

## **Model Number**

## MLV41-LL-IR-IO/115/136

Fiber optic sensor with 2 m fixed cable


#### **Features**

- Robust fiber optic sensor for reliable operation under all conditions
- Adjustable continuous sensitivity
- Easy fiber optic installation with quickaction clamping lock
- Aluminum housing with high-quality **Delta Seal coating**
- IO-link interface for service and process data


# **Product information**

The unique and extremely popular design of the MLV41 series enables it be mounted correctly in confined areas and offers all the functions that are normally only found on larger phototelectric sensors. The MLV41 series comes with a range of functions. For example, highly visible status LEDs on the front and back, resistance to ambient light, crosstalk protection and universally applicable output stages that permit every possible switching logic and polarity to be realized. The enhanced resistance to ambient light ensures reliable operation even where modern energy-saving lamps with electronic ballasts are in use. The same applies where multiple devices are present, i.e. the use of a number of sensors in the same vicinity causes no problems.

## **Dimensions**

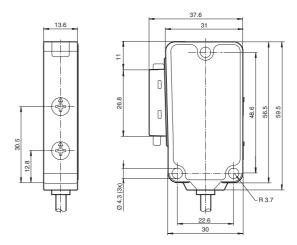


## **Electrical connection**

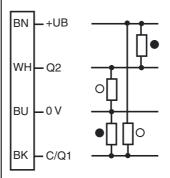

- O = Light on
- = Dark on

# Indicators/operating means

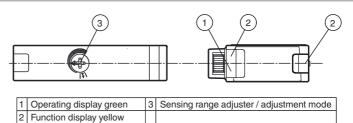

Technical data		
General specifications		
Sensor range		on black (6 %): up to 55 mm on Kodak white, reflection factor 90% up to 160 mm with LLR 04-1.6-0.5-WC3 fiberoptic cable
Adjustment range		0 160 mm on Kodak white, reflection factor 90%
Reference target		100 mm x 100 mm on Kodak white, reflection factor 90%
Light source		IRED
Light type		modulated infrared light, 880 nm
Functional safety related parame	eters	5 ,
MTTF <sub>d</sub>		770 a
Mission Time (T <sub>M</sub> )		20 a
Diagnostic Coverage (DC)		0%
Indicators/operating means		0,0
Operation indicator		LED green, statically lit Power on , Undervoltage indicator: Green LED, pulsing (approx. 0.8 Hz) , short-circuit: LED greer flashing (approx. 4 Hz) , IO link communication: green LED goes out briefly (1 Hz)
Function indicator		LED yellow, lights up with receiver lit; flashes when falling sho of the stability control
Control elements		sensitivity adjustment
Electrical specifications		
Operating voltage	$U_{R}$	10 30 V DC
Ripple	- G	max. 10 %
No-load supply current	I <sub>0</sub>	max. 40 mA
Interface	U	
Interface type		IO-Link
Protocol		IO-Link V1.0
Mode		COM 2 (38.4 kBaud)
		00W 2 (00.4 KBaaa)
Output		Park Adams, and
Switching type		light/dark on
Signal output		2 push-pull (4 in 1) outputs, complementary, short-circuit proof reverse polarity protected
Switching voltage		max. 30 V DC
Switching current		max. 100 mA
Voltage drop	U <sub>d</sub>	≤ 2.5 V DC
Switching frequency	f	1000 Hz
Response time		0.5 ms
Ambient conditions		
Ambient temperature		-20 60 °C (-4 140 °F)
Storage temperature		-40 75 °C (-40 167 °F)
Mechanical specifications		
Fiber optic adapter		04
Degree of protection		IP67
Connection		2 m fixed cable , 5-pin
Material		
Housing		aluminum , Delta-Seal coated
Optical face		Fiber optic connection
Mass Compliance with standards and	directi-	50 g
ves		
Directive conformity		
EMC Directive 2004/108/EC		EN 60947-5-2:2007
Standard conformity		
Product standard		EN 60947-5-2:2007 IEC 60947-5-2:2007
Approvals and certificates		
		II, rated voltage ≤ 50 V AC with pollution degree 1-2 according to IEC 60664-1 functional insulation acc. to DIN EN 50178
Protection class		
UL approval		cULus Listed 57M3 (Only in association with UL Class 2 power
		cULus Listed 57M3 (Only in association with UL Class 2 powe supply; Type 1 enclosure)  CCC approval / marking not required for products rated ≤36 \

# IO link function

The IO link operating mode is indicated by the green LED indicator with a short interruption (f = 1 Hz). IO link communication simultaneously provides process data (measurement data from the sensor) and access to requirement data.

The requirement data contains the following information:

# Identification:

- · Manufacturer information
- Product ID
- User-specific ID

# **Device parameters:**

· Teach-in parameters

## **Accessories**

## **IODD Interpreter DTM**

Software for the integration of IODDs in a frame application (e. g. PACTware)

## IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

#### **OMH-41**

Mounting bracket

## LCR 04-1,6-0,5-Z1

Glass fiber optic - diffuse with PVC covering

# LLR 04-1,6-0,5-G(M6x30)

Glass fiber optic - diffuse with metal silicone covering

#### LCR 04-1,6-0,5-WC 3

Glass fiber optic - diffuse with PVC covering

#### LLR 04-1,6-0,5-W C3

Glass fiber optic - diffuse with metal silicone covering

#### LCE 04-1,6-1,0-Z1

Glass fiber optic - thru-beam with PVC covering

#### LCE 04-1,6-1,0 G

Glass fiber optic - thru-beam with PVC covering

## LLE 04-1,6-1,0-G

Glass fiber optic - thru-beam with metal silicone covering

# LCE 04-1,6-1,0-W C3

Glass fiber optic - thru-beam with PVC covering

# LLE 04-1,6-1,0-W C3

Glass fiber optic - thru-beam with metal silicone covering

#### **MLV41-LL IODD**

IODD for communication with MLV41-LL-IO-Link sensors

Other suitable accessories can be found at www.pepperl-fuchs.com

Release date: 2015-02-26 13:44 Date of issue: 2015-02-26 249787\_eng.xml

- · Operating parameters
- · Configuration parameters
- Device commands

## Diagnostic messages and warnings

# **Setting information**

## **Detection range adjustment:**

The detection range can be set via the rotary switch or the IO-Link.

# Setting using the rotary switch:

If you would like to change the detection range on the sensor, turn:

- the rotary switch to the left to reduce the value.
- the rotary switch to the right to increase the value.

With the IO-Link, the set detection range the current rotary switch configuration is always assigned.

If the rotary switch is too far to the left or the right, perform the following:

Turn the potentiometer completely to the left until it stops. The LED will briefly flash green.

The assignment of the current rotary switch configuration to the detection range set via IO-Link is overridden.

Now set the desired detection range again.

# Example application - manually reduce detection range:



The potentiometer has one position as shown here. The adjustable detection range is set via IO-Link to maximum. The rotary switch is too far to the left to set a considerably lower detection range for example.



Turn the potentiometer to the left until it stops to override the set value to this rotary switch configuration. The LED will briefly flash green.



Now set the desired detection range again.

www.pepperl-fuchs.com