



Technical data

General specifications

Description	Software to help users choose the correct power supply, check voltage drop is not too large, and verify the configuration of an AS-Interface network
-------------	--

System requirements

Hardware requirements	Intel® Pentium® III processor or better 20 GB of available hard disk memory 521 MB RAM CD-ROM or DVD drive Serial interface on PC
Operating system	Microsoft Windows Win 98 SE, Win Me, Win 2000, Win XP, NT4, Vista 32 Bit

Model number

AS-Interface Power Calculator

AS-Interface Power supply and network checking utility

Features

- Straightforward operation
- Checks to make sure AS-i network configuration is Okay
- Calculates Voltage drop of AS-i cable
- Calculates AS-i and Auxiliary power supply load

Release date: 2011-04-06 21:27 Date of issue: 2014-01-13 t48939_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com