
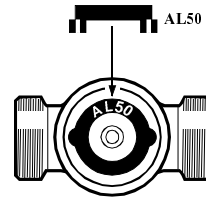


- de** Montageanleitung
- en** Mounting instructions
- fr** Instructions de montage
- sv** Monteringsinstruktion
- nl** Montage-handleiding
- it** Istruzioni di montaggio
- fi** Asennusohje
- es** Instrucciones de montaje
- da** Monteringsvejledning

- Stützring für Ventile V...P47...**
- Support ring for valves V...P47...**
- Bague d'appui pour vannes V...P47...**
- Stödring för ventiler V...P47...**
- Ondersteuningsring voor afsluiters V...P47...**
- Supporto per valvole V...P47...**
- Venttiilien tukirengas V...P47...**
- Arandela de soporte para válvulas V...P47...**
- Støttering for ventiler V...P47...**

AL50

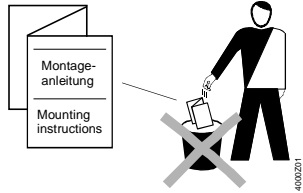


VVP47...





VXP47...




VMP47...

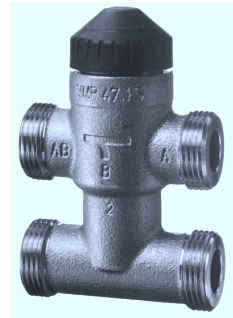

AL50

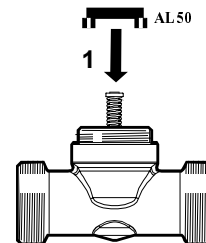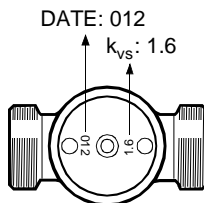

V...P47... + SSP...

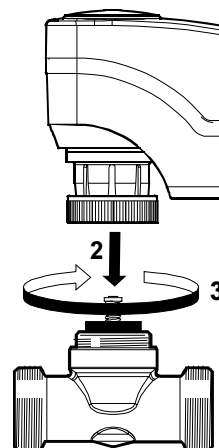

V...P47... + STP...

