# Safety light curtain

# SLC14-450/129/151





### **Model Number**

### SLC14-450/129/151

with 2 separate fail-safe semiconductor outputs

#### **Features**


- ٠ Sensing range up to 5 m
- Resolution 14 mm (finger protection) ٠
- Self-monitoring (type 4 according to IEC/EN 61496-1)
- Master/Slave detection, Plug and ٠ Play
- Protection degree IP67 ٠
- Integrated function display •
- Pre-fault indication •
- Connection via appliance socket • M12 x b1
- Safety outputs OSSD in potential-se-• parated semiconductor version
- Protective field height up to 1800 mm ٠
- Start/Restart disable preset by Option /129

# Accessories


PG SLC-450 Protective glass panes for SLC series

## **BA SLC**

laser alignment aid for safety light cutrtains series SLC

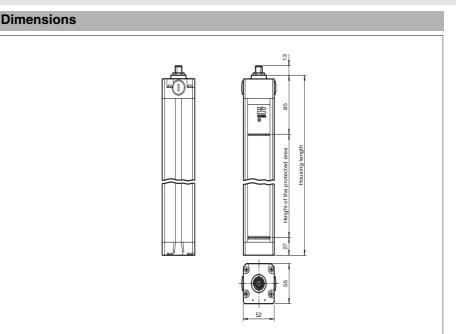

# **Electrical connection**

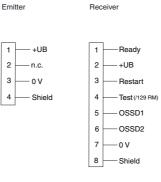


## **Pinout**

1

2

з

 4



Subject to modifications without notice Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776-4411 fa-info@pepperl-fuchs.com

Copyright Pepperl+Fuchs Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



1

# SLC14-450/129/151

Fechnical data	
General specifications	
Effective detection range	0.2 5 m
Light source	IRED
Light type	modulated infrared light
Approvals	TÜV, cULus
Tests	IEC/EN 61496
Safety type according to IEC/EN 61496	4
Marking	CE
Width of protected area	0.2 5 m
Protection field height	450 mm
Number of beams	48
Operating mode	can be selected with or without start/restart disable
Optical resolution	14 mm
Angle of divergence	< 5 °
unctional safety related parameters	
Safety Integrity Level (SIL)	SIL 3
Performance level (PL)	PL e
Category	Cat. 4
Mission Time $(T_M)$	20 a
PFH <sub>d</sub>	2.28 E-8
-	
Туре	4
ndicators/operating means	
Operating display	7-segment display in emitter
Diagnostics display	7-segment display in receiver
Function display	in receiver:
	LED red: OSSD off
	LED green: OSSD on LED yellow: Protected area free, system start-ready
Pre-fault indication	LED yender. Holected area nee, system startheady
Controls	
	switch for start/restart disable, transmission coding
Electrical specifications	
Operating voltage U <sub>B</sub>	24 V DC (-30 %/+25 %)
No-load supply current I <sub>0</sub>	Emitter: ≤ 100 mA receiver: ≤ 150 mA
Protection class	III
nput	
Activation current	approx. 10 mA
Activation time	0.03 1 s
Test input	Reset-input for system test (not for option /129)
Function input	Start release
Dutput	
-	2 separated fail safe semiconductor outputs
Safety output	
Signal output	1 PNP, max. 100 mA for start readiness
Switching voltage	Operating voltage -2 V
Switching current	max. 0.5 A
Response time	18 ms
Ambient conditions	
Ambient temperature	0 55 °C (32 131 °F)
Storage temperature	-25 70 °C (-13 158 °F)
Relative humidity	max. 95 %, not condensing
Aechanical specifications	
-	560 mm
Housing length L	1P67
Protection degree	
Connection	Emitter: M12 connector, 4-pin Receiver: M12 connector, 8-pin
Material	
Housing	extruded aluminum profile, RAL 1021 (yellow) coated
Optical face	Plastic pane
Mass	Per 1650 g
General information	
System components	
Emitter	SLC14-450-T / 92
Receiver	SLC14-450-R / 129 / 151 Startup/restart disable preset
Compliance with standards and directi-	
es	
Directive conformity	
Machinery Directive 2006/42/EC	EN ISO 13849-1:2008 EN 61496-1:2004/A1:2008
	EN 61000-6-4:2007 + A1:2011
EMC Directive 2004/109/EC	
EMC Directive 2004/108/EC	
Standard conformity	150 04400 0.0000 EN 50170.4007
Standard conformity Standards	IEC 61496-2:2006 EN 50178:1997
Standard conformity Standards Approvals and certificates	
Standard conformity Standards	IEC 61496-2:2006 EN 50178:1997 CE
Standard conformity Standards Approvals and certificates	
Standard conformity Standards Approvals and certificates CE conformity	CE

2

 Subject to modifications without notice

 Pepperl+Fuchs Group
 USA: +1 330 486 0001


 www.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com


0001 Germany: +49 621 776-4411 fa-info@pepperl-fuchs.com


Copyright Pepperl+Fuchs Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



### **Curves/Diagrams**

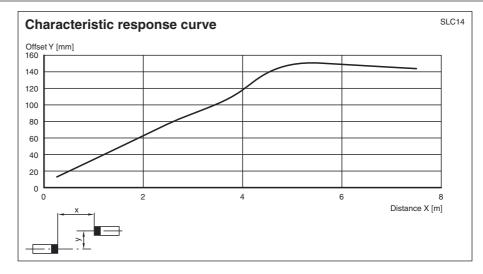

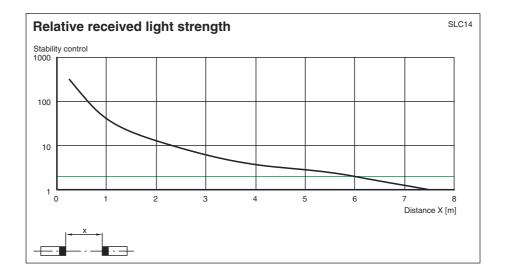

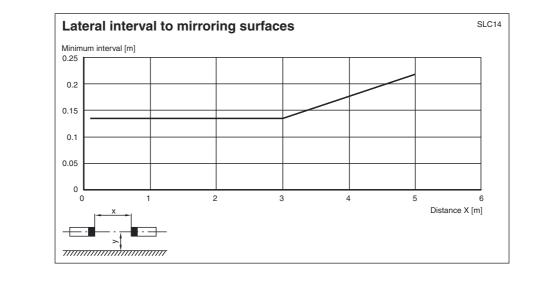

#### Notes

#### Master slave mode



3

Master:	SLC (semiconductor)
	or
	SLC/31 (relay)
Slave:	SLCS

Using slaves makes it possible to lengthen protective fields or to form protective fields that lie in more than just one level. When you select slaves that can be connected, you should take into consideration that the maximum number of 96 light rays must not be exceeded.

There are slaves for transmitters and receivers. These may simply be connected to the master light curtain. As many as 2 slaves may be connected respectively to the transmitter and receiver unit.

Installation:

- 1 The end cap should be screwed off for the light curtain (without cable gland).
- 2 The plug-in jumper on the connectors of the printed circuit board, which is now visible, should be removed.
- 3 The slave is designed so that the cap located on the cable connector can be plugged directly onto the open end of the light curtain with the printed circuit board.
- 4 After you have screwed on the connection cap, the system is complete.

### System accessories

- Mounting set SLC
- Test rods SLC14/SLC30/SLC60
- Protective glass pieces for SLC (to protect the optically functional surface)
- Lateral screwed connection SLC
- Profile alignment aid
- Laser alignment aid SLC
- Mirror for SLC (for securing hazardous areas on multiple sides)
- Ground pillar UC SLP/SLC
- Housing for pillar Enclosure UC SLP/SLC
- Collision protector Damping UC SLP/SLC

