








Electrical connection

Emitter

Dimensions



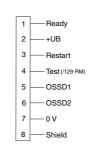

Receiver

Model Number

SLC14-1650/129/130/151

with 2 separate fail-safe semiconductor outputs

Features

- Sensing range up to 5 m
- Resolution 14 mm (finger protection)
- Self-monitoring (type 4 according to IEC/EN 61496-1)
- Master/Slave detection, Plug and Play
- Very short response time
- Protection degree IP67
- Integrated function display
- Pre-fault indication
- Connection via appliance socket M12 x b1
- Safety outputs OSSD in potential-separated semiconductor version
- Protective field height up to 1800 mm
- Start/Restart disable preset by Option /129

Accessories

PG SLC-1650

Protective glass panes for SLC series

laser alignment aid for safety light cutrtains series SLC

Pinout





Receiver

www.pepperl-fuchs.com

200068 2012-08-01 Date of issue:

PEPPERL+FUCHS

EMC Directive 2004/108/EC

Standard conformity Standards

UL approval

CCC approval TÜV approval


Approvals and certificates CE conformity


cULus Listed

CE

EN 61000-6-4:2007 + A1:2011

IEC 61496-2:2006 EN 50178:1997

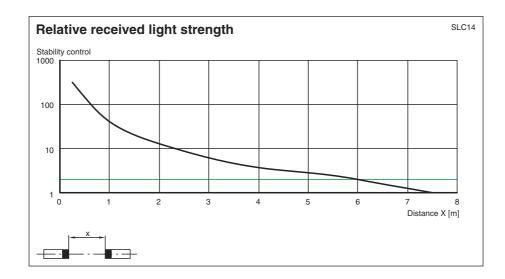

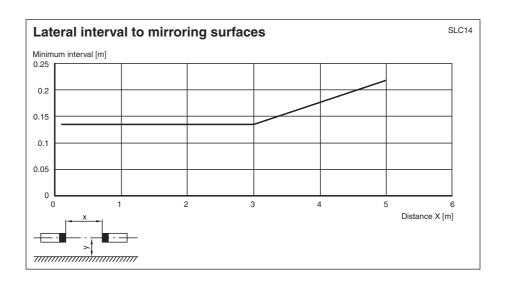

Germany: +49 621 776-4411

fa-info@pepperl-fuchs.com

Master-Slave operation

SLC..-... (semiconductor) Master:

or SLC ..-../31 (relay)

USA: +1 330 486 0001

fa-info@us.pepperl-fuchs.com

SLC..-...-S Slave:



The use of slaves allows both the protection fields to be extended and protection fields to be created that do not all exist at a single level. When deciding which slaves to connect, remember that the total maximum of 96 beams must not be exceeded. Up to 192 beams are possible if the /130 option is selected.

Slaves exist for the transmitter and the receiver. These simply need to be connected to the master light curtain. Up to two slaves can be connected to both the transmitter and receiving units. Only one slave can be connected if the /130 option is selected.

Installation:

- The end cap (no cable gland) on the light curtain is unscrewed and removed. 1
- 2 The plug-in jumper on the connectors of the now visible PCB is removed.
- The slave is designed in such a way that the cap and PCB on the connecting cable plug directly onto the open end of the light curtain.
- Once the end cap has been screwed on, the system is complete.

System accessories

- Mounting set SLC
- Test rods SLC14/SLC30/SLC60
- Protection glass for SLC (to protect the optical surface)
- Side cable gland SLC
- Profile alignment tool
- Beam alignment tool SLC
- Mirror for SLC (to protect danger areas on more than one side)
- Stands UC SLP/SLC
- Enclosure for stands Enclosure UC SLP/SLC
- Start protection Damping UC SLP/SLC

PEPPERL+FUCHS