## **AS-Interface Handheld**

## VBP-HH1-V3.0-110V

## Dimensions



# 3.0


### Model number


VBP-HH1-V3.0-110V

AS-Interface Handheld

### **Features**

- Addressing and programming AS-Interface slaves
- Displaying the assigned slave addresses and the status of the inputs
- Setting outputs at the AS-Interface ٠ slave
- Also supports profiles S-7.7.A.7 ٠ (Spec 3.0), S-0.B and S-7.B (AS Interface Safety at Work)
- The slave connection is short-circuit ٠ and overload proof
- Battery charger included with delivery

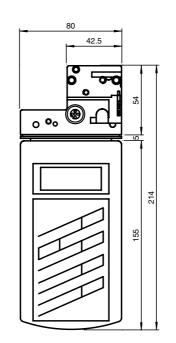

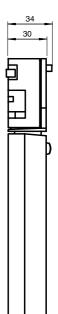


## **Electrical connection**



- AS-Interface + 1
- 2 Digital input for optical addressing adapters
- 3 AS-Interface -
- Digital output for optical addressing adapters 4
- 5 Voltage supply for optical addressing adapters

## Indicating / Operating means

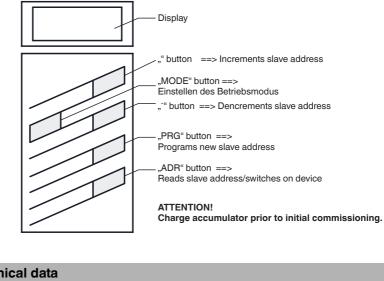

#### **Technical data**

- General specifications AS-Interface specification Operating mode
- Indicators/operating means
- Display Keyboard

**Electrical specifications** 

Plug-in charging unit, 120 V AC, included with delivery

LC display membrane keys, 5 keys

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

USA: +1 330 486 0001

fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

V3 0



1

Release date: 2013-06-05 15:03 Date of issue: 2014-01-13 221096\_eng.xml

Pepperl+Fuchs Group www.pepperl-fuchs.com

## **AS-Interface Handheld**

Operating duration Power supply

## Interface Interface type Open loop voltage

Housing

Mass

Load current Ambient conditions Ambient temperature Storage temperature **Mechanical specifications** 

## Protection degree Material

IP20 plastic approx. 610 g

#### Compliance with standards and directives

Directive conformity EMC Directive 2004/108/EC Standard conformity Noise immunity Emitted interference Protection degree Electrical safety

8 h or  $\geq$  250 read/write procedures for fully charged battery battery mode, please use only battery charger included with delivery to charge (charging time about 14 h)

AS-Interface, short-circuit proof and overload-proof, or optical 28 V 100 mA at 25 V

0 ... 40 °C (32 ... 104 °F) -20 ... 40 °C (-4 ... 104 °F)

EN 61326-1:2006 EN 61326-1:2006 EN 61326-1:2006 EN 60529:2000 Plug-in charging unit UL 1310

## Function

The AS-Interface Handheld VBP-HH1-V3.0 is an addressing device according to the AS-Interface specification 3.0.

This addressing device can be used to program AS-Interface slaves and to test part of their functions.

In addition, new functions have been incorporated:

- Permanent data exchange with AS-Interface slaves
- Support of the data exchange with 4E4A slaves in ext. addressing mode
- Indication of the safety code for AS-Interface Safety-at-Work slaves

The AS-Interface connection adapter on the top of the addressing device is used for connecting AS-Interface slaves (sensors, actuators and modules) to the addressing device. The following devices and designs can be connected to the addressing device by directly plugging it onto the AS-Interface connection adapter:

Devices with M12 connector, VariKont M-system, VariKont system, FP design, AS-Interface modules of the types G1 and G4.

For device designs with integrated addressing socket, please use the optional adapter cable.

## Accessories

## VAZ-PK-1,5M-V1-G

Adapter cable module/hand-held programming device

## V1S-TEE-V1/V1S

T-Distributor, M12 connector to M12 socket/connector

V1-W-2M-PVC Female cordset, M12, 4-pin, PVC cable

VAZ-PK-FK-0,2M-V1-W Adapter cable G10 module/hand-held programming device

VAZ-9VDC-CHRG-115VAC Power Supply

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs



www.pepperl-fuchs.com