

Model Number

OM-VB14N

oscillating mirror for the VB14N barcode scanner series

Function

The OM-VB14N oscillating mirror is an accessory for the VB14N barcode reader series.

It is designed to generate homogeneous and adjustable raster reading through deflection of the scanning laser beam.


The system consists of the oscillating mirror attached to the scanner and allows a surface instead of a line to be observed; versatility and reading accuracy are therefore increased in "Picket Fence" reading mode.

Some examples are given in the following cases: codes presented at different "heights" on the reading surface; codes with printing defects.

The electronic and electromechanical components controlling the mirror movement are contained inside the rugged metal casing, which guarantees protection class IP65 when the OM-VB14N is mounted correctly onto the scanner.

The OM-VB14N is directly powered from the scanner through a connector which is accessible after removing the scanner cover (see assembly instructions).

Dimensions

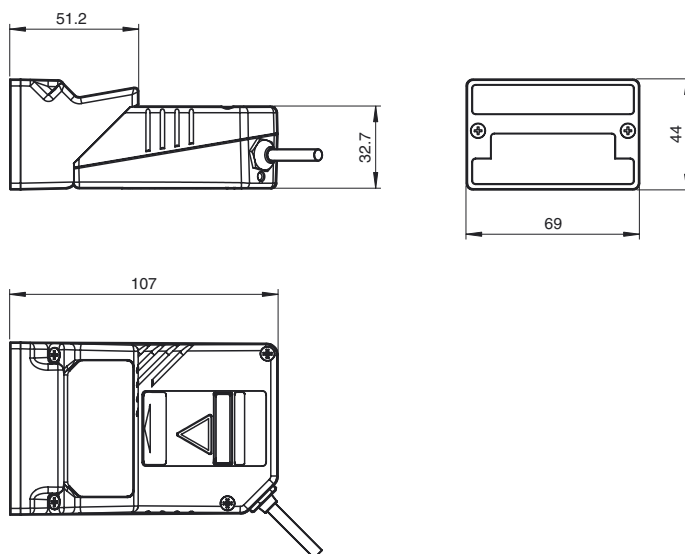

Technical data

General specifications

Reading angle 10 ... 40 °, adjustable

Nominal ratings

Oscillator frequency f_O 0.5 ... 4 Hz, adjustable

Electrical specifications

Operating voltage U_B 10 ... 30 V DC
 Operating current max. 40 mA @ 10 V DC
 Power consumption P_0 max. 1 W @ 30 V DC
 Inrush current 1.2 A @ 10 V DC at max. duration = 100 ms

Output

Response time max. 1 ms

Ambient conditions

Ambient temperature 0 ... 45 °C (32 ... 113 °F)
 Storage temperature -20 ... 70 °C (-4 ... 158 °F)
 Relative humidity 90 %, noncondensing
 Shock resistance IEC 68-2-6 FC 0,5 G at 9 ... 150 Hz 2 hours on each axis
 Vibration resistance IEC 68-2-27 Test EA 30G; 11 ms; 3 impacts on each axis

Mechanical specifications

Protection degree IP65 (with correct installation on the barcode scanner)
 Connection Device connector, 4-pin
 Mass approx. 160 g

Mounting oscillating mirror

CAUTION:

Avoid any contact with the oscillating mirror, mirrored rotor, the lenses or other optical components; otherwise the performance of the reader will be reduced.

1. Turn off the device.
2. Remove the VB14N scanning window unscrewing the two cover screws.
3. Bring the oscillating mirror close to the scanner and insert the cable into the power connector of the scanner.
4. Make sure the cable doesn't remain in the path of the mirror movement.
5. Check that the seal is correctly positioned and then after having aligned the oscillating mirror onto the scanner, fix it using the two screws.