

## Important Notice

### CAUTION

Electrical shock could cause death or serious injury. If the sensor is installed in a high voltage environment and a fault or installation error occurs, high voltage may be present on the connection terminals or the probe itself.

Safe and secure operation of the temperature sensor can only be guaranteed if the operating instructions of the used transmitters and all included safety notes are read, understood and followed. For Endress+Hauser temperature transmitters see enclosed CD-ROM.

### Correct use


The manufacturer cannot be held responsible for damage caused by misuse of the unit. The installation conditions and connection values indicated in the operating instructions must be followed!

## Installation Guidelines and Safety instructions

1. Install the unit according to the relevant NEC Code and local regulations.
2. Avoid any spark due to impact, friction and installation. Anti-sparking wrenches should be utilized.
3. The temperature sensor should be connected to the power supply or other external circuit using the appropriate cable glands and wire entries.
4. For ambient temperature higher than 158 °F, suitable cables, conduit and conductors must be used. Only use approved wire entries.
5. When utilized in dust atmospheres, the connection between the housing, fittings and thermowell should provide a minimum degree of Ingress Protection. Liquid/gas sealants should be used. Local regulations need to be respected.

### CAUTION

Do not disconnect equipment unless power has been switched off or the area is not hazardous.

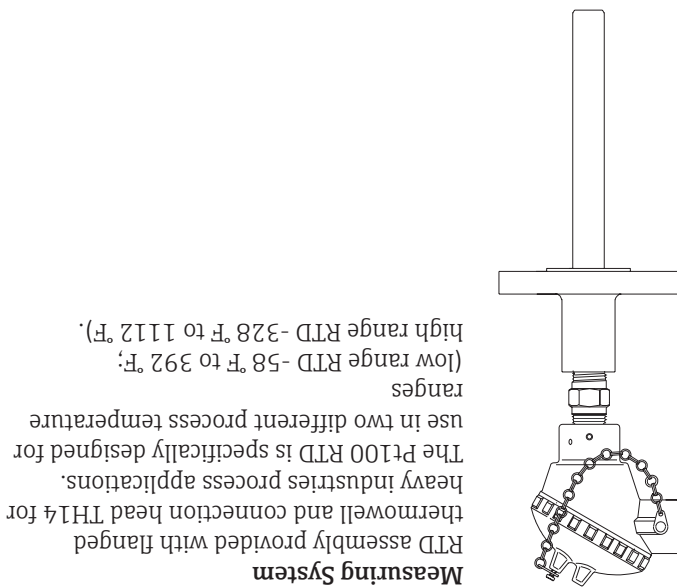

Compact Instructions  
RTD Assembly in  
flanged Thermowell  
TH14  
Measuring System

RTD assembly provided with flanged thermowell and connection head TH14 for heavy industries process applications. The Pt100 RTD is specifically designed for use in two different process temperature ranges  
(low range RTD -58 °F to 392 °F;  
high range RTD -328 °F to 1112 °F).

The accessories for pipe connections and the appropriate gaskets and sealing rings are not supplied with the sensors. These are the customer's responsibility. Depending on temperature and pressure operating conditions, the gaskets, the sealing and the applicable torques must be selected by the user. For further information regarding connections, please refer to the corresponding Standards.

## Installation and operation

The unit is constructed using the most up to date production equipment and complies with the safety requirements of the local guidelines. However, if it is installed incorrectly or misused, certain application dangers can occur. Installation, wiring and maintenance of the unit must only be completed by trained, skilled personnel who are authorized to do so by the plant operator. The plant operator must make sure that the measurement system has been correctly wired to the connection schematics. Procedures indicated in these instructions must be followed.

## Returns

Please follow the Return Authorization Policy which is attached with this manual.

## Safety pictograms and symbols



Notes draw attention to activities or procedures that can have a direct influence on operation or trigger an unforeseen device reaction if they are not carried out properly.

### CAUTION

Cautions draw attention to activities or procedures that can lead to persons being seriously injured, to safety risks or to the destruction of the device if they are not carried out properly.

*Though the information provided herein is believed to be accurate, be advised that the information contained herein is NOT a guarantee of satisfactory results. Specifically, this information is neither a warranty nor guarantee, expressed or implied, regarding performance; merchantability, fitness, or other matter with respect to the products; and recommendation for the use of the product/process information in conflict with any patent. Please note that Endress+Hauser reserves the right to change and/or improve the product design and specifications without notice.*

Class	max. Tolerances (°C)
A	$\pm (0.15 + 0.002 \cdot  t )$ , temperature range: -100 °C to 450 °C
B	$\pm (0.3 + 0.005 \cdot  t )$ , temperature range: -200 °C to 600 °C

\* |t| = absolute value °C. For measurement errors in °F, calculate using equation above in °C, then multiply the outcome by 1.8.

Insulation resistance between terminals and probe

- $\geq 10 \text{ M}\Omega$  at 572 °F (300 °C)
- $\geq 100 \text{ M}\Omega$  at 77 °F (25 °C)


sheath, test voltage 250 V.

All important Temperature Operating Instructions, particularly with regard to head and field transmitters are available on CD-ROM, find enclosed or order by order number: **SONDTT-AG**.

**Supplementary documentation**

## Installation

### Installation locations

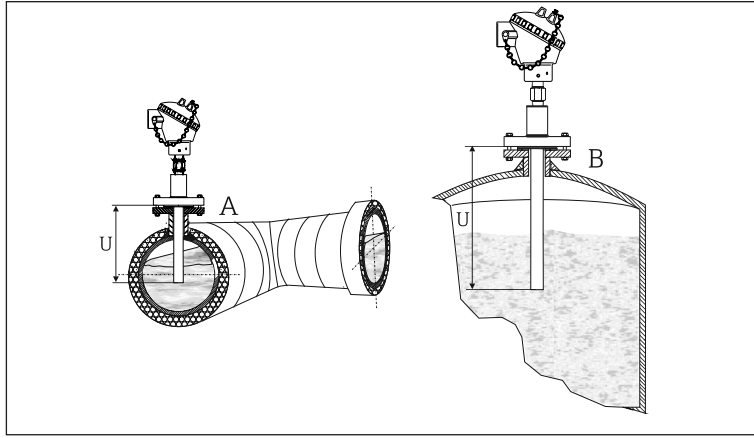

Examples of installation. In pipes of a small section the axis line of the duct must be reached and if possible slightly exceeded by the tip of the probe (=U).


- A: Pipe installation  
B: Container installation

For installation proceed as follows:

1. Attach thermowell to pipe or process container wall. Install and tighten the Thermowell before applying process pressure.
2. Make sure that the process fitting matches the maximum specified process pressure.
3. Seal the extension nipples with TFE tape before screwing the sensor into the thermowell.
4. Thermowells are used in measuring the temperature of a moving fluid in a conduit, where the stream exerts an appreciable force. The limiting value for the thermowells is governed by the temperature, the pressure and the speed of the medium, the immersion length, the materials of the thermowell and the medium, etc. For operating conditions, a stress calculation should be carried out.

## Dimensions

for TH14 assembly with spring loaded insert and self contained nipple.

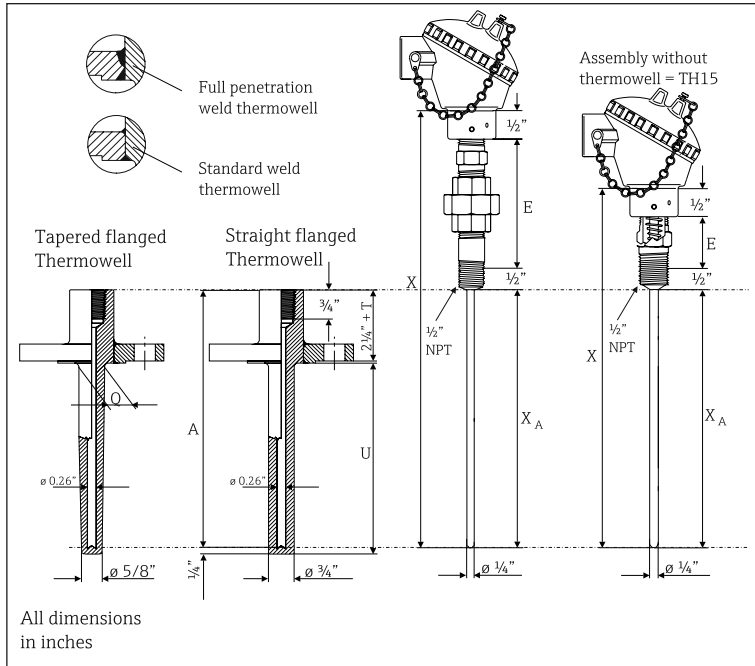

U = Thermowell Immersion length (see table)

E = Extension (see table)

T = Lag dimension


Q = Thermowell diameter (see table)

$X_A = A =$  Immersion length RTD sensor = thermowell drilled depth ( $U + 2'' + T$ )


X = Insert overall length ( $X = A + E$ )

## Electrical connection-wiring diagrams

Transmitter mounted (3" or 5½" flying leads - crimped sleeves)

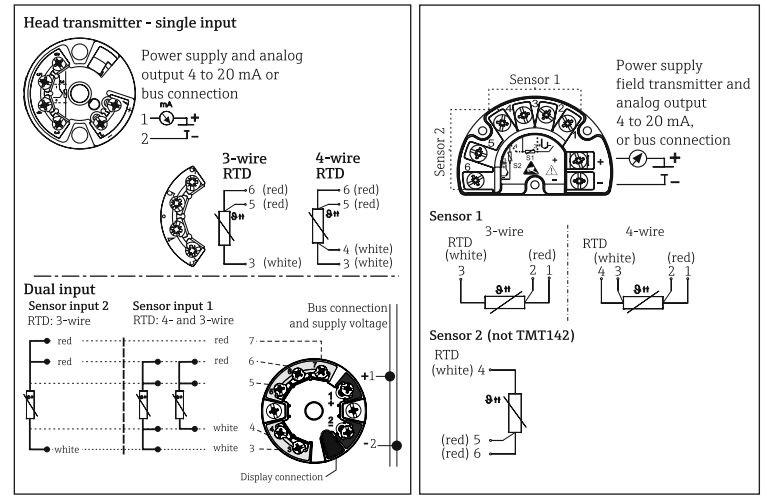

Terminal block mounted (3" flying leads - fork lugs)

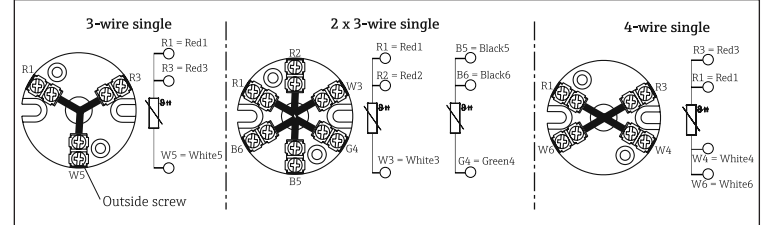

The blocks and transmitters are shown as they will sit inside the heads in reference to the conduit opening. ALWAYS terminate leads to the outside screw!

Flange rating: ASME B16.5				
U	E (nom. dimension)	T	Flange size	ø Q
2", 4", 7", 10"; 13"; 16"; 22"; specified length 2" to 18" in ½"	Hex nipple = 1" or Nipple Union Nipple (NUN) = 4" or 7" Material: Steel or 316SS	specified length 1" to 10" in ½" increments	1"	7/8"
			1½"	1 1/16"
			2"	1 1/16"
			3"	1 1/16"

Wire specifications 24AWG, 19 strand silver plated copper with 0.010" TFE extruded outer

Recommended minimum immersion for thermowell:

Tapered TW = 4½"	¾" straight TW = 4"
------------------	---------------------

## Technical data

Weight From 1 to 10 lbs  
Material Wetted parts 316 SS  
Shock and vibration resistance 4g/2 to 150 Hz as per IEC 60 068-2-6

Ambient temperature limits\*

Housing without head-mounted transmitter	
Aluminium pressure die-cast housing	-40 to 300 °F (-40 to 150 °C)
Plastic housing	-40 to 185 °F (-40 to 85 °C)
Deep drawn SS housing without display	-40 to 300 °F (-40 to 150 °C)
Housing with head-mounted transmitter	
Deep drawn SS housing with display	-4 to 160 °F (-20 to 70 °C)
Field transmitter	
with display	-40 to 158 °F (-40 to 70 °C)
without display	-40 to 185 °F (-40 to 85 °C)

\*For hazardous areas refer to the transmitter control drawing