








Dimensions

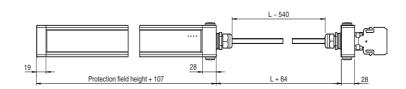

Model Number

SLC14-450-S

Slave module for master slave mode

Features

- Sensing range up to 5 m
- Resolution 14 mm (finger protection)
- · Protection field height up to 750 mm
- Self-monitoring (type 4 according to IEC/EN 61496-1)
- Master/Slave detection, Plug and Play
- Start/Restart disable
- Protection degree IP67
- Integrated function display
- Pre-fault indication
- Safety outputs OSSD in potential-separated semiconductor design or with monitored, compelled connection NC-contacts
- Optional with ATEX certificates for zone 2 and 22 and protection degree IP66 (Option 133)

Accessories


PG SLC-450

Protective glass panes for SLC series

BA SLC


laser alignment aid for safety light cutrtains series SLC


Electrical connection

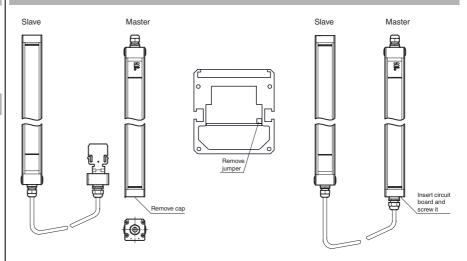

Pepperl+Fuchs Group www.pepperl-fuchs.com

TÜV approval

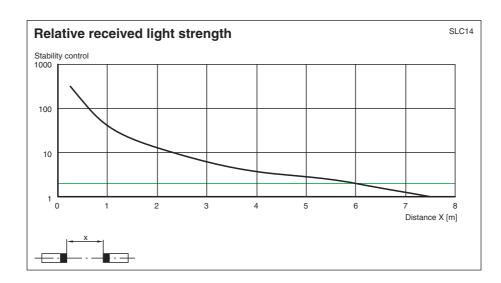

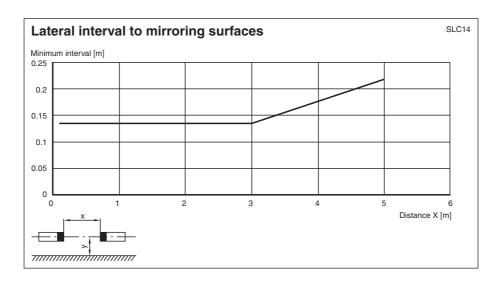

Notes

Response times of cascading units

USA: +1 330 486 0001

fa-info@us.pepperl-fuchs.com

If cascading units are set up, the response time of the entire SLC, consisting of a master and a slave, must be determined. The overall number of beams for master and slave can be determined from technical data sheets. Depending on the type of output, the resulting response time can be read from the table.

Number of beams	Response time in milliseconds	
	Semiconductor output	Relay output
8	10	30
16	10	30
24	12	32
32	14	34
40	16	36
48	18	38
56	20	40
64	22	42
72	24	44
80	26	46
88	28	48
96	30	50

SLC14-300/31 32 beams **Example:** Master:

> Slave: SLC60-90-S+ 24 beams

> > 56 beams

56 beams, OSSD relay --> response time = 40 ms.

Notes

Master slave mode

Master: SLC ..- ... (semiconductor)

SLC..-.../31 (relay)

Slave: SLC..-...-S

Using slaves makes it possible to lengthen protective fields or to form protective fields that lie in more than just one level. When you select slaves that can be connected, you should take into consideration that the maximum number of 96 light rays must not be exceeded.

There are slaves for transmitters and receivers. These may simply be connected to the master light curtain. As many as 2 slaves may be connected respectively to the transmitter and receiver unit.

Installation:

- 1 The end cap should be screwed off for the light curtain (without cable gland).
- 2 The plug-in jumper on the connectors of the printed circuit board, which is now visible, should be removed.
- 3 The slave is designed so that the cap located on the cable connector can be plugged directly onto the open end of the light curtain with the printed circuit board.

Germany: +49 621 776-4411

fa-info@pepperl-fuchs.com

After you have screwed on the connection cap, the system is complete.

System accessories

- Mounting set SLC
- Test rods SLC14/SLC30/SLC60
- Protective glass pieces for SLC (to protect the optically functional surface)
- Lateral screwed connection SLC
- Profile alignment aid
- Laser alignment aid SLC
- Mirror for SLC (for securing hazardous areas on multiple sides)
- Ground pillar UC SLP/SLC
- Housing for pillar

Enclosure UC SLP/SLC

Collision protector Damping UC SLP/SLC

PEPPERL+FUCHS