








# Electrical connection

**Dimensions** 

Emitter



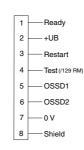

# **Model Number**

### SLC14-150/129/151

with 2 separate fail-safe semiconductor outputs

## **Features**

- Sensing range up to 5 m
- Resolution 14 mm (finger protection)
- Self-monitoring (type 4 according to IEC/EN 61496-1)
- Master/Slave detection, Plug and Play
- Protection degree IP67
- Integrated function display
- · Pre-fault indication
- Connection via appliance socket M12 x b1
- Safety outputs OSSD in potential-separated semiconductor version
- Protective field height up to 1800 mm
- Start/Restart disable preset by Option /129

# **Accessories**

# **MS SLC**

Mounting bracket for Light grid

# PA SLP/SLC

Profile alignment aid

# **PG HOLDER SLC**

Holders for SLC protective glass panes

#### **PG SLC-X**

Protective glass panes for SLC series

# **PG SLC-150**

Pepperl+Fuchs Group www.pepperl-fuchs.com

Protective glass panes for SLC series

# Pinout





Height of the protected area

#### **Technical data** General specifications Effective detection range 0.2 ... 5 m IRFD Light source modulated infrared light Light type Approvals TÜV, cULus Tests IEC/EN 61496 Safety type according to IEC/EN 61496 CE Marking Width of protected area 0.2 ... 5 m Protection field height 150 mm Number of beams can be selected with or without start/restart disable Operating mode Optical resolution 14 mm Angle of divergence < 5 ° Functional safety related parameters Safety Integrity Level (SIL) SIL 3 Performance level (PL) PL e Cat. 4 Category Mission Time (T<sub>M</sub>) 20 a 2 28 F-8 $PFH_d$ Type Indicators/operating means Operating display 7-segment display in emitter Diagnostics display 7-segment display in receiver Function display in receiver: LED red: OSSD off LED green: OSSD on LED yellow: Protected area free, system start-ready Pre-fault indication Controls switch for start/restart disable, transmission coding **Electrical specifications** 24 V DC (-30 %/+25 %) Operating voltage $\mathsf{U}_\mathsf{B}$ Emitter: ≤ 100 mA receiver: ≤ 150 mA No-load supply current I<sub>0</sub> Protection class Input Activation current approx. 10 mA Activation time 0.03 ... 1 s Test input Reset-input for system test (not for option /129) Function input Start release Output Safety output 2 separated fail safe semiconductor outputs Signal output 1 PNP, max. 100 mA for start readiness Switching voltage Operating voltage -2 V Switching current max. 0.5 A Response time 10 ms **Ambient conditions** 0 ... 55 °C (32 ... 131 °F) Ambient temperature Storage temperature -25 ... 70 °C (-13 ... 158 °F) Relative humidity max. 95 %, not condensing Mechanical specifications Housing length L 260 mm Protection degree Connection Emitter: M12 connector, 4-pin Receiver: M12 connector, 8-pin Material extruded aluminum profile, RAL 1021 (yellow) coated Housing Optical face Plastic pane Mass Per 750 g General information System components Emitter SLC14-150-T / 92 Receive SLC14-150-R / 129 / 151 Startup/restart disable preset

199719\_eng.xml

2012-08-01 Products with a maximum operating voltage of ≤36 V do not bear a CCC marking because they do not require approval.

Date of issue: 11:47 2012-08-01

PEPPERL+FUCHS

Compliance with standards and directi-

Machinery Directive 2006/42/EC

EMC Directive 2004/108/EC

**UL** approval

CCC approval TÜV approval

ves

Directive conformity

Standard conformity Standards

Approvals and certificates CE conformity

EN ISO 13849-1:2008 EN 61496-1:2004/A1:2008


EN 61000-6-4:2007 + A1:2011


CE

cULus Listed

USA: +1 330 486 0001

IEC 61496-2:2006 EN 50178:1997

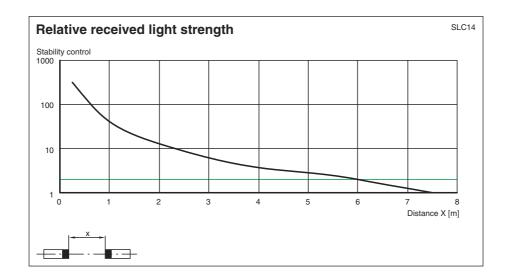

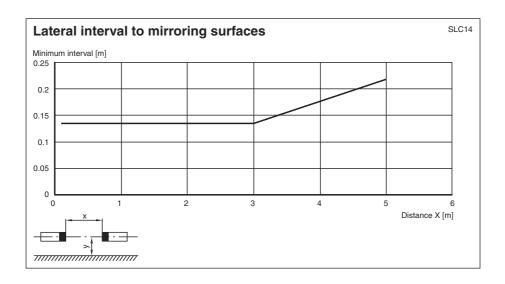

Germany: +49 621 776-4411 fa-info@pepperl-fuchs.com

# **Notes**

# Master slave mode

www.pepperl-fuchs.com

Master: SLC..-... (semiconductor)

SLC ..-../31 (relay)

Slave: SLC..-...-S

Using slaves makes it possible to lengthen protective fields or to form protective fields that lie in more than just one level. When you select slaves that can be connected, you should take into consideration that the maximum number of 96 light rays must not be exceeded.

There are slaves for transmitters and receivers. These may simply be connected to the master light curtain. As many as 2 slaves may be connected respectively to the transmitter and receiver unit.

#### Installation:

- The end cap should be screwed off for the light curtain (without cable gland). 1
- 2 The plug-in jumper on the connectors of the printed circuit board, which is now visible, should be removed.
- The slave is designed so that the cap located on the cable connector can be plugged directly onto the open end of the light curtain with the printed circuit board.
- After you have screwed on the connection cap, the system is complete.

# System accessories

- Mounting set SLC
- Test rods SLC14/SLC30/SLC60
- Protective glass pieces for SLC (to protect the optically functional surface)
- Lateral screwed connection SLC
- Profile alignment aid
- Laser alignment aid SLC
- Mirror for SLC (for securing hazardous areas on multiple sides)
- Ground pillar UC SLP/SLC
- Housing for pillar Enclosure UC SLP/SLC
- Collision protector Damping UC SLP/SLC

fa-info@us.pepperl-fuchs.com