



**EN** Operating instructions..... pages 7 to 12  
Translation of the original operating instructions

**FR** Vous trouverez la version actuelle du mode d'emploi dans votre langue nationale officielle sur l'Internet, [www.schmersal.net](http://www.schmersal.net).

**ES** Encontrará el manual de instrucciones actual en su idioma oficial de la UE en nuestra página de Internet [www.schmersal.net](http://www.schmersal.net).

**NL** U vindt de huidige versie van de gebruikshandleiding in uw officiële landstaal op het Internet, [www.schmersal.net](http://www.schmersal.net).

**IT** Il manuale d'istruzioni aggiornato nella vostra lingua (lingua ufficiale UE) è scaricabile in Internet all'indirizzo [www.schmersal.net](http://www.schmersal.net).

**JP** EU公用語で書かれた最新の取扱説明書は、インターネット([www.schmersal.net](http://www.schmersal.net))からダウンロードできます。

## Content

|   |   |
|---|---|
| <b>1 About this document</b>                            |   |
| 1.1 Function .....                                      | 1 |
| 1.2 Target group: authorised qualified personnel .....  | 1 |
| 1.3 Explanation of the symbols used .....               | 1 |
| 1.4 Appropriate use .....                               | 1 |
| 1.5 General safety instructions .....                   | 1 |
| 1.6 Warning about misuse .....                          | 2 |
| 1.7 Exclusion of liability .....                        | 2 |
| <b>2 Product description</b>                            |   |
| 2.1 Ordering code .....                                 | 2 |
| 2.2 Special versions .....                              | 2 |
| 2.3 Destination and use .....                           | 2 |
| 2.4 Technical data .....                                | 2 |
| 2.5 Safety classification .....                         | 2 |
| <b>3 Mounting</b>                                       |   |
| 3.1 General mounting instructions .....                 | 3 |
| 3.2 Dimensions .....                                    | 3 |
| <b>4 Electrical connection</b>                          |   |
| 4.1 General information for electrical connection ..... | 3 |
| <b>5 Operating principle and settings</b>               |   |
| <b>6 Set-up and maintenance</b>                         |   |
| 6.1 Functional testing .....                            | 3 |
| 6.2 Maintenance .....                                   | 3 |
| <b>7 Disassembly and disposal</b>                       |   |
| 7.1 Disassembly .....                                   | 3 |
| 7.2 Disposal .....                                      | 3 |
| <b>8 Appendix</b>                                       |   |
| 8.1 Wiring example .....                                | 4 |
| 8.2 Integral System Diagnostics (ISD) .....             | 4 |
| 8.3 Declaration of conformity .....                     | 5 |

## 1 About this document

### 1.1 Function

This operating instructions manual provides all the information you need for the mounting, set-up and commissioning for the safe operation and disassembly of the safety-monitoring module. The operating instructions must be available in a legible condition and a complete version in the vicinity of the device.

### 1.2 Target group: authorised qualified personnel

All operations described in this operating instructions manual must be carried out by trained specialist personnel, authorised by the plant operator only.

Please make sure that you have read and understood these operating instructions and that you know all applicable legislations regarding occupational safety and accident prevention prior to installation and putting the component into operation.

The machine builder must carefully select the harmonised standards to be complied with as well as other technical specifications for the selection, mounting and integration of the components.

### 1.3 Explanation of the symbols used



#### Information, hint, note:

This symbol is used for identifying useful additional information.



**Caution:** Failure to comply with this warning notice could lead to failures or malfunctions.

**Warning:** Failure to comply with this warning notice could lead to physical injury and/or damage to the machine.

### 1.4 Appropriate use

The products described in these operating instructions are developed to execute safety-related functions as part of an entire plant or machine. It is the responsibility of the manufacturer of a machine or plant to ensure the proper functionality of the entire machinery or plant.

The safety-monitoring module must be exclusively used in accordance with the versions listed below or for the applications authorised by the manufacturer. Detailed information regarding the range of applications can be found in the chapter "Product description".

### 1.5 General safety instructions

The user must observe the safety instructions in this operating instructions manual, the country-specific installation standards as well as all prevailing safety regulations and accident prevention rules.



Further technical information can be found in the Schmersal catalogues or in the online catalogue on the Internet: [www.schmersal.net](http://www.schmersal.net).

The information contained in this operating instructions manual is provided without liability. Subject to technical modifications.



The entire concept of the control system, in which the safety component is integrated, must be validated to EN ISO 13849-2.

There are no residual risks, provided that the safety instructions as well as the instructions regarding mounting, commissioning, operation and maintenance are observed.

## 1.6 Warning about misuse



In case of inadequate or improper use or manipulations of the safety-monitoring module, personal hazards or damages to machinery or plant components cannot be excluded. The relevant requirements of the standard EN 1088 must be observed.

## 1.7 Exclusion of liability

We shall accept no liability for damages and malfunctions resulting from defective mounting or failure to comply with this operating instructions manual. The manufacturer shall accept no liability for damages resulting from the use of unauthorised spare parts or accessories.

For safety reasons, invasive work on the device as well as arbitrary repairs, conversions and modifications to the device are strictly forbidden; the manufacturer shall accept no liability for damages resulting from such invasive work, arbitrary repairs, conversions and/or modifications to the device.

## 2 Product description

### 2.1 Ordering code

This operating instructions manual applies to the following types:

| AES 213① |        |                       |
|----------|--------|-----------------------|
| No.      | Option | Description           |
| ①        | 5      | without start-up test |
|          | 6      | with start-up test    |



Only if the information described in this operating instructions manual are realised correctly, the safety function and therefore the compliance with the Machinery Directive is maintained.

### 2.2 Special versions

For special versions, which are not listed in the order code below 2.1, these specifications apply accordingly, provided that they correspond to the standard version.

### 2.3 Destination and use

The safety-monitoring modules for integration in safety circuits are designed for fitting in control cabinets. They are used for the safe evaluation of the signals of positive break position switches for safety functions or magnetic safety sensors on sliding, hinged and removable safety guards as well as emergency stop control devices.

### Design

The safety-monitoring modules have a dual-channel structure. They include two safety relays with monitored positive action contacts. The NO contacts of the relays, which are wired in series, build the enabling contacts.

## 2.4 Technical data

|   |  |
|---|--|
| Standards:                                      | IEC/EN 60204-1; EN 60947-5-3; EN ISO 13849-1; IEC 61508; BG-GS-ET-14; BG-GS-ET-20      |
| Start conditions                                | Automatic  |
| Feedback circuit available:                     | no   |
| Start-up test:                                  | AES ...5: no; AES ...6: yes  |
| Pull-in delay for automatic start:              | adjustable 0.1 / 1.0 second  |
| Drop-out delay in case of emergency stop:       | < 50 ms  |
| Rated operating voltage $U_e$ :                 | 24 ... 230 VAC/DC  |
| Rated operating current $I_e$ :                 | 0.3 A  |
| Rated insulation voltage $U_i$ :                | 250 V  |
| Rated impulse withstand voltage $U_{imp}$ :     | 4.8 kV   |
| Thermal test current $I_{the}$ :                | 4 A  |
| Internal electronic fuse:                       | no   |
| Power consumption:                              | < 5 W  |
| <b>Input monitoring:</b>                        |  |
| Cross-wire short detection:                     | yes  |
| Wire breakage detection:                        | yes  |
| Earth leakage detection:                        | yes  |
| Number of NC contacts:                          | convertible 1NC→2NC  |
| Number of NO contacts:                          | convertible 1NO→0NO  |
| <b>Outputs:</b>                                 |  |
| Stop category 0:                                | 1  |
| Stop category 1:                                | 0  |
| Number of safety contacts:                      | 1  |
| Number of auxiliary contacts:                   | 0  |
| Number of signalling outputs:                   | 2  |
| Signalling output:                              | 2 transistor outputs, Y1 + Y2 = max. 100 mA, p-type, short-circuit proof               |
| Max. switching capacity of the safety contacts: | 4 A  |
| Utilisation category to EN 60947-5-1:           | AC-15: 230 V / 3 A<br>DC-13: 24 V / 2 A  |
| Max. fuse rating:                               | 4 A gG D-fuse  |
| Mechanical life:                                | > 50 million operations  |
| LED indication:                                 | Wiring diagram   |
| <b>Ambient conditions:</b>                      |  |
| Operating temperature:                          | 0°C ... +55°C  |
| Storage and transport temperature:              | -25°C ... +70°C  |
| Protection class:                               | Enclosure: IP 40<br>Terminals: IP 20<br>Wiring compartment: IP 54                      |
| Degree of pollution:                            | 2  |
| Fixation:                                       | Snaps onto standard DIN rails to DIN EN 60715  |
| Connection type:                                | Screw terminals  |
| Min. cable section:                             | 0.2 mm <sup>2</sup>  |
| Max. cable section:                             | 2.5 mm <sup>2</sup> , solid strand or multi-strand lead (including conductor ferrules) |
| Tightening torque:                              | 0.6 Nm   |
| Max. cable length:                              | 1000 m with 0.75 mm <sup>2</sup> cable   |
| Weight:   | 275 g  |
| Dimensions (H/W/D):                             | 100 x 45 x 121 mm  |

### 2.5 Safety classification

|                   |   |
|-------------------|---|
| Standards:        | EN ISO 13849-1; IEC 61508   |
| PL:               | up to d   |
| Control category: | up to 3   |
| PFH value:        | 1.0 x 10 <sup>-7</sup> / h; applicable for applications with up to max. 50,000 switching cycles / year and max. 80 % contact load. Diverging applications upon request. |
| SIL:              | up to 2   |
| Service life:     | 20 years  |

### 3 Mounting

#### 3.1 General mounting instructions

Mounting: snaps onto standard DIN rails to EN 60715.

#### 3.2 Dimensions

Device dimensions (H/W/D): 100 x 45 x 121 mm

### 4 Electrical connection

#### 4.1 General information for electrical connection



The electrical connection may only be carried out by authorised personnel in a de-energised condition.

Wiring examples: see appendix

### 5 Operating principle and settings

#### Operating principle after the operating voltage is switched on Without start-up test AES 2135

1. The function of the safety-monitoring module is tested.
2. If the safety guard is closed or the emergency stop button released, the enabling paths of the safety-monitoring module will close. The LED is green.
3. The cable and the connected safety switch are only tested when the safety guard is opened or the emergency stop button when actuated

#### With start-up test AES 2136

1. The function of the safety-monitoring module is tested.
2. The safety guard or the emergency stop button must be actuated, in order to check the cables and the connected safety switch (start-up test).
3. If the safety guard is closed or the emergency stop button released, the enabling paths of the safety-monitoring module will close. The LED is green.

If the safety guard is opened or the emergency-stop button is actuated, the enabling paths of the safety-monitoring module will open. The machine is stopped and the LED flashes yellow.

#### Inputs S14/S22

Connect a safety switch with one NC and one NO contact or two safety switches with one contact each or an emergency-stop button at input S14/S22.

#### Safety switch with two NC contacts X3/X4

For safety switches with two NC contacts, a bridge must be established between X3 and X4. In this configuration, the short-circuit detection becomes inoperative.

#### Conversion of the output function X5/X6

By using a bridge between X5 and X6, the output function of the additional outputs can be modified. This control can also be realised when e.g. a PLC is running (24 VDC at terminal X6).

#### Enable delay time X7/X8

By bridging the connections X7/X8, the enable delay time (i.e. time during which after the first closing of the guard, bouncing of the switch contacts or of the entire guard is possible without error message) can be extended from 0.1 s to 1 s. The enable delay time simultaneously is the minimum time, expiring between the guard being closed and the relays being activated.

#### Outputs

##### Enabling path 13-14

NO contacts for safety functions

##### Additional outputs Y1/Y2

without bridge (X5/X6): Y1: indication "release"  
Y2: indication "no release"

with bridge (X5/X6): Y1: indication "guard open"  
Y2: indication "fault"

The additional outputs Y1 and Y2 must not be integrated in the safety circuit; they may only be used for signalling purposes.

### 6 Set-up and maintenance

#### 6.1 Functional testing

The safety function of the safety-monitoring module must be tested. The following conditions must be previously checked and met:

1. Proper fitting of the safety-monitoring module
2. Fitting and integrity of the power cable

#### 6.2 Maintenance

In the case of correct installation and adequate use, the safety-monitoring module features maintenance-free functionality.

A regular visual inspection and functional test, including the following steps, is recommended:

- Check the proper fixation of the safety monitoring module
- Check the cable for damage.

**Damaged or defective components must be replaced.**

### 7 Disassembly and disposal

#### 7.1 Disassembly

The safety monitoring module must be disassembled in the de-energised condition only.

#### 7.2 Disposal

The safety monitoring module must be disposed of in an appropriate manner in accordance with the national prescriptions and legislations.

8 Appendix


8.1 Wiring example

The application examples shown are suggestions. They however do not release the user from carefully checking whether the switchgear and its set-up are suitable for the individual application.

The wiring diagram is shown with guard doors closed and in a de-energised condition. Inductive loads (e.g. contactors, relays, etc.) are to be provided with suitable interference suppression circuitry. Do not connect additional loads to terminal S..

AES 2135/2136

Guard door monitoring by means of a magnetic safety sensor (BNS)

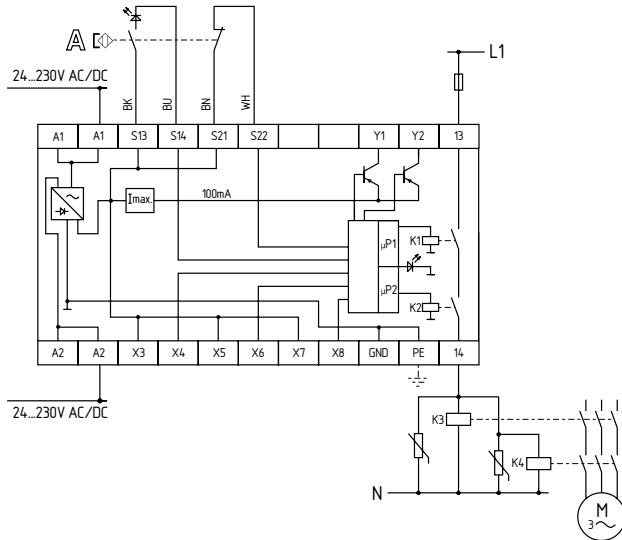

Legend

A Non-contact safety sensor

8.2 Integral System Diagnostics (ISD)

The LED indication of the safety-monitoring modules shows the different switching conditions and errors. The switching conditions are explained in the following tables.

Tables switching condition indication

| Diagnostic LED              | System condition   |
|-----------------------------|--|
| The LED is green.           | Enabling paths closed  |
| LED flashes yellow (0.5 Hz) | Enabling paths open  |
| LED flashes yellow (2 Hz)   | Safety guard closed, however no release; possible causes: incorrect operation (only one contact actuated upon opening) or voltage drop → perform start-up test |

In case of error messages, the LED lights orange intermittently. During these intermissions, the LED flashes one up to seven times with short pulses.

Table error indications



| Indication (orange) LED | Error   | Cause   |
|-------------------------|---|---|
| 1 impulse               | Inputs S1   | Defective supply voltage lead, defective switch, erroneous fitting of the switch; switch only partially actuated for at least 5 s |
| 4 impulses              | Interference signals at the inputs (no safe evaluation assured) | Too high capacitive or inductive interference at the switch's cables or the supply voltage lead                                   |
| 5 impulses              | One or both relays did not close within the monitoring time     | Too low operating voltage $U_e$ ; Defective relay   |
| 6 impulses              | Relay not disabled upon the actuation of the switch             | Relay contact welding   |
| 7 impulses              | Dynamic monitoring of both channels (cross-monitoring)          | Fault in one channel; internal data transmission interrupted failure  |

\* Partial actuation: position of the switch, in which only one contact was actuated.

Deleting the error message

The fault message is deleted once the fault has been rectified and after the connected switch has been actuated to check the various functions.

### 8.3 Declaration of conformity

|  |  |
|--|--|
|    |  |
| <h2>EC Declaration of conformity</h2>  |  |
| Translation of the original declaration of conformity<br>valid as of December 29, 2009   | K.A. Schmersal GmbH<br>Industrielle Sicherheitsschaltssysteme<br>Möddinghofe 30, D - 42279 Wuppertal<br>Germany<br>Internet: www.schmersal.com   |
| We hereby certify that the hereafter described safety components both in its basic design and construction conforms to the applicable European Directives. |  |
| <b>Name of the safety component / type:</b>  | AES 2135 / AES 2136  |
| <b>Description of the safety component:</b>  | Safety monitoring module for non-contact safety switches and safety relay combination in connection with the BNS series magnetic safety switches |
| <b>Harmonised EC-Directives:</b>   | 2006/42/EC EC-Machinery Directive<br>2004/108/ EC EMC-Directive  |
| <b>Person authorized for the compilation of the technical documentation:</b>   | Ulrich Loss<br>Möddinghofe 30<br>42279 Wuppertal   |
| <b>Notified body, which approved the full quality assurance system, referred to in Appendix X, 2006/42/EC:</b>   | TÜV Rheinland Industrie Service GmbH<br>Alboinstrasse 56<br>12103 Berlin<br>ID n°: 0035  |
| <b>Place and date of issue:</b>  | Wuppertal, October 7, 2009   |
| AES 2135-B-EN  |    |
|  | Authorised signature<br>Heinz Schmersal<br>Managing Director   |
|  |  |



#### Note

The currently valid declaration of conformity can be downloaded from the internet at [www.schmersal.net](http://www.schmersal.net).



**K. A. Schmersal GmbH**  
**Industrielle Sicherheitssysteme**  
Möddinghofe 30, D - 42279 Wuppertal  
Postfach 24 02 63, D - 42232 Wuppertal

Telefon +49 - (0)2 02 - 64 74 - 0  
Telefax +49 - (0)2 02 - 64 74 - 1 00  
E-Mail: [info@schmersal.com](mailto:info@schmersal.com)  
Internet: <http://www.schmersal.com>