# **Installation / Monitoring Technique**

VARIMETER IMD Insulation Monitor IN 5880/711, IP 5880/711







# • According to IEC/EN 61 557-8

- For rooms used for medical purposes according to IEC 60364-7-710, DIN VDE 0100-710
- For three-phase and A.C. power systems with 0 ... 500 V and 10 ... 1000 Hz (IT power systems)
- Adjustable alarm value for ground fault  $R_{_{Al}}$  of 50 ... 500  $k\Omega$
- Measuring circuit with broken wire protection
- · As option, programmable for storing or non-storing of errors
- With reset and test button
- Additional external reset and test buttons can be connected
- LED indicators for operation, insulation fault, and interruption of Measuring circuit
- · 2 changeover contacts
- With LED chain for indication of the current insulation status
- IP 5880/711 for connection of the test and display panel UP 5862
- 52.5 mm width

# **Circuit Diagrams**

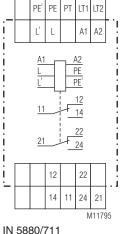

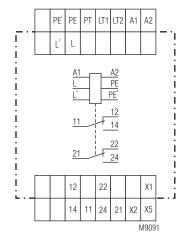

IP 5880/711

# **Connection Terminals**

Terminal designation	Signal designation	
A1, A2	Auxiliary voltage	
L/L'	Connection for monitored IT-systems	
PE / PE'	Connection for protective conductor	
PT	Connection for external test button	
LT1, LT2	Connections for external reset or manual and auto reset: LT1/LT2 bridged: hysteresis function LT1/LT2 not bridged: manual reset	
X1, X2, X5 *)	Connections for external Test and indication panel UP 5862 *)	
11, 12, 14 21, 22 ,24	Alarm signal relay (2 changeover contact)	

<sup>\*)</sup> At IP 5880/711 only

# **Approvals and Markings**



AC

**MED** 

### **Applications**

For insulation monitoring of the IT system of rooms used for medical purposes according to VDE 0100-710:

#### Function

The terminals L/L' and PE/PE' are connected to the respective lines of the IT power system. If the IT transformer has a centre tapping or a star point, the terminals L / L' are preferably connected to this point. The terminals L' and PE' should be connected with separate lines and possibly not in the same place (at least not at the same terminal) of the IT power system to

allow for safe recognition of an interruption in the measuring circle.

The insulation resistance of the IT power system against ground is measured between the terminals L / L' and PE / PE'. If the ground fault resistance  $\rm R_E$  falls below the pickup value  $\rm R_{AL}$  of the line isolation monitor, the red LED "AL" will be illuminated, and the two changeover contacts fall back into normal position. On interruption of the Measuring circuit, the two changeover contacts will likewise fall back into normal position, and the red LED "MK" will be illuminated.

After correction of the error ( $R_{\rm E} > R_{\rm AL}$ , Measuring circuit connected) and jumpered terminals LT1 – LT2 (= error not stored), the changeover contacts will change into work position (correct status), and the red error LEDs will stop lighting.

If you wish to store errors, remove the jumper LT1 - LT2. In this way, also short-lived errors as e.g. a temporary deterioration of insulation, for example by touching of a line or unreliable contact making in the Measuring circuit may trigger a stored alarm: The output contacts remain open also after the error has been corrected. The type of the error can be seen in retrospect from the illuminated error LED "AL" or "MK".


The error memory can be reset by pressing the internal or external reset key, or by switching off the auxiliary voltage.

By pressing the internal or external "Test" key, a deterioration of insulation is simulated in the Measuring circuit (=  $\rm R_{\rm E}$  approx. 40 k $\Omega$ ); thus, the correct response of the isolation monitor is checked.

The IN 5880/711 comprises an 11-stage LED chain for indication of the current insulation resistance of the power system. By means of differently colored LEDs, the insulation status in the range of 20 k $\Omega$  ... 1 M $\Omega$  is indicated. In this way, deterioration of insulation can be detected even before an alarm is triggered.

The IP 5880/711 includes a 11 step LED indicator to monitor the actual state of the insulation, an additional power supply and relays to connect a test and indicator unit UP 5862. The width is 70 mm.

#### **Function Diagram Insulation Monitoring System**

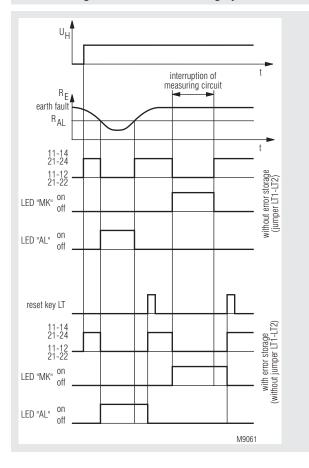

#### Notes

#### General

Before checking insulation and voltage of the system, disconnect the monitoring device IN 5880 from the power source.

### Insulation monitoring system

The isolation monitor is designed to monitor straight AC power systems. Any interfering direct voltages getting into the Measuring circuit will not damage the device but will falsify the conditions in the Measuring circuit while they are affecting it. As insulation measuring is performed via direct current, it will not be falsified by system capacitances against protective ground C<sub>F</sub>. However, the pickup time may be longer in case of insulation failure, in the order of the time constant R<sub>F</sub> times C<sub>E</sub>.

In every IT circuit, only one isolation monitor must be connected.

This has to be observed when coupling voltage system.

**Indicators** 

Green LED "ON": is illuminated when auxiliary voltage has been

applied (operability)

Red LED "AL": is illuminated when an insulation failure is present.

 $R_{E} < R_{AL}$  (value has fallen below alarm level) is illuminated when one of the lines of the

Red LED "MK": Measuring circuit is interrupted (L, L', PE, PE')

11-stage LED chain:

Green LEDs: at  $\geq$  1 M $\Omega$ , 750 k $\Omega$ , 550 k $\Omega$ 

Yellow LEDs: at 400 k $\Omega$ , 300 k $\Omega$ , 220 k $\Omega$ , 160 k $\Omega$ , 110 k $\Omega$ , 75 k $\Omega$ 

Red LEDs: at 40 k $\Omega$ ,  $\leq$  20 k $\Omega$ 

### **Technical Data**

# **Insulation Measuring Circuit**

Nominal voltage U<sub>N</sub>: AC 0 ... 500 V Voltage range: 0 ... 1.1 U<sub>N</sub> Frequency range: 10 ... 1000 Hz,

Alarm value R<sub>AL</sub>: Adjustable from 50 ... 500 k $\Omega$ Internal testing resistor: corresponds to an R<sub>E</sub> of approx. 40 k $\Omega$ 

AC internal resistance: > 250 kODC internal resistance:  $> 250 k\Omega$ 

Measuring voltage: approx. DC 15 V (generated internally)

Max. measuring current

 $(R_{E} = 0)$ : < 50 µA

Response inaccuracy:  $\pm$  15 % + 1.5 k $\Omega$ IEC 61557-8

Max. permissible DC 500 V interfering direct voltage:

Operate delay: with  $R_{\text{AL}}$  = 50 k $\Omega,$  CE = 1  $\mu\text{F}$ 

 $R_{\rm F}$  of  $\infty$  to 0.9  $R_{\rm Al}$ :  $< 1.3 \, s$  $R_{\scriptscriptstyle \square}$  of  $\infty$  to 0 k $\Omega$ : < 0.7 sHysteresis: approx. 15 %

**Auxiliary Circuit** 

AC 220 ... 240 V Auxiliary voltage U\_: Voltage range: 0.85 ... 1.1 U<sub>u</sub>

**Nominal consumption** 

IN 5880/711: approx. 2,5 VA IP 5880/711: approx. 4 VA Nominal frequency: 45 ... 400 Hz

Output

Contacts: 2 changeover contacts

Thermal current I<sub>m</sub>: 4 A

Switching capacity

acc. to AC 15

NO contact: 5 A / AC 230 V IEC/EN 60 947-5-1 2 A / AC 230 V NC contact: IEC/EN 60 947-5-1

**Contact life** 

to AC 15 with 1 A, AC 230V: 5 x 105 operating cycles IEC/EN 60 947-5-1

Short circuit strenght

max. fuse rating: IEC/EN 60 947-5-1

> 30 x 106 operating cycles Mechanical life:

**General Data** 

Nominal operation: Permanent operation

Temperature range:

Operation: - 20 ... + 60 °C Storage: - 25 ... + 70 °C Betriebshöhe: < 2.000 m

Clearance and creepage distances

overvoltage category/

pollution degree: 4 kV / 2 IEC 60 664-1

Insulation test voltage

Routine test: AC 2,5 kV; 1 s

**EMC** 

Static discharge (ESD): 8 kV (air discharge) IEC/EN 61 000-4-2

80 MHz ... 1 GHz:

HF irradiation

10 V / m IEC/EN 61 000-4-3 1 GHz ... 2.5 GHz: 3 V / m IEC/EN 61 000-4-3 2.5 GHz ... 2.7 GHz: 1 V / m IEC/EN 61 000-4-3 Fast transients: 2 kV IEC/EN 61 000-4-4

Surges

between supply lines: 1 kV IEC/EN 61 000-4-5 between wire and ground: IEC/EN 61 000-4-5 2 kV IEC/EN 61 000-4-6 HF-wire guided: 10 V

Interference suppression: Limit value class B EN 55 011

Degree of protection

IP 40 IEC/EN 60 529 Housing: Terminals: IP 20 IEC/EN 60 529

Thermoplast with V0 behavior Housing: according to UL Subject 94

Vibration resistance: Amplitude 0.35 mm

Frequency 10 ... 55 Hz IEC/EN 60 068-2-6

Climate resistance: 20 / 060 / 04 IEC/EN 60 068-1

Terminal designation: EN 50 005

2 08.06.17 en / 872 **Technical Data** 

**Wire connection:** DIN 46 228-1/-2/-3 Cross section: 2 x 2.5 mm<sup>2</sup> solid, or

2 x 1.5 mm<sup>2</sup> stranded wire with sleeve

Stripping length: 10 mm

Wire fixing: Screw terminals with self-lifting

clamping piece IEC/EN 60 999-1

Fixing torque: 0.8 Nm

Mounting: DIN rail IEC/EN 60 715

Net weight

IN 5880/710: approx. 190 g
IN 5880/711: approx. 250 g
IP 5880/711: approx. 350 g

#### **Dimensions**

Width x height x depth

IN 5880/711: 52.5 x 90 x 59 mm IP 5880/711: 70 x 90 x 59 mm

# Standard typs

IN 5880.12/711 AC 220 ... 240 V

Artikelnummer: 0056884

Output: 2 changeover contacts
 Auxiliary voltage U<sub>H</sub>: AC 220 ... 240 V

Width: 52,5 mm
 Adjustable alarm value RAL: 50 ... 500 kΩ

With 11-stage LED chain for indication of the current insulation value

IP 5880.12/711 AC 220 ... 240 V


Artikelnummer: 0057875

Output: 2 changeover contacts
 Auxiliary voltage U<sub>H</sub>: AC 220 ... 240 V
 Width: 70 mm
 Adjustable alarm value RAL: 50 ... 500 kΩ


With 11-stage LED chain for indication of the current insulation value

In addition with connection for test and indicator panel UP 5862

# **Ordering Example**




# **Connection Example**

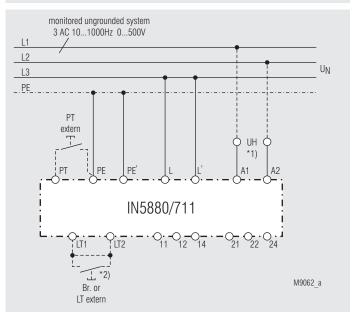

Monitoring of a 3-phase IT power system

# **Connection Example**

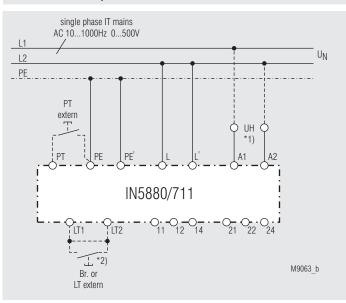

Monitoring of a single phase IT power system


\*1) The auxiliary voltage U<sub>H</sub> (A1 – A2) can also be drawn from the power system to be monitored. However, the voltage range of the auxiliary voltage must be taken into consideration.

\*2) With jumper LT1 – LT2: No storing of error message

(hysteresis behavior)

With jumper LT1 – LT2: Storing of error message; can be deleted

by pressing the Delete (Reset) key LT

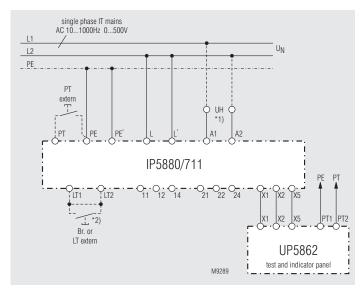

3 08.06.17 en / 872

#### **Accessories**

# Test and indicator panel UP 5862

For insulation monitors in medically used rooms according to IEC 60 364-7-710, DIN VDE 0100-710



- to mount in flush device boxes ø 60 mm, 35 mm deep;
- test button to check the function of the device
- with green LED to indicate operation
- reset button for audible alarm
- with yellow LED to monitor insulation failure


Max. wire length to IN / IP 5880 at wire cross section A =  $0.5 \text{ mm}^2$ : 500 m at wire cross section A =  $1.5 \text{ mm}^2$ : 1000 m

Dimensions (width x height): 80 x 80 mm

Article number: 0041706

# Flush mounting kit

Order reference: KU 4087-150/005659

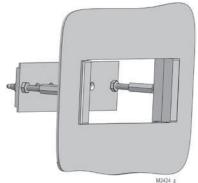


For universal use with:

- I-series devices of 17,5 to 105 mm width
- · easy mounting

# Mounting kit for surface mounting

KU 4087-100

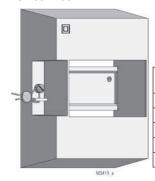

Device of I-series	Width (mm)	Order reference
IK	17.5	KU4087-100/56763
IL	35.0	KU4088-100/56764
IN	52.5	KU4084-100/56765
IP	70.0	KU4089-100/56766
IR	105.0	KU4090-100/56767