Optical laser distance sensors








150 ... 2000mm








- Reflection-independent distance information
- IO-Link/OLED display and key pad for configuration
- Measurement value is indicated in mm on OLED display
- Measurement range and mode adjustable
- Teachable switching output and analogue output

Dimensioned drawing

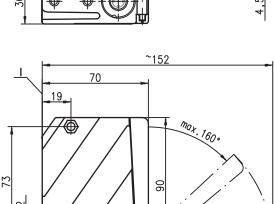




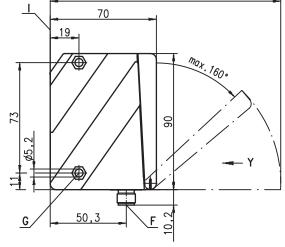




- Green indicator diode
- В Indicator diode yellow С Transmitter
- D Receiver
- Ε Optical axis
- Device plug M12x1
- G Countersinking for SK nut M5, 4.2mm deep
- OLED display and key pad н
- Reference edge for the measurement (cover glass)



Electrical connection

















(available separately)

- Mounting systems
- Cable with M12 connector (K-D ...)
- IO-Link master set MD12-US2-IOL1 (50112085) and K-DS M12A-M12A-4P-2m-PVC cable (50110126)

Specifications

Optical data

Measurement range 1) 150 ... 2000mm Resolution 2) 1 ... 3mm Light source laser

655nm (visible red light) divergent, 2x6mm² at 2m 1.2mW Wavelength Light spot

Max. output power Pulse duration 22 ms

Error limits (relative to measurement distance)

Absolute measurement accuracy 1) $\pm 1.5\%$ ± 0.5 % ≤ 1 % Repeatability 3) B/W detection thresh. (6 ... 90% rem.) Temperature compensation yes 4)

Timing

Measurement time 5) 1 ... 51)ms Response time 1) ≤ 15ms Delay before start-up ≤ 300 ms

Electrical data

Operating voltage U_B Residual ripple 18 ... 30V (incl. residual ripple) \leq 15% of U_B

Open-circuit current ≤ 150mA

Sensor operating mode

COM2 (38.4 kBaud), Frame 2.2, Vers. 1.0, IO-Link

min. cycle time 2.2ms not supported SIO

Indicators

Green LED continuous light ready no voltage off

Yellow LED continuous light object within measurement range

no object within measurement range

Mechanical data metal housing Housing Optics cover diecast zinc glass 380g Weight Connection type M12 connector

Environmental data

Ambient temp. (operation/storage) -20°C ... +50°C / -30°C ... +70°C

Protective circuit 6) 1, 2, 3 II, all-insulated IP 67, IP 69K ⁸⁾ 2 (acc. to EN 60825-1) IEC 60947-5-2 VDE safety class 7) Protection class Laser class

Standards applied

1) Luminosity coefficient 6 % ... 90 %, complete measurement range, at 20 °C, medium range of U_B, measurement

Minimum and maximum value depend on measurement distance

Same object, identical environmental conditions, measurement object ≥ 50x50mm²

Typ. \pm 0.02 %/K

- internal measurement time distance sensor
- 1=transient protection, 2=polarity reversal protection, 3=short circuit protection for all outputs

Rating voltage 250 VAC, with cover closed

IP 69K test in accordance with DIN 40050 part 9 simulated, high pressure cleaning conditions without the use of additives. Acids and bases are not part of the test

Order guide

Designation Part no.

10-Link interface ODSL 96B M/L-2000-S12 50111164

Tables

Diagrams

Remarks

Approved purpose:

This product may only be used by qualified personnel and must only be used for the approved purpose. This sensor is not a safety sensor and is not to be used for the protection of persons.

ODSL 96B M/L-2000... - 01

Optical laser distance sensors

IO-Link process data

Output data device

								a bit							
A15	A14	A13	A12	A11	A10	A9	A8	A7	A6	A5	A4	А3	A2	A1	A0
MSB					16 k	oit m	easu	ireme	ent va	alue					LSB

16 bit measurement value: distance
1 bit output resolution: 1 mm
Signal too weak: 65535
Laser error: 65533

IO-Link service data

Sensors with IO-Link interface can be configured and diagnosed via the service data.

Parameters

Measure mode

A measurement mode for adapting to the application task can be activated with this parameter.

There is a selection of four measurement modes (standard, precision, speed und light suppression). By selecting the mode, the following results are achieved:

- Standard: standard setting
- Precision: high accuracy, approx. 95% slower
- Speed: fast measurement, approx. 30% faster
- Light suppression: higher immunity against external light interference

The following table provides an overview of the effects of the individual parameters on the measurement function.

Measure mode	Accuracy	Measurement time / update	Ambient light	Varying diffuse reflection
Standard	+	+	+	+
Precision	++		+	+
Speed	-	++	+	+
Light suppression	+		++	0

Measurement filter

A measurement filter for adapting to the application task can be activated with this parameter.

There is a selection of three options (off, averaging, center value). By selecting the filter, the following results are achieved:

• Off: no filtering of the measurement values.

• Averasins: a moving average from the last 2 ... 99 measurement values (setting of the number with measurems count)

is calculated and output. If the measurement value changes abruptly, the output value moves linearly over n measurements from the old to the new measurement value. The time until the measurement value is updated is therefore not affected by the number of measurements; the response time for distance changes

slows down.

■ Center value: filtering out of extreme values - the average is calculated from 10 ... 50 individual measurements. The

number of individual measurements used for this purpose is selected via measurem. count (10, 20, 30, 40 or 50). The setting under filter depth specifies whether only the most extreme (coarse), the middle

(medium) or the lowest deviations (fine) should be filtered out.

The following table provides an overview of the effects of the individual parameters on the measurement function.

	Updating measurement time	Response time for small change in distance	Response time for large change in distance	Filtering of individual faulty measurements	Filtering of cumulative faulty measurements
Off	+	+	+		
Averaging	+	-	-	0	-
Center value		-	-	++	+

Number of measurement values (averaging)

This parameter defines the number of individual measurements which are used for filtering.

Number of measurement values (center value)

This parameter defines the number of individual measurements which are used for filtering.

Filter depth (center value)

This parameter defines the filter gauge (medium, coarse, fine).

Display

This parameter determines the display setting on the sensor (on, off, auto).

Button lock

This parameter determines whether the key pad on the sensor is locked or activated.

ODSL 96B M/L-2000... - 01 2012/03

Optical laser distance sensors

System commands:

Laser transmitter activation

This system command switches on the laser transmitter.

Laser transmitter deactivation

This system command switches off the laser transmitter.

If the sensor is deactivated, the last measurement value detected is frozen. The state of the laser can be seen from the sensor status.

Setting to factory setting

This system command restores the factory settings of the sensor.

Diagnostics (observation)

Signal too weak [process value 65535] or laser failure [process value 65533]

Reception signal is not sufficient: either no object is in the measurement range or the signal from the object is too weak for detection. A displayed laser failure signalizes interference of the laser light source.

Signal warning

Low reception signal: the object is not detected reliably, e.g. because the signal from the object is very weak.

Laser activation

Status information on whether the laser transmitter is activated or deactivated.

Measurement range sensor

Status information on whether an object is located in the measurement range of the sensor.

	Notice! If parameters are changed on the device via the display and keyboard, the master is not signaled. In the event the master sends an explicit request, however, the changed value is available.
0	Notice! Detailed information about the IO-Link service data and the IODD can be found at www.leuze.com .

Working safely



Attention Laser Radiation!

The optical distance sensors ODSL 96B operate with a red light laser of class 2 acc. to EN 60825-1. If you look into the beam path over a longer time period, the retina of your eye may be damaged!

Never look directly into the beam path! Do not point the laser beam of the ODSL 96B at persons!

When mounting and aligning the ODSL 96B take care to avoid reflections of the laser beam off reflective surfaces!

The use of operating and adjusting devices other than those specified in the technical description, carrying out of differing procedures, or improper use of the optical laser distance sensor may lead to dangerous exposure to radiation!

The use of optical instruments or devices in combination with the device increases the danger of eye damage! Adhere to the applicable legal and local regulations regarding protection from laser beams acc. to EN 60825-1 in its latest version.

The ODSL 96B uses a laser diode with low power in the visible red light range with an emitted wavelength of about 655nm.

The glass optics cover is the only opening through which the laser radiation can escape from the device. The housing of the ODSL 96B is sealed and has no parts that need to be adjusted or maintained by the user. The device must not be tampered with and must not be changed in any way! The destruction of the seal voids the warranty!

ĭ

Notice!

It is important to attach the stick-on labels delivered with the device (notice signs)! If the signs could be covered due to the installation location of the ODSL 96B, attach them close to the ODSL 96B so that it is not possible to look into the laser beam when reading the notices!

ODSL 96B M/L-2000... - 01 2012/03