

# Technical data sheet · Fittings for C-track cables RB

Cable fittings and accessories



<b>Identification</b>	Type	RB M M 40
	Part-No.	600386

## Use/Area of application

### Properties

- Cable fitting with hexagon base
- Strain relief through strain relief ferrule
- Seal and O-Ring
- With the Lütze-RB fittings and SUPERFLEX-cables the risk of a wire break on frequently moving machine parts is virtually eliminated
- **Application:** Slide the upper part of the RB fittings onto the control cable. Screw in the lower part of the RB fittings into the machine part or the enclosure and tighten. Subsequently remove the control cable jacket and strip the insulation and screw on the upper part of the RB fitting onto the lower part and tighten. Fix the outer end of the strain relief ferrule with a cable tie.

## Technical data

Strain relief	Yes
Material	Brass nickel-plated
Protection class	IP 65
SW	50 mm
Gasket	Neoprene
O-Ring (OR)	Perbunan®
Clamping range D	18.0 – 28.0 mm
Strain relief ferrule	Stainless steel W No. 4301
weight approx.	14.20 kg/100 piece

24.11.2007 – Subject to technical modification

Part-No. 600386

USA: LUTZE INC.

13330 South Ridge Drive • Charlotte, NC 28273  
Tel.: +1 (704) 504-0222 • Fax: +1 (704) 504-0223  
www.lutze.com • info@lutze.com

United Kingdom: LÜTZE Ltd.

Unit 3 Sandy Hill Park  
Sandy Way, Amington • GB-Tamworth, Staffs, B77 4DU  
Tel.: +44 (0)1827 31333-0 • Fax: +44 (0)1827 31333-2  
www.lutze.com • sales.gb@lutze.co.uk



Systematic Technology

# Technical data sheet · Fittings for C-track cables RB

Thread M 40

## Design

G M 40  
L 1 9.0 mm  
L 38.0 mm  
SW 50 mm


## General

PU 1 piece  
Note With the Lütze-RB fittings and SUPERFLEX-cables the risk of a wire break on frequently moving machine parts is virtually eliminated.

### Application

Slide the upper part of the RB fittings onto the control cable.  
Screw in the lower part of the RB fittings into the machine part or the enclosure and tighten.  
Subsequently remove the control cable jacket and strip the insulation and screw on the upper part of the RB fitting onto the lower part and tighten.  
Fix the outer end of the strain relief ferrule with a cable tie.

## Dimensions

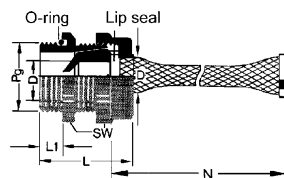

24.11.2007 – Subject to technical modification

Part-No. 600386

USA: LUTZE INC.

13330 South Ridge Drive • Charlotte, NC 28273  
Tel.: +1 (704) 504-0222 • Fax: +1 (704) 504-0223  
www.lutze.com • info@lutze.com

United Kingdom: LÜTZE Ltd.

Unit 3 Sandy Hill Park  
Sandy Way, Amington • GB-Tamworth, Staffs, B77 4DU  
Tel.: +44 (0)1827 31333-0 • Fax: +44 (0)1827 31333-2  
www.lutze.com • sales.gb@lutze.co.uk