

## **Model Number**


# MLV12-54/76b/124/128

Retroreflective sensor with metal connector M12; 5-pin, 90° convertible


### **Features**

- ٠ Robust photoelectric sensor series in a widely used standard housing
- Resistant against noise: reliable ope-٠ ration under all conditions
- Clear and functional display concept for the operating modes
- High level of stability thanks to the me-٠ tal housing frame
- Tightly sealed thanks to welded plas-٠ tic components
- Suitable for operation at low tempera-٠ tures down to -40 °C




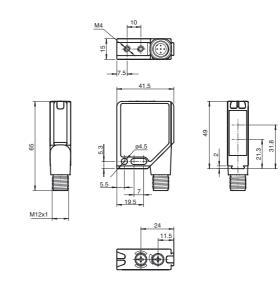


## **Electrical connection**

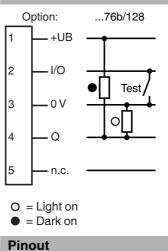

# Indicators/operating means





1	Operating display greer		
2	Switch state yellow		
3	Light/dark switch		
4	Sensitivity adjuster		
5	Optical axis emitter		
6	Optical axis receiver		

Pepperl+Fuchs Group www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Technical data			Accessories
General specifications			OMH-MLV12-HWG
Effective detection range		0 6.5 m	Mounting bracket for series MLV12 ser
Reflector distance		0.01 6.5 m	sors
Threshold detection range		9 m	
Reference target		H85-2 reflector	OMH-MLV12-HWK
Light source		LED	Mounting bracket for series MLV12 ser
Light type		modulated visible red light , 660 nm	sors
Diameter of the light spot		approx. 170 mm at detection range 6.5 m	ОМН-К01
Angle of divergence		1.5 °	
Ambient light limit			dove tail mounting clamp
Continuous light		50000 Lux	ОМН-К02
Modulated light		5000 Lux	dove tail mounting clamp
Functional safety related param	neters		
MTTF <sub>d</sub>	leter 3	1000 a	OMH-K03
Mission Time (T <sub>M</sub> )		20 a	dove tail mounting clamp
Diagnostic Coverage (DC)		90 %	0
Indicators/operating means			ОМН-06
		LED green, flashes in case of short-circuit	Mounting aid for round steel ø 12 mm o
Operating display		5 ,	sheet 1.5 mm 3 mm
Function display		2 LEDs yellow, light up when light beam is free, flash when falling short of the stability control, off when light beam is interrupted	Other suitable accessories can be found
Controls		rotary switch for light/dark, sensitivity adjuster	www.pepperl-fuchs.com
Electrical specifications			F-FF
Operating voltage	UB	10 30 V DC	
Ripple		max. 10 %	
No-load supply current	I <sub>0</sub>	max. 40 mA	
Input			
Test input		emitter deactivation at 0 V	
Output			
Switching type		light/dark on switchable	
Signal output		1 push-pull (4 in 1) output, short-circuit protected, reverse pola- rity protected	
Switching voltage		max. 30 V DC	
Switching current		max. 0.2 A	
Voltage drop	Ud	≤ 2.5 V DC	
Switching frequency	f	1000 Hz	
Response time		0.5 ms	
Ambient conditions			
Ambient temperature		-40 60 °C (-40 140 °F)	
Storage temperature		-40 75 °C (-40 167 °F)	
Mechanical specifications		ID67	
Protection degree Connection		IP67 Metal connector, M12, 5-pin, 90° rotatable	
		wetar connector, witz, 3-pin, 90 Totatable	
Material Housing		Frame: nickel plated, die cast zinc,	
Optical face		Laterals: glass-fiber reinforced plastic PC Plastic pane	
Mass		60 g	
Compliance with standards and	d direct	-	
ves	a un col		
Standard conformity		EN 00047 5 0.0007	
Product standard		EN 60947-5-2:2007 IEC 60947-5-2:2007	
Shock and impact resistance		IEC / EN 60068. half-sine, 40 g in each X, Y and Z directions	
Vibration resistance		IEC / EN 60068-2-6. Sinus. 10 -150 Hz, 5 g in each X, Y and Z	
งามาลแบบ เ เธอเอเล่มใชช		directions	
Approvals and certificates			
Protection class		II, rated voltage $\leq$ 300 V AC with pollution degree 1-2 accor-	
		ding to IEC 60664-1	
III annroval		d II us	

UL approval CCC approval cULus CCC approval / marking not required for products rated ≤36 V

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group

www.pepperl-fuchs.com

2


Germany: +49 621 776 4411


fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



## **Curves/Diagrams**

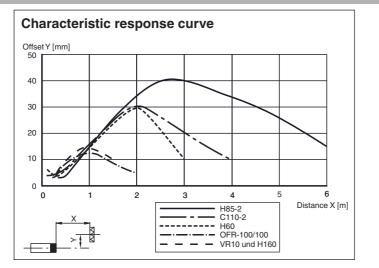

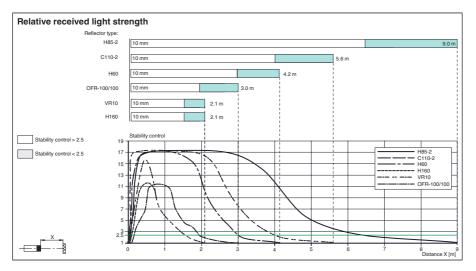

# Additional Information

## **Conventional use**

The reflex light beam switch contains the emitter and receiver in a single housing. The light from transmitter is beamed back from a reflector to the receiver. If an object interrupts the light beam the switching function is initiated.

# Mounting instructions

The sensor can be fastened over the through-holes directly or with a support angle or clamping components (this are not contained in the scope of supply).

The base surface must be flat to avoid distorting the housing during mounting. It is advisable to secure the bolts and screws with washers to prevent misalignment.

# Adjustment instructions

Connect the sensor to operating voltage, the LED green lights up constantly.

Mount suitable reflector opposite light beam switch and align roughly.

The exact adjustment takes by swivelling the sensor horizontally and vertically. With optimum light reception the yellow LED lights up constantly. They flash if setting is inexact.

## **Object detection check**

Move the object into the light beam. If the object is recorded, the yellow LED switch off. If it does not switch off, reduce the sensitivity with the potentiometer until the switches off. It should lights up constantly on again when the object is removed.

# Lustration

The yellow LED flashes if reception deteriorates (e.g. soiled lenses.)

We recommend that you clean the optical interfaces and check the plug- and screw connections at regular intervals.

115230 eng.xml 2013-05-13 Date of issue: Release date: 2013-04-18 17:06

