



CE







## **Model Number**

#### M7/MV7/59/76a/103/115

Thru-beam sensor with 2 m fixed cable


### **Features**

- Reliable sensor for standard applications
- Miniature design with versatile mounting options
- Automatic adjustment of sensitivity via TEACH-IN
- Resistant against noise: reliable operation under all conditions
- · Certified by ECOLAB

### **Product information**


Small, robust, effective, and reliable - these are the properties of the ML7 sensor series. Due to their small size, number of versions, and two different lens positions, they are particularly suited for installation in tight spaces. The robust design and high quality of Pepperl+Fuchs mean they can also be used under harsh environmental conditions. The efficient technology, switching frequencies up to 1000 Hz, high resistance to ambient light, and 4-in-1 output make the series suitable for non-contact object detection.

### **Dimensions**

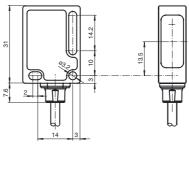




#### **Electrical connection**

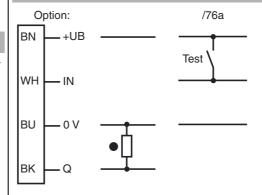

- O = Light on
- = Dark on

### Indicators/operating means

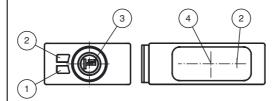

1	Operating display	green
2	Signal display (Receiver)	yellow
3	Teach-In button (Receiver)	
1	Ontical center	

www.pepperl-fuchs.com

Technical data		
System components		
Emitter		M7/76a/115
Receiver		MV7/59/103/115
General specifications		
Effective detection range		0 3.5 m
Threshold detection range		4.5 m
Light source		LED
Light type		modulated visible red light
Target size		min. 7 mm
Diameter of the light spot		approx. 180 mm at a distance of 3.5 m
Angle of divergence		approx. 3 °
Ambient light limit		40000 Lux
Functional safety related parameters	eters	
MTTF <sub>d</sub>		1130 a
Mission Time (T <sub>M</sub> )		20 a
Diagnostic Coverage (DC)		60 %
Indicators/operating means		
Operating display		Receiver: LED green, flashes in case of short-circuit Emitter: LED green
Function display		Receiver: LED yellow, lights up when light beam is free, flashes when falling short of the stability control
Controls		Receiver: TEACH-IN key
Electrical specifications		
Operating voltage	$U_B$	10 30 V DC , class 2
Ripple		max. 10 %
No-load supply current	I <sub>0</sub>	Emitter: ≤ 17 mA Receiver: ≤ 15 mA
Input		
Test input		emitter deactivation at +U <sub>B</sub>
Output		
Switching type		dark on
Signal output		1 PNP output, short-circuit protected, reverse polarity protected, open collector
Switching voltage		max. 30 V DC
Switching current		max. 100 mA
Voltage drop	$U_d$	≤ 1.5 V DC
Switching frequency	f	1000 Hz
Response time		0.5 ms
Ambient conditions		
Ambient temperature		-20 60 °C (-4 140 °F)
Storage temperature		-40 75 °C (-40 167 °F)
Mechanical specifications		
Protection degree		IP67 / IP69K
Connection		2 m fixed cable
Material		
Housing		PC (glass-fiber-reinforced Makrolon)
Optical face		PMMA
Mass		approx. 100 g (emitter and receiver)
Compliance with standards and ves	directi-	
Standard conformity		
Product standard		EN 60947-5-2:2007 IEC 60947-5-2:2007
Standards		EN 50178, UL 508
Approvals and certificates		
Protection class		II, rated voltage ≤ 250 V AC with pollution degree 1-2 according to IEC 60664-1
UL approval		cULus
000		CCC approval / moreling pat to guite differ products rated < 26 V

### **Accessories**

## Montagekit OMH-ML7-01

Mounting set consisting of bracket OMH-ML-01 sheet OMH-ML7-03, and fastening material

## Montagekit OMH-ML7-02

Mounting set consisting of bracket OMH-ML-02 sheet OMH-ML7-03, and fastening material

## OMH-ML7-01

Mounting bracket

#### **OMH-ML7-02**

Mounting bracket

### **OMH-ML7-03**

Fixing plate


Other suitable accessories can be found at www.pepperl-fuchs.com


**EPPERL+FUCHS** 

CCC approval

CCC approval / marking not required for products rated ≤36 V

# **Curves/Diagrams**

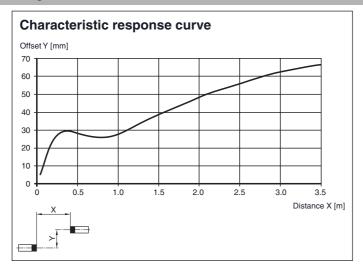

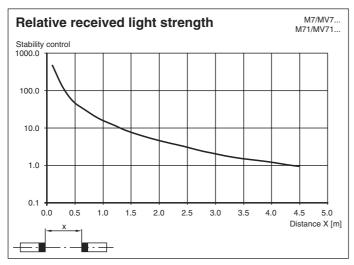

## Teach-In

Connect the sensors to operating voltage, the green LEDs green lights up constantly.

The receiver operates at max. sensitivity (delivery status) or with the last teached values.

- Mount transmitter and receiver opposite each other and align roughly.
- Adjust the transmitter to the receiver.
- Press the Teach-In button on the receiver as an acknowledgement the green LED will quickly turn off one time.
- Press the Teach-In button on the receiver until both LEDs green and yellow are blinking in parallel (2 Hz). Release the Teach-In button now.
- While the green and yellow LEDs are blinking alternating (2 Hz) on the receiver the unit is in the internal set up procedure.
- Teach-In successful: Both LEDs green and yellow on the receiver are on. The unit is ready to use and in switching mode now.
- Teach-In not successful: Both LEDs on the receiver are flashing alternating (4 Hz) for approx. 5 seconds. Afterwards the sensor returns to max. sensitivity setting. Please retry the Teach-In procedure beginning by step 1.