Dimensions



Model Number

ML7-6/59/82b/103/143

Retroreflective sensor


with 4-pin, M8 x 1 connector

Features

- Reliable sensor for standard applications
- Miniature design with versatile mounting options
- Automatic adjustment of sensitivity via TEACH-IN
- Resistant against noise: reliable operation under all conditions
- · Certified by ECOLAB


Product information

Small, robust, effective, and reliable - these are the properties of the ML7 sensor series. Due to their small size, number of versions, and two different lens positions, they are particularly suited for installation in tight spaces. The robust design and high quality of Pepperl+Fuchs mean they can also be used under harsh environmental conditions. The efficient technology, switching frequencies up to 1000 Hz, high resistance to ambient light, and 4-in-1 output make the series suitable for non-contact object detection.

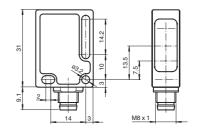




Electrical connection

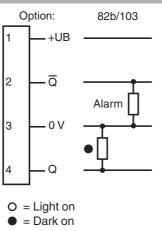

Pinout



Indicators/operating means



1	Operating display	green
2	Signal display	yellow
3	TEACH-IN button	
4	Emitter	
5	Receiver	

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



UL approval

CCC approval

Technical data			Accessories	
General specifications			Menterekit ONH MI 7.01	
Effective detection range		0 3 m	Montagekit OMH-ML7-01	
Reflector distance		0.02 3 m	Mounting set consisting of bracket OMH- ML-01 sheet OMH-ML7-03, and faste- ning material	
Threshold detection range		3.5 m		
Reference target		H85-2 reflector		
Light source		LED	Montagekit OMH-ML7-02	
Light type		modulated visible red light	Mounting set consisting of bracket OMH- ML-02 sheet OMH-ML7-03, and faste-	
Diameter of the light spot		approx. 180 mm at a distance of 3.5 m		
Angle of divergence		approx. 3 °		
Ambient light limit		40000 Lux	ning material	
Functional safety related parameters			OMH-ML7-01	
MTTFd		1530 a	Mounting bracket	
Mission Time (T _M)		20 a	Mounting bracket	
Diagnostic Coverage (DC)		0 %	OMH-ML7-02	
Indicators/operating means			Mounting bracket	
Operating display LED green, flashes in case of short-circuit				
Function display		LED yellow, lights up when light beam is free, flashes when fal- ling short of the stability control	OMH-ML7-03 Fixing plate	
Controls		TEACH-IN key		
Electrical specifications		,	V31-WM-2M-PUR	
Operating voltage	U _B	10 30 V DC , class 2	4-pin, M8 socket, PUR cable	
Ripple	чB	max. 10 %	Vot ON ON DUD	
No-load supply current	I ₀	< 20 mA	V31-GM-2M-PUR	
Output	•0		4-pin, M8 socket, PUR cable	
Pre-fault indication output		1 PNP, inactive when level falls below function reserve after	Suitable reflectors and cable sockets can be	
		approx. 5 s. Immediately inactive if the beam is interrupted 4 times during the flashtime.	found in the Internet	
Switching type		dark on		
Signal output		1 PNP output, short-circuit protected, reverse polarity protected, open collector		
Switching voltage		max. 30 V DC		
Switching current		max. 100 mA		
Voltage drop	U _d	≤ 1.5 V DC		
Switching frequency	f	1000 Hz		
Response time		0.5 ms		
Ambient conditions				
Ambient temperature		-20 60 °C (-4 140 °F)		
Storage temperature		-40 75 °C (-40 167 °F)		
Mechanical specifications				
Protection degree		IP67 / IP69K		
Connection		M8 x 1 connector, 4-pin		
Material				
Housing		PC (glass-fiber-reinforced Makrolon)		
Optical face		PMMA		
Connector		plastic		
Mass		approx. 10 g		
Compliance with standards a ves	nd direct	F.		
Standard conformity				
Product standard		EN 60947-5-2:2007 IEC 60947-5-2:2007		
Standards		EN 50178, UL 508		
Approvals and certificates				
Protection class		II, rated voltage \leq 250 V AC with pollution degree 1-2 according to IEC 60664-1		

Date of issue: 2013-05-13 127464_eng.xml Release date: 2013-04-18 14:38

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group

2

cULus


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com


CCC approval / marking not required for products rated ≤36 V

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Curves/Diagrams

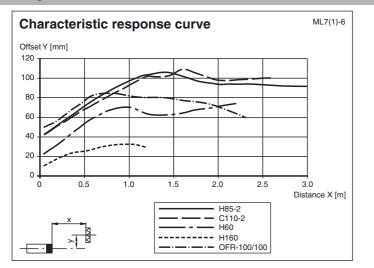

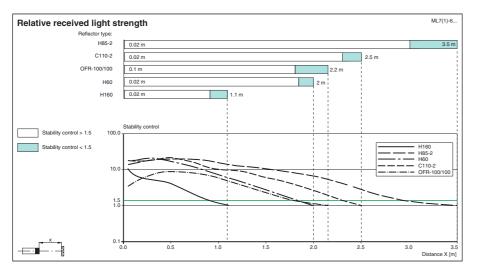

Teach-In

Connect the sensor to operating voltage, the LED green lights up constantly. The sensor operates at max. sensitivity (delivery status) or with the last teached values.

Mount suitable reflector opposite light beam switch.

- Adjust the unit to the reflector.
- Press the Teach-In button as an acknowledgement the green LED will quickly turn off one time.
- Press the Teach-In button until both LEDs green and yellow are blinking in parallel (2Hz). Release the Teach-In button now.
- While the green and yellow LEDs are blinking alternating (2 Hz) the unit is in the internal set up procedure.
- Teach-In successful: Both LEDs green and yellow are on. The unit is ready to use and in switching mode now.
- Teach-In not successful: Both LEDs are flashing alternating (4 Hz) for approx. 5 seconds. Afterwards the sensor returns to max. sensitivity setting. Please retry the Teach-In procedure beginning by step 1.

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

