
Thru-beam sensor



Dimensions

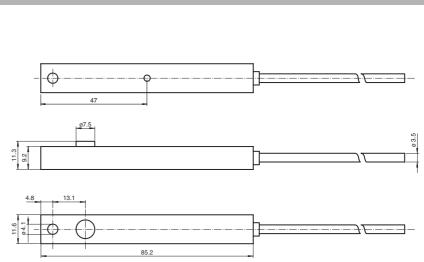

CE

Model Number

ML29-P/59/103/115


Thru-beam sensor with fixed cable

Features

- Single-beam monitoring with extre-• mely narrow sensor
- Integrated circuit ٠
- Test •
- Simple installation Plug & Play
- Ideal for installation in door profiles or ٠ frames
- Dark on version

Product information

The narrow miniature thru-beam sensors are a small and cost-effective solution, fitting in virtually any door frame. The ML29 and ML30 series offer fast, reliable detection at a distance of up to 8.5 m. The sensors are easy to mount on the profile, either using adhesive strips or a screw. A large opening angle ensures problem-free alignment. Several sensors can be mounted in a cross formation to offer multi-beam protection.

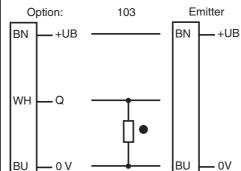


Electrical connection





Indicators/operating means



Pepperl+Fuchs Group

www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001

fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Technical data			Typical applications		
System components			Person detection for automatic doors and		
Emitter		ML29-T/115	gates		
Receiver		ML29-R/59/103/115	 Closing edge protection on sliding and 		
General specifications			revolving doors		
Effective detection range		0 6 m	Threshold monitoring for elevator doors		
Threshold detection range		8.5 m	Step monitoring for doors on public trans-		
Light source		IRED	port vehicles		
Light type		modulated infrared light	 Trigger function for restarting escalators 		
Angle of divergence		+/- 8 °			
Optical face		lateral	Detection area		
Ambient light limit		40000 Lux	Detection area		
Functional safety related part	ameters				
MTTFd		880 a			
Mission Time (T _M)		20 a			
Diagnostic Coverage (DC)		0 %			
Indicators/operating means					
Function indicator		LED red in receiver : lights up when receiving the light beam			
Electrical specifications		5 1 5 5			
Operating voltage	UB	11 30 V DC			
No-load supply current	I ₀	Emitter: ≤ 25 mA			
	.0	Receiver: ≤ 10 mA			
Input					
Test input		Test: Transmitter switches off at +UB \leq 5 V DC			
Output					
Switching type		dark on			
Signal output		1 PNP output, short-circuit protected, reverse polarity protected, open collector			
Switching voltage		max. 30 V DC			
Switching current		max. 0.1 A			
Switching frequency	f	100 Hz			
Response time		5 ms	Accessories		
Ambient conditions			Accessories		
Ambient temperature		-20 60 °C (-4 140 °F)	ML29 Front Plate		
Storage temperature		-20 75 °C (-4 167 °F)	Front plate for thru-beam sensors in se-		
Relative humidity		90 %, noncondensing	ries ML29		
Mechanical specifications					
Degree of protection		IP65	Other suitable accessories can be found a		
Connection		6 m fixed cable	www.pepperl-fuchs.com		
Material		0 milixed cable			
Housing		PMMA , black			
Optical face		Plastic pane			
Mass		per device 120 g			
Compliance with standards a	and direct				
Ves Standard conformity					
Standard conformity Product standard		EN 60947-5-2:2007			
		IEC 60947-5-2:2007			
Standards		EN 61000-6-2, EN 61000-6-3			
Approvals and certificates					

CCC approval

Curves/Diagrams

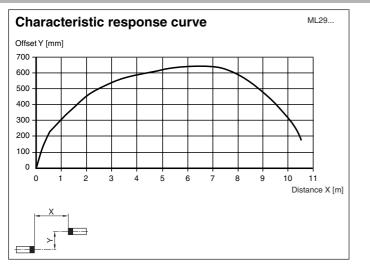

Release date: 2015-02-05 09:15 Date of issue: 2015-02-05 129315_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

CCC approval / marking not required for products rated ≤36 V

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



2

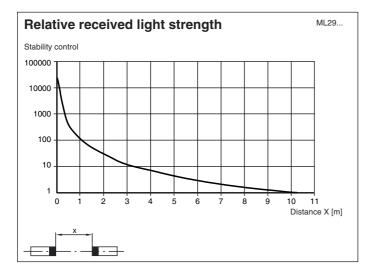

Function principle

The thru-beam sensor requires a pair of devices for operation, comprising a light transmitter and a light receiver. The emitter and receiver must be arranged in optical alignment with each other. The infrared light from the emitter is detected by the receiver and evaluated.

Function

Static detection:

The thru-beam sensor detects persons and objects independently of movement and surface structure for as long as the object breaks the detection beam.

		Electronic output
Light detection /05	Person in the beam	Inactive
Light detection /25	No person in the beam	Active
Dark data stien (50	Person in the beam	Active
Dark detection /59	No person in the beam	Inactive

Optics:

The relatively wide opening angles enable the light beam switches to be installed quickly, without alignment problems. Even if there is a light distortion of the installation profiles the function is retained.

Testing:

Testing is used to check the function of the light beam switch.

With supply voltage +U_B < 5 V the emitter device is switched off. This simulates a light beam interruption. By means of this, the function of the light barrier can be tested easily without using a separate test input.

Installation:

Thanks to its small dimensions, the light beam can be fitted in a U-profile or behind a face panel. The hole diameter for both the emitter and the receiver is 8 mm.


Even fixing by means of the adhesive tape contained in the delivery package can be considered.

Installation of twin-beam arrangement:

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com



A twin-beam version requires 2 emitters and receivers. Care should be taken that the beam separation is not less than 20 cm. The transmitters and receivers must be arranged in the form of a cross.

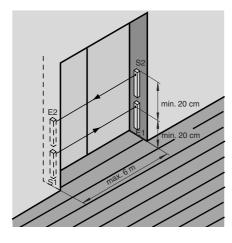



4