

CE

Model Number

UB500-F42-U-V15


Single head system

Features

- Analogue output 0 V ... 10 V
- Extremely small unusable area
- **TEACH-IN**
- Interference suppression (adjustable width of sound cone in close range)
- **Temperature compensation**
- **Synchronization options**
- Mode of operation adjustable

Curves

Characteristic response curve

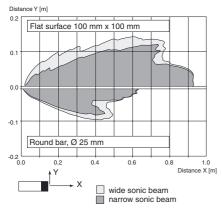

Technical data

General	specifications
0 : -	

30 ... 500 mm Sensing range 50 ... 500 mm Adjustment range 0 ... 30 mm Unusable area Standard target plate 100 mm x 100 mm approx. 390 kHz Transducer frequency Response delay approx. 50 ms

Indicators/operating means

LED green permanently green: Power on LED yellow permanent: object in evaluation range flashing: program function

LED red normal operation: "fault" program function: no object detected

Electrical specifications

Operating voltage U_B 17 ... 30 V DC , ripple 10 %SS

No-load supply current I₀ ≤ 50 mA

Input/output

Synchronization bi-directional 0 level -U_{B...+1} V 1 level: +4 V...+U_B

input impedance: > 12 KOhm

synchronization pulse: ≥ 100 µs, synchronization interpulse

< 95 Hz

Synchronization frequency Common mode operation

≤ 95/n Hz, n = number of sensors Multiplex operation

Output

Output type 1 analogue output 0 ... 10 V Default setting

evaluation limit A1: 50 mm, evaluation limit A2: 500 mm, wide beam width

Resolution 0.2 mm at max. sensing range

Deviation of the characteristic curve ± 1 % of full-scale value

± 0.1 % of full-scale value Repeat accuracy Load impedance > 1 kOhm

Temperature influence ± 1 % of full-scale value

Ambient conditions

Ambient temperature -25 ... 70 °C (248 ... 343 K) Storage temperature -40 ... 85 °C (233 ... 358 K)

Mechanical specifications

Protection degree IP54

Connection connector V15 (M12 x 1), 5 pin

Material

Housing

Transducer epoxy resin/hollow glass sphere mixture; foam

polyurethane, cover PBT

Mass 140 g


Compliance with standards and directives

Standard conformity

EN 60947-5-2:2007 Standards


IEC 60947-5-2:2007 EN 60947-5-7:2003 IEC 60947-5-7:2003

Dimensions

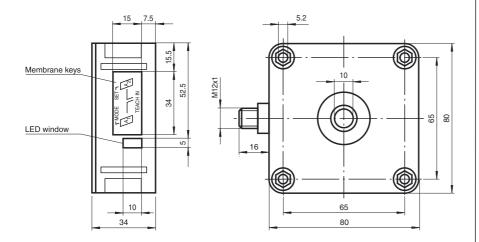

Electrical Connection





Core colours in accordance with EN 60947-5-2.

Pinout

Connector V15



Functional Description


The sensor may be completely parameterised via two keys on the side panel of the housing. As a special feature provided by this sensor, the ultrasound beam width may be adapted to the environmental conditions at the place of operation of the sensor.

Specifying the evaluation limits:

The evaluation limits determine the characteristic line and the working range of the analog output.

Additional Information

Analogue output programmation

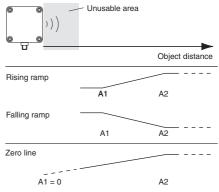

Accessories

MH 04-3505

Mounting aid

MHW 11

Mounting aid

DA5-IU-2K-V

Process control and indication equipment

V15-G-2M-PVC

Cable connector

V15-W-2M-PUR

Cable connector

mode is exited.

The A2 evaluation limit is specified via the A2 key, analogous to the description above.

Alternatively, the evaluation limits may also be specified electrically via the learn input. To specify the A1 evaluation limit, the learn input must be connected to

 $-U_B$; to specify the A2 evaluation limit, it must be connected to $+U_B$. Specified values are saved upon the disconnection from the learn input.

Evaluation limits may only be specified within the first 5 minutes after Power on. To modify the evaluation limits later, the user may specify the desired values only after a new Power On.

Proceed as follows to parameterise the output function and the ultrasound beam width:

Press the A1 key during Power on and hold down the key for another second to ensure that the sensor starts the two-step parameterisation of the operating modes.

Step 1, parameterisation of the output function

The output function parameterised last is displayed. All output functions available may be selected via consecutive, brief strokes of the A2 key. These strokes are visualised via short flashes of the green LED.

Operating mode	Flash sequence of the green LED	A2 key
Rising edge	pause -	
Falling edge		\
Zero point straight line		

The "Zero point straight line" setting fixedly specifies the A1 evaluation limit to 0 (see specification of the evaluation limits). The A2 evaluation limit determines the steepness of the output characteristic line.

Hold down the A1 key for 2 seconds to save the selected output mode, complete the parameterisation and ensure that the sensor returns to normal mode. If you briefly press the A1 key, Step 2 is entered (parameterisation of the ultrasound beam width).

Step 2, parameterisation of the ultrasound beam width

Via Step 2, the ultrasound beam width may be adapted to the requirements of the corresponding application.

The beam width parameterised last is displayed first. Available beam width settings may be selected via consecutive, brief strokes of the A2 key. These strokes are visualised via the flash sequence of the red LED.

Beam width	Flash sequence of the red LED	A2 key
Small beam	pause -	
Medium beam		
Large beam	pause pause	

Hold down the A1 key for 2 seconds to save the selected beam shape, terminate the parameterisation and ensure that the sensor returns to normal mode. Briefly press the A1 key to return to Step 1 (parameterisation of the output function).

If the parameterisation mode is not terminated within 5 minutes (hold down the A1 key for 2 seconds), the sensor aborts this mode without modifying the settings.

Synchronisation

The sensor provides a synchronisation port to suppress mutual influencing. If this port has not been connected, the sensor works at an internally generated cycle rate. Several sensors may be synchronised via the following options.

External synchronisation:

The sensor may be synchronised via the external application of a square wave voltage. A synchronisation pulse on the synchronisation input initiates a measuring cycle. The pulse width must be greater than $100 \, \mu s$. The measuring cycle is started with the falling edge. A low level > 1 s or an open synchronisation input initiate the transition to normal sensor mode. A high level on the synchronisation input deactivates the sensor.

Two modes are possible:

- Several sensors are controlled via the same synchronisation signal. The sensors work in common mode.
- The synchronisation pulses are forwarded at cyclic intervals to respectively one single sensor. The sensors work in multiplex mode.

Self-synchronisation:

The synchronisation ports of up to 5 sensors suitable for self-synchronisation are connected to each other. These sensors work in multiplex mode after Power on. The On delay increases depending on the number of sensors to be synchronised. While the learn mode is active, no synchronisation is possible (and vice-versa). To specify the switching points, the sensors must be operated in non-synchronised mode.

Note:

If the synchronisation option is not used, the synchronisation input must be connected to ground (0V) or the sensor must be operated with a (4-pole) V1 connecting cable.