



Level



Pressure



Flow



Temperature

Liquid
Analysis

Registration

Systems
Components

Services



Solutions

Technical Information

Solicap S FTI77

Capacitance

Robust point level switch for applications with bulk solids and very high temperatures



Application

Solicap S is used for point level detection at high temperatures in bulk solids. It can be operated in minimum or maximum failsafe mode.

Due to its robust construction, it can also be used to provide accurate measurements in applications with very high lateral loads (up to 800 Nm for sword version) and in applications with abrasive media.

Active buildup compensation facilitates safe switching, even in the event of media that tend to cause buildup.

Your benefits

- Extremely robust design for harsh process conditions
- Easy and fast commissioning as calibration is performed at the press of a button
- Universal application thanks to wide range of certificates and approvals
- Two-stage overvoltage protection against static discharges from the silo
- Active buildup compensation for bulk solids with caking tendency
- Use in safety systems requiring functional safety to SIL2/SIL3 in combination with electronic insert FEI55
- Increased safety due to permanent automatic monitoring of electronics
- Reduction in storage costs thanks to easy-to-shorten sword model and rope model

Table of contents

Function and system design	4	FEI52 electronic insert (DC PNP)	29
Measuring principle	4	Power supply	29
Application examples	4	Electrical connection	29
Measuring system	5	Output signal	29
Electronic versions	7	Signal on alarm	29
System integration via Fieldgate	8	Connectable load	29
Operating conditions: Installation	9	Electronic insert FEI53 (3-wire)	30
Installation	9	Power supply	30
Preparing to install sword probes FTI77	10	Electrical connection	30
Preparing to install rope probes FTI77	12	Output signal	30
Probe with separate housing	16	Signal on alarm	30
Connectable load		Connectable load	30
Operating conditions: Environment	18	FEI54 electronic insert (AC/DC with relay output)	31
Ambient temperature range	18	Power supply	31
Storage temperature	18	Electrical connection	31
Climate class	18	Output signal	31
Degree of protection	18	Signal on alarm	31
Vibration resistance	18	Connectable load	31
Cleaning	18	 	
Electromagnetic compatibility (EMC)	18	Electronic insert FEI55 (8/16 mA; SIL2/SIL3)	32
Shock resistance	18	Power supply	32
 		Electrical connection	32
Operating conditions: Process	19	Output signal	32
Process temperature range	19	Signal on alarm	32
Process pressure limits	19	Connectable load	32
State of aggregation	19	 	
 		FEI57S electronic insert (PFM)	33
Mechanical construction	20	Power supply	33
Overview	20	Electrical connection	33
Housing	21	Output signal	33
Material	25	Signal on alarm	33
Weight	25	Connectable load	33
Input	26	Electronic insert FEI58 (NAMUR H-L edge)	34
Measured variable	26	Power supply	34
Measuring range (valid for all)	26	Electrical connection	34
Input signal	26	Output signal	34
Measuring conditions	26	Signal on alarm	34
Minimum probe length for nonconductive media (<1µs/cm)	26	Connectable load	34
Output	27	Power supply	35
Galvanic isolation	27	Electrical connection	35
Switch behavior	27	Connector	35
Switch-on behavior	27	Cable entry	35
Fail-safe mode	27	 	
Switching delay	27	Performance characteristics	36
 		Reference operating conditions	36
Electronic insert FEI51 (AC 2-wire)	28	Switch point	36
Power supply	28	Ambient temperature effect	36
Electrical connection	28	 	
Signal on alarm	28	Human interface	37
Output signal	28	Electronic inserts	37
Connectable load	28	Electronic inserts	38
		Electronic insert	39

Certificates and approvals	40
CE approval	40
Other certificates	40
Other standards and guidelines	40
Ordering information	41
Solicap S FTI77	41
Accessories	43
Weather protection cover	43
Overvoltage protection HAW56x	43
Adapter flange FAU70E / FAU70A	43
Spare parts	44
Documentation	44
Technical Information	44
Operating Instructions	44
Certificates	44
Patents	45
.....	46
.....	46


Function and system design

Measuring principle

The principle of capacitance point level detection is based on the change in capacitance of a capacitor as a result of the probe being covered by bulk solids. The probe and container wall (conductive material) form an electric capacitor. When the probe is in air (1), a certain low initial capacitance is measured. If the container is being filled, the capacitance of the capacitor increases as more of the probe is covered (2), (3).

The point level switch switches when the capacitance C_S specified during calibration is reached.

In addition, a probe with inactive length ensures that the effects of medium buildup or condensate near the process connection are avoided. A probe with active buildup compensation compensates for the effects of buildup on the probe in the area of the process connection.

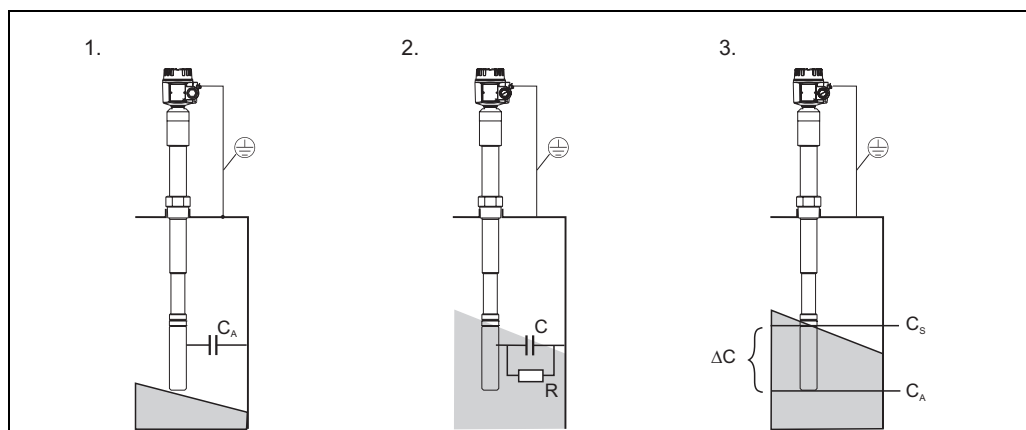

R : Conductivity of bulk solids
 C : Capacitance of bulk solids
 C_A : Initial capacitance (probe not covered)
 C_S : Switching capacitance
 ΔC : Change in capacitance

Function

The electronic insert selected for the probe determines the change in capacitance depending on how much of the probe is covered. This ensures accurate switching at the switchpoint (level) calibrated for this purpose.

Application examples

Fly ash, sand, glass aggregate, gravel, molding sand, lime, ore (crushed), plaster, aluminum shavings, cement, pumice, dolomite, kaolin and similar bulk solids.

In general:

Bulk solids with a relative dielectric constant $\epsilon_r \geq 2.5$.


Measuring system

The make-up of the measuring system depends on the electronic insert selected.

Point level switch

The complete measuring system consists of:

- The point level switch, Solicap S FTI77
- An electronic insert FEI51, FEI52, FEI54

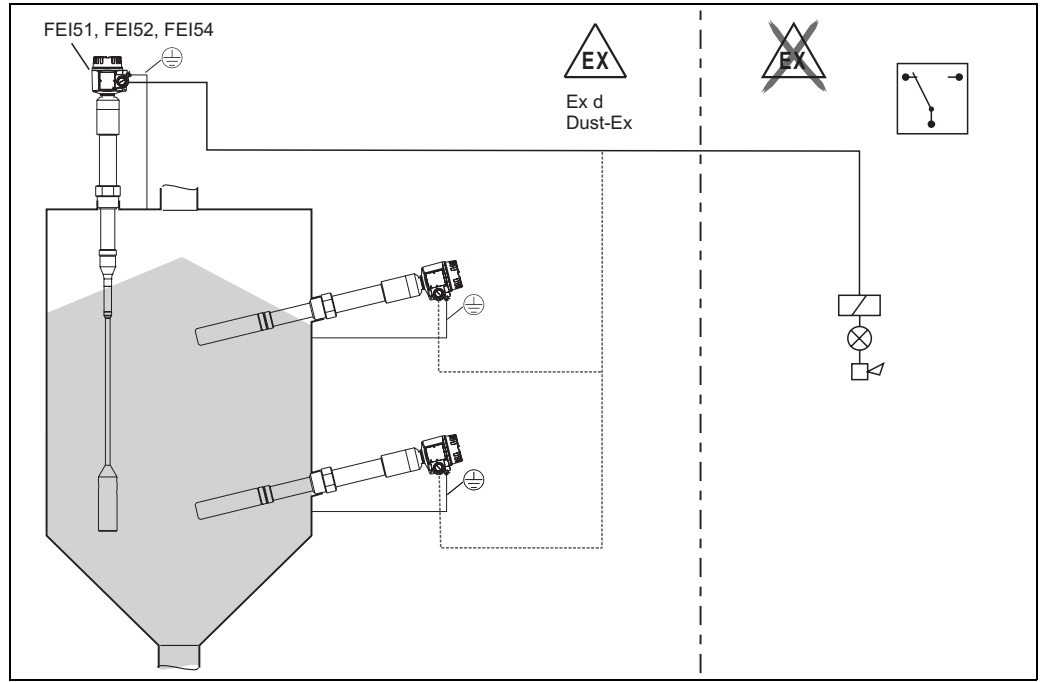


T1433Fex02

Two-point control (Δs function)



Note!

Only in conjunction with nonconductive bulk solids.

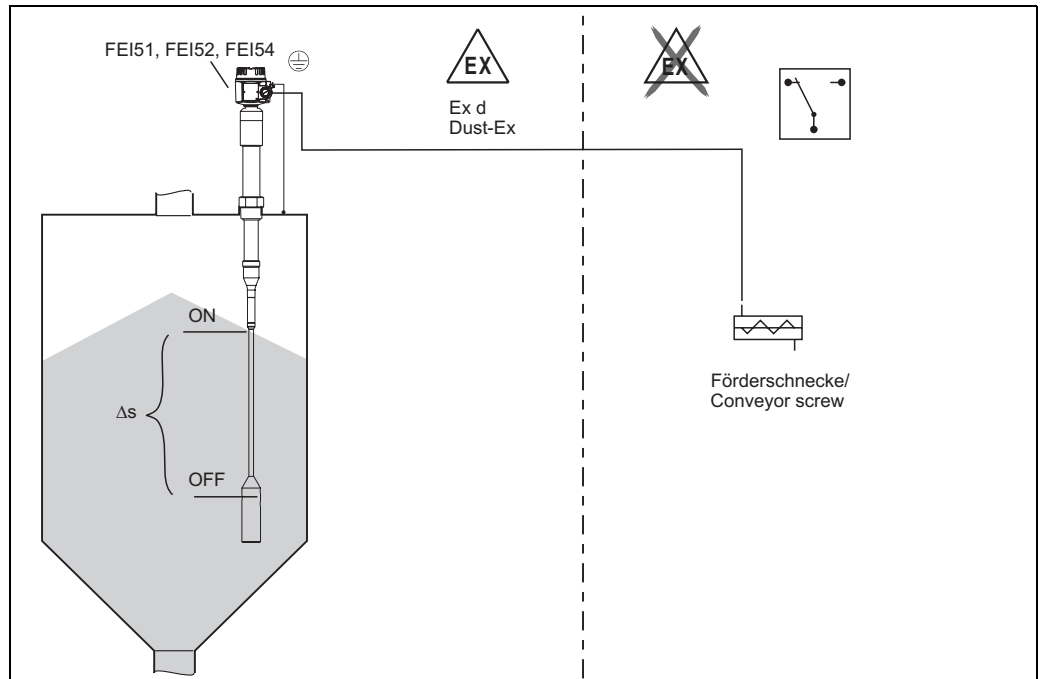

T1418Fen03


The point level switch can also be used to control a screw conveyor, for example, where the on and off values can be freely defined.

Point level switch

Solicap S FTI77 with electronic versions FEI53, FEI57S and FEI58 for connecting to a separate switching unit.

The complete measuring system consists of:

- the capacitance point level switch, Solicap S FTI77
- an FEI53, FEI57S, FEI58 electronic insert
- a transmitter power supply e.g. FTC325, FTC625 (SW V1.4 or higher), FTC470Z, FTC471Z, FTL325N, FTL375N

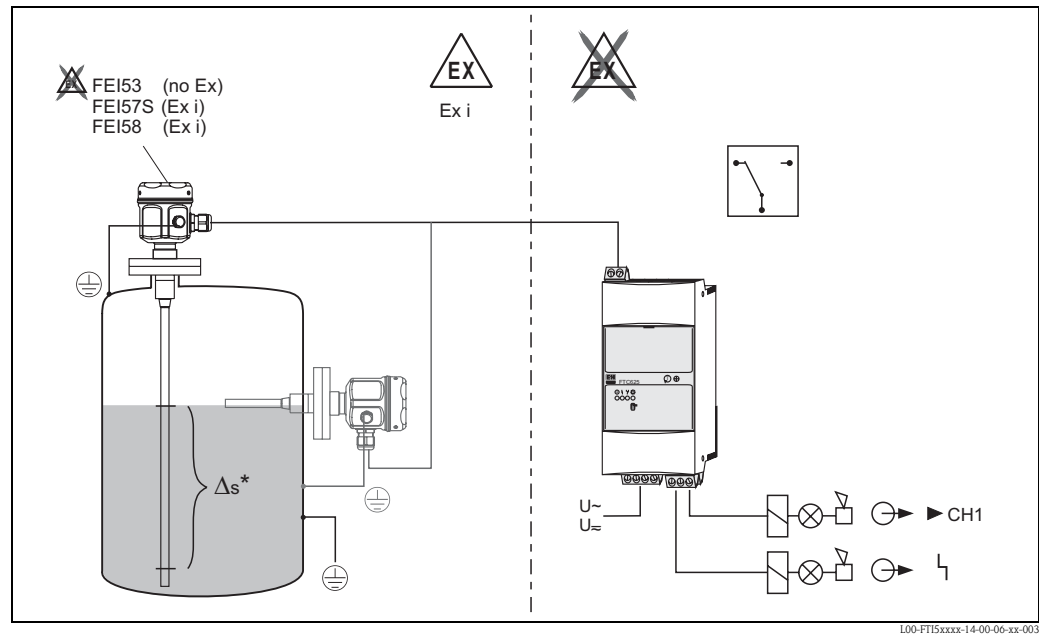

L00-FTI5xxxx-14-00-00-xx-003

* Only possible with FEI53

The following table lists the transmitter power supply units that are available and can be operated with the electronic inserts FEI57S and FEI53.

Electronic insert	FEI57S	FEI53	FEI58
Transmitter power supply unit			
FTC625	X	–	–
FTC325	X	X	–
FTL325N	–	–	X
FTL375N	–	–	X
FTC470Z	X	–	–
FTC471Z	X	–	–
FTC520Z*	X	–	–
FTC521Z*	X	–	–
FTC420*	–	X	–
FTC421*	–	X	–
FTC422*	–	X	–

x Combination is possible


– Combination is not possible

* Product phase-out 2006

Point level switch 8/16 mA

The complete measuring system consists of:

- the point level switch, Solicap S FTI77
- the FEI55 electronic insert
- a transmitter power supply unit (e.g. RN221N, RNS221, RMA421, RMA422)

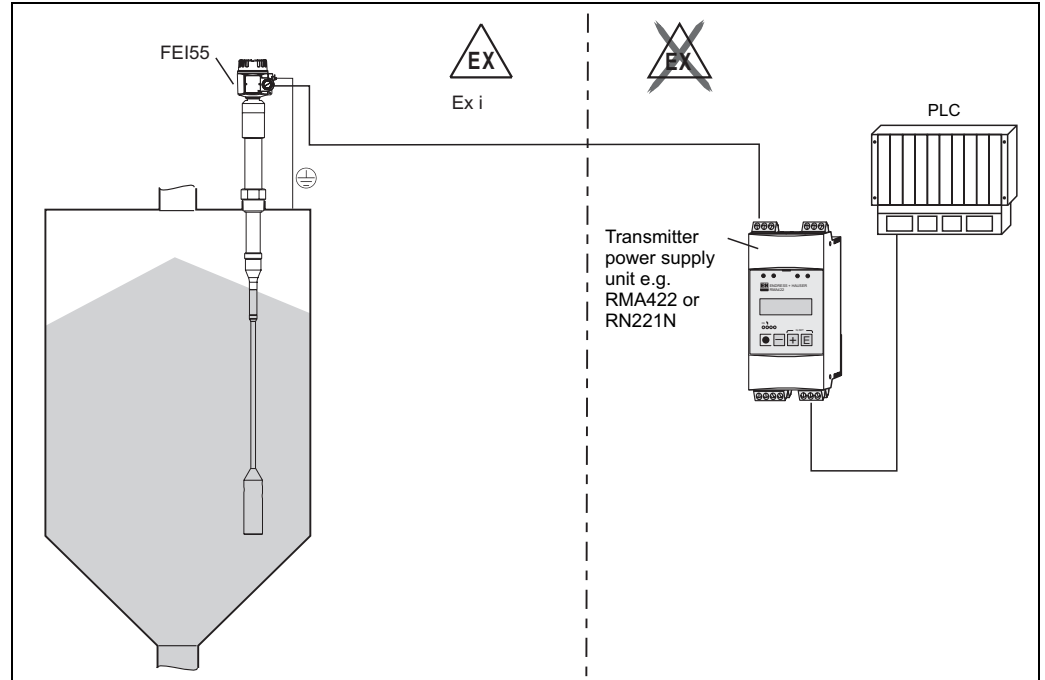

T1433Fem07

Electronic versions

FEI51

Two-wire AC connection

- Switching the load directly into the power supply circuit via the thyristor.
- Point level adjustment directly at the point level switch.

FEI52

3-wire direct current version:

- Switch the load via the transistor (PNP) and separate supply voltage connection.
- Point level adjustment directly at the point level switch.

FEI53

3-wire direct current version with 3 to 12 V signal output:

- For separate switching unit, Nivotester FTC325 3-WIRE.
- Point level adjustment directly at the switching unit.

FEI54

Universal current version with relay output:

- Switch the loads via 2 floating changeover contacts (DPDT).
- Point level adjustment directly at the point level switch.

FEI55

Signal transmission 8/16 mA on two-wire cabling:

- SIL2 approval for the hardware
- SIL3 approval for the software
- For separate switching unit (e.g. RN221N, RNS221, RMA421, RMA422).
- Point level adjustment directly at the point level switch.

FEI57S

PFM signal transmission (current pulses are superimposed on the supply current):

- For separate switching unit with PFM signal transmission e.g. FTC325 PFM, FTC625 PFM and FTC470Z/471Z

- Self-test from the switching unit without changing levels.
- Point level adjustment directly at the point level switch.
- Recurrent function test from the switching unit.

FEI58 (NAMUR)

Signal transmission H-L edge 2.2 to 3.5 / 0.6 to 1.0 mA as per IEC 60947-5-6 on two-wire cable:

- For a separate switching unit (e.g. Nivotester FTL325N and FTL375N).
- Point level adjustment directly at the point level switch.
- Test of the connection cables and slave devices by pressing a key on the electronic insert.



Note!

For additional information see → 28 ff.


System integration via Fieldgate

Vendor managed inventory

The remote interrogation of tank or silo levels via Fieldgate enables suppliers of raw materials to gather information about the current inventories of their regular customers at any time and, for example, to take this into account in their own production planning. The Fieldgate monitors the configured point levels and automatically triggers the next order as required. Here, the range of possibilities ranges from simple requisitioning by e-mail through to fully automatic order processing by incorporating XML data into the planning systems on both sides.

Remote maintenance of measuring systems

Not only does Fieldgate transmit the current measured values, it also alerts the standby personnel responsible by e-mail or SMS as required. Fieldgate forwards the information transparently. In this way, all options of the operating software in question are available remotely. By using remote diagnosis and remote configuration some onsite service operations can be avoided and all others can at least be planned and prepared better.

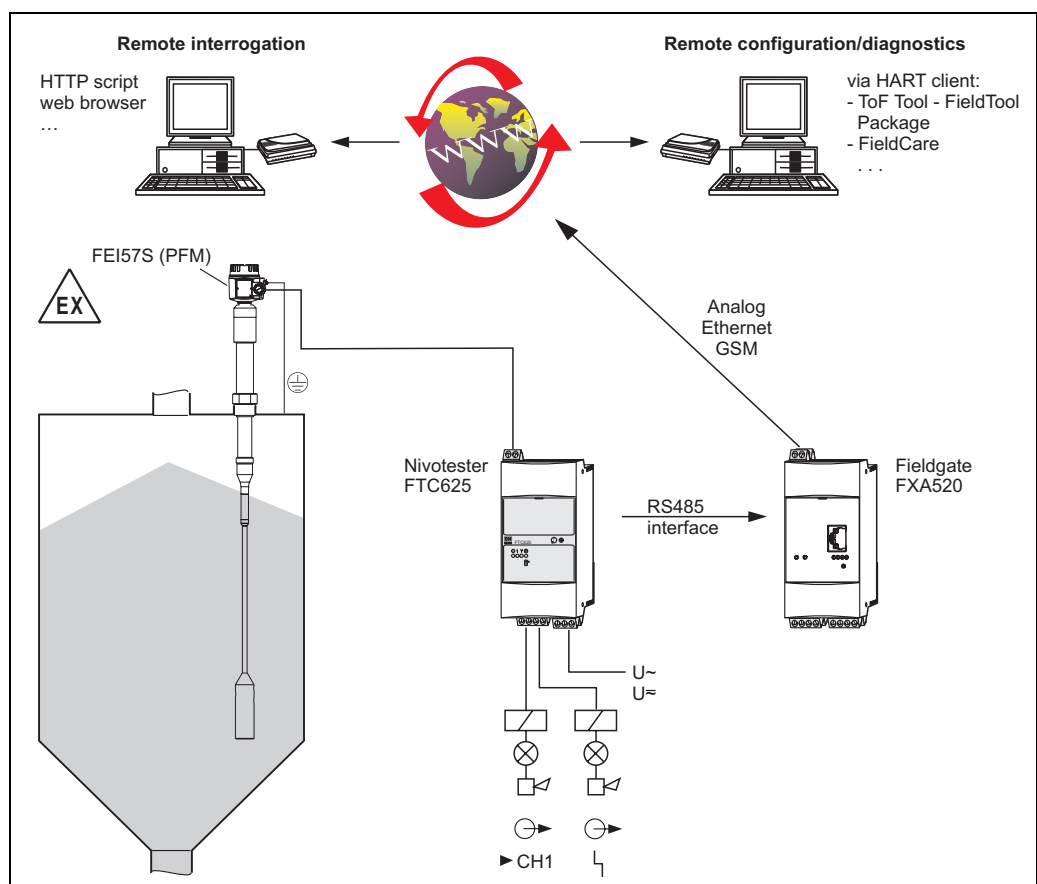

T1433Rev06

Operating conditions: Installation



Note!
All dimensions in mm.

Installation

Installation instructions

The Solicap S FTI77 (sword probe) can be installed from above and from the side.
The Solicap S FTI77 (rope probe) can be installed vertically from above.



Caution!

If you order a probe that is prepared for subsequent mounting of an active length (feature: active length; version: VV), grounding must take place at the lower ceramic fixture when welding on the active length.



Note!

The probe may not come into contact with the container wall! Do not install probes in the area of the filling curtain!


General notes

Filling the silo

The filling stream should not be directed onto the probe.

Angle of material flow

Note the expected angle of the material flow or of the outlet funnel when determining the mounting location or probe length.

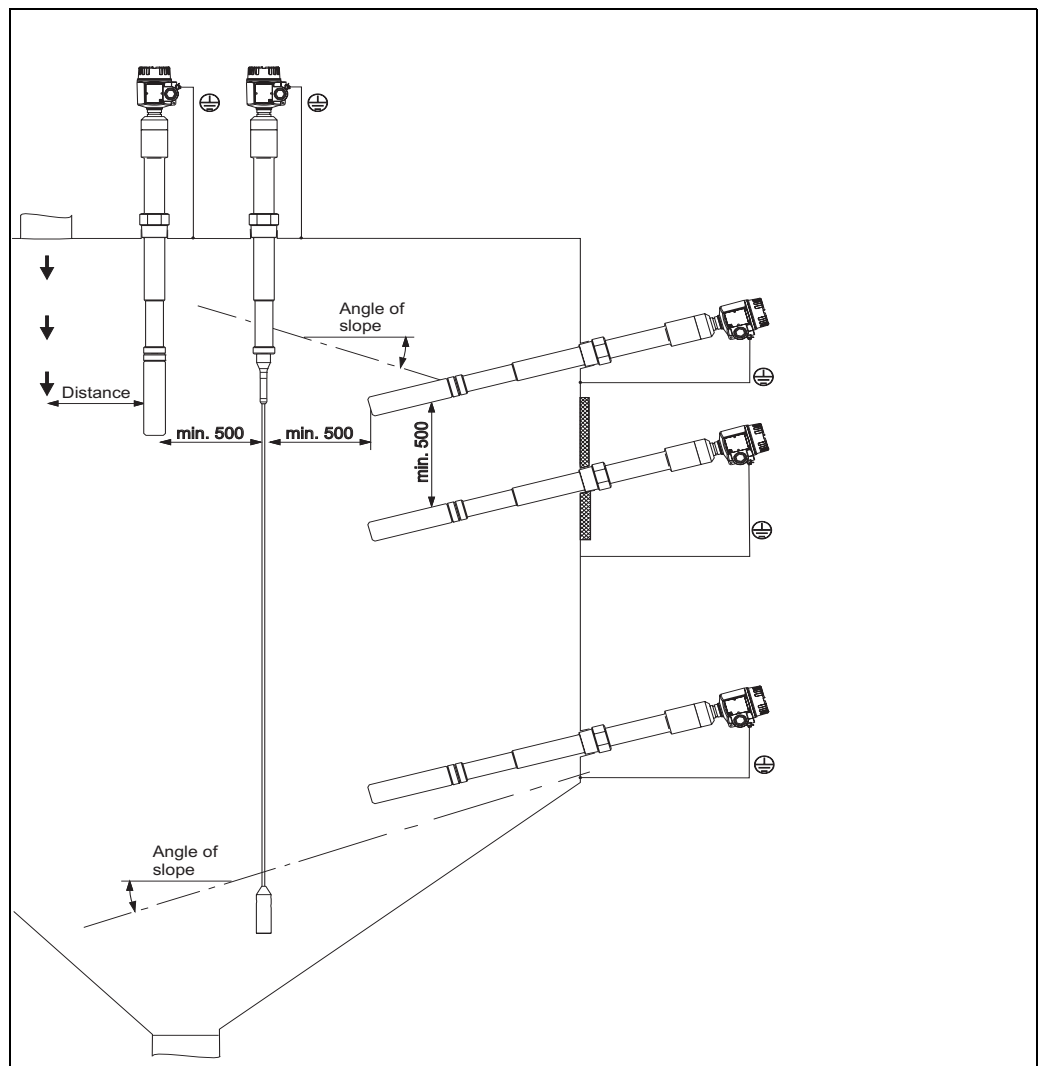

BA381Fen003

Distance between probes

When installing several probes in a silo, a minimum distance of 0.5 m between the probes must be observed.


Threaded coupling for mounting

When installing the Solicap S FTI77, the threaded coupling should be as short as possible. Condensation or product residue may occur in a long threaded coupling and interfere with the correct operation of the probe.

Heat insulation

In the event of high temperatures in the silo: Insulate the external silo wall to avoid exceeding the permitted temperature of the Solicap S housing. Heat insulation also prevents condensation from forming near the threaded boss in the silo. This reduces buildup and the risk of error switching.

Preparing to install sword probes FTI77

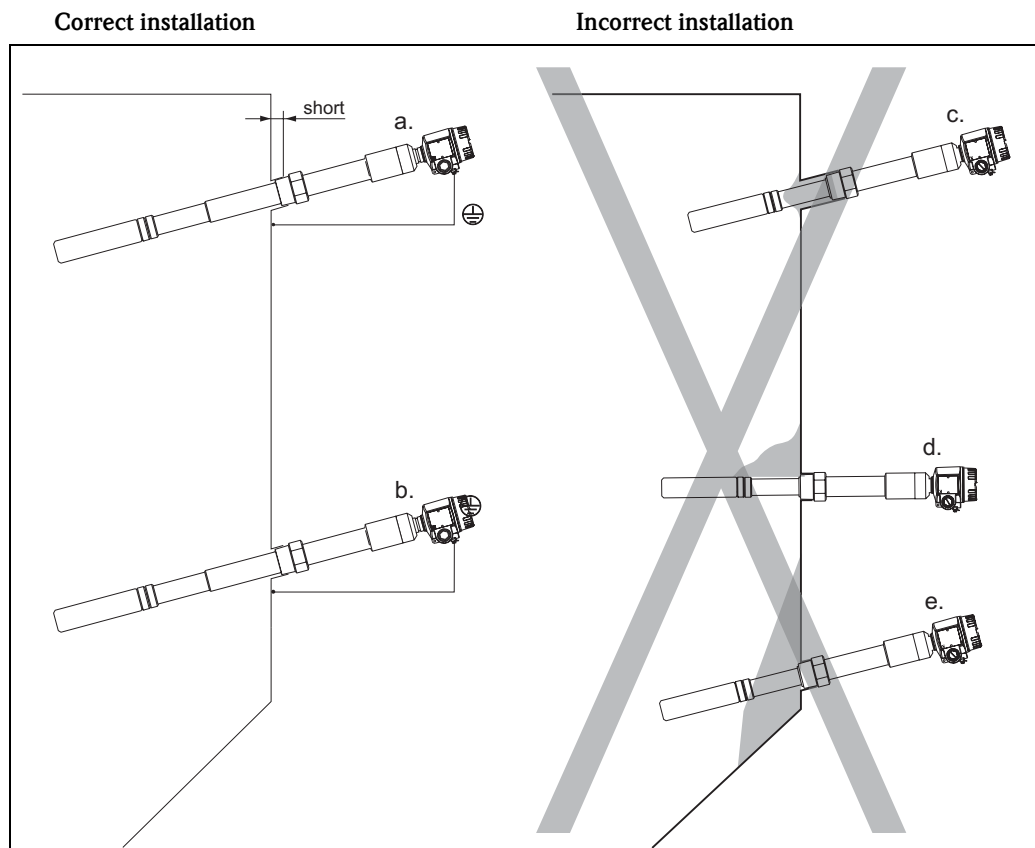**Correct installation**

- a. For maximum point level detection, a short threaded coupling is used.
- b. For minimum point level detection, a short threaded coupling is used.


**Note!****Aligning the sword probe**

To prevent unnecessary lateral load when installing the sword probe from the side, the sword must be installed with the narrow edge pointing upwards. An adhesive label indicates the installation position of the sword.

Incorrect installation

- c. The threaded coupling is too long. This may cause material to settle inside and result in error switching.
- d. Horizontal mounting means a risk of error switching in the event of heavy buildup on the silo wall. In this case, the Solicap S FTI77 (sword probe) with inactive length is recommended.
- e. In areas where product buildup occurs, the device cannot detect if the silo is "empty". In this case, the FTI77 (rope probe) should be installed from above.

In this example, the grounded steel plate forms the counter electrode.
Heat insulation prevents condensation and therefore buildup on the steel plate.

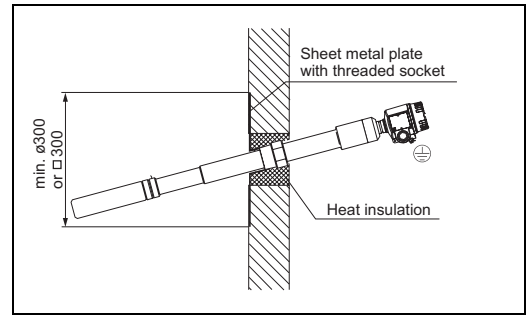


BA381Fes005

In a silo with concrete walls

When installing in a nonconductive container, a sheet metal plate must be attached to the exterior of the silo as a counter electrode.
This plate can be either square or round.


- Dimensions in the case of a thin silo wall with a low dielectric constant:
approx. 0.5 m along each side or $\varnothing 0.5$ m;
- Dimensions in the case of a thicker silo wall or wall with a higher dielectric constant:
approx. 0.7 m along each side or $\varnothing 0.7$ m.

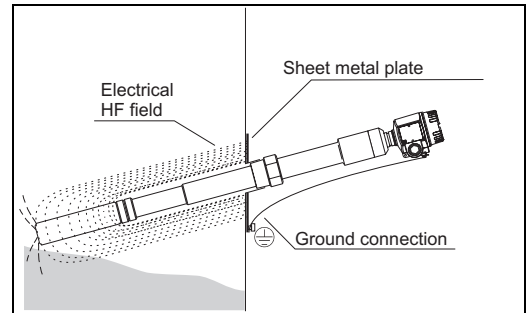

BA381Fes006

In a silo with plastic walls

The required minimum distances can be achieved by offset installation.

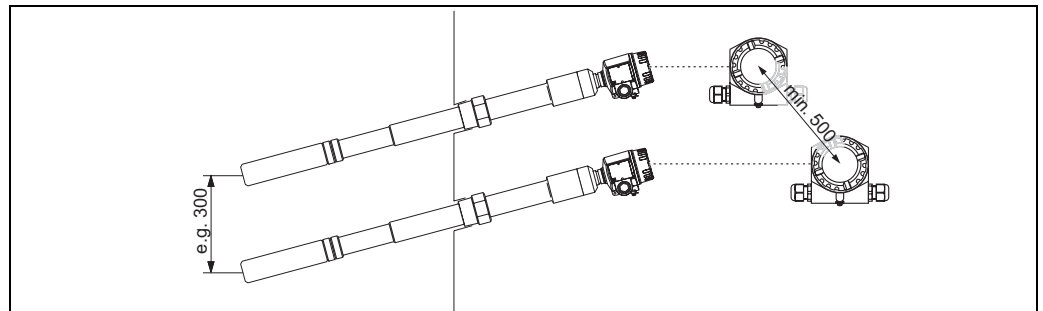

BA381Fes007

For small differences in level

Probe length and minimum coverage



Note!


- When selecting the probe length, pay attention to the dependency between the relative dielectric constant ϵ_r and the minimum amount the probe needs to be covered (see Table).
- For probe length tolerances see Seite 23 ff.
- To ensure problem-free operation, it is important that the difference in capacitance between the covered and uncovered parts of the probe is at least 5 pF.
- If you do not know the dielectric constant of the material, contact us for advice.

Product properties, relative dielectric constant ϵ_r	
Electrically conductive	* Minimum coverage 25 mm

TI418F12

Nonconductive	
$\epsilon_r > 10$	100 mm
$\epsilon_r > 5$ to 10	200 mm
$\epsilon_r > 2$ to 5	500 mm

Preparing to install rope probes FTI77

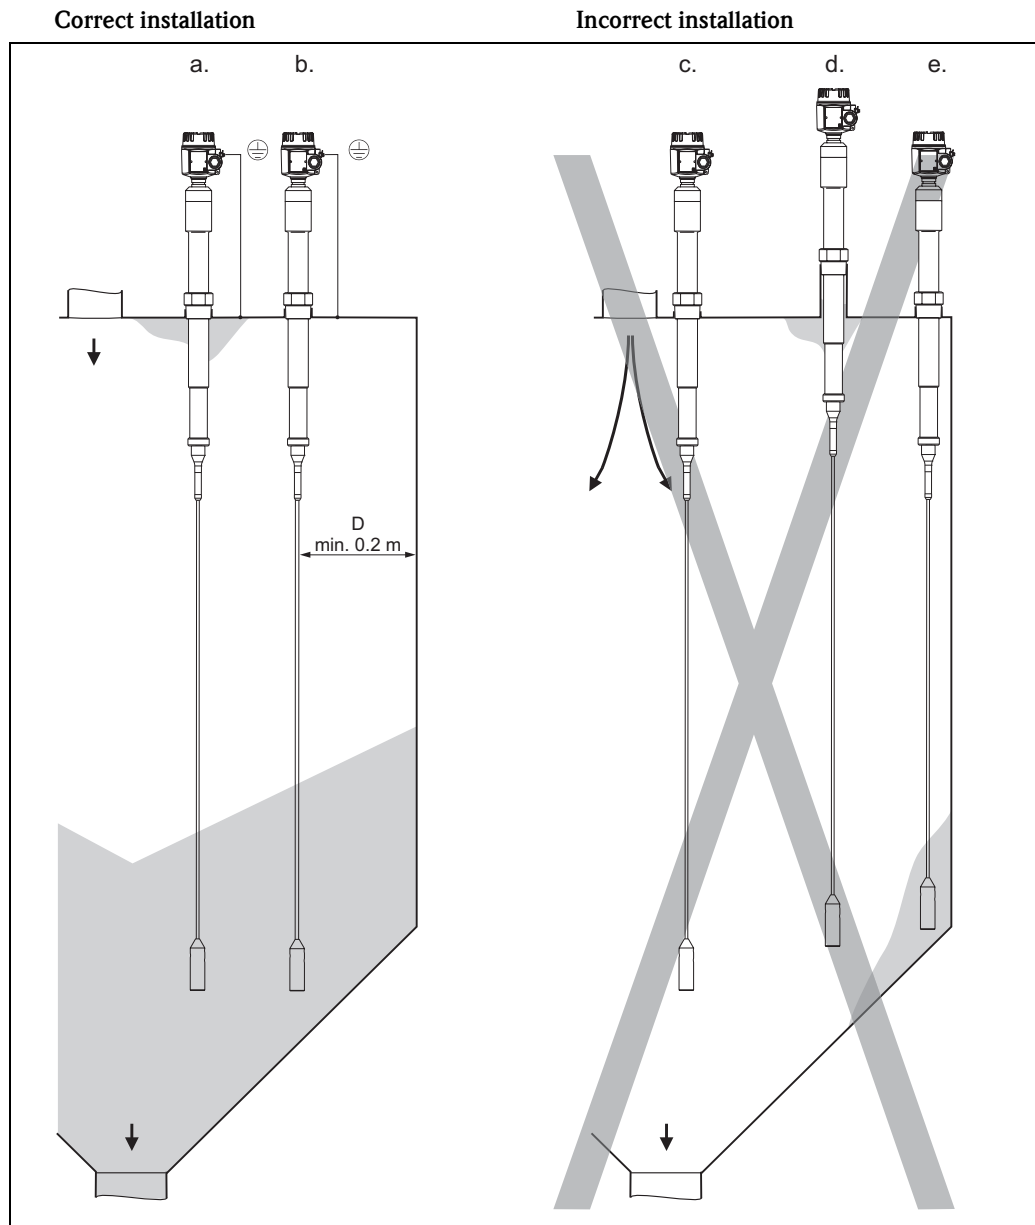

BA381Fxx013

In a silo with metal walls Distance D between the probe and the wall approx. 10 to 25 % of the silo diameter

Correct installation

- Solicap S FTI77 with inactive length in the event of condensation and material buildup on the silo roof.
- At the correct distance from the silo wall, the material inlet and the material outlet.
Close to the wall, for reliable switching in the case of a low dielectric constant (not for pneumatic filling).
For pneumatic filling, the distance from the probe to the wall should not be too short, as the probe may swing.

Incorrect installation

- c. If too close to the material inlet, inflowing bulk solids may damage the sensor.
If close to the center of the material outflow, high tensile forces at this point may cause the probe to break off or subject the silo roof to excessive strain.
- d. The threaded coupling is too long. This may cause condensation and dust to settle inside which may result in error switching.
- e. If too close to the silo wall, the probe may swing slightly against the wall or come in contact with buildup. This can result in error switching.

Silo roof

Ensure that the silo roof is of a sufficiently stable construction.

High tensile forces may occur when material is being extracted, particularly in the case of heavy and powdery bulk solids which have a tendency to form buildup.

Abrasive bulk solids

In silos with extremely abrasive bulk solids, the use of a Solicap S FTI77 is recommended only for maximum detection.

Distance between the rope probes

To rule out mutual probe interference, you must maintain a minimum distance of 0.5 m between the rope probes. This also applies if you are installing several Solicap S units in adjacent silos with nonconductive walls.

In the event of condensation:

Use the FTI77 with inactive length.


The inactive length (**Fig. A**) prevents moisture and buildup forming between the active part of the probe and the silo roof.

Or:

To reduce the effects of condensation (**Fig. B**) and buildup, the threaded coupling (length: max. 25 mm) must project into the silo.


Heat insulation reduces condensation and therefore buildup on the steel plate.

Fig. A

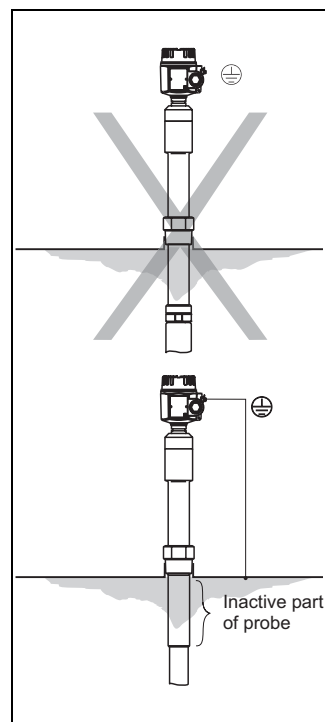

Silo with walls that conduct electricity


Fig. B

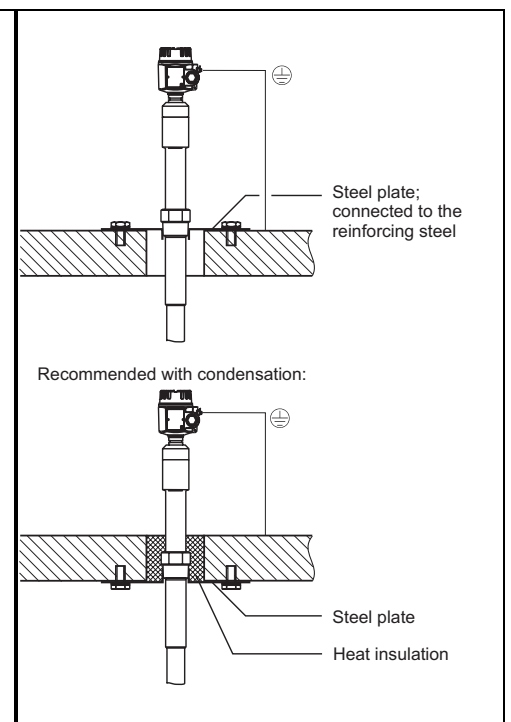

Silo with concrete walls

In the event of buildup:


If buildup on the sword probe can be expected when operating the measuring system, the active buildup compensation function prevents the measurement result from becoming distorted. This renders cleaning work on the sword probe unnecessary.

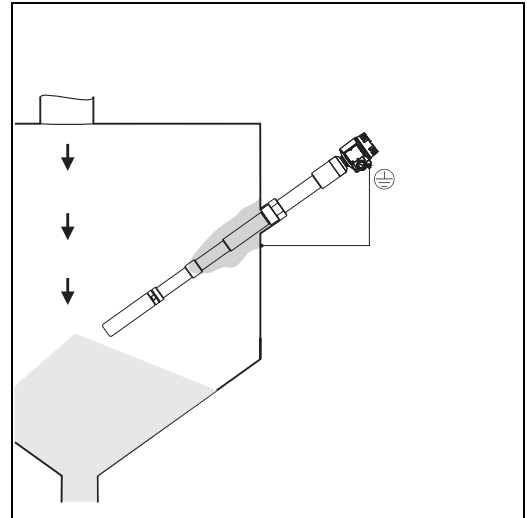

BA381Fxx014

Installation in a nonconductive tank


When installing in a silo made of concrete, a counter electrode must be mounted on the silo exterior at the same height as the tensioning weight. The length of the edge of the counter electrode should be approximately the same length as the distance between the tensioning weight and the silo wall.

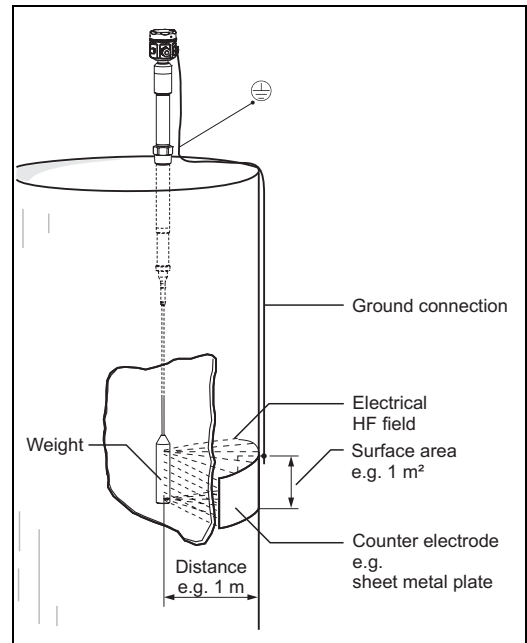

BA381Fen010

In a silo with plastic walls

Range of sensor lengths

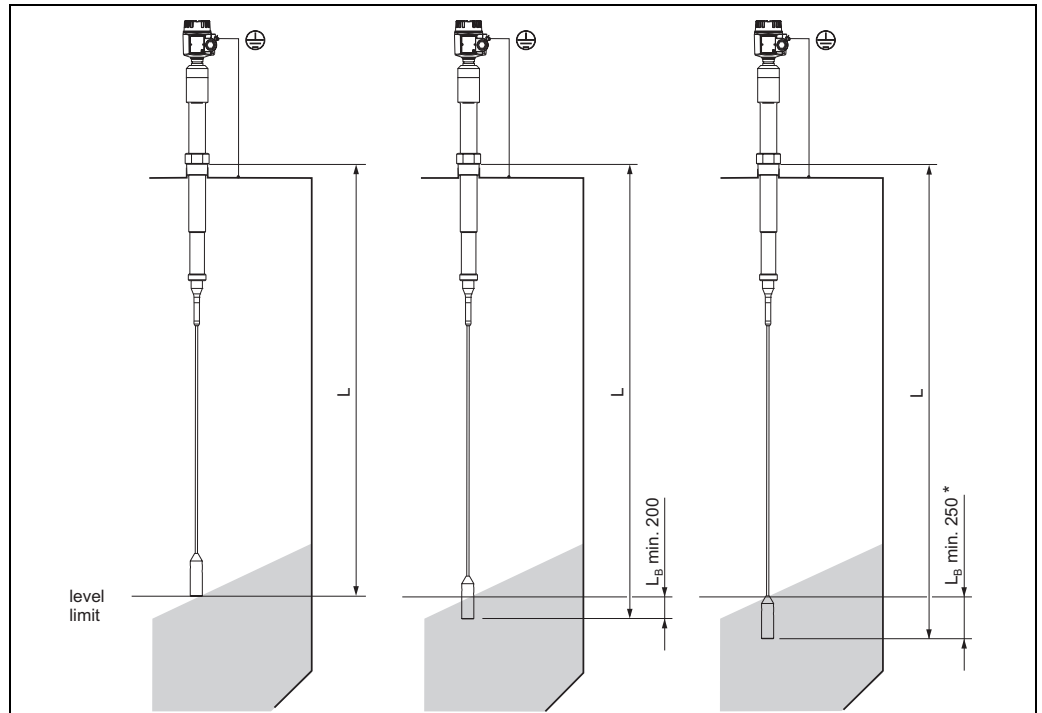

BA381Fen011

Electrically conductive
bulk solids
(e.g. coal)

Bulk solids with high
dielectric constant
(e.g. rock salt)

Bulk solids with low
dielectric constant
(e.g. fly ash)

* L_B (covered length):

For nonconductive bulk solids with a low dielectric constant, the rope probe must be approx. 5 % (but no less than 250 mm) longer than the distance between the tank roof and the required point level.

Shortening the probe

Sword probe:

The sword probe can be shortened at a later stage by the user.

Rope probe:

The rope probe can be shortened at a later stage by the user.


Probe with separate housing

With separate housing



Note!

- For information on how to order, see also "Ordering information" from → 41 under "Probe design".
- The maximum connection length between the probe and the separate housing is 6 m (L4).
When ordering a Solicap S with a separate housing, the desired length must be specified.
- If the connecting cable is to be shortened or passed through a wall, it must be separated from the process connection. See also → 16 (extension heights).
- The cable has a bending radius of $r \geq 100$ mm. This must be observed as a minimum.

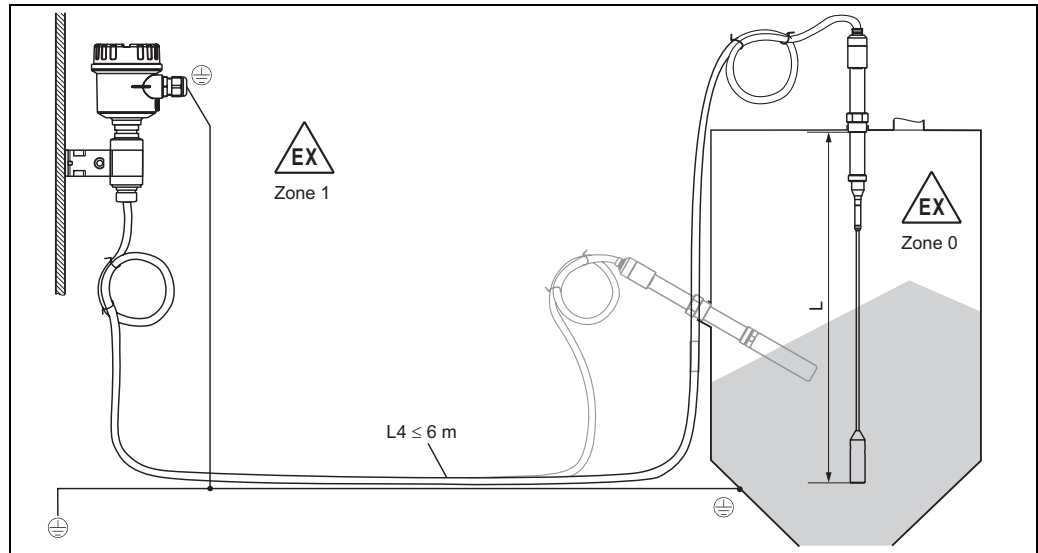


The maximum overall length of $L + L4$ may not exceed 20 m.

Extension heights

Housing side: wall mounting

Housing side: pipe mounting

Sensor side

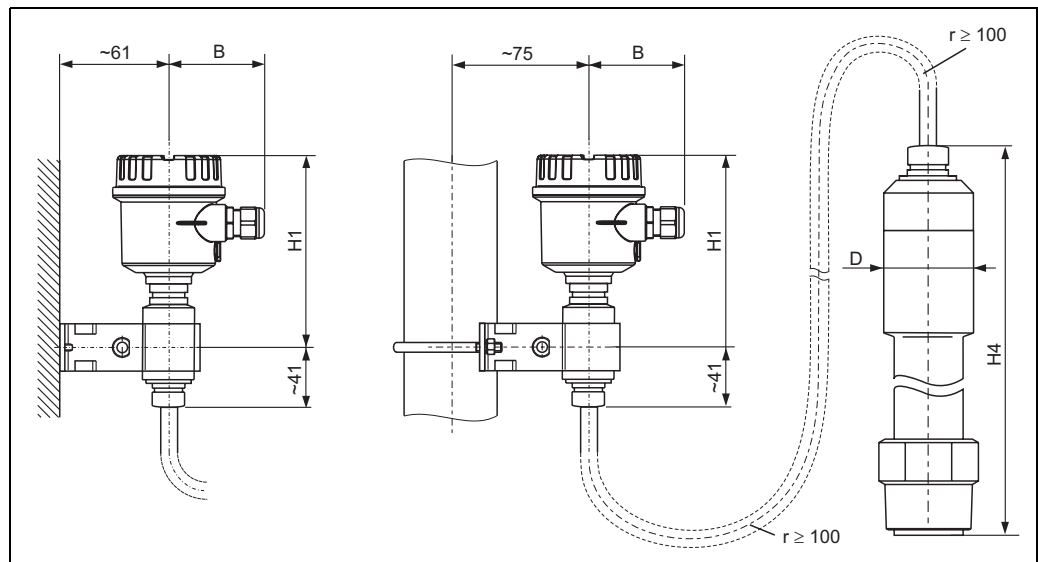

		Polyester housing F16	Stainless steel housing F15	Aluminum housing F17
B	-	76	64	65
H1	-	172	166	177
D	50	-	-	-
H4	330	-	-	-



Note!


- Connecting cable: $\varnothing 10.5$ mm
- Outer jacket: silicone, notch-resistant

Wall holder unit



Note!

- The wall holder unit forms part of the scope of supply.
- The wall holder unit first has to be screwed to the separate housing before you can use it as a drilling template. The distance between the holes is reduced by screwing it to the separate housing.

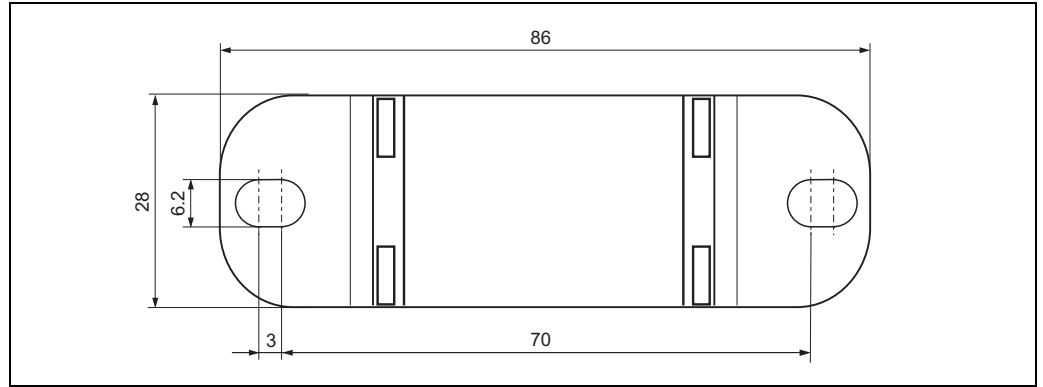


Temperature derating with separate housing



Note!

The maximum connection length between the probe and the separate housing is 6 m (L4). When ordering a Solicap S with a separate housing, the desired length must be specified.

If the connecting cable is to be shortened or passed through a wall, it must be separated from the process connection. See "Documentation" => "Operating Instructions" on → 44.

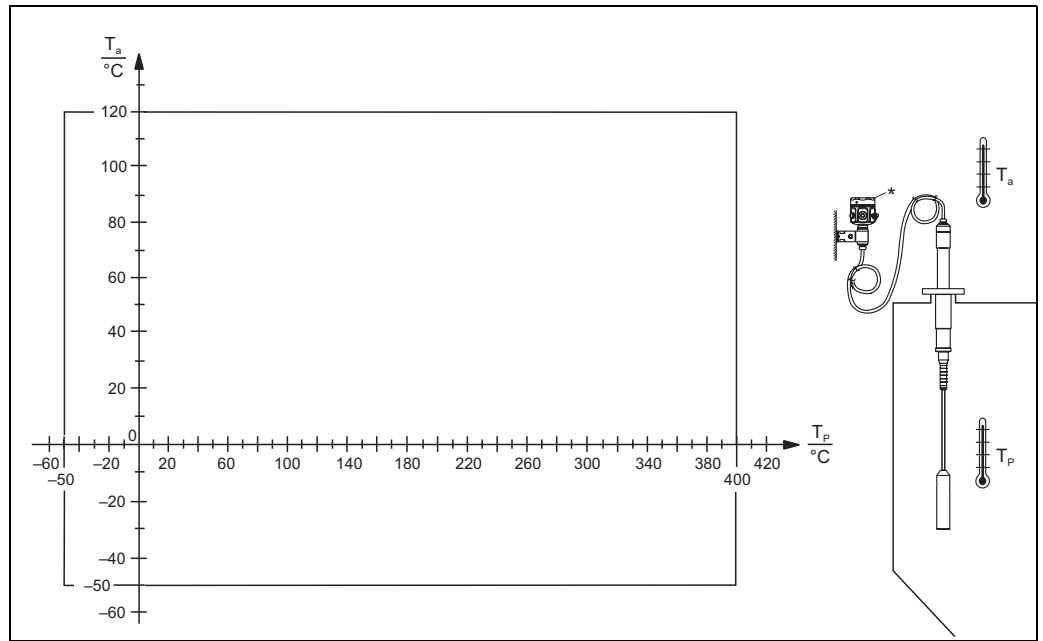

T_a = ambient temperature,

T_p = process temperature,

* temperature at separate housing: $-40\text{ °C} \leq T_a \leq 70\text{ °C}$

Operating conditions: Environment

Ambient temperature range	<ul style="list-style-type: none"> ■ Ambient temperature of the point level switch (note derating, see → 19): <ul style="list-style-type: none"> □ -50 to +70 °C □ -40 to +70 °C (with F16 housing) ■ A weather protection cover should be used when operating outdoors in strong sunlight. For further information on the weather protection cover, see → 43.
----------------------------------	---

Storage temperature	-50 to +85 °C
----------------------------	---------------

Climate class	DIN EN 60068-2-38/IEC 68-2-38: test Z/AD
----------------------	--

Degree of protection

	IP66*	IP67*	IP68*	NEMA4X**
Polyester housing F16	X	X	-	X
Stainless steel housing F15	X	X	-	X
Aluminum housing F17	X	X	-	X
Aluminum housing F13 with gas-tight process seal	X	-	X***	X
Aluminum housing T13 with gas-tight process seal and separate connection compartment (EEx d)	X	-	X***	X
Separate housing	X	-	X***	X

* As per EN60529

** As per NEMA 250

*** Only with M20 cable entry or G1/2 thread

Vibration resistance	DIN EN 60068-2-64/IEC 68-2-64: 20 Hz– 2000 Hz; 0.01 g ² /Hz
-----------------------------	--

Cleaning	<p>Housing: When cleaning, make sure that the cleaning agent used does not corrode the housing surface or the seals.</p>
-----------------	---

Probe:
Depending on the application, buildup (contamination and soiling) can form on the sword of the probe. A high degree of material buildup can affect the measurement result. If the medium tends to create a high degree of buildup, regular cleaning is recommended. If cleaning agents are used make sure the material is resistant to them!

Electromagnetic compatibility (EMC)	<ul style="list-style-type: none"> ■ Interference emission to EN 61326, Electrical Equipment Class B Interference immunity in accordance with EN 61326, Appendix A (Industrial) and NAMUR Recommendation NE 21 (EMC) ■ A usual commercial instrument cable can be used.
--	---

Shock resistance	DIN EN 60068-2-27/IEC 68-2-27: 30g acceleration
-------------------------	---

Operating conditions: Process

Process temperature range




Note!

- The following process temperature ranges only apply for standard applications outside hazardous areas.
- Regulations for use in hazardous areas are provided in the Supplementary Documentation XA389F/00.

Permitted ambient temperature T_a at the housing depending on the process temperature T_p in the tank.

Compact version

Sword and rope version

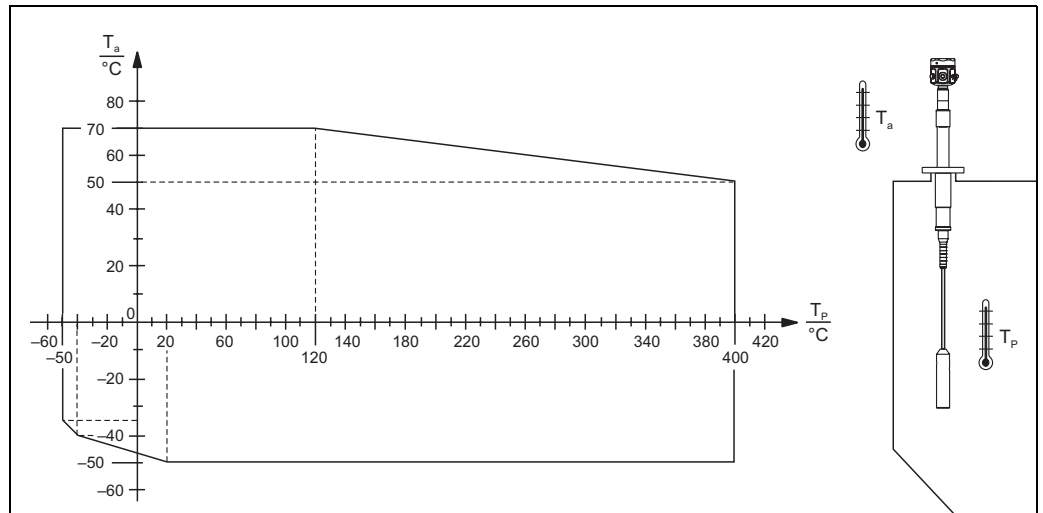

T_a = ambient temperature,

T_p = process temperature

XA486xx05

Process pressure limits


-1 to 10 bar

The permitted pressure values depend on the flange selected. In the case of higher temperatures, the permitted pressure values can be taken from the following standards.

- pR EN 1092-1: 2005 table, Appendix G2
- ASME B 16.5a - 1998 Tab. 2-2.2 F316
- ASME B 16.5a - 1998 Tab. 2.3.8 N10276
- JIS B 2220

State of aggregation

See → 4, "Application examples"

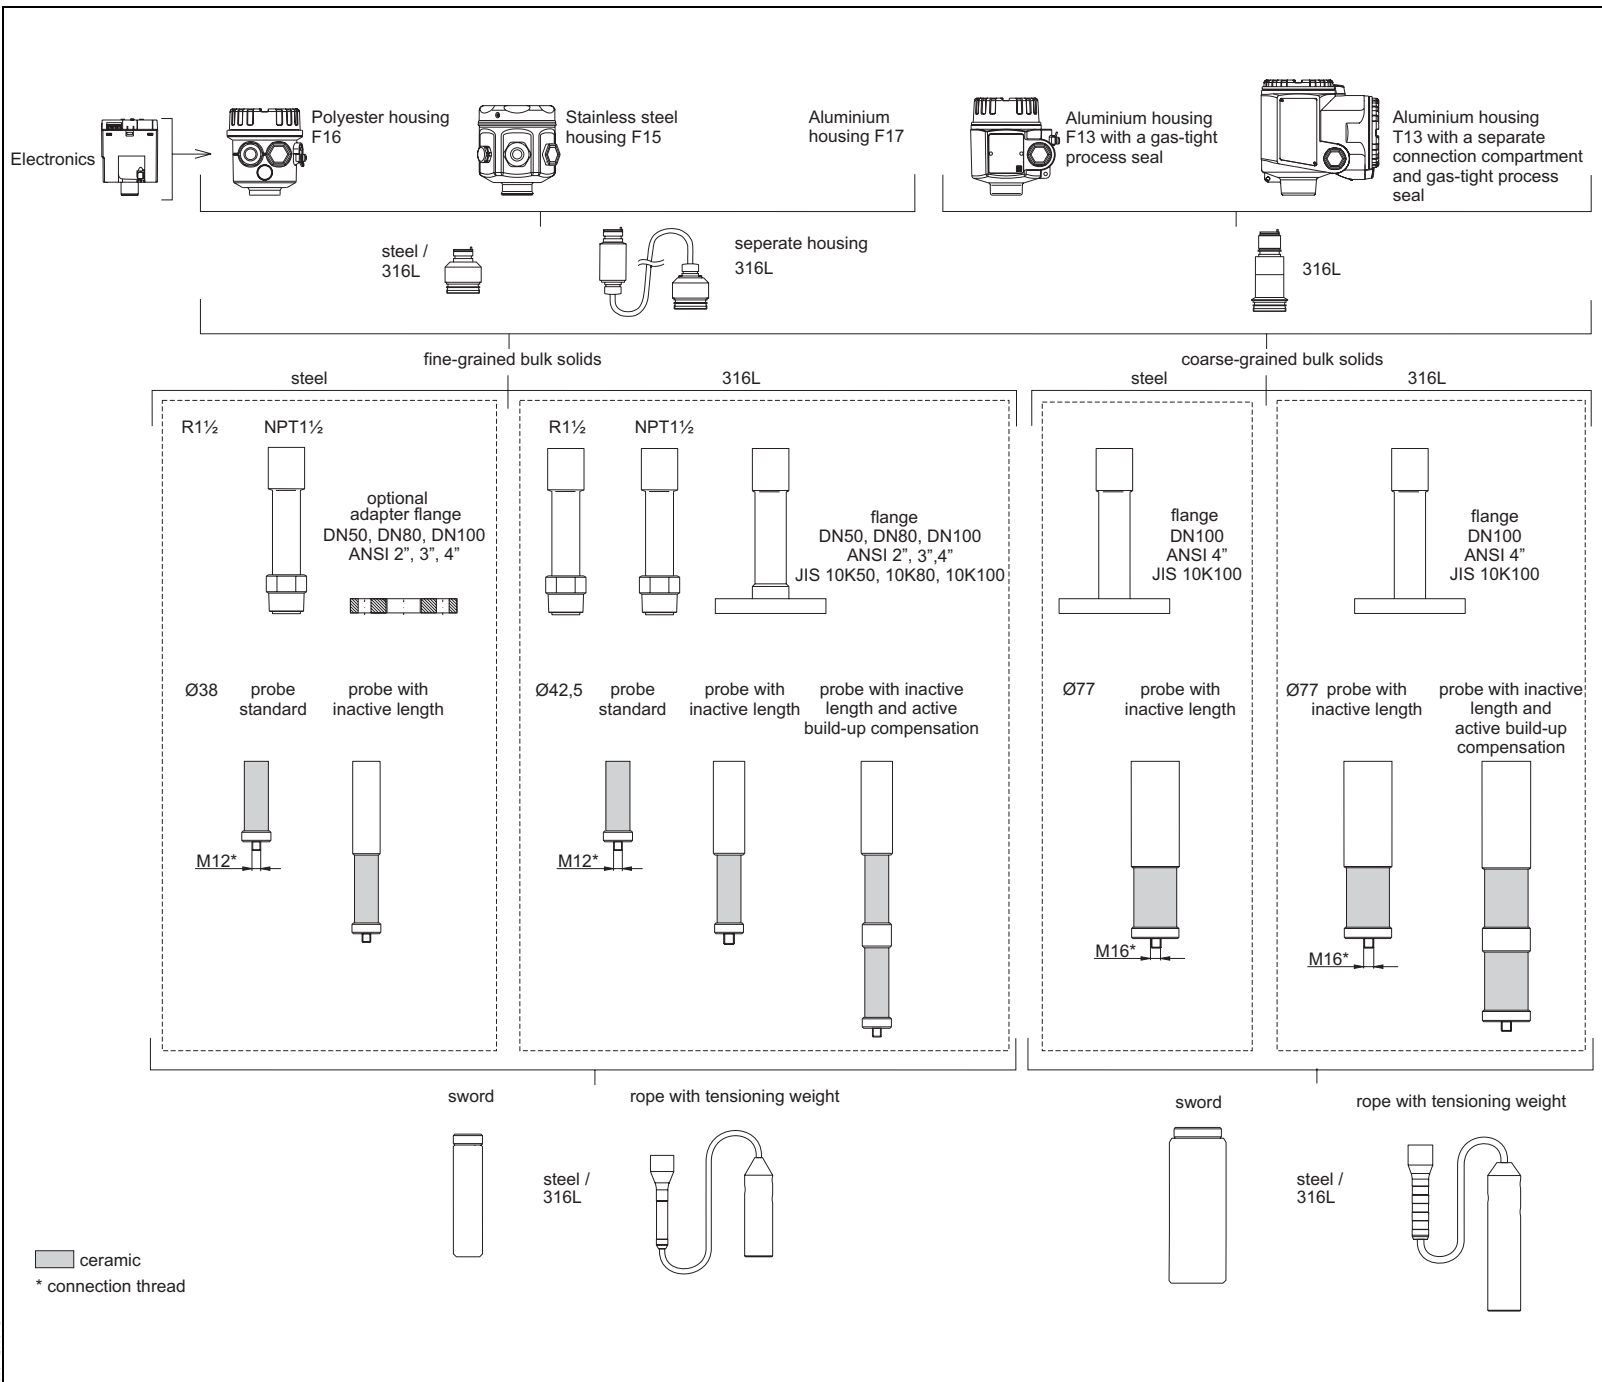


Mechanical construction
 Note!
 All dimensions in mm.

BA301F0002


Housing

Polyester housing F16

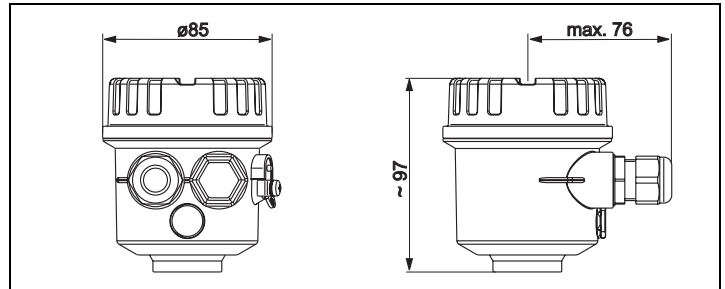


TI418F25

Stainless steel housing F15

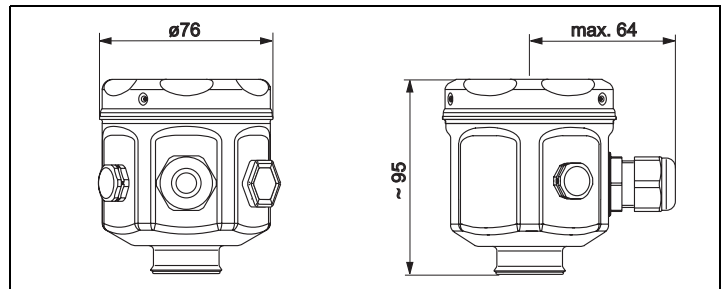


TI418F26

Aluminum housing F17

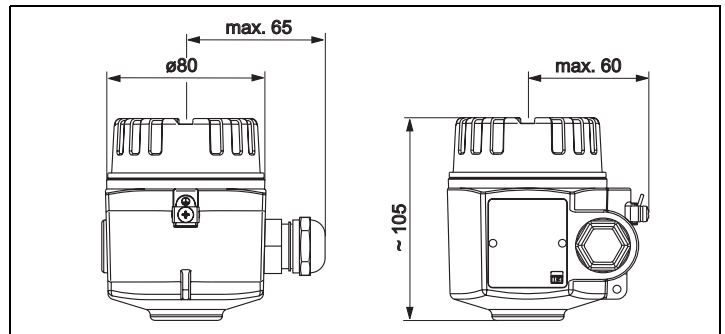


TI418F27

Aluminum housing F13 with gas-tight process seal

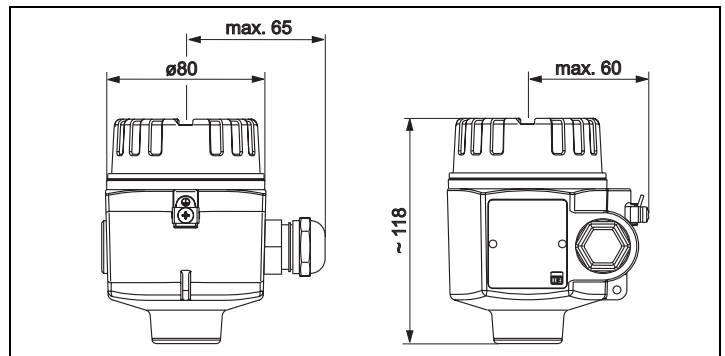






TI418F28

Aluminum housing T13 with separate connection compartment and gas-tight process seal

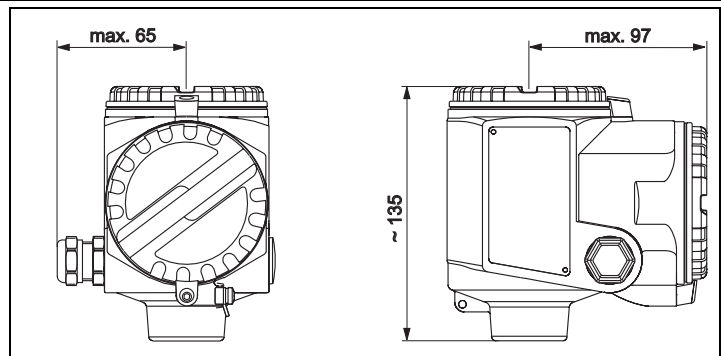

TI418F29

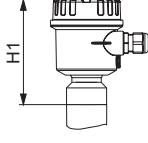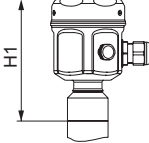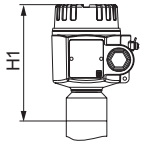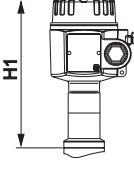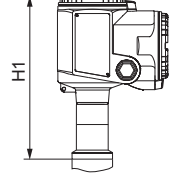



Housing heights with adapter

	Polyester housing F16	Stainless steel housing F15	Aluminum housing F17	Aluminum housing F13*	Aluminum housing with separate connection compartment T13*
	 BA381Fxx003	 BA381Fxx004	 BA381Fxx005	 BA381Fxx006	 BA381Fxx007
Order code	2	1	3	4	5
FTI77					
H1	125**/177	121**/ 173	131**/183	177	194

* Housing with gas-tight process seal

** For Approval: A (Non-hazardous area) or K (CSA General Purpose, CSA C US). => Device identification.

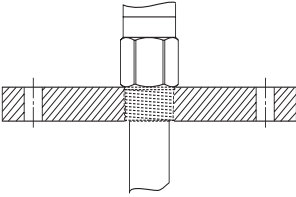Process connections and flanges

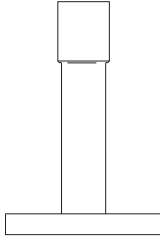
	Thread: R 1½*	Thread: NPT 1½*	Flanges
 BA381Fxx025 <i>* Optional with adapter flange (for steel)</i>	 BA381Fxx008 (DIN EN 10226-1)	 BA381Fxx009 (ANSI B 1.20.1)	 BA381Fxx010 (EN1092-1) (ANSI B 16.5) (JIS B2220)
Order code/material	RVJ / 316L RV1 / steel*	RGJ / 316L RG1 / steel*	
Pressures up to	10 bars	10 bars	Depends on flange max. 10 bar

Sword probes FTI77 for fine-grained bulk solids



Note!

Total length of the probe from the start of the thread: $L = L1 + L3 + 110$ mm (ceramic)
 + 125 mm with active buildup compensation (optional)

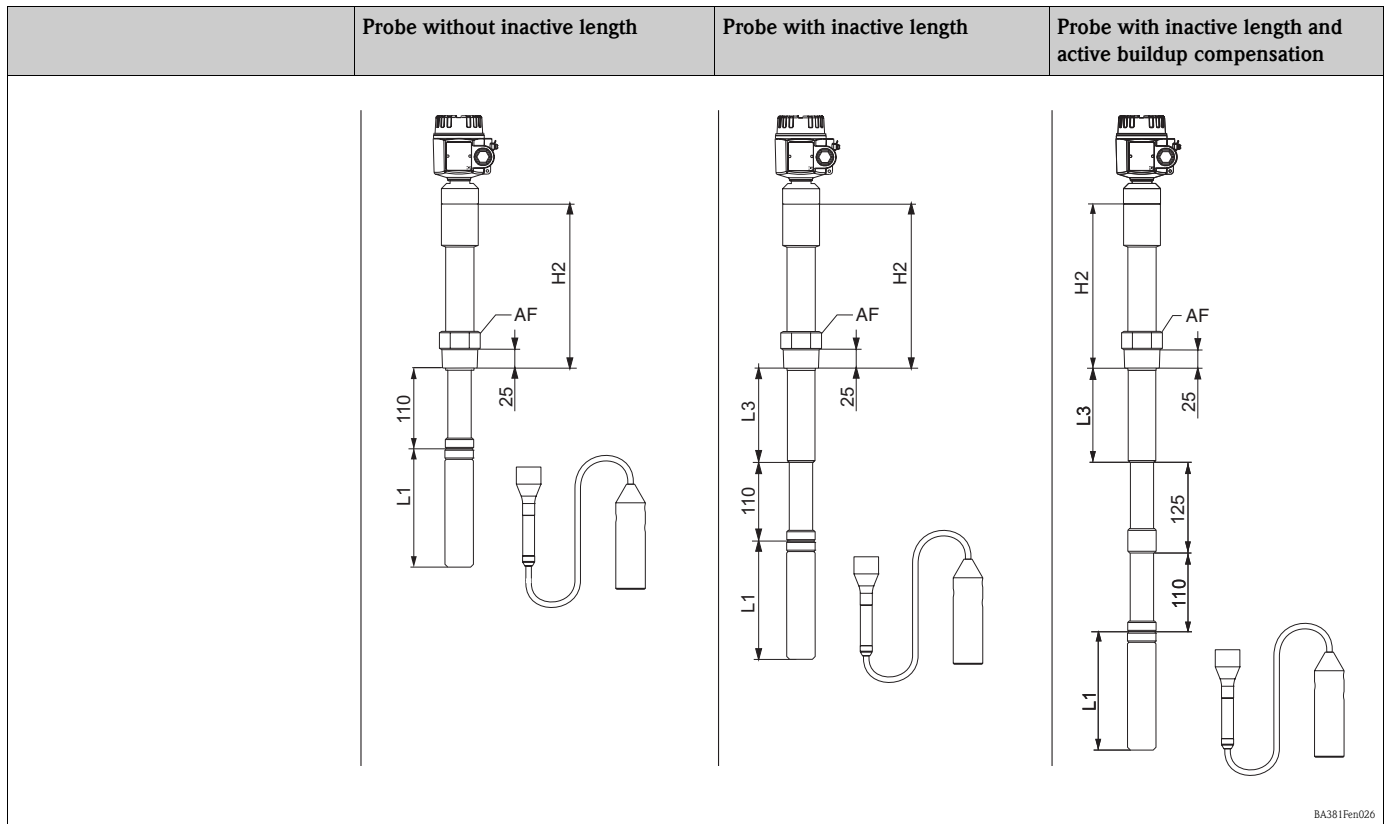

Sword/rope	Probe without inactive length		Probe with inactive length		Probe with inactive length and active buildup compensation	
	Sword	Rope	Sword	Rope	Sword	Rope
H2	259	259	259	259	259	259
Across flats (AF)	55	55	55	55	55	55
Total length (L)	310 to 1110	610 to 20000	410 to 2110	710 to 20000	535 to 2235	835 to 20000
Active length L1	200 to 1000	500 to 19890	200 to 1000	500 to 19790	200 to 1000	500 to 19665
Inactive length (L3)	–	–	100 to 1000	100 to 1000	100 to 1000	100 to 1000
ø inactive length [L3 (steel/316L)]	–	–	38/42.5	38/42.5	38/42.5	38/42.5
Sword width	40	–	40	–	40	–
ø rope	–	6	–	6	–	6
ø active buildup compensation	–	–	–	–	40	40
ø tensioning weight	–	30	–	30	–	30
Lateral loading capacity (Nm) at 20 °C	250	–	250	–	250	–
For use in mounting nozzles	–	–	X	X	X	X
In the event of condensate on tank ceiling	–	–	X	X	X	X
Tensile loading capacity kN	–	7.5	–	7.5	–	7.5
Length of tensioning weight	–	150	–	150	–	150

X = recommended

Length tolerance of sword probe < 1 m: 0 to –5 mm; > 1 m up to 3 m: 0 to –10 mm

Length tolerance of rope probe < 1 m: 0 to –10 mm; > 1 m up to 3 m: 0 to –20 mm; > 3 m up to 6 m: 0 to –30 mm, > 6 m up to 20 m: 0 to –40 mm

Sword probes FTI77 for coarse-grained bulk solidsTotal length of probe from start of thread: $L = L1 + L3$

- + 110 mm (ceramic for probe with inactive length) **or**
+ 92 mm (ceramic for probe with inactive length and active buildup compensation)
- + 125 mm in the event of active buildup compensation (optional)

	Probe with inactive length		Probe with inactive length and active buildup compensation	
	BA381Fxx027			
Sword/rope	Sword	Rope	Sword	Rope
H2	259	259	259	259
Total length (L)	410 to 2110	710 to 20000	517 to 2235	817 to 20000
Active length (L1)	200 to 1000	500 to 19790	200 to 1000	500 to 19665
Inactive length (L3)	100 to 1000	100 to 1000	100 to 1000	100 to 1000
ø inactive length	77	77	77	77
Sword width	90	–	90	–
ø rope	–	12	–	12
ø active buildup compensation	–	–	76	76
ø tensioning weight	–	40	–	40
Lateral loading capacity (Nm) at 20 °C	800	–	800	–
For use in mounting nozzles	X	X	X	X
In the event of condensate on tank ceiling	X	X	X	X
Tensile loading capacity kN	–	20	–	20
Length of tensioning weight	–	250	–	250

X = recommended

Length tolerance of sword probe < 1 m: 0 to –5 mm; > 1 m up to 3 m: 0 to –10 mm

Length tolerance of rope probe < 1 m: 0 to –10 mm; > 1 m up to 3 m: 0 to –20 mm; > 3 m up to 6 m: 0 to –30 mm, > 6 m up to 20 m: 0 to –40 mm

Material**Housing**

- Aluminum housing F17, F13, T13: GD–Al Si 10 Mg, DIN 1725, with plastic coating (blue/gray)
- Polyester housing F16: PBT–FR fiberglass reinforced polyester (blue/gray)
- Stainless steel housing F15: corrosion-resistant steel 316L (14404), uninsulated

Housing cover and seals

- Aluminum housing F17, F13, T13: EN-AC-ALSi10Mg, plastic-coated cover seal: EPDM
- Polyester housing F16: Cover made of PBT-FR or cover with sight glass made of PA12
Cover seal: EPDM
- Stainless steel housing F15: AISI 316L Cover seal: silicone

Probe material

- Process connection, inactive length, sword, tensioning weight for rope probe: 316L or steel
 - Probe rope: 1.4401 (AISI 316)
-

Weight**Probes for fine-grained bulk solids:**

The probe weighs approx. 3 kg. This weight comprises:

- Housing
- Process connection: thread
- Temperature spacing sleeve

Additional weights have to be taken into consideration depending on the make-up of the device:

- + Flange weight
- + Inactive length 0.288 kg/100 mm
- + Probe sword 0.25 kg/100 mm
- + Probe rope (ø6) 0.180 kg/m

Probes for coarse-grained bulk solids (always with flange)

The probe weighs approx. 9 kg. This weight comprises:

- Housing
- Process connection: flange
- Temperature spacing sleeve

Additional weights have to be taken into consideration depending on the make-up of the device:

- + Inactive length 0.844 kg/100 mm
- + Probe sword 0.6 kg/100 mm
- + Probe rope (ø12) 0.550 kg/m

Input

Measured variable Measurement of the change in capacitance between the probe sword and the tank wall, depending on the level of the bulk solids.

Measuring range (valid for all)

- Measuring frequency:
500 kHz
- Span:
 $\Delta C = 5$ to 1600 pF
 $\Delta C = 5$ to 500 pF (with FEI58)
- Final capacitance:
 $C_E = \text{max. } 1600$ pF
- Adjustable initial capacitance:
 $C_A = 5$ to 500 pF (range 1 = factory setting)
 $C_A = 5$ to 1600 pF (range 2; not with FEI58)

Input signal Probe covered \Rightarrow high capacitance
Probe not covered \Rightarrow low capacitance

Measuring conditions




Note!

- When installing in a nozzle, use inactive length (L3).
- To control a screw conveyor (Δs mode), sword probes and rope probes can be used (only for nonconductive bulk solids). The on-value and off-value are determined by the empty and full calibration.

$DK > 10$ Measuring range up to 4 m
 $5 < DK < 10$ Measuring range up to 12 m
 $2 < DK < 5$ Measuring range up to 20 m

- The minimum capacitance change for point level detection must be ≥ 5 pF.

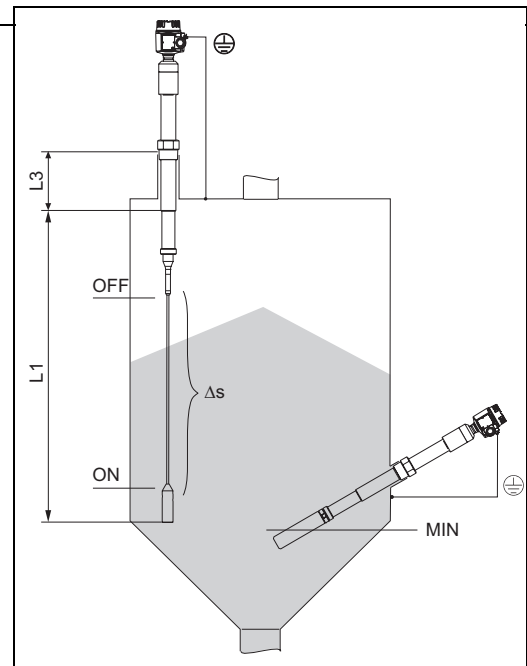

BA381Fxx015

Minimum probe length for nonconductive media ($< 1 \mu\text{s/cm}$)

$$l_{\min} = \Delta C_{\min} / (C_s * [\epsilon_r - 1])$$

l_{\min} = Minimum probe length

ΔC_{\min} = 5 pF

C_s = Probe capacitance in air

ϵ_r = Dielectric constant, for example of dried grain = 3.0

Output

Galvanic isolation	<p>FEI51, FEI52 between rod probe and power supply</p> <p>FEI54: between rod probe, power supply and load</p> <p>FEI53, FEI55, FEI57S, FEI58 see connected switching device (functional galvanic isolation in the electronic insert)</p>
Switch behavior	Binary or Δ s mode (controlling a screw conveyor, not with FEI58)
Switch-on behavior	When the power supply is switched on, the switching status of the outputs corresponds to the signal on alarm. The correct switch condition is reached after max. 3 seconds.
Fail-safe mode	<p>Minimum/maximum quiescent current safety can be switched at the electronic insert (for FEI53 and FEI57S only at Nivotester FTCxxx)</p> <p>MAX = minimum safety: The output switches safety-oriented when the probe is uncovered (signal on alarm). For use for dry running protection and pump protection for example</p> <p>MAX = maximum safety: The output switches safety-oriented when the probe is covered (signal on alarm). For use with overflow protection for example</p>
Switching delay	<p>FEI51, FEI52, FEI54, FEI55 Can be adjusted incrementally at the electronic insert: 0.3 to 10 s</p> <p>FEI53, FEI57S Depends on the connected Nivotester (transmitter): FTC325, FTC625, FTC470Z or FTC471Z</p> <p>FEI58 Can be adjusted alternately at the electronic insert: 1 s/5 s</p>

Electronic insert FEI51 (AC 2-wire)



Note!
Connect in series with an external load.

Power supply


Supply voltage: 19 to 253 V AC
Power consumption: < 1.5 W
Residual current consumption: < 3.8 mA
Short-circuit protection
FEI51 overvoltage protection: overvoltage category II

Electrical connection

Always connect in series with a load.
Check the following:

- the residual current consumption in blocked state.
- that for low voltage:
 - the voltage drop across the load is such that the minimum terminal voltage at the electronic insert (19 V) when blocked is not undershot.
 - the voltage drop across the electronics when switched through is observed (up to 12 V).
- that a relay cannot de-energize with holding power below 1 mA.
If this is the case, a resistor should be connected parallel to the relay (RC module available on request).

When selecting the relay, pay attention to the holding power / rated power (see below: "Connectable load").

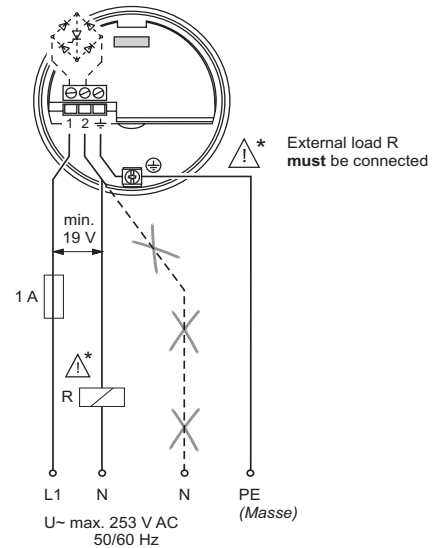

L00-FM15xxxx-06-05-xx-en-071

Signal on alarm

Safety mode	Level	Output signal	LEDs					
			gn	gn	rd	gn	gn	ye
MAX		L^+ 1 $\xrightarrow{I_L}$ 3	●	●	●	●	●	●
		$< 3,8 \text{ mA}$ 1 $\xrightarrow{\text{---}}$ 3	●	●	●	●	●	●
MIN		L^+ 1 $\xrightarrow{I_L}$ 3	●	●	●	●	●	●
		$< 3,8 \text{ mA}$ 1 $\xrightarrow{\text{---}}$ 3	●	●	●	●	●	●
Maintenance required		$I_L / < 3,8 \text{ mA}$ 1 $\xrightarrow{\text{---}}$ 3	●	●	●	●	●	●
Instrument failure		$< 3,8 \text{ mA}$ 1 $\xrightarrow{\text{---}}$ 3	●	●	●	●	●	●

BA300Fen017

Output signal

Output signal on power failure or in the event of damage to the sensor: < 3.8 mA

Connectable load

- For relays with a minimum holding power or rated power > 2.5 VA at 253 V AC (10 mA) or > 0.5 VA at 24 V AC (20 mA)
- Relays with a lower holding power or rated power can be operated by means of an RC module connected in parallel.
- For relays with a maximum holding power or rated power < 89 VA at 253 V AC or < 8.4 VA at 24 V AC
- Voltage drop across FEI51 max. 12 V
- Residual current with blocked thyristor max. 3.8 mA
- Load switched directly into the power supply circuit via the thyristor.

FEI52 electronic insert (DC PNP)


Power supply

Supply voltage: 10 to 55 V DC
 Ripple: max. 1.7 V, 0...400 Hz
 Current consumption: < 20 mA
 Power consumption without load: max. 0.9 W
 Power consumption with full load (350 mA): 1.6 W
 Reverse polarity protection: yes
 Separation voltage: 3.7 kV
 FEI52 overvoltage protection: overvoltage category II

Electrical connection

Three-wire DC connection

Preferably in conjunction with programmable logic controllers (PLC),
 DI modules in accordance with EN 61131-2.
 Positive signal present at the switch output of the electronic system (PNP).

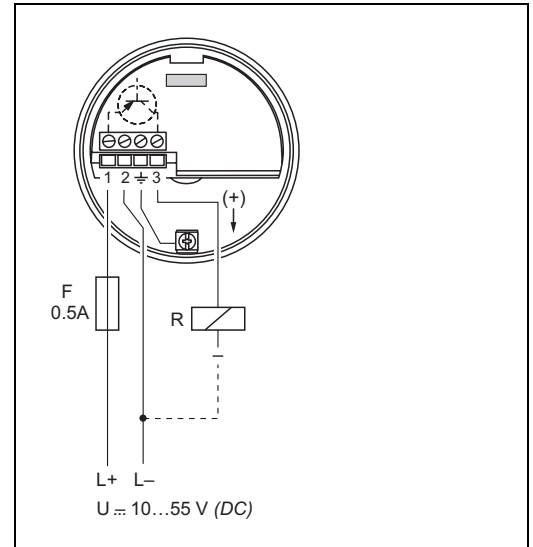

TI418F42

Output signal

Safety mode	Level	Output signal	LEDs					
			gn	gn	rd	gn	gn	ye
MAX		$L^+ \xrightarrow{I_L} +$ 1 ———→ 3	●	●	●	●	●	●
		$1 \xrightarrow{I_R} 3$	●	●	●	●	●	●
MIN		$L^+ \xrightarrow{I_L} +$ 1 ———→ 3	●	●	●	●	●	●
		$1 \xrightarrow{I_R} 3$	●	●	●	●	●	●
Maintenance required		$1 \xrightarrow{I_L / I_R} 3$	●	●	●	●	●	●
Instrument failure		$1 \xrightarrow{I_R} 3$	●	●	●	●	●	●

I_L = Load current (switched through)
 I_R = Residual current (blocked)

● Lit
 ● Flashes
 ● Unlit

TI418Fen43

TI418F44

Signal on alarm

Output signal on power failure or in the event of device failure: $I_R < 100 \mu A$

Connectable load

- Load switched via transistor and separate PNP connection, max. 55 V
- Load current max. 350 mA (cyclical overload and short-circuit protection)
- Residual current < 100 μA (with transistor blocked)
- Capacitance load max. 0.5 μF at 55 V; max. 1.0 μF at 24 V
- Residual voltage < 3 V (for transistor switched through)

Electronic insert FEI53 (3-wire)

Power supply

Supply voltage: 14.5 V DC
 Current consumption: < 15 mA
 Power consumption: max. 230 mW
 Reverse polarity protection: yes
 Separation voltage: 0.5 kV

Electrical connection


Three-wire DC connection

3 to 12 V signal

For connecting to the switching unit, Nivotester FTC325 3-WIRE from Endress+Hauser.

Switching between minimum/maximum
 Safety in the Nivotester FTC325 3-WIRE.

Point level adjustment directly at the Nivotester.

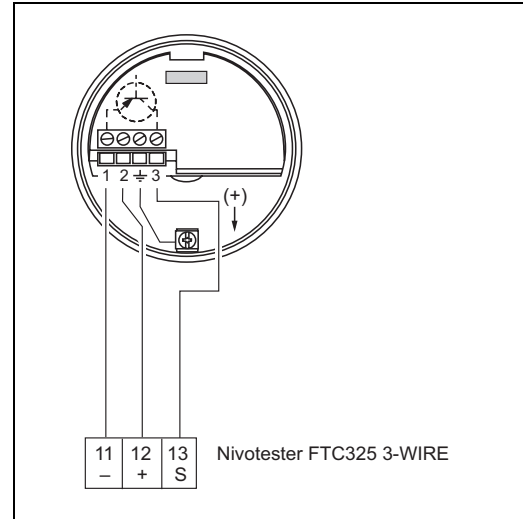

TI418F45

Output signal

Mode	Output signal	LEDs green red
Normal operation	3...12 V at terminal 3	
Maintenance required *	3...12 V at terminal 3	
Instrument failure	< 2,7 V at terminal 3	

TI418Fen40

Lit
 Flashes
 Unlit

TI418F44

Signal on alarm

Voltage at terminal 3 vis-à-vis terminal 1: < 2.7 V

Connectable load

- Floating relay contacts in the connected switching unit Nivotester FTC325 3-WIRE
- For the contact load capacity, refer to the technical data of the switching device.

FEI54 electronic insert (AC/DC with relay output)

Power supply

Supply voltage: 19 to 253 V AC, 50/60 Hz or 19 to 55 V DC
 Power consumption: max. 1.6 W
 Reverse polarity protection: yes
 Separation voltage: 3.7 kV
 FEI54 overvoltage protection: overvoltage category II


Electrical connection

Universal current connection with relay output (DPDT)

Power supply:
 Please note the different voltage ranges for AC and DC.

Output:
 When connecting an instrument with high inductance, provide a spark arrester to protect the relay contact.
 A fine-wire fuse (depending on the load connected) protects the relay contact on short-circuiting.
 Both relay contacts switch simultaneously.

* See below "Connectable load"

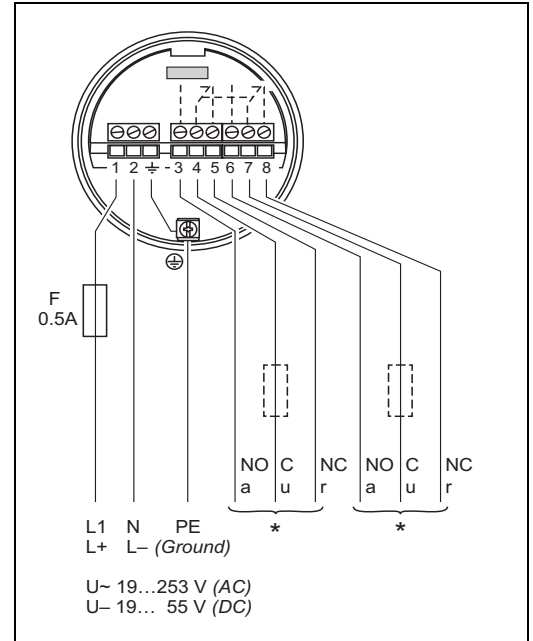

TI418F47

Output signal

Safety mode	Level	Output signal	LEDs					
			gn	gn	rd	gn	gn	ye
MAX								
MIN								
Maintenance required								
Instrument failure								

TI418Fen48

TI418F49

- Relay energized
- Relay de-energized
- Lit
- Flashes
- Unlit

Signal on alarm

Output signal on power failure or in the event of device failure: relay de-energized

Connectable load

- Loads switched via 2 floating changeover contacts (DPDT)
- I~ max. 6 A, U~ max. 253 V; P~ max. 1500 VA at $\cos \varphi = 1$, P~ max. 750 VA at $\cos \varphi > 0.7$
- I- max. 6 A to 30 V, I- max. 0.2 A to 125 V
- The following applies when connecting a functional low-voltage circuit with double isolation as per IEC 1010: Sum of voltages of relay output and power supply max. 300 V

Electronic insert FEI55 (8/16 mA; SIL2/SIL3)

Power supply


Supply voltage: 11 to 36 V DC
 Power consumption: < 600 mW
 Reverse polarity protection: yes
 Separation voltage: 0.5 kV

Electrical connection

Two-wire connection for separate switching unit

For connecting to programmable logic controllers (PLC), AI modules 4 to 20 mA in accordance with EN 61131-2.

The point level signal is sent via an output signal jump from 8 mA to 16 mA.

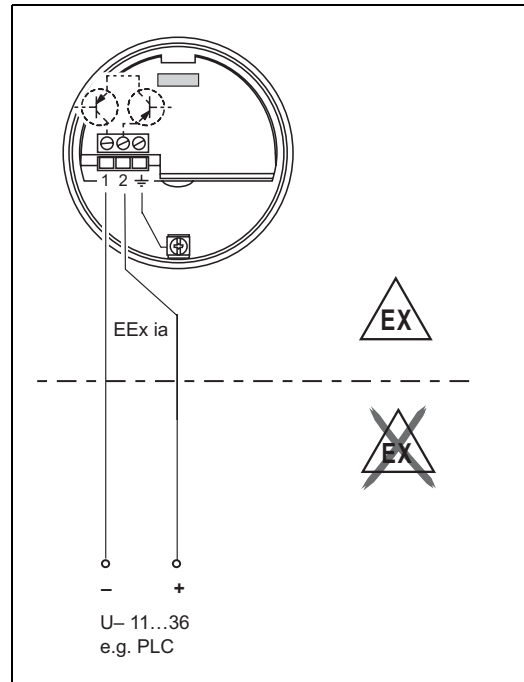

TI418Fen50

Output signal

Safety mode	Level	Output signal	LEDs gn gn rd gn gn ye
MAX		$\frac{+}{2} \xrightarrow{\sim 16 \text{ mA}} 1$	
		$\frac{+}{2} \xrightarrow{\sim 8 \text{ mA}} 1$	
MIN		$\frac{+}{2} \xrightarrow{\sim 16 \text{ mA}} 1$	
		$\frac{+}{2} \xrightarrow{\sim 8 \text{ mA}} 1$	
Maintenance required *		$\frac{+}{2} \xrightarrow{8/16 \text{ mA}} 1$	
Instrument failure		$\frac{+}{2} \xrightarrow{< 3.6 \text{ mA}} 1$	

$\sim 16 \text{ mA} = 16 \text{ mA} \pm 5 \%$
 $\sim 8 \text{ mA} = 8 \text{ mA} \pm 6 \%$

Lit
 Flashes
 Unlit

TI418Fen51

TI418F44

Signal on alarm

Output signal on power failure or in the event of device failure: < 3.6 mA


Connectable load

- U = Connection DC voltage:
 - 11 to 36 V DC (non-hazardous area and Ex ia)
 - 14.4 to 30 V DC (Ex d)
- $I_{\text{max}} = 16 \text{ mA}$

FEI57S electronic insert (PFM)

Power supply

Supply voltage:
 9.5 to 12.5 VDC
 Power consumption: < 150 mW
 Reverse polarity protection: yes
 Separation voltage: 0.5 kV

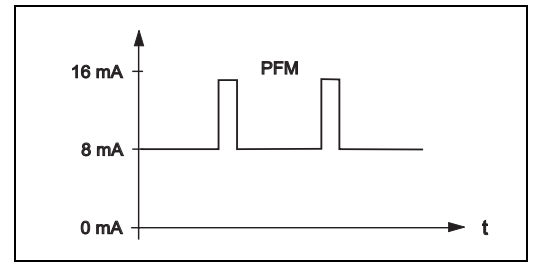

Frequency: 17 to 185 Hz

TI418F52


Electrical connection

Two-wire connection for separate switching unit

For connecting to switching units
 Nivotester FTC325, FTC625, FTC470Z, FTC471Z
 from Endress+Hauser.

PFM signal 17 to 185 Hz

Switching between minimum/maximum
 safety in the Nivotester.

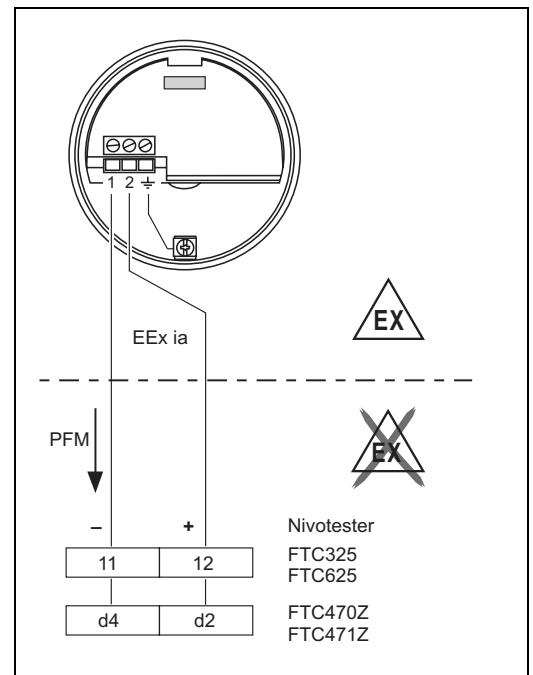

TI418F53

Output signal

PFM 60 to 185 Hz (Endress+Hauser)

Signal on alarm

Mode	Output signal	LEDs green red
Normal operation	60...185 Hz 1 -----> 2	● ●
Maintenance required *	60...185 Hz 1 -----> 2	● ●
Instrument failure	< 20 Hz 1 -----> 2	● ●

TI418Fen54

- ☀ Lit
- ⚡ Flashes
- Unlit

TI418F44

Connectable load

- Floating relay contacts in the connected switching unit Nivotester FTC325, FTC625, FTC470Z, FTC471Z
- For the contact load capacity, refer to the technical data of the switching device.

Electronic insert FEI58 (NAMUR H-L edge)

Power supply

Power consumption: < 6 mW at I < 1 mA; < 38 mW at I = 2.2 to 4 mA
Interface connection data: IEC 60947-5-6


Electrical connection

Two-wire connection for separate switching unit


For connecting to isolating amplifiers as per NAMUR (IEC 60947-5-6), e.g. FXN421, FXN422, FTL325N, FTL375N from Endress+Hauser. Change in output signal from high to low current in event of point level detection.

(H-L edge)

Additional function:
Test key on the electronic insert.
Pressing the key interrupts the connection to the isolating amplifier.




 **Note!**
In the case of Ex-d operation, the additional function can only be used if the housing is not exposed to an explosive atmosphere.

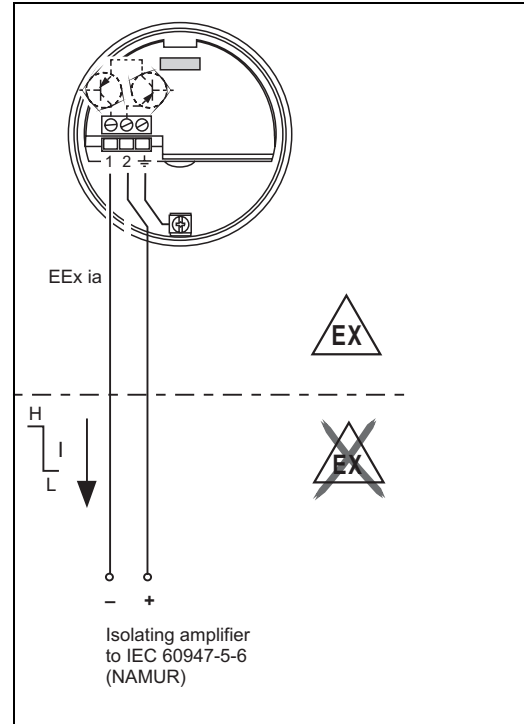Connection to Multiplexer: set 3 s as the cycle time at least.















L00-FTL5xxxx-04-05-xx-xx-007

Output signal

 = Lit
 = Flashes
 = Unlit

L00-FTL5xxxx-07-05-xx-xx-002

Fail-safe mode	Level	Output signal	LEDs	
			green	yellow
Max.		+ 2.2 ... 3.5 mA → 1		
		+ 0.6 ... 1.0 mA → 1		
Min.		+ 2.2 ... 3.5 mA → 1		
		+ 0.6 ... 1.0 mA → 1		

L00-FTL5xxxx-04-05-xx-xx-007

Signal on alarm

Output signal in the event of damage to the sensor: < 1.0 mA

Connectable load

- See the technical data of the connected isolating amplifier as per IEC 60947-5-6 (NAMUR)
- Connection also to isolating amplifiers which have special safety circuits (I > 3.0 mA)

Power supply

Electrical connection

Connection compartment


Five housings with the following protection classes are available:

Housing	Standard	EEx ia	EEx d	gas-tight process seal
Polyester housing F16	X	X	-	-
Stainless steel housing F15	X	X	-	-
Aluminum housing F17	X	X	-	-
Aluminum housing F13	X	X	X	X
Aluminum housing T13 (with separate connection compartment)	X	X	X	X


Connector

In the case of the versions with a connector (M12 or 7/8"), the housing does not have to be opened to connect the signal cable.

PIN assignment for the M12 connector (PROFIBUS PA standard, HART)

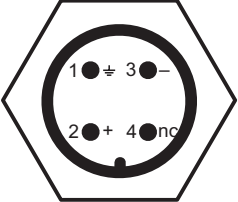 <small>L00-FMxxxxx-04-00-00-yy-016</small>	PIN	Meaning for FEI52, FEI53	Meaning for FEI55, FEI57S, FEI58
	1	External load/voltage output	Not assigned
	2	Not assigned	Not assigned
	3	Signal -	Signal -
	4	Signal +	Signal +

PIN assignment for the 7/8" connector (Fieldbus FOUNDATION standard, HART)

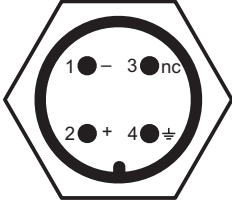 <small>L00-FMxxxxx-04-00-00-yy-017</small>	PIN	Meaning for FEI52, FEI53	Meaning for FEI55, FEI57S, FEI58
	1	Signal -	Signal -
	2	Signal +	Signal +
	3	External load/voltage output	Not assigned
	4	Ground	Ground

Cable entry

- Cable gland: M20x1.5 (for EEx d only cable entry M20)
Two cable glands included in scope of delivery.
- Cable entry: G 1/2, NPT 1/2, NPT 3/4 or M20 thread

Performance characteristics

Reference operating conditions

- Room temperature: $+20\text{ °C} \pm 5\text{ °C}$
 - Span:
 - Standard measuring range: 5 to 500 pF
 - Extended measuring range: 5 to 1600 pF
 - Span for reference: 5 to 250 pF
 - Uncertainty according to DIN 61298-2: max $\pm 0.3\%$
 - Non-repeatability (reproducibility) according to DIN 61298-2: max. $\pm 0.1\%$
-

Switch point

- Uncertainty according to DIN 61298-2: max $\pm 0.3\%$
 - Non-repeatability (reproducibility) according to DIN 61298-2: max. $\pm 0.1\%$
-

Ambient temperature effect**Electronic insert**

$< 0.06\% / 10\text{ K}$ related to the full scale value


Separate housing

Capacitance change of connecting cable per meter 0.15 pF/10K

Human interface

Electronic inserts

FEI51, FEI52, FEI54, FEI55

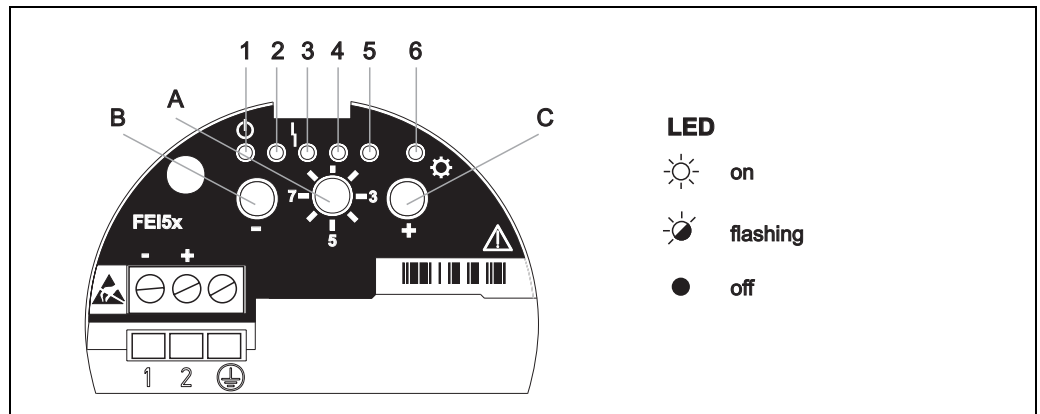

Green LED 1 (☺ operational), red LED 3 (⚠ fault), yellow LED 6 (⚙ switching state)


BA300Fes015

Function switch setting	Function	- key	+ key	Light emitting diodes (LED signals)					
				☺	☺	⚠	☺	☺	⚙
				☺ 1 (green)	☺ 2 (green)	⚠ 3 (red)	☺ 4 (green)	☺ 5 (green)	☺ 6 (yellow)
	Operation			Flashes Operational LED	On (MIN-SIL)	Flashes (warning/ alarm)	On (MAX-SIL)		On/off/ flashes
	Restore factory setting	Press both keys for approx. 20 s		On	->	->	->	->	On/off/ flashes
	Empty calibration	Press		On (present)					On/off/ flashes
	Full calibration		Press					On (present)	On/off/ flashes
	Reset: Calibration and switchpoint adjustment	Press both keys for approx. 10 s		On	->	->	->	->	On/off/ flashes
	Switchpoint adjustment	Press for <	Press for >	On (2 pF)	Off (4 pF)	Off (8 pF)	Off (16 pF)	Off (32 pF)	On/off/ flashes
	Measuring range	Press for <		On (500 pF)	Off (1600 pF)				On/off/ flashes
	Two-point control Δs		Press once					On	On/off/ flashes
	Buildup mode		Press twice				On	On	On/off/ flashes
	Switching delay	Press for <	Press for >	Off (0.3 s)	On (1.5 s)	Off (5 s)	Off (10 s)		On/off/ flashes
	Self-test (function test)	Press both keys		Off (inactive)				Flashes (active)	On/off/ flashes
	MIN-/MAX Fail-safe mode	Press for MIN	Press for MAX	Off (MIN)				On (MAX)	On/off/ flashes
	Lock/unlock SIL mode*	Press both keys			On (MIN-SIL)		On (MAX-SIL)		On/off/ flashes
	Upload/download Sensor DAT (EEPROM)	Press for download	Press for upload	Flashes (download)				Flashes (upload)	On/off/ flashes

* Only in conjunction with electronic insert FEI55 (SIL).

Electronic inserts

FEI53, FEI57S

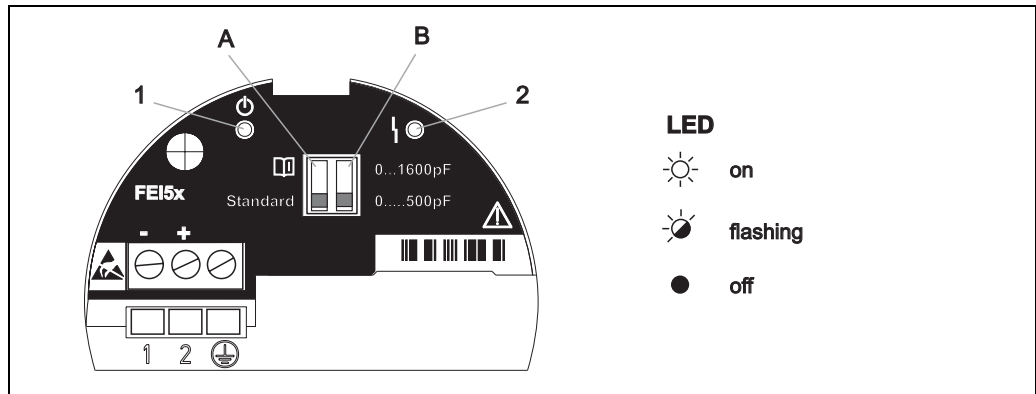


BA300Fen016

Green LED (⏻ operational), red LED (⚡ fault)

DIP switches	Function
A Standard	Standard ¹⁾ : If the measuring range is exceeded no alarm is output.
A	: If the measuring range is exceeded an alarm is output.
B 0...500pF	Measuring range: The measuring range is between 0 and 500 pF. Span: The span is between 5 and 500 pF.
B 0...1600pF	Measuring range: The measuring range is between 0 and 1600 pF. Span: The span is between 5 and 1600 pF.

Electronic insert

FEI58

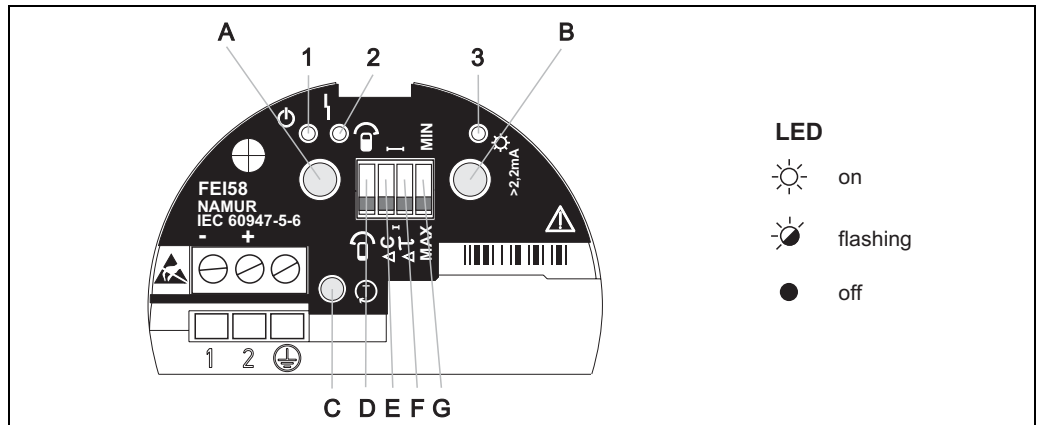

Green LED 1 (☉ operational), red LED 2 (⦿ fault), yellow LED 3 (⚡ switching state)

BA299Fen010

DIP switches (C, D, E, F)		Function
D		The probe is covered during calibration.
D		The probe is uncovered during calibration.
E		Switchpoint adjustment: 10 pF
E		Switchpoint adjustment: 2 pF
F		Switching delay: 5 s
F		Switching delay: 1 s
G		Fail-safe mode: MIN The output switches safety-oriented when the probe is uncovered (signal on alarm). For use for dry running protection and pump protection for example
G		Fail-safe mode: MAX The output switches safety-oriented when the probe is covered (signal on alarm). For use with overflow protection for example


Key			Function
A	B	C	
X			Display diagnostic code
	X		Display calibration situation
X	X		Perform calibration (during operation)
X	X		Delete calibration points (during startup)
		X	Test key , (disconnects the transmitter from the switching unit)

Certificates and approvals

CE approval

The devices are designed to meet state-of-the-art safety requirements, have been tested and left the factory in a condition in which they are safe to operate. The devices comply with the applicable standards and regulations that are listed in the EC Declaration of Conformity and thus meet the legal requirements of the EC Directives. Endress+Hauser confirms the conformity and the successful testing of the device by affixing to it the CE approval.

Other certificates

- See also "Ordering information" →  41
 - AD2000
The wetted material (316L) corresponds to AD2000 – W0/W2
-

Other standards and guidelines

EN 60529

Degrees of protection by housing (IP code)

EN 61010

Safety requirements for electrical equipment for measurement, control and laboratory use

EN 61326

Interference emission (Class B equipment), interference immunity (Appendix A – Industrial).

NAMUR

Association for Standards for Control and Regulation in the Chemical Industry

IEC 61508

Functional safety

IEC 60947-5-6

Low-voltage switchgear and control gear; DC interface for proximity sensors and switching amplifiers (NAMUR)

Ordering information



Note!

In this list, versions which are mutually exclusive are not marked.

Solicap S FTI77

10		Approval:	
A	Non-hazardous area		
B	ATEX II 1/3 D	Ex tD	
C	ATEX II 1/2 D	Ex tD	
D	ATEX II 3 D	Ex nA/nL/nC	
F	ATEX II 1 D, 1/2 D, 1/3 D	EEx ia D20 T 90 °C	
K	CSA General Purpose,	CSA C US	
L	CSA/FM IS Cl. I, II, III,	Div. 1+2, Gr. A-G	
M	CSA/FM XP Cl. I, II, III,	Div. 1+2, Gr. A-G	
N	CSA/FM DIP Cl. II, III,	Div. 1+2, Gr. E-G	
Y	Special version, TSP-no. to be specified		

15		Application:	
1	Solid, fine-grained		
2	Solid, coarse-solids		
9	Special version		

20		Inactive length L3:	
A	Not selected		
B	200 mm		steel
C	400 mm		steel
E	200 mm		316L
F	400 mm		316L
G	... mm		316L
H	... mm, inactive length + 125 mm active buildup compensation		316L
L	8 inch		steel
M	16 inch		steel
N	8 inch		316L
P	16 inch		316L
R	... inch		316L
S	... inch, inactive length + 5 inch active buildup compensation		316L
9	Special version		

30		Active length L1:	
AB	200 mm	sword	steel
AC	400 mm	sword	steel
AD	700 mm	sword	steel
BB	200 mm	sword	316L
BC	400 mm	sword	316L
BR	... mm	sword	316L
CR	... mm	6 mm rope	steel zinc coated
CS	... mm	12 mm rope	steel zinc coated
DR	... mm	6 mm rope	316L
DS	... mm	12 mm rope	316L
EB	8 inch	sword	steel
EC	16 inch	sword	steel
ED	28 inch	sword	steel
FB	8 inch	sword	316L
FC	16 inch	sword	316L
FR	... inch	sword	316L
GR	... inch	0.24 " rope	steel zinc coated
GS	... inch	0.47 " rope	steel zinc coated
HR	... inch	0.24 " rope	316L
HS	... inch	0.47 " rope	316L
VV	Connection thread, prepared for active probe length		
YY	Special version, TSP-no. to be specified		

50		Process connection:	
AFJ	2",	150 lbs RF	316/316L
AGJ	3",	150 lbs RF	316/316L
AHJ	4",	150 lbs RF	316/316L
AH1	4",	150 lbs RF	steel

Accessories

Weather protection cover

For F13 and F17 housing
Order number: 71040497

Overvoltage protection HAW56x

Overvoltage protection (housing)


- HAW569-A11A (non-hazardous)
- HAW569-B11A (hazardous area)



Note!

These two versions can be screwed directly into the housing (M20x1.5).

Surge arrester for limiting overvoltage in signal lines and components.

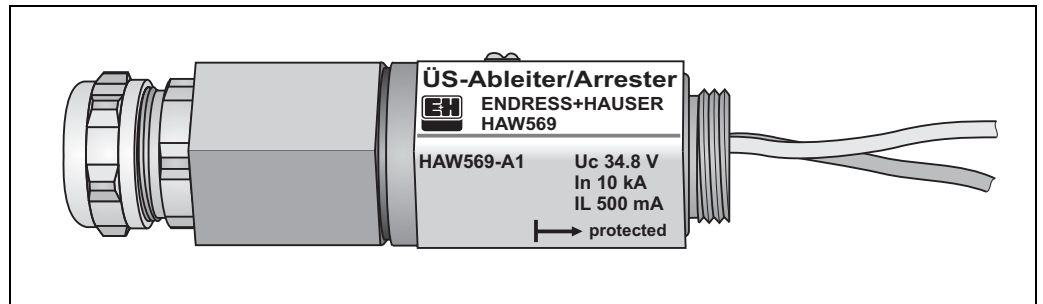

L00-FMI5xxxx-03-05-xx-xx-009

Overvoltage protection (cabinet)

- HAW562Z (hazardous area)

The HAW562Z module can be used for installation in cabinets.


Adapter flange FAU70E / FAU70A

The following (steel) probe versions are available for fine-grained bulk solids:

- R 1½
- NPT 1½

Adapter flanges that can be ordered via the following FAU70E and FAU70A product structures are optionally available.

- **FAU70E**
 - 1233 -> DN50 PN16 A, flange EN1092-1 (DIN2527 B)
 - 1433 -> DN80 PN16 A, flange EN1092-1 (DIN2527 B)
 - 1533 -> DN100 PN16 A, flange EN1092-1 (DIN2527 B)
- **FAU70A**
 - 2253 -> 2" 150lbs FF, flange ANSI B16.5
 - 2453 -> 3" 150lbs FF, flange ANSI B16.5
 - 2553 -> 4" 150lbs FF, flange ANSI B16.5

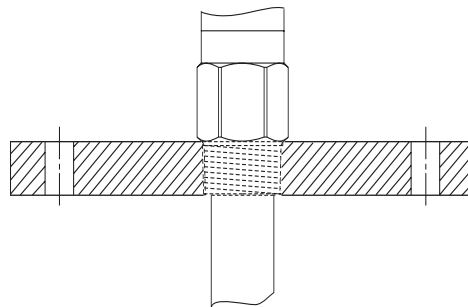

BA381 Fxx025

Spare parts**Electronic inserts**

Electronic insert	Parts number
FEI51	71042887
FEI52	71025819
FEI53	71025820
FEI54	71025814
FEI55	71025815
FEI57S	71025816
FEI58	71100895

**Note!**

- You can order spare parts directly from your E+H service organization by quoting the order number (see below).
- Before ordering, please note that all ordered spare parts must correspond with the indications on your nameplate. Otherwise, the indications on the nameplate will no longer correspond with the instrument version.

Housing cover

Cover	Parts number
For aluminum housing F13: gray with sealing ring	52002698
For stainless steel housing F15: with sealing ring	52027000
For stainless steel housing F15: with clasp and sealing ring	52028268
For polyester housing F16, flat: gray with sealing ring	52025606
For aluminum housing F13, flat: gray with sealing ring	52002699
For aluminum housing T13, flat: gray with sealing ring/electronics compartment	52006903
For aluminum housing T13, flat: gray with sealing ring/connection compartment	52007103

Seal set for stainless steel housing

- Seal set for stainless steel housing F15: with 5 sealing rings
52028179

Documentation**Note!**

This documentation is available on the product pages at www.endress.com

Technical Information

- EMC test procedures
TI241F/00/en
- Nivotester FTL325N
TI353F/00/en
- Nivotester FTL375N
TI361F/00/en

Operating Instructions

- Solicap S FTI77
BA381F/00/en

Certificates**Safety information (ATEX)**

- Solicap S FTI77
ATEX II 1 D Ex tD A20 IP65 T 90 °C,
ATEX II 1/2 D Ex tD A20/A21 IP65 T 100 °C
XA486F/00/a3

Control drawings

- Solicap S FTI77
FM: ZD243F/00/en

- Solicap S FTI77
CSA ZD225F/00/en

Functional safety

- Solicap S FTI77
SD278F/00/en

CRN registration

- CRN 0F1988.75

Other

- AD2000
The wetted material (316L) corresponds to AD2000 – W0/W2

Patents

This product is protected by at least one of the patents listed below.
Further patents are under development.

- DE 103 22 279,
WO 2004 102 133,
US 2005 003 9528
- DE 203 13 695,
WO 2005 025 015

Instruments International

Endress+Hauser
Instruments International AG
Kaegenstrasse 2
4153 Reinach
Switzerland

Tel. +41 61 715 81 00
Fax +41 61 715 25 00
www.endress.com
info@ii.endress.com

Endress+Hauser 
People for Process Automation

