





# **Model Number**


## DK50-UV-609/79d/115b/147

Print mark luminescence scanner with fixed cable and M12 connector, 5-pin


## **Features**

- Detect fluorescent chalk marks, clear glue, tamper-proof seals and other marks that regular contrast sensors cannot
- Detect marks on irregular backgrounds
- Sense invisible or nearly invisible marks
- Compact, space-saving construction
- Integral timer available
- Automatic or incremental teach
- Differentiate degrees of luminescent contrast

## **Dimensions**

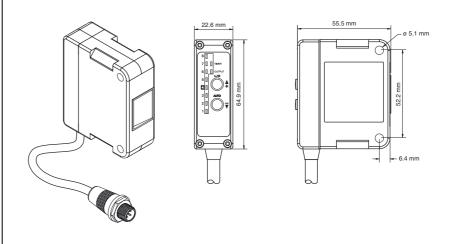

## **Electrical connection**

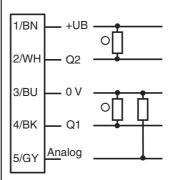

- O = Light on
- = Dark on

# **Pinout**





Technical data		
General specifications		
Detection range		50.8 609.6 mm
Light source		LED
Light type		modulated UV light
Light spot representation		25.4 mm at 203 mm sensor range
Teach-In		Incremental or automatic
Indicators/operating means		
Operation indicator		LED green, 15 ms off delay timer LED green (x8), for contrast level indication
Function indicator		LED red, lights up with receiver lit
Teach-In indicator		Automatic Teach-In: green contrast LEDs turn on and off once from levels 1 through 8 then level 8 LED flashes twice Incremental Teach-In: green contrast level LED position may change
Control elements		Push buttons for automatic or incremental Teach-In, L.O./D.O. mode, and/or off-delay timer
Electrical specifications		
Operating voltage	$U_B$	10 30 V DC
No-load supply current	l <sub>0</sub>	65 mA
Output		
Switching type		light on / dark on
Signal output		1 PNP and 1 NPN short-circuit protected, reverse polarity protected
Switching voltage		max. 30 V DC
Switching current		150 mA
Measurement output		0 - 5  V DC R <sub>min</sub> = 1 k $\Omega$
Switching frequency	f	600 Hz
Response time		Discrete Output 200 µs Analog output 1 ms
Ambient conditions		
Ambient temperature		-15 55 °C (5 131 °F)
Storage temperature		-15 70 °C (5 158 °F)
Mechanical specifications		
Protection degree		IP67
Connection		150 mm pigtail, quick disconnect type M12 (micro)
Material		
Housing		Polycarbonate
Optical face		Acrylic
Mass		91 g
Approvals and certificates		
Approvals		CE, cULus

# **Function description**

#### Adjustment

## **Automatic Teach**

1) Position the sensor so that its effective ultraviolet (UV) light beam is focused on the luminescent target. The target should glow when excited by UV light.

## **Accessories**

## OMH-DK50

Right-Angled Mounting Bracket

## V15-G-2M-PUR

Female cordset, M12, 5-pin, PUR cable

## V15-W-2M-PUR

Female cordset, M12, 5-pin, PUR cable

Other suitable accessories can be found at www.pepperl-fuchs.com



**EPPERL+FUCHS** 

2) While pressing the AUTO button, repeatedly press the "+" button to scroll through the four possible automatic teach modes. The direction of the flashing contrast indicator LEDs (numbered 1 through 8) indicates the current automatic teach mode (see Figure 1). When the desired mode is indicated, release the AUTO button. Descriptions of the four automatic teach modes are below.

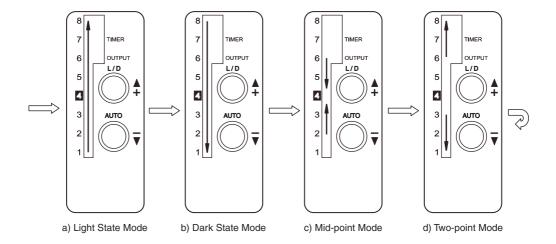


Figure 1. LED flashing sequence for automatic teach modes

## a) Light State mode

- The most luminescent target should be in view of the sensor when the AUTO button is released.
- This mode sets the sensor's digital output threshold approximately 10% below the sampled point. The contrast indicator LEDs display the level of returned light relative to the threshold.

#### b) Dark State mode

- The least luminescent target should be in view of the sensor when the AUTO button is released.
- This mode sets the sensor's digital output threshold approximately 10% above the sampled point. The contrast indicator LEDs display the level of returned light relative to the threshold.

## c) Mid-point mode

- The luminescent target should be in view of the sensor when the AUTO button is released to center the analog output.
- This mode sets the sensor's digital output threshold at the sampled point (the middle of the hysteresis band). The contrast indicator LEDs display the level of returned light relative to the threshold.

#### d) Two-point mode

- The luminescent target that should turn ON the digital output should be in view of the sensor when the AUTO button is
  released. Then the target that should not turn ON the digital output should be placed in view of the sensor, and the
  AUTO button should again be pressed and released. (Note: Insufficient contrast is indicated by all eight contrast indicator LEDs flashing three times.)
- This mode sets the sensor's threshold midway between the two sampled points. The contrast indicator LEDs display
  the level of returned light relative to the threshold. The contrast indicator LEDs are scaled to the application from level
  0 to level 8 based on the two set points.

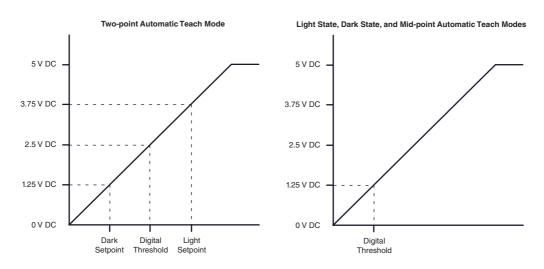


Figure 2. Digital Output Thresholds for Automatic Teach Modes

#### **Incremental Teach**

- 1) Position the sensor so that its effective ultraviolet (UV) light beam is focused on the luminescent target. The target should glow when excited by UV light.
- 2) Press "+" button quickly one or more times to manually increase the sensitivity of the sensor, and/or press "-" button quickly one or more times to manually decrease the sensitivity of the sensor.

#### **Timer Mode**

Push and hold both push-buttons simultaneously to turn on or off the integral 15 ms pulse-stretching timer. The green LED next to TIMER is on when the timer is active and is off when there is no timer function.

#### Setting Light On / Dark On Mode

Press and hold the L/D button for 2 seconds to toggle between Light on and Dark on modes. The red LED next to OUTPUT changes state when the mode switches.

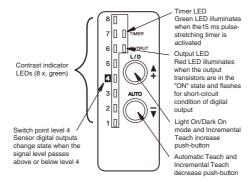


Figure 3. Push-buttons and Status Indication LEDs

#### **Note on Sensing Range Specification**

Sensing range specifications are typical values and are dependent on application conditions, the luminescent concentration, and other attributes of the target. It is suggested to test the sensor model in the application to ensure optimal performance.

PEPPERL+FUCHS