



CSL 505

Switching light curtains



© 2015

Leuze electronic GmbH + Co. KG
In der Braike 1

73277 Owen/Germany

Phone: +49 7021 573-0

Fax: +49 7021 573-199

<http://www.leuze.com>

info@leuze.de

Table of contents

1	General information.....	5
1.1	About this technical description	5
1.2	Used symbols and signal words	5
1.3	Declaration of Conformity	5
2	Safety notices.....	6
2.1	Safety standards	6
2.2	Approved purpose.....	6
2.3	Working safely.....	7
3	Product description.....	8
3.1	General information	8
3.2	Performance characteristics	8
3.3	Configuration interface.....	9
3.4	Configuration software	10
3.5	Parameters (receiver)	11
3.5.1	Switching output (dark/light).....	11
3.5.2	Output functions (pin 2/pin 4).....	11
3.5.3	Beam mode.....	12
3.5.4	Relative switching threshold	13
3.5.5	Blanking of beams	13
3.5.6	Start beam of second detection range.....	14
3.5.7	Synchronization beam	15
3.5.8	Smoothing	15
3.5.9	Pulse stretching [ms].....	15
3.5.10	Top blanking.....	15
3.5.11	Relative switching threshold warn.....	15
3.5.12	Warn signal delay [s].....	16
3.5.13	Power-up teach delay [s]	16
3.5.14	Blanking warning.....	16
3.5.15	Overview table of configuration values for receiver	17
3.6	Parameters (transmitter)	19
3.6.1	High signal or Low signal at input	19
3.6.2	Operating range	20
4	Mounting and commissioning.....	21
4.1	Electrical connection	22
4.1.1	M8 connector variant	22
4.2	Execution of teach event.....	23
4.3	LED indicators/Error diagnostics.....	24
4.3.1	Receiver bar	24
4.3.2	Transmitter bar.....	24
4.4	Substitution of Vario B	25
4.4.1	Receiver bar	25
4.4.2	Transmitter bar	25
5	Maintenance	26
6	Technical data	27
6.1	General specifications.....	27
6.2	Nomenclature.....	28
6.3	Dimensioned drawings.....	28
6.4	Dimensions	29

7	Accessories and scope of delivery	34
7.1	Accessories.....	34
7.2	Delivery contents.....	35

Figures and tables

Figure 1:	CSL505-Interface	9
Figure 2:	Pin assignment of CSL 505 switching light curtain cables.....	9
Figure 3:	Configuration window of CSL505-Software	10
Figure 4:	Mounting the CSL 505 switching light curtain	21
Figure 5:	M8 connector variant.....	22
Figure 6:	LED indicators/Error diagnostics.....	24
Figure 7:	CSL 505 with beam spacing 5 mm	28
Figure 8:	CSL 505 with beam spacing > 5 mm	29
Table 1:	Output functions (pin 2/pin 4)	11
Table 2:	Beam mode	12
Table 3:	Automatic beam blanking	14
Table 4:	Output functions	14
Table 5:	Configuration values Receiver	18
Table 6:	High signal and Low signal at input.....	19
Table 7:	Operating range	20
Table 8:	Configuration values for transmitter	20
Table 9:	Flash codes during teach event	23
Table 10:	LED indicators of receiver bar	24
Table 11:	LED indicators of transmitter bar	24
Table 12:	Part number code	28
Table 13:	Dimensions housing	29
Table 14:	Dimensions CSL 505.....	31
Table 15:	Dimensions of CSL 505, special variant "VB"	33
Table 16:	Accessories	34
Table 17:	Connection cables.....	34

1 General information

1.1 About this technical description

These operating instructions contain information regarding the proper and effective use of the CSL 505 switching light curtain. These operating instructions (PDF file) can be downloaded from the Internet at www.leuze.de.

1.2 Used symbols and signal words

The symbols used in this technical description are explained below.



Attention!

Pay attention to passages marked with this symbol. Failure to observe the provided instructions could lead to personal injury or damage to equipment.



Notice!

This symbol indicates text passages containing important information.

1.3 Declaration of Conformity

The product satisfies the following standards:

EU Directive	2004/108/EC
Interference emission	EN 55022:2010
Interference rejection	EN 55024:2010
Degree of protection	EN 60529
Proximity switch	EN 60947-5-2
Certification	UL 61010-1 (Third Edition):2012-05 CAN/CSA-C22.2 No. 61010-1-1

Leuze electronic GmbH + Co KG in D-73277 Owen, possesses a certified quality assurance system in accordance with ISO 9001.



2 Safety notices

2.1 Safety standards

The CSL 505 switching light curtain was developed, manufactured and tested in accordance with the applicable safety standards. It corresponds to the state of the art.

2.2 Approved purpose

The CSL 505 switching light curtain is used for detecting objects in defined controlled areas as part of a superordinate overall system.

**Attention!**

The protection of personnel and the device cannot be guaranteed if the device is operated in a manner not complying with its intended use. Leuze electronic GmbH + Co. KG is not liable for damages caused by improper use. Knowledge of this manual is an element of proper use.

In particular, unauthorized uses include:

- Rooms with explosive atmospheres
- Operation for medical purposes
- Circuits relevant to safety

**Attention!**

The CSL 505 switching light curtains as well as their components are not certified safety components within the meaning of the EU machinery directive. They are not allowed to be used as a safety component with human protection function.

Areas of application

The CSL 505 switching light curtains are designed, in particular, for the following areas of application:

- Object detection in storage and materials-handling applications
- Overhang controls in transport systems
- Object detection and process controls in the packaging industry
- Object qualification in the surface industry

2.3 Working safely

**Attention!**

Access to or changes on the device, except where expressly described in this operating manual, is not authorized.

Unless explicitly stated otherwise, the device and its input and output circuits must be operated with a voltage supply that meets the requirements of PELV/SELV systems. Operation of the isolating device must not be hindered in any way.

The system must be secured to prevent it from being switched on again.

Safety regulations

Observe the locally applicable legal regulations and the rules of the employer's liability insurance association.

Qualified personnel

Mounting, commissioning and maintenance of the device must only be carried out by qualified personnel. Installation and electrical connection of the light curtains should be performed only by qualified personnel in accordance with the applicable regulations, with the power supply disconnected and the device switched off.

3 Product description

3.1 General information

The CSL 505 switching light curtains monitor a defined area using invisible, infrared light beams. The light curtain systems consist of a transmitter bar (Tx) and receiver bar (Rx). They function in the same way as a system comprising multiple throughbeam photoelectric sensors. If one of the light beams between the transmitter bar and receiver bar is interrupted, this is registered by the evaluation electronics and signaled at the push-pull signal outputs.

3.2 Performance characteristics

- No separate evaluation unit required. The device is operated directly from a 24 V DC supply.
- Two short-circuit proof push-pull signal outputs: Can therefore be used both as PNP and as NPN.
- Plug-and-play: The CSL 505 switching light curtains are fully preconfigured at the factory.
- A teach event automatically adapts the operating range.
- Increased resolution possible thanks to crossed-beam scanning.

3.3 Configuration interface

The configuration can be read out and changed using the **CSL505-Software**. The **CSL505-Software** can be downloaded at the Leuze website: www.leuze.com. The **CSL505-Interface** is used for connection to the serial port of a PC.


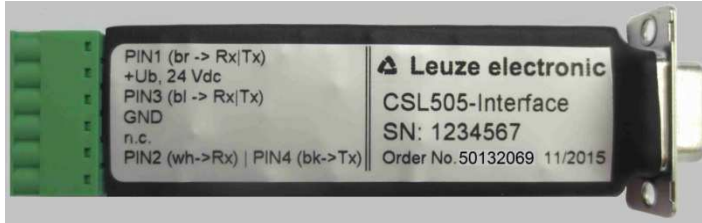


Figure 1: CSL505-Interface

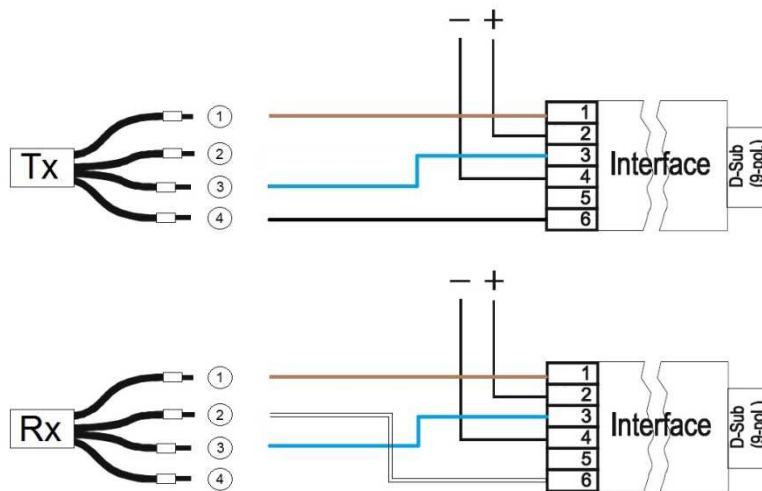

Legend:

- 1 brown
- 2 white
- 3 blue
- 4 black

Figure 2: Pin assignment of CSL 505 switching light curtain cables

A number of functions are configured via the transmitter and others via the receiver. For a complete list, see Table 5: "Configuration values Receiver" on page 18 and Table 8: "Configuration values for transmitter" on page 20.

1. Connect the CSL505-Interface (part number 50132069) to the +24 V DC power supply unit as indicated by the labeling.
2. Connect the RS232 interconnection cable (included in the scope of delivery) to the PC.
3. Connect the transmitter (type CSL-T) or receiver (type CSL-R..) to the CSL505-Interface module as indicated by the labeling.
4. Start the **CSL505-Software** and define the COM interface.
5. Switch on the voltage supply.

The charge process is indicated in the lower right part of the configuration window.

3.4 Configuration software

The **CSL505-Software** configuration software can be used to change the functionality of the CSL 505 light curtain. The software operates under the Windows® 95/98/2000/NT/XP/7/8 operating systems. Depending on the used parameter list, parameter values may have different designations or be hidden.

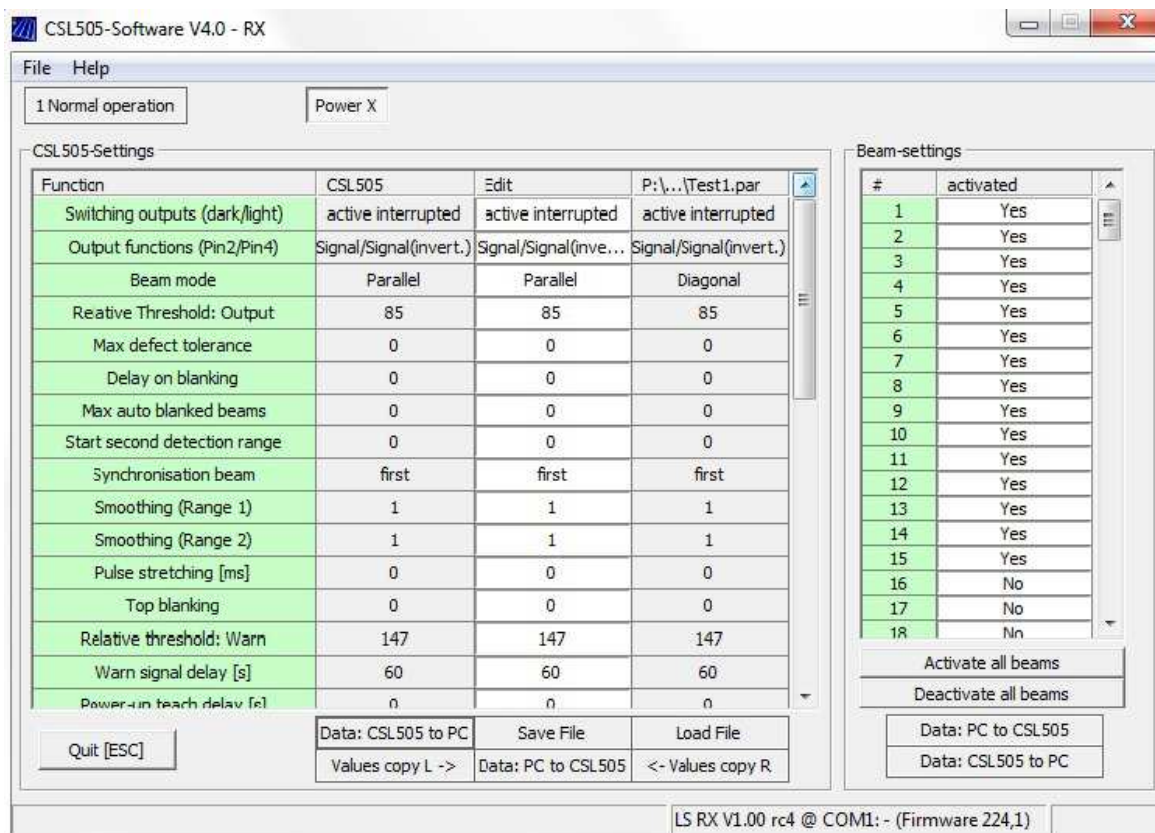


Figure 3: Configuration window of CSL505-Software

Parameter values can be saved in a parameter file on the hard drive by clicking the **File: Save** button. Parameter values saved in this way can be imported via the menu **File -> Load parameter file** or by clicking the **File: Load** button.

The connected receiver bar can be activated and deactivated using the **Power X** button.

In general, parameters are changed in the white fields. Changed values are indicated by italic text with a yellow field background.



Attention!

After entering numeric values, you must confirm the entry with **<Return>**.

After completing changes to the parameters, the configuration is transferred to the light curtain system by clicking the **Data: PC to CSL505** button.



Attention!

Please note that only the data of the column above the button are transferred. The transmitted settings are retained even after the system is switched off.

Use the **1 Normal operation** button to switch the light curtain to the normal detection state.

3.5 Parameters (receiver)

The CSL 505 switching light curtains can be configured over a wide range.

3.5.1 Switching output (dark/light)

You can configure the CSL 505 switching light curtain to be dark switching or light switching.

This is set using the parameter **Switching output (dark/light)**.


	Dark switching	light switching
Monitoring area free	Output inactive	Output active
Beam interrupted	Output active	Output inactive

Input option: dark switching / light switching

Factory setting: dark switching

3.5.2 Output functions (pin 2/pin 4)

The CSL 505 switching light curtain has two outputs (pin 2 and pin 4 at the receiver). The function of the outputs can be set using the parameter **Output functions (pin 2/pin 4)**.

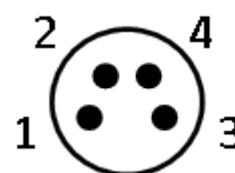

For further information, see also the special case "3.5.6 Start beam of second detection range" on page 14.

Output assignment	Pin 2	Pin 4
Normal	Signal	Warning (normal), i.e. active when warning is output
Normal with inverted warning output	Signal	Warning (inverted), i.e. active when device operation is OK
Swapped	Warning (normal), i.e. active when warning is output	Signal
Swapped with inverted warning output	Warning (inverted), i.e. active when device operation is OK	Signal
Swapped without warning output	-	Signal
Antivalent	Signal	Signal (inverted), i.e. active if pin 2 is inactive

Table 1: Output functions (pin 2/pin 4)

Signal: dark switching or light switching according to parameter **Switching output (dark/light)**.

Factory setting: antivalent

3.5.3 Beam mode





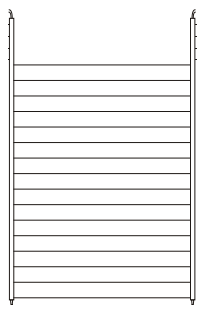
Beam mode	Parallel beams	Diagonal beams	Single crossed-beam scanning	Multiple crossed-beam scanning	Multiple crossed-beam scanning
Synchroniza- tion beam	first or last	first or last	last	last	last
Number of beams	n	2n-1	3n-2	4n-4	5n-6
Max. perm. number of phys. beams (n)	160	80	54	41	33
Sketch					

Table 2: Beam mode

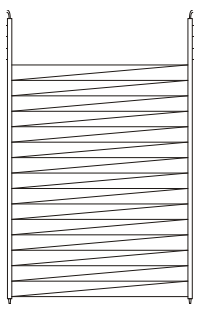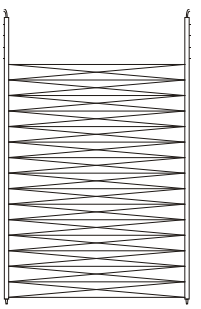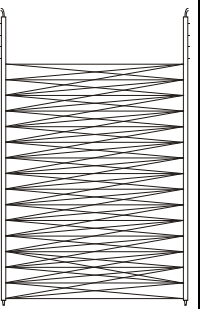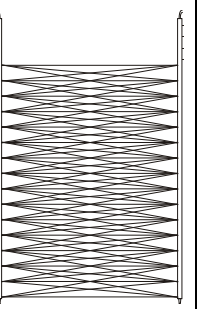

Notice!

- A teach event must be performed after this parameter is changed.
- A higher number of beams also increases the cycle time!
- A total of max. 160 logical beams are possible.

Factory settings:

Receiver	Pin 1	Pin 3	Description
	+24 V DC	GND	Only parallel beams
	GND	+24 V DC	Parallel and diagonal beams

3.5.4 Relative switching threshold

During the teach event, the value for the brightness of every individual beam is measured and saved in a non-volatile memory. The absolute switching threshold per beam is determined by multiplying by the relative switching threshold (percentage of **Relative switching threshold**).

To ensure that the system responds even at low beam coverage levels, the switching threshold must be increased. The default value is 85 (corresponds to approx. 33 %). The switching threshold should be set to max. 179 (corresponds to approx. 70 %).

Use

Define switching threshold automatically	Relative switching threshold = 0
Improve detection of transparent objects	High switching threshold
Reduce effect of reflection bypass	High switching threshold
Tolerate rough environmental conditions	Low switching threshold

Input option: 0 to 255

Factory setting: 85

3.5.5 Blanking of beams

Various options are available for blanking beams.

It is important to note that the synchronization beam must always remain active!

3.5.5.1 Manual blanking via CSL505-Software

You configure manual blanking in the beam configuration area on the right side of the CSL505-Software program window. Select there the receiver element that is to be deactivated.

3.5.5.2 Automatic blanking during teach event (auto blanking)

All interrupted beams are blanked automatically during the teach event.

Blanking threshold specifies the signal strength below which beams are blanked automatically during the teach event.

If **Blanking threshold** is set to 0, the function is deactivated.

Input option: 0 to 255

Factory setting: 100

3.5.5.3 Blanking of defective beams

The parameter **Max defect tolerance** specifies the number of beams that are tolerated. If this number exceeds the value for **Max defect tolerance**, a serious error is signaled. Below this number, defective beams are blanked and not taken into consideration during evaluation.

All other blanked beams are not added to **Max defect tolerance**.

Input option: 0 to 160

Factory setting: 0

3.5.5.4 Delay on blanking [s]

Time that must pass before a beam interruption is blanked. Specified in seconds.

Input option: 0 to 255

Factory setting: 0

3.5.5.5 Maximum automatic beam blanking

Permanently interrupted beams can be blanked automatically.

Automatic beam blanking is used to set how many adjacent beams of the same type (e.g. parallel beams) are allowed to be blanked. The count restarts after an active beam.

Example

Automatic beam blanking = 1

Beam 3, 5 and 8 can be blanked. If beam 9 is additionally covered, this beam is not blanked and the CSL 505 switching light curtain remains interrupted.

This function is often used for elevator applications and enables permanently interrupted beams to be blanked automatically.

	Automatic beam blanking
0	None
1	1 beam
2	2 beams of same type
...	...

Table 3: Automatic beam blanking

3.5.6 Start beam of second detection range

With **Start beam of second detection range** you split the CSL 505 switching light curtain into two ranges.

The state of the ranges is indicated at the outputs pin 2 and pin 4.

Output functions	Pin 2	Pin 4
Normal	Range 1	Range 2
Normal with inverted warning output	Range 1	Range 2 inv.
Swapped	Range 2	Range 1
Swapped with inverted warning output	Range 2 inv.	Range 1
Swapped without warning output		Range 1
Antivalent	Range 1	Range 1 inv.

Table 4: Output functions



Notice!

- Switching ranges with non-parallel beams overlap.
- If the synchronization beam is interrupted, both ranges switch.
- The dark switching or hell switching (factory setting) parameter applies to both ranges.
- If "1" is selected, the two ranges together cover the entire monitoring range.
- **Smoothing** can be defined for each range

3.5.7 Synchronization beam

Synchronization beam is used to define whether the first beam (at the cable outlet) or the last beam is used for optical synchronization.



Notice!

- The transmitter and receiver must be set to the same value.
- The synchronization beam cannot be suppressed.
- Interruption of the synchronization beam is signaled at both ranges.

Input option: first / last

Factory setting: first

3.5.8 Smoothing

Smoothing (range 1) specifies the number of beams which must be interrupted before beam interruption is signaled. The interrupted beams do not have to occur consecutively.

If ranges are used (see the section 3.5.6 "Start beam of second detection range" on page 14), the value for the second range is defined using **Smoothing (range 2)**.

Example

- **Smoothing (range 1) = "5"**:
Output switches when 5 or more beams have been interrupted.
- Special function with: **Start beam of second detection range = "1"**:
Both smoothing values relate to the entire monitoring range.
- **Smoothing (range 1) = "2"**:
Smoothing (range 2) = "3":
Start beam of second detection range = "10":
If, for example, beam 4 and 7 are interrupted, range 1 switches; if beams 10, 11 and 20 are interrupted, the second range switches.

3.5.9 Pulse stretching [ms]

The parameter value **Pulse stretching [ms]** delays the change in state of the switching outputs by the set value in milliseconds (ms). A maximum delay of 255 ms is possible.

Input option: 0 to 255

Factory setting: 0

3.5.10 Top blanking

When the device is switched on, the beams covered at the beginning of the bar can be permanently blanked. **Top blanking** specifies how many consecutive beams can be blanked.

This function is intended for elevator applications and only available where **Synchronization beam = last**.

3.5.11 Relative switching threshold warn

If the intensity of the received signal remains below a set value (**Relative switching threshold: Warn** for a certain period (**Warn signal delay [s]**), the CSL 505 switching light curtain signals a "minor error".

Possible remedies:

- Clean the beam exit.
- Align the transmitter and receiver and perform the teach event again.

If **Relative switching threshold: Warn** is set to "0", the "soiling alarm" is deactivated.

Input option: 0 to 255

Factory setting: 147

3.5.12 Warn signal delay [s]

Time after which soiling is signaled. See section 3.5.11 "Relative switching threshold warn" on page 15.

Input option: 0 to 255

Factory setting: 60

3.5.13 Power-up teach delay [s]

Switching threshold setting is activated at power-up. After a time (in seconds) has elapsed, the determined reference values are saved in a non-volatile memory, provided that the monitoring range was free. Otherwise the original reference values are used. This teach event at power-up is deactivated with "0" and "255".

Input option: 0 to 255

Factory setting: 0

3.5.14 Blanking warning

Blanking warning specifies the position (beam number) as of which an error message is issued in the event of blanking.

Input option: 0 to 160

Factory setting: 0

3.5.15 Overview table of configuration values for receiver

Configuration values	Default value (value range)	Description
First beam	1	Value is always 1
Last beam¹	xx	Value is dependent on bar
Switching output (dark/light)	Dark switching	light switching Dark switching
Output functions (pin 2/pin 4)	Antivalent	Normal Normal with inverted warning output Swapped Swapped with inverted warning output Swapped without warning output Antivalent
Beam mode	Parallel Diagonal with Rx polarity reversal	Parallel Diagonal Crossed-beam* 2x crossed beam* 3x crossed beam* (*only where <i>Synchronization beam</i> = last)
Relative switching threshold	85 (0...255)	85 corresponds to 33 % (255 corresponds to 100 %) 0 = Automatic switching threshold setting active.
Max defect tolerance	0 (0...160)	Max. number of defective beams that are blanked automatically.
Delay on blanking [s]	0 (0...255)	Time that must pass before a beam interruption is blanked. Specified in seconds.
Automatic beam blanking	0 (0...160)	Number of consecutive beams of the same type which can be blanked.
Start beam of second detection range	0	This beam is the beginning of the 2nd range. Recommended for "parallel" beam mode only!
Synchronization beam	first	first = Synchronization using first beam. last = Synchronization using last beam.
Smoothing (range 1)	1 (1...160)	Number of interrupted beams as of which an interruption is detected.
Smoothing (range 2)	1 (1...160)	Number of interrupted beams as of which an interruption is detected. (range 2)
Pulse stretching [ms]	0 (0...255)	Time period in ms between output changes. (Value range: 0 – 255 ms)
Top blanking	0 (0...160)	Number of consecutive beams which can be blanked during start-up. Only where blanking threshold = 0.
Relative switching threshold warn	147 (0...255)	Threshold for soiling warning. Corresponds to 57 % (value * 256)
Warn signal delay [s]	60	Time after which soiling is signaled.

¹ Only the value of the physically present beams should be set; an incorrect value can lead to malfunctions.

Configuration values	Default value (value range)	Description
	(0...255)	Specified in seconds.
<i>Power-up teach delay [s]</i>	0 (0...255)	Enables the reference values to be saved '1' to '255' seconds after power-up.
<i>Blanking threshold</i>	100 (0...255)	Signal strength below which beams are blanked during the teach event. '0' deactivates the function.
<i>Blanking warning</i>	0 (0...160)	Beam number as of which an error message is issued in the event of blanking (not defective!).

Table 5: Configuration values Receiver

3.6 Parameters (transmitter)

When the transmitter is switched off by means of an input signal, a switching operation is specifically triggered, e.g. for a start test. Various functions are configurable.

When the transmitter is deactivated, the receiver reacts in the same way as for a beam interruption, and the transmitter LED flashes.

The transmitter cycle is not stopped; the system is therefore quickly ready for operation again after transmitter activation.

3.6.1 High signal or Low signal at input

Use the parameter value **High signal at input** for transmitter deactivation with active transmitter input, or **Low signal at input** for transmitter deactivation with inactive transmitter input.

Parameter "High signal at input" or "Low signal at input" for deactivation with signal at transmitter input				
Active		inactive		
Low	high	Low	high	Remark
0	0	0	0	Transmitter deactivation off.
0	1	1	0	Only the synchronization beam is switched off. The warning output remains unchanged e.g. for a start test.
0	2	2	0	The synchronization beam remains active; all other beams are switched off. If the warning output is active, it switches after Delay on blanking [s] (see section 3.5.5.4 "Delay on blanking [s]" on page 14).
0	3	3	0	All beams are switched off, e.g. to prevent interference at multiple sensors. The warning output remains unchanged.

(Factory setting in **bold type**)

Table 6: High signal and Low signal at input

3.6.2 Operating range

The parameter **Operating range** is used to switch over to "reduced" operating range.

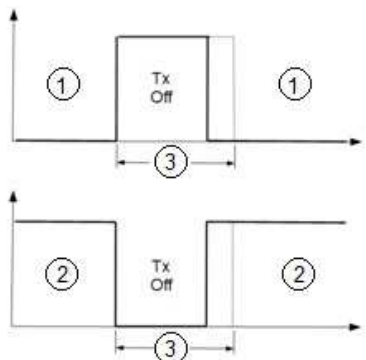
Operating range	Remark	
0	Extended operating range (ex factory in parameter set 1)	
1	Reduced operating range (factory setting in parameter set 2)	
2 ... 255 Disable transmitter deactivation	Start test with range switching option Selectable at the input: 24 V reduced, 0 V normal The value corresponds to a time delay in steps of 2.56. Example: 200 gives a time delay of 512 ms. During the time delay, the transmitter is deactivated according to the mode set for transmitter deactivation. If the input signal returns to the original value within the delay time, transmitter deactivation is ended.	1 Extended operating range 2 Reduced operating range 3 Time delay 

Table 7: Operating range

Factory settings:


Transmitter	Pin 1	Pin 3	Description
	+24 V DC	GND	Extended operating range: 1000 ... 5000 mm
	GND	+24 V DC	Reduced operating range: 300 ... 1300 mm

3.6.2.1 Overview table of configuration values for transmitter

	Default value (value range)	Description
First beam	1	Value is always 1
Last beam	xx	Value is dependent on bar
High signal at input	3	Transmitter deactivation with active transmitter input
Low signal at input	0	Transmitter deactivation with inactive transmitter input
Operating range	0 or 1 (0...255)	Extended (0) or reduced (1) operating range 2...255: Disable transmitter deactivation
Synchronization beam	first	first = Synchronization using first beam last = Synchronization using last beam

Table 8: Configuration values for transmitter

4 Mounting and commissioning

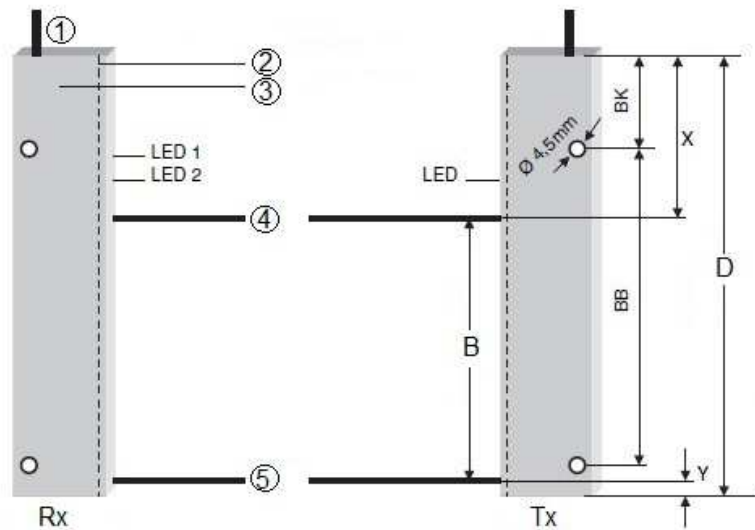

Legend:

- 1 M8 connector/connection cable
- 2 Front screen
- 3 Aluminum housing
- 4 First beam
- 5 Last beam

Figure 4: Mounting the CSL 505 switching light curtain

The dimensions are given in the following tables: Table 14: "Dimensions CSL 505" on page 31 or Table 15: "Dimensions of CSL 505, special variant "VB"" on page 33.

1. The transmitter and receiver bars must be aligned with each other with an accuracy of about 10°.
2. Do not place any mechanical load on the bars or bend them, etc.
3. Be careful during horizontal mounting, as liquids may be detected on the front cover as if they were objects. If they remain there for a long time, they may penetrate the bar and damage the electronics. Increased risk of soiling.
4. Protect the cable from being crushed and from exposure to strong electromagnetic effects.
5. Strong extraneous light effect (caused for example by strobe lights, direct sunshine) on the receiver bar should be avoided.
6. Prevent optical sensors (for example other light curtains, photoelectric sensors) from affecting each other by positioning them appropriately or blocking them from each other, etc.
7. There must be no reflecting surfaces near the light curtain. Otherwise objects may not be detected due to the reflection.

The CSL 505 switching light curtain is ready for operation maximum 1.5 seconds after the receiver is switched on.

4.1 Electrical connection

1. Bars must only be connected while there is no voltage in the system.
2. Avoid ground loops; all bars must have the same grounding potential.
3. A potential difference of 60 V between the bar housing and the supply voltage must not be exceeded.
4. Insulate unused wires.

4.1.1 M8 connector variant



Figure 5: M8 connector variant

Pin	Tx	Rx
1, 3	+24 V DC, GND	
2*	n.c.	Dark switching
4	Tx_Off	Light switching

* Used for the teach event

By reversing the polarity of the supply voltages on the transmitter and receiver, it is possible to switch between predefined device functions:

Transmitter	Pin 1	Pin 3	Description
	+24 V DC	GND	Extended operating range: 1000 ... 5000 mm
	GND	+24 V DC	Reduced operating range: 300 ... 1300 mm

Receiver	Pin 1	Pin 3	Description
	+24 V DC	GND	Only parallel beams
	GND	+24 V DC	Parallel and diagonal beams

The depicted assignments are standard settings. The assigned functions can be freely configured.

4.2 Execution of teach event

1. When switching on, connect pin 2 of the receiver bar to + 24 V DC.
=> Teach event starts (flashing signals different to those in normal operation)
2. Both LEDs on the receiver bar illuminate.
=> Teach event successful.
3. Disconnect the voltage from pin 2 while the CSL 505 switching light curtain is still switched on.
=> Saves the sensitivity data and ends the teach event.

Example of practical implementation:

1. Insert a bridge between the connection of pin 2 and the supply voltage (+24 V DC).
2. Make sure that the monitoring range is free.
3. Switch on the operating voltage.
4. Remove the bridge.



Notice!

- The teach event is important for ensuring the function of the CSL 505 switching light curtain.
- Therefore, perform the teach event after every change to the light curtain.
- For an error-free teach event, the monitoring range must be clear and both LEDs of the receiver bar must illuminate continuously.
The exception is described in the section 3.5.5.2 "Automatic blanking during teach event (auto blanking)" on page 13.

Flash codes during teach event

One LED flashes	Defective beams	One LED flashes
LEDs flash in phase	Differences too great or not yet calibrated. Check the alignment of the transmitter and receiver and the monitoring range.	LEDs flash in phase
LEDs flash out of phase	The self test has detected a fault.	LEDs flash out of phase

Table 9: Flash codes during teach event

4.3 LED indicators/Error diagnostics

If the CSL 505 switching light curtain detects a fault, the LEDs show one of the following error codes. Depending on the output assignment and output function, a warning output may be evaluated.

As soon as the cause of the fault is rectified, the warning output becomes inactive again.



Figure 6: LED indicators/Error diagnostics

4.3.1 Receiver bar

LED 1	LED 2	Operating state	Monitoring area
Off	Off	Off	Unknown
On	On	Ready	Free
On	Off	Ready	Beam interrupted
Flashes	On	Minor error	Free
Flashes	Off	Minor error	Beam interrupted
Flashes (double)	Off	Configuration error	Unknown
Flashes	Flashes (in phase)	Serious error	Unknown
Flashes	Flashes (out of phase)	Serious error	Unknown

Table 10: LED indicators of receiver bar

Minor error:

The CSL 505 switching light curtain continues to operate but with reduced functionality, e.g. beam blanking; soiling alarm **Relative switching threshold: Warn**.

Serious error:

The CSL 505 switching light curtain no longer functions.

4.3.2 Transmitter bar

LED	Operating state
Off	Off
On	Ready
Flashes	Error

Table 11: LED indicators of transmitter bar

Make sure that the values for **Last beam** and **Synchronization beam** are correctly set and identical in the receiver and transmitter.

4.4 Substitution of Vario B

The CSL505 switching light curtain enables a smooth substitution of Vario B.

4.4.1 Receiver bar

In existing installations with a dark-switching Vario B PNP-type or a light-switching Vario B NPN-type, pin 2 of the CSL505 receiver must be used instead of pin 4.

In existing installations with a Vario B diagonal-beam type, the CSL505 switching light curtain must be connected with the polarity of the voltage supply reversed at pin 1 and pin 3.

4.4.2 Transmitter bar

In existing installations with all Vario B types, the function assignment of the electrical connection remains unchanged on the transmitter bar.

5 Maintenance

The CSL 505 switching light curtain does not require regular maintenance.
If the front cover should become soiled, clean it with a moist cloth.

- Do not use any cleaners which contain solvents to clean.
- Do not use any high-pressure cleaners or steam jet cleaners.
- When cleaning, take care not to scratch the front cover.
- If necessary, realign the light curtain and perform the teach event again.

6 Technical data

6.1 General specifications

Optical data

Range	Approx. 300 to 5000 mm (teach event required) Factory presetting: approx. 4 m Operating range can be set by reversing polarity: approx. 300 to 1300 mm (reduced operating range) or approx. 1000 to 5000 mm (extended operating range)
-------	--

Maximum number of beams	160 logical beams
-------------------------	-------------------

Timing

Response time Cycle time approx. 1 ms/beam plus basic time (approx. 4 ms).
After interruption of synchronization beam approx. 1-2 cycles.

Delay time at power-up	Approx. 810 ms + 1-2 cycles
------------------------	-----------------------------

Electrical data

Operating voltage 18 to 30 V DC with max. 10 % ripple.

Use reverse-polarity protected, grounded voltage supply!

Power consumption	Extended operating range	Nominal 3.1 W, peak 6.5 W (2 MHz, 100 μ s)
-------------------	--------------------------	--

Reduced operating range Nominal 1.3 W, peak 2.3 W (2 MHz, 100 μ s)

Switch-on current Max. 7.5 A, 40 μ s

Outputs Push-pull switching current max. 150 mA

Input of transmitter	Positive switching; permissible input voltage 0 to 30 V DC Input resistance typ. 6 k Ω ; switching threshold typ. 4 V
----------------------	---

Protective circuit	Polarity reversal protection, short circuit protection, inductive protection for all outputs
--------------------	--

Mechanical data

Light curtain housing	Aluminum, natural anodized, front cover made of plastic, dark red.
-----------------------	--

Connection Receiver: M8 plug, 4-pin

Transmitter: M8 plug, 4-pin

Safety class IP 65

Environmental data

Operating temperature -30 °C to +50 °C

Storage temperature	-40 °C to +65 °C
---------------------	------------------

Elevation < 2000 mDegree of contamination 2

6.2 Nomenclature

Part designation: CSLbbb-fss-xxxx-vv-ee

CSL	Operating principle: switching light curtain
bbb	Series: 505 for CSL 505
f	Function classes: T: Transmitter R: Receiver
ss	Beam spacing: 05: 5 mm 12.5: 12.5 mm 25: 25 mm 50: 50 mm 100: 100 mm
xxxx	Measurement field length [mm], dependent on beam spacing: For values see tables
vv	Special variant: VB: Profile and mounting system compatible with VARIO B
ee	Electrical connection: M8: M8 connector

Table 12: Part number code

6.3 Dimensioned drawings

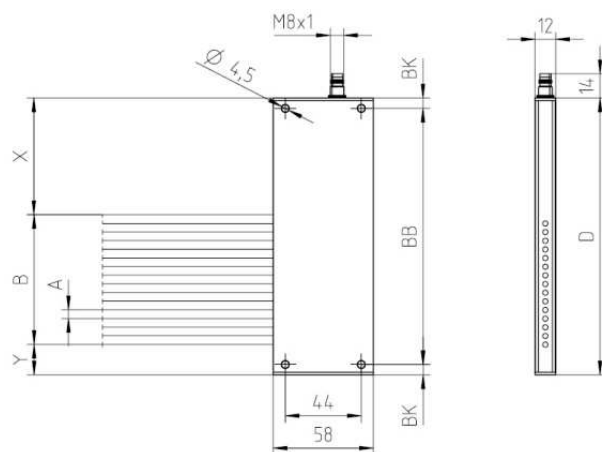


Figure 7: CSL 505 with beam spacing 5 mm

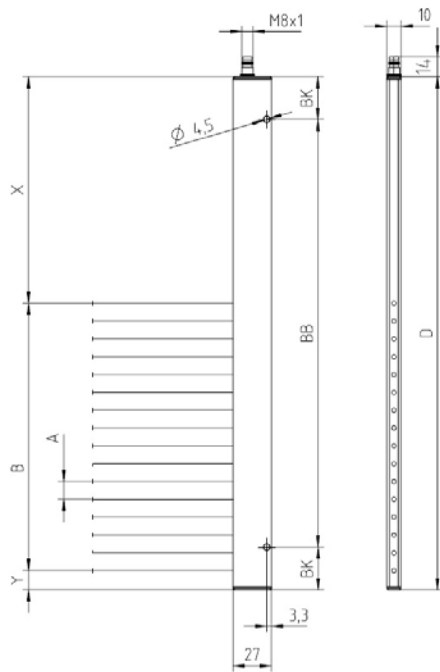


Figure 8: CSL 505 with beam spacing > 5 mm

6.4 Dimensions

The housings have the following dimensions:

Beam spacing	Width (mm)	Depth (mm)
5 mm	12	58
12.5 / 25 / 50 / 100 mm	10	27

Table 13: Dimensions housing

Dimensions CSL 505:

Designation	Beam spacing A	Number of beams	Measurement field length B	Profile length D	AB	BB	BK	Y	X
CSL505-R05-35-M8 CSL505-T05-35-M8	5	8	35	120	4	108	6	17.5	67.5
CSL505-R05-75-M8 CSL505-T05-75-M8	5	16	75	160	4	148	6	17.5	67.5
CSL505-R05-115-M8 CSL505-T05-115-M8	5	24	115	200	4	188	6	17.5	67.5
CSL505-R05-155-M8 CSL505-T05-155-M8	5	32	155	240	4	228	6	17.5	67.5
CSL505-R05-195-M8 CSL505-T05-195-M8	5	40	195	280	4	268	6	17.5	67.5
CSL505-R05-235-M8 CSL505-T05-235-M8	5	48	235	320	4	308	6	17.5	67.5
CSL505-R05-275-M8 CSL505-T05-275-M8	5	56	275	360	4	348	6	17.5	67.5

Designation	Beam spacing A	Number of beams	Measurement field length B	Profile length D	AB	BB	BK	Y	X
CSL505-R05-315-M8 CSL505-T05-315-M8	5	64	315	400	4	388	6	17.5	67.5
CSL505-R05-355-M8 CSL505-T05-355-M8	5	72	355	440	4	428	6	17.5	67.5
CSL505-R05-395-M8 CSL505-T05-395-M8	5	80	395	480	4	468	6	17.5	67.5
CSL505-R12.5-88-M8 CSL505-T12.5-88-M8	12.5	8	88	150	2	100	25	13.5	48.5
CSL505-R12.5-188-M8 CSL505-T12.5-188-M8	12.5	16	188	250	2	100	75	13.5	48.5
CSL505-R12.5-288-M8 CSL505-T12.5-288-M8	12.5	24	288	350	2	200	75	13.5	48.5
CSL505-R12.5-388-M8 CSL505-T12.5-388-M8	12.5	32	388	450	2	300	75	13.5	48.5
CSL505-R12.5-488-M8 CSL505-T12.5-488-M8	12.5	40	488	550	2	400	75	13.5	48.5
CSL505-R12.5-588-M8 CSL505-T12.5-588-M8	12.5	48	588	650	2	500	75	13.5	48.5
CSL505-R12.5-688-M8 CSL505-T12.5-688-M8	12.5	56	688	750	2	600	75	13.5	48.5
CSL505-R12.5-788-M8 CSL505-T12.5-788-M8	12.5	64	788	850	2	700	75	13.5	48.5
CSL505-R12.5-888-M8 CSL505-T12.5-888-M8	12.5	72	887.5	950	2	800	75	13.5	49.0
CSL505-R12.5-988-M8 CSL505-T12.5-988-M8	12.5	80	987.5	1050	3	400	125	13.5	49.0
CSL505-R25-175-M8 CSL505-T25-175-M8	25	8	175	250	2	100	75	20.0	55.0
CSL505-R25-275-M8 CSL505-T25-275-M8	25	12	275	350	2	200	75	20.0	55.0
CSL505-R25-375-M8 CSL505-T25-375-M8	25	16	375	450	2	300	75	20.0	55.0
CSL505-R25-475-M8 CSL505-T25-475-M8	25	20	475	550	2	400	75	20.0	55.0
CSL505-R25-575-M8 CSL505-T25-575-M8	25	24	575	650	2	500	75	20.0	55.0
CSL505-R25-675-M8 CSL505-T25-675-M8	25	28	675	750	2	600	75	20.0	55.0
CSL505-R25-775-M8 CSL505-T25-775-M8	25	32	775	850	2	700	75	20.0	55.0
CSL505-R25-875-M8 CSL505-T25-875-M8	25	36	875	950	2	800	75	20.0	55.0
CSL505-R25-975-M8 CSL505-T25-975-M8	25	40	975	1050	3	400	125	20.0	55.0
CSL505-R25-1075-M8 CSL505-T25-1075-M8	25	44	1075	1150	3	500	75	20.0	55.0
CSL505-R25-1175-M8 CSL505-T25-1175-M8	25	48	1175	1250	3	500	125	20.0	55.0
CSL505-R25-1275-M8 CSL505-T25-1275-M8	25	52	1275	1350	3	600	75	20.0	55.0
CSL505-R25-1375-M8 CSL505-T25-1375-M8	25	56	1375	1450	3	600	125	20.0	55.0

Designation	Beam spacing A	Number of beams	Measurement field length B	Profile length D	AB	BB	BK	Y	X
CSL505-R25-1475-M8 CSL505-T25-1475-M8	25	60	1475	1550	4	400	175	20.0	55.0
CSL505-R25-1575-M8 CSL505-T25-1575-M8	25	64	1575	1650	4	500	75	20.0	55.0
CSL505-R25-1675-M8 CSL505-T25-1675-M8	25	68	1675	1750	4	500	125	20.0	55.0
CSL505-R25-1775-M8 CSL505-T25-1775-M8	25	72	1775	1850	4	500	175	20.0	55.0
CSL505-R25-1875-M8 CSL505-T25-1875-M8	25	76	1875	1950	4	600	75	20.0	55.0
CSL505-R25-1975-M8 CSL505-T25-1975-M8	25	80	1975	2050	4	600	125	20.0	55.0
CSL505-R25-2175-M8 ² CSL505-T25-2175-M8 ²	25	88	2175	2250	5	500	125	20.0	55.0
CSL505-R25-2375-M8 ² CSL505-T25-2375-M8 ²	25	96	2375	2450	5	520	185	20.0	55.0
CSL505-R50-350-M8 CSL505-T50-350-M8	50	8	350	430	2	300	65	20.0	60.0
CSL505-R50-750-M8 CSL505-T50-750-M8	50	16	750	830	2	700	65	20.0	60.0
CSL505-R50-1150-M8 CSL505-T50-1150-M8	50	24	1150	1230	3	500	115	20.0	60.0
CSL505-R50-1550-M8 CSL505-T50-1550-M8	50	32	1550	1630	4	500	65	20.0	60.0
CSL505-R50-1950-M8 CSL505-T50-1950-M8	50	40	1950	2030	4	600	115	20.0	60.0
CSL505-R50-2350-M8 CSL505-T50-2350-M8	50	48	2350	2430	5	520	175	20.0	60.0
CSL505-R50-2750-M8 CSL505-T50-2750-M8	50	56	2750	2830	6	500	165	20.0	60.0
CSL505-R50-3150-M8 CSL505-T50-3150-M8	50	64	3150	3230	6	600	115	20.0	60.0
CSL505-R100-700-M8 CSL505-T100-700-M8	100	8	700	780	2	700	40	20.0	60.0
CSL505-R100-1100-M8 CSL505-T100-1100-M8	100	12	1100	1180	3	500	90	20.0	60.0
CSL505-R100-1500-M8 CSL505-T100-1500-M8	100	16	1500	1580	4	500	40	20.0	60.0
CSL505-R100-1900-M8 CSL505-T100-1900-M8	100	20	1900	1980	4	600	90	20.0	60.0
CSL505-R100-2300-M8 CSL505-T100-2300-M8	100	24	2300	2380	5	520	150	20.0	60.0
CSL505-R100-2700-M8 CSL505-T100-2700-M8	100	28	2700	2780	6	500	140	20.0	60.0
CSL505-R100-3100-M8 CSL505-T100-3100-M8	100	32	3100	3180	6	600	90	20.0	60.0

Table 14: Dimensions CSL 505

² These variants with special lengths have neither diagonal nor crossed-beam scanning.

Legend:	AB	Number of bore holes	Y	Distance housing edge - last beam
	BK	Bore hole to profile edge	X	Distance housing edge - first beam (connection)
	BB	Bore hole to bore hole		Profile length D = X + measurement field length + Y
		all dimensions in mm		Tolerance of the beam positions: ± 2mm

The following dimensions are applicable for special variant "VB":

Designation	Beam spacing A	Number of beams	Measurement field length B	Profile length D	AB	BB	BK	Y	X
CSL505-R12.5-88-VB-M8 CSL505-T12.5-88-VB-M8	12.5	8	87.5	260	2	200	30	13.5	159
CSL505-R12.5-188-VB-M8 CSL505-T12.5-188-VB-M8	12.5	16	187.5	360	2	300	30	13.5	159
CSL505-R12.5-288-VB-M8 CSL505-T12.5-288-VB-M8	12.5	24	287.5	460	2	300	80	13.5	159
CSL505-R12.5-388-VB-M8 CSL505-T12.5-388-VB-M8	12.5	32	387.5	560	2	400	80	13.5	159
CSL505-R12.5-488-VB-M8 CSL505-T12.5-488-VB-M8	12.5	40	487.5	660	2	500	80	13.5	159
CSL505-R12.5-588-VB-M8 CSL505-T12.5-588-VB-M8	12.5	48	587.5	760	2	700	30	13.5	159
CSL505-R12.5-688-VB-M8 CSL505-T12.5-688-VB-M8	12.5	56	687.5	860	2	700	80	13.5	159
CSL505-R12.5-788-VB-M8 CSL505-T12.5-788-VB-M8	12.5	64	787.5	960	3	400	80	13.5	159
CSL505-R25-175-VB-M8 CSL505-T25-175-VB-M8	25	8	175	360	2	300	30	20	165
CSL505-R25-375-VB-M8 CSL505-T25-375-VB-M8	25	16	375	560	2	400	80	20	165
CSL505-R25-575-VB-M8 CSL505-T25-575-VB-M8	25	24	575	760	2	700	30	20	165
CSL505-R25-775-VB-M8 CSL505-T25-775-VB-M8	25	32	775	960	3	400	80	20	165
CSL505-R25-975-VB-M8 CSL505-T25-975-VB-M8	25	40	975	1160	3	500	80	20	165
CSL505-R25-1175-VB-M8 CSL505-T25-1175-VB-M8	25	48	1175	1360	3	600	80	20	165
CSL505-R25-1375-VB-M8 CSL505-T25-1375-VB-M8	25	56	1375	1560	4	500	30	20	165
CSL505-R25-1575-VB-M8 CSL505-T25-1575-VB-M8	25	64	1575	1760	4	500	130	20	165
CSL505-R25-1775-VB-M8 CSL505-T25-1775-VB-M8	25	72	1775	1960	4	600	80	20	165
CSL505-R25-2175-VB-M8 ³ CSL505-T25-2175-VB-M8 ³	25	88	2175	2360	5	520	140	20	165
CSL505-R25-2375-VB-M8 ³ CSL505-T25-2375-VB-M8 ³	25	96	2375	2560	5	600	80	20	165
CSL505-R50-350-VB-M8 CSL505-T50-350-VB-M8	50	8	350	560	2	400	80	20	190
CSL505-R50-750-VB-M8 CSL505-T50-750-VB-M8	50	16	750	960	3	400	80	20	190

³ These variants with special lengths have neither diagonal nor crossed-beam scanning.

Designation	Beam spacing A	Number of beams	Measurement field length B	Profile length D	AB	BB	BK	Y	X
CSL505-R50-1150-VB-M8 CSL505-T50-1150-VB-M8	50	24	1150	1360	3	600	80	20	190
CSL505-R50-1550-VB-M8 CSL505-T50-1550-VB-M8	50	32	1550	1760	4	500	130	20	190
CSL505-R50-1950-VB-M8 CSL505-T50-1950-VB-M8	50	40	1950	2160	5	500	80	20	190
CSL505-R50-2350-VB-M8 CSL505-T50-2350-VB-M8	50	48	2350	2560	5	600	80	20	190
CSL505-R50-2750-VB-M8 CSL505-T50-2750-VB-M8	50	56	2750	2960	5	700	80	20	190
CSL505-R50-3150-VB-M8 CSL505-T50-3150-VB-M8	50	64	3150	3360	5	800	80	20	190
CSL505-R100-700-VB-M8 CSL505-T100-700-VB-M8	100	8	700	970	3	400	85	20	250
CSL505-R100-1100-VB-M8 CSL505-T100-1100-VB-M8	100	12	1100	1370	3	600	85	20	250
CSL505-R100-1500-VB-M8 CSL505-T100-1500-VB-M8	100	16	1500	1770	4	500	135	20	250
CSL505-R100-1900-VB-M8 CSL505-T100-1900-VB-M8	100	20	1900	2170	5	500	85	20	250
CSL505-R100-2300-VB-M8 CSL505-T100-2300-VB-M8	100	24	2300	2570	5	600	85	20	250
CSL505-R100-2700-VB-M8 CSL505-T100-2700-VB-M8	100	28	2700	2970	5	700	85	20	250
CSL505-R100-3100-VB-M8 CSL505-T100-3100-VB-M8	100	32	3100	3370	5	800	85	20	250

Table 15: Dimensions of CSL 505, special variant "VB"

Legend:

AB	Number of bore holes	Y	Distance housing edge - last beam
BK	Bore hole to profile edge	X	Distance housing edge - first beam (connection)
BB	Bore hole to bore hole		Profile length D = X + measurement field length + Y

all dimensions in mm

Tolerance of the beam positions: ± 2mm

7 Accessories and scope of delivery

7.1 Accessories

Part no.	Part designation	Description
50132069	CSL505-Interface	Programming interface for configuration incl. connection cable. CSL505 software available for download.
-	CSL505-Software	Configuration software available for download at www.leuze.com

Table 16: Accessories

M8 connection cables in various lengths, sheathing material and design:

Part no.	Part designation	Description
50104524	K-D M8A-4P-2m-PVC	Connection cable: M8 socket, 4-pin, axial, PVC cable, length 2,000 mm, open cable end
50104526	K-D M8A 4P-5m-PVC	Connection cable: M8 socket, 4-pin, axial, PVC cable, length 5,000 mm, open cable end
50104527	K-D M8W-4P-5m-PVC	Connection cable: M8 socket, 4-pin, angled, PVC cable, length 5,000 mm, open cable end
50104528	K-D M8A-4P-10m-PVC	Connection cable: M8 socket, 4-pin, axial, PVC cable, length 10,000 mm, open cable end
50115424	K-D M8A 4P-20m-PVC	Connection cable: M8 socket, 4-pin, axial, PVC cable, length 20,000 mm, open cable end
50104530	K-D M8A-4P-2m-PUR	Connection cable: M8 socket, 4-pin, axial, PUR cable, length 2,000 mm, open cable end
50104532	K-D M8A 4P-5m-PUR	Connection cable: M8 socket, 4-pin, axial, PUR cable, length 5,000 mm, open cable end
50104761	K-D M8W-4P-5m-PUR	Connection cable: M8 socket, 4-pin, angled, PUR cable, length 5,000 mm, open cable end
50104533	K-D M8A-4P-10m-PUR	Connection cable: M8 socket, 4-pin, axial, PUR cable, length 10,000 mm, open cable end
50104534	K-D M8W-4P-10m-PUR	Connection cable: M8 socket, 4-pin, angled, PUR cable, length 20,000 mm, open cable end

Table 17: Connection cables

7.2 Delivery contents

Transmitter and receiver both have their part number.

- Transmitter / receiver with supplementary sheet

These operating instructions (PDF file) can be ~downloaded from the Internet at www.leuze.de.



Notice!

Connection cables, interconnection cables, mounting brackets, etc. are not included in the scope of delivery and must be ordered separately.