

















Brief Operating Instructions

Oxymax COS61D

Optical sensor for oxygen measurement With Memosens protocol



These instructions are Brief Operating Instructions.

For detailed information, please read the Operating Instructions and the special instructions on the supplied CD-ROM.

The complete device documentation comprises:

- these Brief Operating Instructions
- the Operating Instructions on the supplied CD-ROM
- if necessary, certificates and calibration protocols (depending on version).



Documentation information Oxymax COS61D

1 Documentation information

Warnings

The structure, signal words and safety colors of the signs comply with the specifications of ANSI Z535.6 ("Product safety information in product manuals, instructions and other collateral materials").

Safety message structure	Meaning
A DANGER Cause (/consequences) Possible consequences if ignored ▶ Preventive measures	This symbol alerts you to a dangerous situation. Failure to avoid the situation will result in a fatal or serious injury.
A WARNING Cause (/consequences) Possible consequences if ignored ▶ Preventive measures	This symbol alerts you to a dangerous situation. Failure to avoid the situation can result in a fatal or serious injury.
▲ CAUTION Cause (/consequences) Possible consequences if ignored ► Preventive measures	This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
NOTICE Cause/situation Possible consequences if ignored ► Action/note	This symbol alerts you to situations that can result in damage to property and equipment.

Symbols used

- \rightarrow $\stackrel{\triangleright}{=}$ 1 This symbol indicates a cross reference to a defined page (e.g. p. 1).
- \rightarrow 2 This symbol indicates a cross reference to a defined figure (e.g. fig. 2).
- Additional information, tips
- Permitted or recommended
- Forbidden or not recommended

Oxymax COS61D Table of contents

Table of contents

1	Documentation information	2
2	Basic safety instructions	3
2 1	David Salety Instruction	
	Requirements for personnel	
	Designated use	
	Occupational safety	
	Operational safety	
2.5	Product safety	4
3	Installation	5
	Installation conditions	
	Installation instructions	
3.3	Installation examples	0
1	Wiring	10
	Direct connection to the transmitter	
4.2	Post connection check	10
_		11
	Commissioning	
	Function check	
5.2	Calibration	11

2 Basic safety instructions

2.1 Requirements for personnel

- ► Installation, commissioning, operation and maintenance of the measuring system must only be carried out by trained technical personnel.
- ▶ The technical personnel must be authorized by the plant operator to carry out the specified activities.
- lacktriangle The electrical connection may only be performed by an electrical technician.
- ► The technical personnel must have read and understood these Operating Instructions and must follow the instructions they contain.
- ► Measuring point faults may only be rectified by authorized and specially trained personnel.
- Repairs not described in the enclosed Operating Instructions may only be carried out directly at the manufacturer's or by the service organization.

2.2 Designated use

The oxygen sensor is suitable for continuous measurement of dissolved oxygen in water.

Typical applications are:

- \blacksquare Measuring, monitoring and regulating the oxygen content in activated sludge basins.
- Monitoring the oxygen content in the sewage treatment plant outlet.
- Monitoring, measuring and regulating the oxygen content in public waters and fish farming water.
- Monitoring of oxygen enrichment in drinking water.

Basic safety instructions Oxymax COS61D

Any other use than the one described here compromises the safety of persons and the entire measuring system and is not permitted.

The manufacturer is not liable for damage caused by improper or non-designated use.

NOTICE

Use in not specified applications

Measurement errors and failures up to the breakdown of the measurement point possible

- ► Only use the product acc. to its specification.
- ► Observe the technical data of the nameplate.

2.3 Occupational safety

As the user, you are responsible for complying with the following safety conditions:

- Installation instructions
- Local prevailing standards and regulations.

Electromagnetic compatibility

With regard to electromagnetic compatibility, this device has been tested in accordance with the applicable European standards for industrial applications.

The electromagnetic compatibility indicated only applies to a device that has been connected in accordance with the instructions in these Operating Instructions.

2.4 Operational safety

- ▶ Before commissioning the entire measuring point, make sure all the connections are correct. Ensure that electrical cables and hose connections are not damaged.
- ► Do not operate damaged products, and safeguard them to ensure that they are not operated inadvertently. Mark the damaged product as defective.
- ► If faults cannot be rectified, the products must be taken out of service and secured against unintentional commissioning.

A CAUTION

The cleaning system is not switched off during calibration or maintenance activities Risk of injury due to medium or cleaning agent

- ▶ If a cleaning system is connected, switch it off before removing a sensor from the medium.
- ► If you are not switching off the cleaning system because you wish to test the cleaning function, wear protective clothing, goggles and gloves or take other appropriate measures.

2.5 Product safety

The product is designed to meet state-of-the-art safety requirements, has been tested and left the factory in a condition in which it is safe to operate. Relevant regulations and European standards have been observed.

Oxymax COS61D Installation

3 Installation

3.1 Installation conditions

3.1.1 Orientation

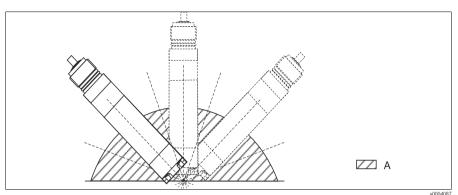


Fig. 1: Angle of installation

4000-

A Recommended angle of installation: 0 ... 180°, no overhead installation

3.1.2 Mounting location

- Select the installation location so that there is easy access for later calibration.
- Make sure that upright posts and assemblies are secured safely and vibration-free.
- Select an installation location which produces a typical oxygen concentration.

3.2 Installation instructions

3.2.1 Installing a measuring point

For immersed operation, install the individual modules away from the basin on a solid base. Only carry out the final installation at the intended installation location.

For a complete installation of a measuring point, proceed as follows:

- 1. Install a retractable or a flow assembly (if used) into the process.
- 2. Connect the water supply to the rinse connections (if you use an assembly with cleaning function).
- 3. Install and connect the oxygen sensor.

Installation Oxymax COS61D

NOTICE

No assembly used, sensor not correctly installed, grounding regulations not observed Risk of damaging the sensor cable, no protection to electromagnetic interferencies

- ► Screw the sensor into the assembly so that the cable is not twisted.
- ► Avoid exerting excessive tensile force on the cable (e.g. from jerky pulling).
- When using metallic assemblies and installation equipment, comply with national grounding regulations.
- ▶ Observe the sensor installation instructions of the Operating Instructions of the assembly used.

3.3 Installation examples

3.3.1 Immersion operation

Universal assembly holder and chain assembly

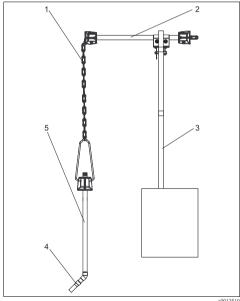


Fig. 2: Chain holder, rail mounted

- 1 Chair
- 2 Flexdip CYH112 holder
- 3 Rail
- 4 Oxymax sensor
- 5 Flexdip CYA112 wastewater assembly

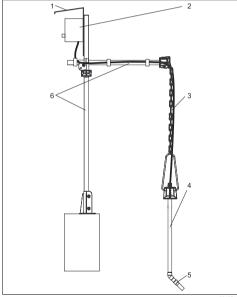


Fig. 3: Chain holder, mounted to a post

- 1 Weather protection cover
- 2 Controller / transmitter
- 3 Chair
- 4 Flexdip CYA112 wastewater assembly
- 5 Oxymax sensor
- 6 Flexdip CYH112 holder

6 Endress+Hauser

a0013511

Oxymax COS61D Installation

Universal assembly holder and fixed immersion assembly

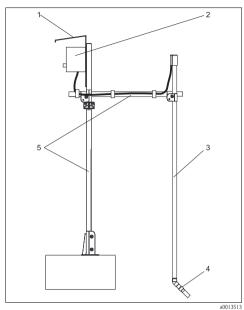


Fig. 4: Assembly holder with immersion tube

- Weather protection cover
- Controller / transmitter 2 3 4 5
- Immersion assembly Flexdip CYA112
 - Oxymax sensor
- Assembly holder Flexdip CYH112

Installation Oxymax COS61D

Basin rim mounting with immersion tube

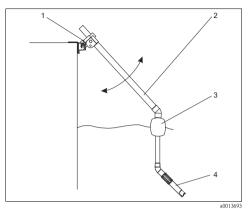


Fig. 5: Basin rim mounting

- Pentulum holder CYH112
- 2 Assembly Flexdip CYA112
- 3 Float of assembly CYA112
- Oxymax sensor

Floating body

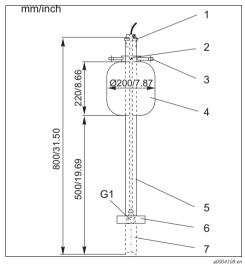
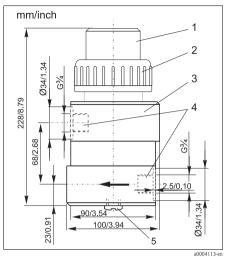


Fig. 6: Floating body

- Cable route with strain relief and rain protection Mounting ring for ropes and chains with locking screw
- 2 Lugs Ø15, 3 x 120° for anchoring Saltwater-resistant plastic float 3
- 4
- Pipe 40x1, stainless steel 1.4571 (AISI 316Ti) 5
- Shock absorber and weight
- Oxygen sensor

Oxymax COS61D Installation

3.3.2 Flow assembly



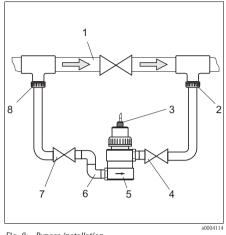


Fig. 7: Flow assembly COA250-B

- Screw-in part for sensor
- 2 Screw ring
- 3 Meter body
- 4 Connection thread G3/4
- 5 Dummy plug (connection for spray head COR3)

Fig. 8: Bypass installation

- 1 Main line 2 Medium return
- 3 Oxygen sensor
- 4, 7 Manually actuated or solenoid valves
- 5 Flow assembly COA250-B
- 6 90° pipe bracket
- 8 Medium removal

3.3.3 Retractable assembly

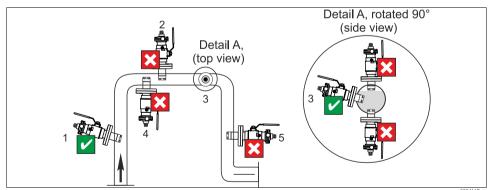


Fig. 9: Permissible and impermissible sensor installation positions with retractable assembly COA451

- 1 Ascending pipe, best position
- 2 Horizontal pipe, sensor top down, impermissible due to air cushion or foam bubble forming
- 3 Horizontal pipe, installation with permissible installation angle (acc. to sensor version)
- 4 Overhead installation, critical due to possible sediment buildup on fluorescence cap
- 5 Down pipe, impermissible

a0004117-

9

Wiring Oxymax COS61D

4 Wiring

WARNING

Device is energized

Improper connection can cause injury or death.

- ▶ The electrical connection must only be carried out by a certified electrician.
- ► Technical personnel must have read and understood the instructions in this manual and must adhere to them.
- ▶ **Prior to beginning** any wiring work, make sure voltage is not applied to any of the cables.

4.1 Direct connection to the transmitter

Connection methods

- Sensor cable directly connected to the terminal connector of the basic module
- Optional: Sensor cable plug connected to the M12 sensor socket on the underside of the device. With this type of connection, the device is already wired at the factory.




Fig. 10: Sensor cable with terminated cable cores

a0013305

 $\ensuremath{\blacksquare}$ Observe the connection instructions in the Operating Instructions of the transmitter used.

4.2 Post connection check

Instrument status and specifications	Remarks	
Are the sensor, assembly, junction box or cable damaged?	Visual inspection	
Electrical connection	Remarks	
Are the installed cables strain-relieved and not twisted ?		
Long enough length of cable core stripped and correct in terminal?	Check seating (pull slightly)	
Are all the screws terminals properly tightened ?	Tighten	
Are all the cable entries installed, tightened and sealed ?	For cable entries lateral: cable loops downwards	
Are all the cable entries installed downwards or lateral ?	for water to be able to drip off.	

Oxymax COS61D Commissioning

5 Commissioning

5.1 Function check

Before first commissioning, check if:

- the sensor is correctly installed
- the electrical connection is correct.

If using an assembly with automatic cleaning, check the correct connection of the cleaning agent (e.g. water or air).

A WARNING

Escaping process medium

Risk of injury from high pressure, high temperatures or chemical hazards

- Before applying compressed air to an assembly with cleaning facility, make sure the connections are correctly fitted.
- ▶ Do not install the assembly in the process if you cannot make the correct connection reliably.

5.2 Calibration

The sensor is calibrated at the factory. A new calibration is only needed in special situations.

- 1. Remove the sensor from the medium.
- 2. Clean the outside of the sensor with a damp cloth.
- 3. Then wait while the sensor adjusts to the temperature of the ambient air. This takes about 20 minutes. Check that the sensor is not in direct sunlight during this time.
- 4. If the measured value display on the transmitter is stable, carry out the calibration in accordance with the Operating Instructions of the transmitter.
- 5. Place the sensor in the medium again.
- Make sure you comply with the instructions for calibration in the Operating Instructions of the transmitter.

www.addresses.endress.com



People for Process Automation

