Technical Information Omnigrad M TR15, TC15

Modular thermometer with extension neck, barstock thermowell, available with a flange or as a weld-in unit



TR15 Resistance thermometer (RTD) TC15 Thermometer with thermocouple (TC)

Application

- Universal range of application
- Particularly suitable for steam and gas applications with high process pressures and temperatures
- Measuring range:
 - Resistance insert (RTD): −200 to 600 °C (−328 to 1112 °F)
 - Thermocouple (TC): −40 to 1100 °C (−40 to 2012 °F)
- Static pressure range up to 400 bar (5800 psi)
- Degree of protection up to IP68

Head transmitter

All Endress+Hauser transmitters are available with enhanced accuracy and reliability compared to directly wired sensors. Easy customizing by choosing one of the following outputs and communication protocols:

- Analog output 4 to 20 mA
- HART®
- PROFIBUS® PA
- FOUNDATION Fieldbus™

Your benefits

- High degree of flexibility thanks to modular design with standard terminal heads as per DIN EN 50446 and customer-specific immersion lengths
- High compatibility with a design according to DIN 43772
- Extension neck to protect the head transmitter from overheating
- Fast response time with reduced/tapered tip form
- Types of protection for use in hazardous locations:
 - Intrinsic Safety (Ex ia)
 - Non-sparking (Ex nA)



Function and system design

Measuring principle

Resistance thermometer (RTD)

These resistance thermometers use a Pt100 temperature sensor according to IEC 60751. The temperature sensor is a temperature-sensitive platinum resistor with a resistance of 100 Ω at 0 °C (32 °F) and a temperature coefficient α = 0.003851 °C⁻¹.

There are generally two different kinds of platinum resistance thermometers:


- Wire wound (WW): Here, a double coil of fine, high-purity platinum wire is located in a ceramic support. This is then sealed top and bottom with a ceramic protective layer. Such resistance thermometers not only facilitate very reproducible measurements but also offer good long-term stability of the resistance/temperature characteristic within temperature ranges up to 600 °C (1112 °F). This type of sensor is relatively large in size and it is comparatively sensitive to vibrations.
- Thin film platinum resistance thermometers (TF): A very thin, ultrapure platinum layer, approx. 1 μm thick, is vaporized in a vacuum on a ceramic substrate and then structured photolithographically. The platinum conductor paths formed in this way create the measuring resistance. Additional covering and passivation layers are applied and reliably protect the thin platinum layer from contamination and oxidation, even at high temperatures.

The primary advantages of thin film temperature sensors over wire wound versions are their smaller sizes and better vibration resistance. A relatively low principle-based deviation of the resistance/temperature characteristic from the standard characteristic of IEC 60751 can frequently be observed among TF sensors at high temperatures. As a result, the tight limit values of tolerance category A as per IEC 60751 can only be observed with TF sensors at temperatures up to approx. 300 $^{\circ}$ C (572 $^{\circ}$ F). For this reason, thin-film sensors are generally only used for temperature measurements in ranges below 400 $^{\circ}$ C (932 $^{\circ}$ F).

Thermocouples (TC)

Thermocouples are comparatively simple, robust temperature sensors which use the Seebeck effect for temperature measurement: if two electrical conductors made of different materials are connected at a point, a weak electrical voltage can be measured between the two open conductor ends if the conductors are subjected to a thermal gradient. This voltage is called thermoelectric voltage or electromotive force (emf.). Its magnitude depends on the type of conducting materials and the temperature difference between the "measuring point" (the junction of the two conductors) and the "cold junction" (the open conductor ends). Accordingly, thermocouples primarily only measure differences in temperature. The absolute temperature at the measuring point can be determined from these if the associated temperature at the cold junction is known or is measured separately and compensated for. The material combinations and associated thermoelectric voltage/temperature characteristics of the most common types of thermocouple are standardized in the IEC 60584 and ASTM E230/ANSI MC96.1 standards.

Measuring system

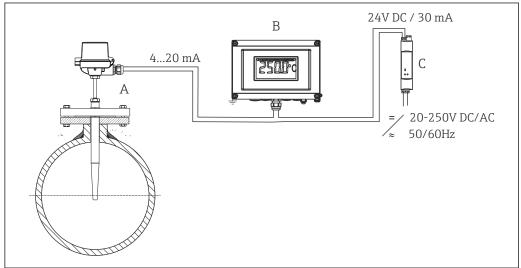


A0010494

■ 1 Application example

- A Mounted thermometer with head transmitter installed.
- B RIA16 field display unit The display unit records the analog measuring signal from the head transmitter and shows this on the display. The LC display shows the current measured value in digital form and as a bar graph indicating a limit value violation. The display unit is looped into the 4 to 20 mA circuit and gets the required energy from there. More information on this can be found in the Technical Information (see "Documentation").
- C Active barrier RN221N The RN221N (24 V DC, 30 mA) active barrier has a galvanically isolated output for supplying voltage to loop-powered transmitters. The universal power supply works with an input supply voltage of 20 to 250 V DC/AC, 50/60 Hz, which means that it can be used in all international power grids. More information on this can be found in the Technical Information (see "Documentation").

Equipment architecture

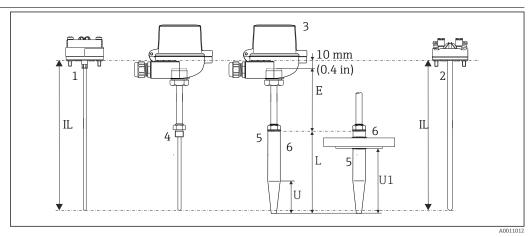

■ 2 Thermometer design

- *Insert with head transmitter mounted (example with* ϕ *3 mm (0.12 in))*
- Insert with terminal block mounted (example with ϕ 6 mm (0.24 in))
- 3 Terminal head
- 4 Version without thermowell
- 5 Thermowell from barstock material
- 6 Process connection: with or without a flange
- E Extension neck length
- L Total thermowell length
- IL Insertion length
- U Length of conical tip
- U1 Immersion length; length of the part of the thermowell in contact with the process from the tip to the sealing surface of the flange

Thermometers from the Omnigrad M TR15 and TC15 series have a modular design. The terminal head is used as a connection module for the mechanical and electrical connection of the insert. The position of the actual thermometer sensor in the insert ensures that it is mechanically protected. The insert can be exchanged and calibrated without interrupting the process. Either ceramic terminal blocks or transmitters can be fitted to the internal base washer. The thermowell is made from barstock and is available with diameters measuring 18, 24 or 26 mm (0.71, 0.94 or 1.02 in). The tip of the thermowell is tapered. The thermometer is installed in the system (pipe or tank) using a flange connection or by welding the thermometer in place ($\rightarrow \square$ 20).

Measurement range

- RTD: -200 to 600 °C (-328 to 1112 °F)
- TC: -40 to 1100 °C (-40 to 2012 °F)

Performance characteristics

Operating conditions

Ambient temperature


Terminal head	Temperature in °C (°F)
Without mounted head transmitter	Depends on the terminal head used and the cable gland or fieldbus connector, see Terminal heads' section
With mounted head transmitter	-40 to 85 °C (-40 to 185 °F)
With mounted head transmitter and display	−20 to 70 °C (−4 to 158 °F)

Process pressure (static)

Process connection	Standard	Max. process pressure
Weld-in version - ≤400 bar (5 800 psi)		≤400 bar (5 800 psi)
	EN1092-1 or ISO 7005-1	20, 40, 50 or 100 bar depending on the flange pressure rating PNxx
Flange	ANSI B16.5	150 or 300 psi depending on the flange pressure rating
	JIS B 2220	20K, 25K or 40K depending on the flange pressure rating

Permitted flow velocity depending on the immersion length

The highest flow velocity tolerated by the thermometer diminishes with increasing immersion length exposed to the stream of the fluid. In addition it is dependent on the diameter of the thermometer tip, on the kind of measuring medium, on the process temperature and on the process pressure. The following figures exemplify the maximum permitted flow velocities in water and superheated steam at a process pressure of **5 MPa (50 bar)**.

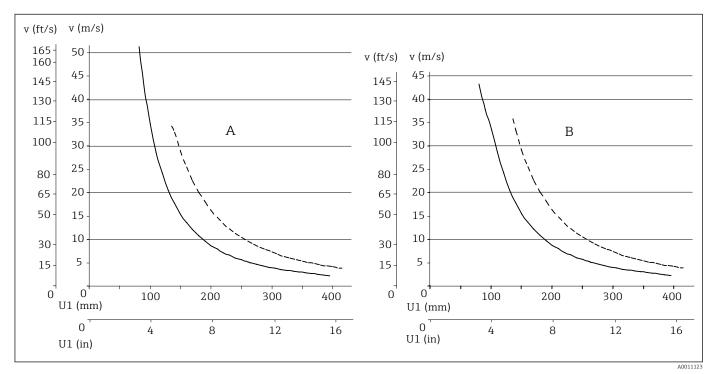


- Permitted flow velocity depending on the immersion length
- A Medium water at $T = 50 \,^{\circ}\text{C}$ (122 °F)
- B Medium superheated steam at $T = 400 \,^{\circ}\text{C}$ (752 °F)
- U1 Immersion length thermowell, material 1.4571 (316Ti)
- v Flow velocity
- ----- Thermowell diameter 18 mm (0.71 in), U = 65 mm (2.56 in)
- --- Thermowell diameter 24 mm (0.94 in), U = 125 mm (4.9 in)

Shock and vibration resistance

- RTD: 3G / 10 to 500 Hz according to IEC 60751
- TC: 4G / 2 to 150 Hz according to IEC 60068-2-6

Accuracy

RTD resistance thermometer as per IEC 60751

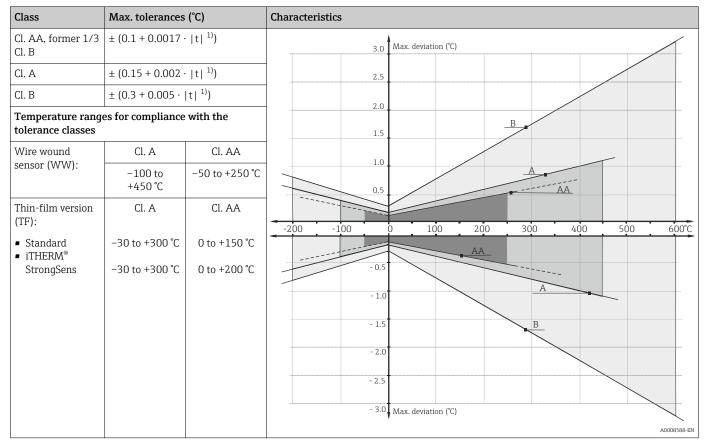

1) |t| = absolute value °C

In order to obtain the maximum tolerances in °F, the results in °C must be multiplied by a factor of 1.8.

Permissible deviation limits of thermoelectric voltages from the standard characteristic for thermocouples as per IEC 60584 or ASTM E230/ANSI MC96.1:

Standard	Туре	Standard tolerance		Special tolerance	
IEC 60584		Class	Deviation	Class	Deviation
	J (Fe-CuNi)	2	±2.5 °C (-40 to 333 °C) ±0.0075 t 1) (333 to 750 °C)	1	±1.5 °C (-40 to 375 °C) ±0.004 t ¹⁾ (375 to 750 °C)
	K (NiCr-NiAl)	2	±2.5 °C (-40 to 333 °C) ±0.0075 t 1) (333 to 1200 °C)	1	±1.5 °C (-40 to 375 °C) ±0.004 t 1) (375 to 1000 °C)

1) |t| = absolute value °C

Standard	Туре	Standard tolerance	Special tolerance	
ASTM E230/ANSI		Deviation, the larger respective value applies		
MC96.1	J (Fe-CuNi)	±2.2 K or ±0.0075 t ¹⁾ (0 to 760 °C)	±1.1 K or ±0.004 t ¹⁾ (0 to 760 °C)	
	K (NiCr-NiAl)	±2.2 K or ±0.02 t ¹⁾ (-200 to 0 °C) ±2.2 K or ±0.0075 t ¹⁾ (0 to 1260 °C)	±1.1 K or ±0.004 t 1) (0 to 1260 °C)	

1) |t| = absolute value °C

Response time

Calculated at an ambient temperature of approx. 23 $^{\circ}$ C by immersing in running water (0.4 m/s flow rate, 10 K excess temperature):

Thermowell, U = length of tapered tip

Thermometer type	Outer diameter	t _(x)	U = 65/ ₇₃ mm (2.56/ _{2.87} in)	U = 125/ ₁₃₃ mm (4.92/ _{5.24} in)	U = 275 mm (10.83 in)	Outer diameter (tapered tip)
Resistance	18 mm (0.71 in)	t ₅₀	22 s	22 s	-	9 mm (0.35 in)
(measuring probe Pt100, TF/WW)	10 11111 (0.71 111)	t ₉₀	60 s	60 s	-) IIIII (0.55 III)
	24 mm (0.94 in)	t ₅₀	31 s	31 s	31 s	12 E mm (0 E in)
		t ₉₀	96 s	96 s	96 s	- 12.5 mm (0.5 in)

Thermowell, U = length of tapered tip

Thermometer	Outer diameter $t_{(x)}$	t _(x)	Grounded			Ungrounded		
type			U = 65/ ₇₃ mm (2.56/ _{2.87} in)	U = 125/ ₁₃₃ mm (4.92/ _{5.24} in)	U = 275 mm (10.83 in)	U = 65/ ₇₃ mm (2.56/ _{2.87} in)	U = 125/ ₁₃₃ mm (4.92/ _{5.24} in)	U = 275 mm (10.83 in)
Thermocouple	Thermocouple 18 mm (0.71 in)	t ₅₀	7 s	7 s	-	7.5 s	7.5 s	-
		t ₉₀	18 s	18 s	-	19 s	19 s	-
24 mm (0.94 in)	t ₅₀	17 s	15 s	15 s	18 s	16 s	16 s	
	t ₉₀	47 s	43 s	43 s	50 s	46 s	46 s	

Insert: Tested in accordance with IEC 60751 in flowing water (0.4 m/s at 30 $^{\circ}$ C):

Sensor type	Diameter ID	Response time	Thin film (TF)
iTHERM® StrongSens	6 mm (0.24 in)	t ₅₀	<3.5 s
		t ₉₀	<10 s
	3 mm (0.12 in)	t ₅₀	2.5 s
TF Sensor		t ₉₀	5.5 s
II. Sellsol	6 mm (0.24 in)	t ₅₀	5 s
		t ₉₀	13 s
	3 mm (0.12 in)	t ₅₀	2 s
WW Sensor		t ₉₀	6 s
W W Selisoi	6 mm (0.24 in)	t ₅₀	4 s
		t ₉₀	12 s
	3 mm (0.12 in)	t ₅₀	0.8 s
Thermocouple (TPC100)		t ₉₀	2 s
grounded	6 mm (0.24 in)	t ₅₀	2 s
		t ₉₀	5 s
	3 mm (0.12 in)	t ₅₀	1 s
Thermocouple (TPC100)		t ₉₀	2.5 s
ungrounded	6 mm (0.24 in)	t ₅₀	2.5 s
		t ₉₀	7 s

Response time for the sensor assembly without transmitter.

Insulation resistance

■ RTD:

Insulation resistance according to IEC 60751 > 100 M Ω at 25 °C between terminals and sheath material measured with a minimum test voltage of 100 V DC

TC:

Insulation resistance according to IEC 1515 between terminals and sheath material with a test voltage of 500 V DC:

- $> 1 \text{ G}\Omega \text{ at } 20 ^{\circ}\text{C}$
- $> 5 M\Omega$ at $500 ^{\circ}$ C

Dielectric strength

Tested at a room temperature for 5 s:

- ϕ 6 mm (0.24 in): \geq 1 000 V DC between terminals and insert sheath
- ϕ 3 mm (0.12 in): \geq 250 V DC between terminals and insert sheath

Self heating

RTD elements are passive resistances that are measured using an external current. This measurement current causes a self-heating effect in the RTD element itself which in turn creates an additional measurement error. In addition to the measurement current, the size of the measurement error is also affected by the temperature conductivity and flow velocity of the process. This self-heating error is negligible when an Endress+Hauser iTEMP® temperature transmitter (very small measurement current) is connected.

Calibration

Endress+Hauser provides comparison temperature calibration from -80 to +1400 °C (-110 to +2552 °F) based on the International Temperature Scale (ITS90). Calibrations are traceable to national and international standards. The calibration certificate is referenced to the serial number of the thermometer. Only the insert is calibrated.

Insert: Ø6 mm (0.24 in) and 3 mm (0.12 in)	Minimum insertion length of insert in mm (in)			
Temperature range	without head transmitter	with head transmitter		
-80 to -40 °C (-110 to -40 °F)	200 (7.87)			
-40 to 0 °C (-40 to 32 °F)	160 (6.3)			
0 to 250 °C (32 to 480 °F)	120 (4.72) 150 (5.91)			
250 to 550 °C (480 to 1020 °F)	300 (11.81)			
550 to 1400 °C (1020 to 2552 °F)	450 (17	.72)		

Material

Extension neck and thermowell.

The temperatures for continuous operation specified in the following table are only intended as reference values for use of the various materials in air and without any significant compressive load. The maximum operation temperatures are reduced considerably in some cases where abnormal conditions such as high mechanical load occur or in aggressive media.

Material name	Short form	Recommended max. temperature for continuous use in air	Properties
AISI 316L/ 1.4404 1.4435	X2CrNiMo17-12-2 X2CrNiMo18-14-3	650 °C (1202 °F) ¹⁾	 Austenitic, stainless steel High corrosion resistance in general Particularly high corrosion resistance in chlorine-based and acidic, non-oxidizing atmospheres through the addition of molybdenum (e.g. phosphoric and sulfuric acids, acetic and tartaric acids with a low concentration) Increased resistance to intergranular corrosion and pitting Compared to 1.4404, 1.4435 has even higher corrosion resistance and a lower delta ferrite content
AISI 316Ti/ 1.4571	X6CrNiMoTi17-12-2	700 °C (1292 °F)	 Properties comparable to AISI316L Addition of titanium means increased resistance to intergranular corrosion even after welding Broad range of uses in the chemical, petrochemical and oil industries as well as in coal chemistry Can only be polished to a limited extent, titanium streaks can form
AISI A105/ 1.0460	C22.8	450 °C (842 °F)	 Heat-resistant steel Resistant in nitrogen-containing atmospheres and atmospheres that are low in oxygen; not suitable for acids or other aggressive media Often used in steam generators, water and steam pipes, pressure vessels
Duplex SAF2205/ 1.4462	X2CrNiMoN22-5-3	300 °C (572 °F)	 Austenitic ferritic steel with good mechanical properties High resistance to general corrosion, pitting, chlorine-induced or transgranular stress corrosion Comparatively good resistance to hydrogeninduced stress corrosion
Inconel600/ 2.4816	NiCr15Fe	1100°C (2012°F)	 A nickel/chromium alloy with very good resistance to aggressive, oxidizing and reducing atmospheres, even at high temperatures Resistant to corrosion caused by chlorine gas and chlorinated media as well as many oxidizing mineral and organic acids, sea water etc. Corrosion from ultrapure water Not to be used in a sulfur-containing atmosphere
Hastelloy C276/ 2.4819	NiMo16Cr15W	1100°C (2012°F)	 A nickel-based alloy with good resistance to oxidizing and reducing atmospheres, even at high temperatures Particularly resistant to chlorine gas and chloride as well as to many oxidizing mineral and organic acids

Material name	Short form	Recommended max. temperature for continuous use in air	Properties
AISI A182 F11/ 1.7335	13CrMo4-5	550 °C (1022 °F)	 Low alloy, heat-resistant steel with chromium and molybdenum additions Better corrosion resistance compared to nonalloy steels, not suitable for acids and other aggressive media Often used in steam generators, water and steam pipes, pressure vessels
Titanium / 3.7035	-	600°C (1112°F)	 A light metal with very high corrosion resistance and strength values Very good resistance to many oxidizing mineral and organic acids, saline solutions, sea water etc. Prone to fast embrittlement at high temperatures through the absorption of oxygen, nitrogen and hydrogen Compared to other metals, titanium reacts readily with many media (O₂, N₂, Cl₂, H₂) at higher temperatures and/or increased pressure Can only be used in chlorine gas and chlorinated media at comparatively low temperatures (<400 °C)
1.5415	16Mo3	530°C (986°F)	Alloyed creep-resistant steel Particularly well suited as pipe material for boiler construction, super heater tube, superheated steam and collecting pipe, stove and line pipes, for heat exchangers and for the purposes of oil-refining industries

¹⁾ Can be used to a limited extent up to 800 °C (1472 °F) for low compressive loads and in non-corrosive media. Please contact your Endress+Hauser sales team for further information.

Components

Family of temperature transmitters

Thermometers fitted with iTEMP® transmitters are an installation-ready complete solution to improve temperature measurement by significantly increasing accuracy and reliability, when compared to direct wired sensors, as well as reducing both wiring and maintenance costs.

PC programmable head transmitters

They offer a high degree of flexibility, thereby supporting universal application with low inventory storage. The iTEMP® transmitters can be configured quickly and easily at a PC. Endress+Hauser offers free configuration software which can be downloaded from the Endress+Hauser Website. More information can be found in the Technical Information.

HART® programmable head transmitters

The transmitter is a 2-wire device with one or two measuring inputs and one analog output. The device not only transfers converted signals from resistance thermometers and thermocouples, it also transfers resistance and voltage signals using HART® communication. It can be installed as an intrinsically safe apparatus in Zone 1 hazardous areas and is used for instrumentation in the terminal head (flat face) as per DIN EN 50446. Swift and easy operation, visualization and maintenance by PC using operating software, Simatic PDM or AMS. For more information, see the Technical Information.

PROFIBUS® PA head transmitters

Universally programmable head transmitter with PROFIBUS® PA communication. Conversion of various input signals into digital output signals. High accuracy over the complete ambient temperature range. Swift and easy operation, visualization and maintenance using a PC directly from the control panel, e. g. using operating software, Simatic PDM or AMS. For more information, see the Technical Information.

FOUNDATION Fieldbus™ head transmitters


Universally programmable head transmitter with FOUNDATION Fieldbus™ communication. Conversion of various input signals into digital output signals. High accuracy over the complete ambient temperature range. Swift and easy operation, visualization and maintenance using a PC directly from the control panel, e.g. using operating software such as ControlCare from Endress +Hauser or NI Configurator from National Instruments. For more information, see the Technical Information.


Advantages of the iTEMP® transmitters:


- Dual or single sensor input (optionally for certain transmitters)
- Unsurpassed reliability, accuracy and long-term stability in critical processes
- Mathematical functions
- Monitoring of the thermometer drift, sensor backup functionality, sensor diagnostic functions
- Sensor-transmitter matching for dual sensor input transmitters, based on Callendar/Van Dusen coefficients


Terminal heads


All terminal heads have an internal shape and size in accordance with DIN EN 50446 flat face and a thermometer connection of M24x1.5, G1/2" or 1/2" NPT thread. All dimensions in mm (in). The cable glands in the diagrams correspond to M20x1.5 connections. Specifications without head transmitter installed. For ambient temperatures with head transmitter installed, see "Operating conditions" section.

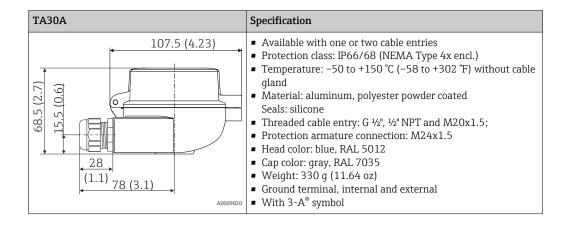


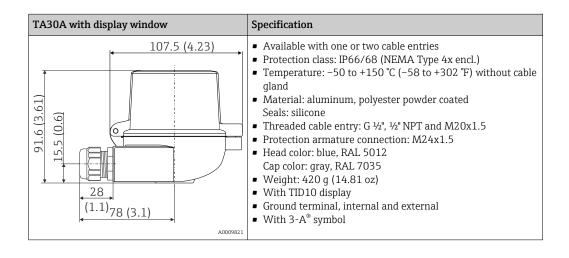


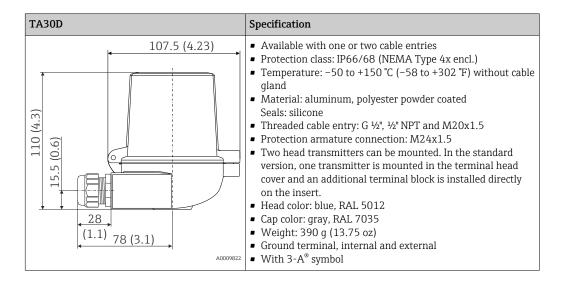


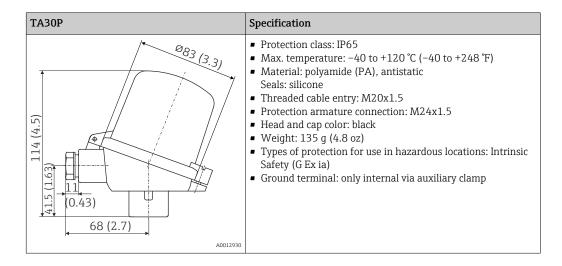

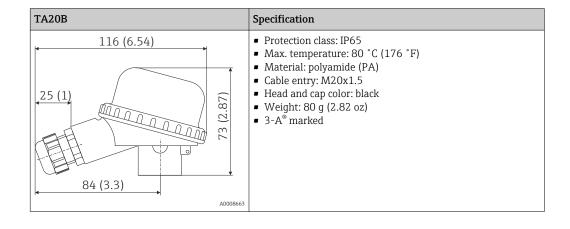

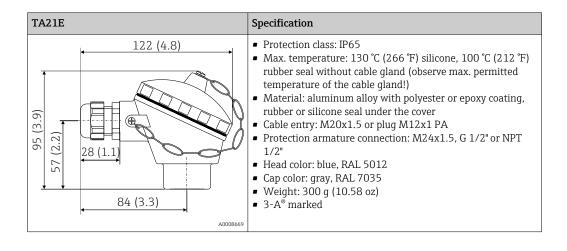

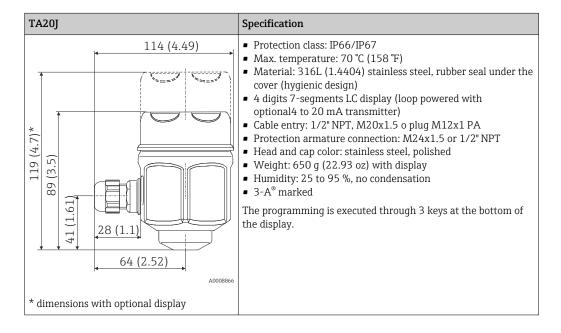


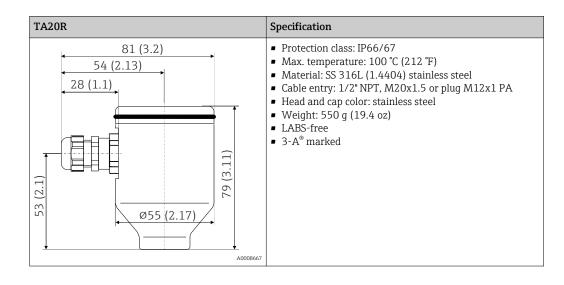

Maximum ambient temperatures for cable glands and fieldbus connectors					
Type Temperature range					
Cable gland ½" NPT, M20x1.5 (non Ex)	-40 to +100 °C (-40 to +212 °F)				
Cable gland M20x1.5 (for dust ignition-proof area)	−20 to +95 °C (−4 to +203 °F)				
Fieldbus connector (M12x1 PA, 7/8" FF)	-40 to +105 °C (-40 to +221 °F)				

Design

All dimensions in mm (in).

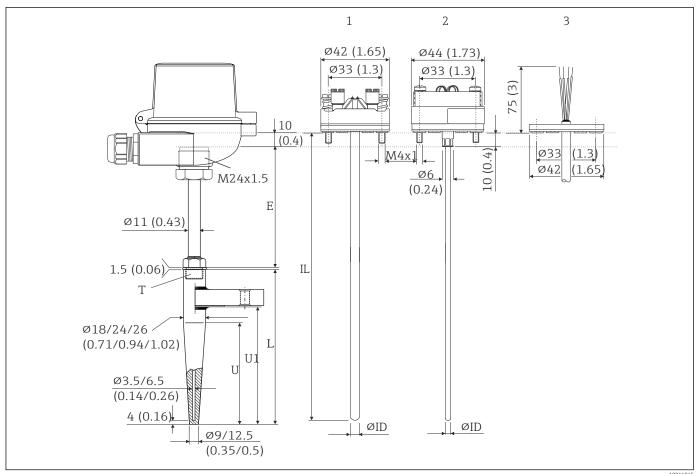

- Dimensions of the Omnigrad M TR15 and TC15 € 4
- 1 Insert with terminal block mounted
- Insert with head transmitter mounted 2
- 3 Insert with flying leads
- T Thread neck tube connection to thermowell
- Ε Extension neck length
- L Total length of thermowell
- ΙL Insertion length = E + L + 10 mm (0.4 in)
- Length of conical tip
- U1 Immersion length; length of the part of the thermowell in contact with the process from the tip to the sealing surface of the flange
- Φ ID Insert diameter Φ 3 mm (0.12 in) or 6 mm (0.24 in)
- Tolerance h7 for weld-in versions with thermowell diameter $\phi18/24/26$ mm (0.71/0.94/1.02

Insert

Depending on the application different inserts are available for the assembly:

Sensor	Standard thin-film	iTHERM® StrongSens	Wire wound		
Sensor design; connection method	1x Pt100, 3- or 4-wire, mineral insulated	1x Pt100, 3- or 4-wire, mineral insulated	1x Pt100, 3- or 4-wire, mineral insulated	2x Pt100, 3-wire, mineral insulated	
Vibration resistance of the insert tip	Up to 3g	Enhanced vibration resistance > 60g	Up to 3g		
Measuring range; accuracy class	-50 to +400 °C (-58 to +752 °F), Class A or AA	−50 to +500 °C (−58 to +932 °F), Class A or AA	−200 to +600 °C (−328 to +1112 °F), Class A or AA		
Diameter	3 mm (½ in), 6 mm (¼ in)	6 mm (½ in)	3 mm (1/8 in), 6 mm (1/4 in)		
Insert type	TPR100	iTHERM® TS111	TPR100		


TC					
Selection in order code	A	В	E	F	
Sensor design; material	1x K; INCONEL600	2x K; INCONEL600	1x J; 316L	2x J; 316L	
Measuring range acc. to:					
DIN EN 60584	−40 to 1200 °C		−40 to 750 °C		
ANSI MC 96.1	0 to 1250 ℃		0 to 750 ℃		
TC Standard, accuracy	IEC 60584-2; class 1 ASTM E230-03; special				
Insert type	TPC100				
Diameter	ϕ 3 mm (0.12 in) or ϕ 6 mm (0.24 in), depending on the selected tip shape				

Weight

1 to 5 kg (2.2 to 11 lbs) for standard options.

Process connection

Standard connection flange or as weld-in connection.

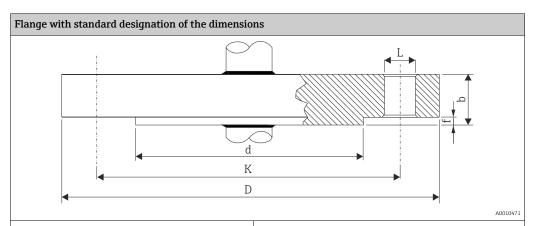

For detailed information on the flange dimensions refer to the following flange standards:

- ANSI/ASME B16.5
- ISO 7005-1
- EN 1092-1
- JIS B 2220: 2004

The flange material must be the same as of the stem of the thermowell. Models in Hastelloy® have flanges in basic material 316L/1.4404 and a disc in Hastelloy® on the surface in contact with the process media. The standard surface finish of the coupling side of flanges ranges from 3.2 to 6.4 μm (Ra). Other types of flanges can be supplied on request.

Spare parts

- The thermowell TW15 is available as spare part ($\Rightarrow \triangleq 25$)
- The gasket set M24x1.5, aramid+NBR (material no. 60001329) is available as spare part
- Inserts (→ 🖺 25)
 - RTD insert TPR100
 - iTHERM® StrongSens TS111
 - TC insert TPC100

The inserts are made from mineral insulated cable (MgO) with a sheath in AISI316L/1.4404 (RTD) or Inconel600 (TC).

If spare parts are required, refer to the following equation:


Insertion length IL = E + L + 10 mm (0.4 in)


- Extension neck welded with threaded connection to terminal head. DIN flat face, different connections to separate thermowell, (order number TN15-...)
- Thermo-conductive paste HS340, 100 g (material no. 60007126)
- Ceramic terminal block 3-wire (42 mm), 5 pieces (material no. 60005544)
- Ceramic terminal block 6-wire (42 mm), 5 pieces (material no. 60005545)
- Ceramic terminal block 4-wire (42 mm), 5 pieces (material no. 60007934)


Wiring

Wiring diagrams for RTD

Type of sensor connection

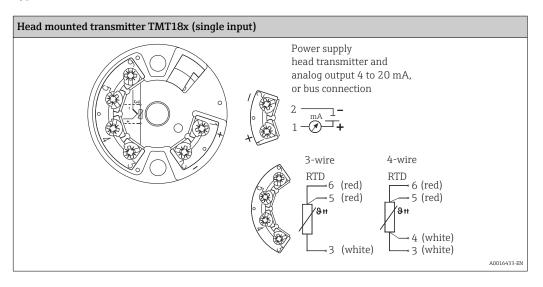

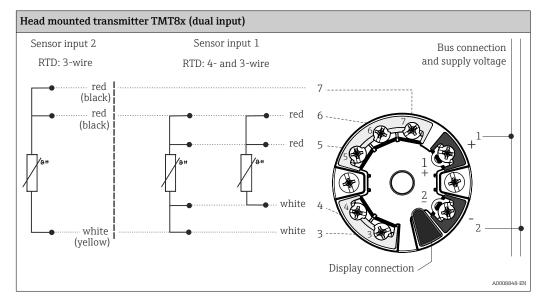


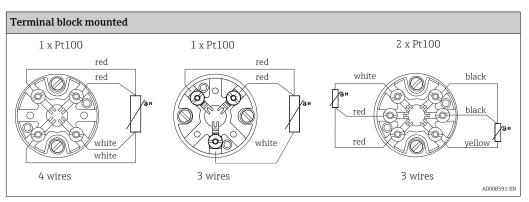


Wiring diagrams for TC

Thermocouple wire colors

As per IEC 60584	As per ASTM E230
Type J: black (+), white (-)Type K: green (+), white (-)	Type J: white (+), red (-)Type K: yellow (+), red (-)

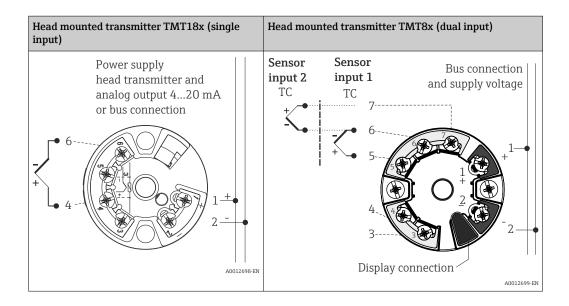

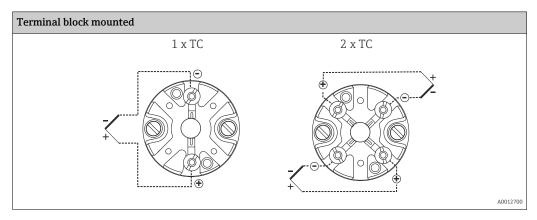


Installation conditions

Orientation

No restrictions.

Installation instructions

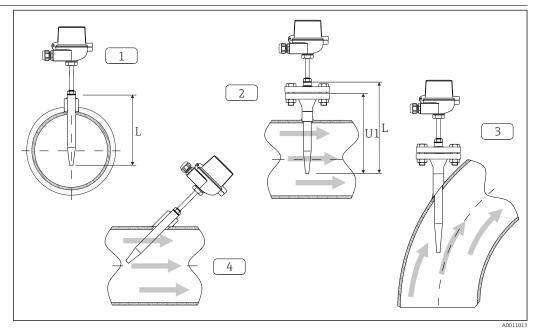

■ 5 Installation examples

- 1-2 In pipes with a small cross section the thermowell tip should reach or extend slightly past the center line of the pipe (=L).
- 3-4 Angled installation.


The immersion length of the thermometer influences the accuracy. If the immersion length is too small then errors in the measurement are caused by heat conduction via the process connection and the container wall. If installing into a pipe then the immersion length should be at least half of the pipe diameter (see 1 and 2). A further solution could be an angled (tilted) installation (see 3 and 4). When determining the immersion length all thermometer parameters and the process to be measured must be taken into account (e.g. flow velocity, process pressure).

- Installation possibilities: Pipes, tanks or other plant components
- Recommended minimum immersion length: 150 mm (5.91 in)

 The immersion length should correspond to at least 8 times of the thermowell diameter. Example: Thermowell diameter 24 mm (0.94 in) x 8 = 192 mm (7.56 in).
- ATEX certification: Always take note of the installation regulations!

Extension neck length

The extension neck is the part between the process connection and the terminal head. It is normally made of a tube with dimensional and physical characteristics (diameter and material) which are the same as of the tube in contact with the medium. The connection situated in the upper part of the neck allows for orientation of the terminal head. As illustrated in the following diagram, the extension neck length influences the temperature in the terminal head. This temperature must remain within the limit values defined in the "Operating conditions" section.

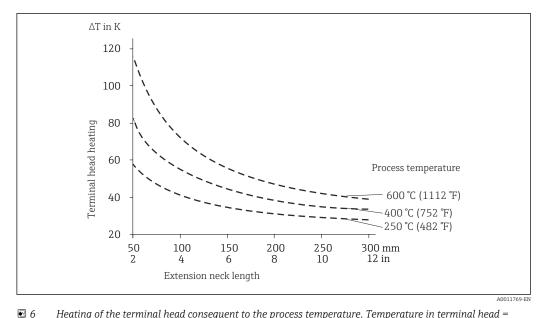

Heating of the terminal head consequent to the process temperature. Temperature in terminal head = ambient temperature 20 °C (68 °F) + ΔT

Certificates and approvals

CE Mark

The device meets the legal requirements of the EC directives if applicable. Endress+Hauser confirms that the device has been successfully tested by applying the CE mark.

Hazardous area approvals

For further details on the available Ex versions (ATEX, CSA, FM etc.), please contact your nearest Endress +Hauser sales organization. All relevant data for hazardous areas can be found in separate Ex documentation.

Other standards and quidelines

- EN 60079: ATEX certification for hazardous areas
- IEC 60529: Degree of protection of housing (IP code)
- IEC 61010-1: Protection Measures for Electrical Equipment for Measurement, Control, Regulation and Laboratory Procedures
- IEC 60751: Industrial platinum resistance thermometers
- IEC 60584 and ASTM E230/ANSI MC96.1: Thermocouples
- DIN 43772: Thermowells
- DIN EN 50446: Terminal heads
- IEC 61326-1: Electromagnetic compatibility (EMC requirements)

PED approval

The thermometer complies with paragraph 3.3 of the Pressure Equipment Directive 97/23/CE and is not marked separately.

Material certification

The material certificate 3.1 (according to EN 10204) can be requested separately. The "short form" certificate includes a simplified declaration with no enclosures of documents related to the materials used in the construction of the single sensor and guarantees the traceability of the materials through the identification number of the thermometer. The data related to the origin of the materials can subsequently be requested if necessary.

Test on thermowell

Thermowell pressure tests are carried out in accordance with the specifications in DIN 43772. With regard to thermowells with tapered or reduced tips that do not comply with this standard, these are tested using the pressure of corresponding straight thermowells. Sensors for use in hazardous areas are also always subjected to a comparative pressure during the tests. Tests according to other specifications can be carried out on request. The liquid penetration test verifies that there are no cracks in the welded seams of the thermowell.

Test report and calibration

The "Factory calibration" is carried out according to an internal procedure in a laboratory of Endress +Hauser accredited by the European Accreditation Organization (EA) according to ISO/IEC 17025. A calibration which is performed according to EA guidelines (SIT/Accredia or DKD/DAkks calibration) may be requested separately. The calibration is performed on the replaceable insert of the thermometer. In the case of thermometers without a replaceable insert, the entire thermometer - from the process connection to the tip of the thermometer - is calibrated.

Ordering information

Detailed ordering information is available from the following sources:

- In the Product Configurator on the Endress+Hauser website: www.endress.com → Select country → Instruments → Select device → Product page function: Configure this product
- From your Endress+Hauser Sales Center: www.endress.com/worldwide

1

Product Configurator - the tool for individual product configuration $% \left(1\right) =\left(1\right) \left(1\right$

- Up-to-the-minute configuration data
- Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language
- Automatic verification of exclusion criteria
- Automatic creation of the order code and its breakdown in PDF or Excel output format
- Ability to order directly in the Endress+Hauser Online Shop

Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

Communication-specific accessories

Configuration kit TXU10	Configuration kit for PC-programmable transmitter with setup software and interface cable for PC with USB port Order code: TXU10-xx
Commubox FXA195 HART	For intrinsically safe HART communication with FieldCare via the USB interface. For details, see "Technical Information" TI00404F
Commubox FXA291	Connects Endress+Hauser field devices with a CDI interface (= Endress+Hauser Common Data Interface) and the USB port of a computer or laptop. For details, see "Technical Information" TI00405C
HART Loop Converter HMX50	Is used to evaluate and convert dynamic HART process variables to analog current signals or limit values. For details, see "Technical Information" TI00429F and Operating Instructions BA00371F
Wireless HART adapter SWA70	Is used for the wireless connection of field devices. The WirelessHART adapter can be easily integrated into field devices and existing infrastructures, offers data protection and transmission safety and can be operated in parallel with other wireless networks with minimum cabling complexity. For details, see Operating Instructions BA061S
Fieldgate FXA320	Gateway for the remote monitoring of connected 4-20 mA measuring devices via a Web browser. For details, see "Technical Information" TI00025S and Operating Instructions BA00053S
Fieldgate FXA520	Gateway for the remote diagnostics and remote configuration of connected HART measuring devices via a Web browser. For details, see "Technical Information" TI00025S and Operating Instructions BA00051S
Field Xpert SFX100	Compact, flexible and robust industry handheld terminal for remote configuration and for obtaining measured values via the HART current output (4-20 mA). For details, see Operating Instructions BA00060S

Service-specific accessories

Accessories	Description
Applicator	Software for selecting and sizing Endress+Hauser measuring devices: Calculation of all the necessary data for identifying the optimum measuring device: e.g. pressure loss, accuracy or process connections. Graphic illustration of the calculation results
	Administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.
	Applicator is available: Via the Internet: https://wapps.endress.com/applicator On CD-ROM for local PC installation.

Konfigurator*temperature	Software for selecting and configuring the product depending on the measuring task, supported by graphics. Includes a comprehensive knowledge database and calculation tools: For temperature competence Quick and easy design and sizing of temperature measuring points Ideal measuring point design and sizing to suit the processes and needs of a wide range of industries The Konfigurator is available: On request from your Endress+Hauser sales office on a CD-ROM for local PC installation.
W@M	Life cycle management for your plant W@M supports you with a wide range of software applications over the entire process: from planning and procurement, to the installation, commissioning and operation of the measuring devices. All the relevant device information, such as the device status, spare parts and device-specific documentation, is available for every device over the entire life cycle. The application already contains the data of your Endress+Hauser device. Endress +Hauser also takes care of maintaining and updating the data records. W@M is available: Via the Internet: www.endress.com/lifecyclemanagement On CD-ROM for local PC installation.
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition. For details, see Operating Instructions BA00027S and BA00059S

System components

Accessories	Description
Field display unit RIA16	The display unit records the analog measuring signal from the head transmitter and shows this on the display. The LC display shows the current measured value in digital form and as a bar graph indicating a limit value violation. The display unit is looped into the 4 to 20 mA circuit and gets the required energy from there.
	For details, see the "Technical Information" document TI00144R/09/en
RN221N	Active barrier with power supply for safe separation of 4-20 mA standard signal circuits. Offers bidirectional HART transmission.
	For details, see "Technical Information" TI00073R and Operating Instructions BA00202R
RNS221	Supply unit for powering two 2-wire measuring devices solely in the non-Ex area. Bidirectional communication is possible via the HART communication jacks.
	For details, see "Technical Information" TI00081R and Brief Operating Instructions KA00110R

Documentation

Technical Information:

- iTEMP® Temperature head transmitter
- TMT180, PC-programmable, single-channel, Pt100 (TI00088R/09/en)
- PCP TMT181, PC-programmable, single-channel, RTD, TC, Ω, mV (TI00070R/09/en)
- HART® TMT182, single-channel, RTD, TC, Ω, mV (TI078R/09/en)
- HART®TMT82, two-channel, RTD, TC, Ω, mV (TI01010T/09/en)
- PROFIBUS® PA TMT84, two-channel, RTD, TC, Ω, mV (TI00138R/09/en)
- FOUNDATION Fieldbus TM TMT85, two-channel, RTD, TC, Ω , mV (TI00134R/09/en)
- Inserts:
 - Resistance thermometer insert Omniset TPR100 (TI268t/02/en)
 - Thermocouple insert Omniset TPC100 (TI278t/02/en)
 - iTHERM® TS111 Insert for installation in thermometers (TI01014T/09/en)
- Thermowell:

Thermowell for temperature sensors Omnigrad M TW15 (TI00265T/02/en)

- Application example:
 - RN221N Active barrier, for supplying loop-powered transmitters (TI073R/09/en)
 - RIA16 Field display unit, loop-powered (TI00144R/09/en)

Supplementary ATEX documentation:

- Omnigrad TRxx, Omniset TPR100, TET10x, TPC100, TEC10x ATEX II 3GD EEx nA (XA00044r/09/a3)
- RTD/TC Thermometer Omnigrad TRxx, TCxx, TxCxxx, ATEX II 1GD or II 1/2GD Ex ia IIC T6...T1 (XA00072R/09/a3)
- iTHERM® TS111, TM211 Omnigrad TST310, TSC310 Omniset TPR100, TPC100 IECEx Ex ia IIC T6...T1 (XA00100R/09/a3)



www.addresses.endress.com

