


# Operating Instructions

## Micropilot FMR51, FMR52

Level radar

Level measurement in liquids

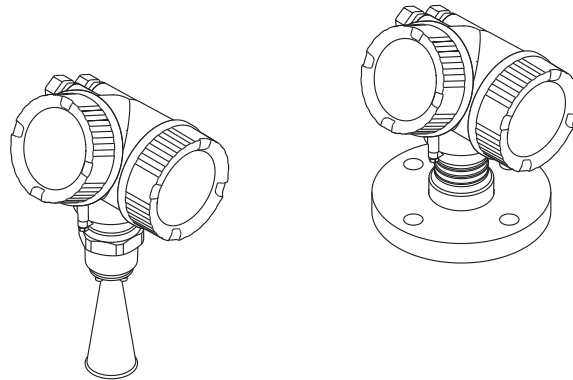



## Table of contents

<b>1</b>	<b>Important document information</b> . . . .	<b>4</b>	<b>9</b>	<b>System integration via HART protocol</b> . . . . .	<b>67</b>
1.1	Document function . . . . .	4	9.1	Overview of the Device Description files (DD) . . . . .	67
1.2	Document conventions . . . . .	4	9.2	Measured values via HART protocol . . . . .	67
1.3	Additional documentation . . . . .	6	<b>10</b>	<b>Commissioning</b> . . . . .	<b>68</b>
<b>2</b>	<b>Basic safety instructions</b> . . . . .	<b>9</b>	10.1	Installation and function check . . . . .	68
2.1	Requirements for the personnel . . . . .	9	10.2	Setting the operating language . . . . .	68
2.2	Designated use . . . . .	9	10.3	Configuration of a level measurement . . . . .	69
2.3	Workplace safety . . . . .	10	10.4	Configuration of the on-site display . . . . .	71
2.4	Operational safety . . . . .	10	10.5	Configuration of the current outputs . . . . .	71
2.5	Product safety . . . . .	10	10.6	Protection of the settings against unauthorized changes . . . . .	71
<b>3</b>	<b>Product description</b> . . . . .	<b>11</b>	<b>11</b>	<b>Diagnostics and troubleshooting</b> . . . . .	<b>72</b>
3.1	Product design . . . . .	11	11.1	General trouble shooting . . . . .	72
3.2	Registered trademarks . . . . .	12	11.2	Diagnostic information on local display . . . . .	74
<b>4</b>	<b>Incoming acceptance and product identification</b> . . . . .	<b>13</b>	11.3	Diagnostic event in the operating tool . . . . .	76
4.1	Incoming acceptance . . . . .	13	11.4	Diagnostic list . . . . .	77
4.2	Product identification . . . . .	15	11.5	Overview of diagnostic information . . . . .	77
<b>5</b>	<b>Storage, Transport</b> . . . . .	<b>17</b>	11.6	Event logbook . . . . .	79
5.1	Storage conditions . . . . .	17	11.7	Firmware-Historie . . . . .	81
5.2	Transport product to the measuring point . . . . .	17	<b>12</b>	<b>Maintenance</b> . . . . .	<b>82</b>
<b>6</b>	<b>Installation</b> . . . . .	<b>18</b>	12.1	Exterior cleaning . . . . .	82
6.1	Installation conditions . . . . .	18	12.2	Replacing seals . . . . .	82
6.2	Measuring conditions . . . . .	24	<b>13</b>	<b>Repairs</b> . . . . .	<b>83</b>
6.3	Installation in vessel (free space) . . . . .	26	13.1	General information on repairs . . . . .	83
6.4	Installation in stilling well . . . . .	30	13.2	Spare parts . . . . .	84
6.5	Installation in bypass . . . . .	33	13.3	Return . . . . .	84
6.6	Vessels with heat insulation . . . . .	36	13.4	Disposal . . . . .	84
6.7	Turning the transmitter housing . . . . .	36	<b>14</b>	<b>Accessories</b> . . . . .	<b>85</b>
6.8	Turning the display module . . . . .	37	14.1	Device-specific accessories . . . . .	85
6.9	Post-installation check . . . . .	37	14.2	Communication-specific accessories . . . . .	87
<b>7</b>	<b>Electrical connection</b> . . . . .	<b>38</b>	14.3	Service-specific accessories . . . . .	88
7.1	Connection conditions . . . . .	38	14.4	System components . . . . .	89
7.2	Connecting the measuring device . . . . .	50	<b>15</b>	<b>Overview of the operating menu</b> . . . . .	<b>90</b>
7.3	Post-connection check . . . . .	52	<b>16</b>	<b>Description of device parameters</b> . . . . .	<b>94</b>
<b>8</b>	<b>Operation options</b> . . . . .	<b>53</b>	16.1	"Setup" menu . . . . .	94
8.1	Overview . . . . .	53	16.2	The "Diagnostics" menu . . . . .	134
8.2	Structure and function of the operating menu . . . . .	55	<b>Index</b> . . . . .	<b>149</b>	
8.3	Display and operating module . . . . .	60			





# 1 Important document information

## 1.1 Document function







These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

## 1.2 Document conventions




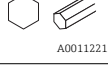

### 1.2.1 Safety symbols

Symbol	Meaning
 A0011189-EN	<b>DANGER!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
 A0011190-EN	<b>WARNING!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
 A0011191-EN	<b>CAUTION!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
 A0011192-EN	<b>NOTICE!</b> This symbol contains information on procedures and other facts which do not result in personal injury.









### 1.2.2 Electrical symbols

Symbol	Meaning
 A0011197	<b>Direct current</b> A terminal to which DC voltage is applied or through which direct current flows.
 A0011198	<b>Alternating current</b> A terminal to which alternating voltage is applied or through which alternating current flows.
 A0017381	<b>Direct current and alternating current</b> <ul style="list-style-type: none"> <li>▪ A terminal to which alternating voltage or DC voltage is applied.</li> <li>▪ A terminal through which alternating current or direct current flows.</li> </ul>
 A0011200	<b>Ground connection</b> A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
 A0011199	<b>Protective ground connection</b> A terminal which must be connected to ground prior to establishing any other connections.
 A0011201	<b>Equipotential connection</b> A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.

### 1.2.3 Tool symbols



Symbol	Meaning
 A0013442	Torx screwdriver
 A0011220	Flat blade screwdriver
 A0011219	Cross-head screwdriver
 A0011221	Allen key
 A0011222	Hexagon wrench

### 1.2.4 Symbols for certain types of information



Symbol	Meaning
 A0011182	<b>Allowed</b> Indicates procedures, processes or actions that are allowed.
 A0011183	<b>Preferred</b> Indicates procedures, processes or actions that are preferred.
 A0011184	<b>Forbidden</b> Indicates procedures, processes or actions that are forbidden.
 A0011193	<b>Tip</b> Indicates additional information.
 A0011194	<b>Reference to documentation</b> Refers to the corresponding device documentation.
 A0011195	<b>Reference to page</b> Refers to the corresponding page number.
 A0011196	<b>Reference to graphic</b> Refers to the corresponding graphic number and page number.
1, 2, 3, ...	<b>Series of steps</b>
✓	<b>Result of a sequence of actions</b>
 A0013562	<b>Help in the event of a problem</b>

### 1.2.5 Symbols in graphics

Symbol	Meaning
1, 2, 3 ...	Item numbers
1, 2, 3, ...	Series of steps
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections


Symbol	Meaning
 A0011187	<b>Hazardous area</b> Indicates a hazardous area.
 A0011188	<b>Safe area (non-hazardous area)</b> Indicates a non-hazardous location.

## 1.2.6 Symbols at the device

Symbol	Meaning
	<b>Safety instructions</b> Observe the safety instructions contained in the associated Operating Instructions.
	<b>Temperature resistance of the connection cables</b> Specifies the minimum value of the temperature resistance of the connection cables.

## 1.3 Additional documentation

Document	Purpose and content of the document
Technical Information TI01040F (FMR51, FMR52)	<b>Planning aid for your device</b> The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions KA01100F (FMR51/FMR52, HART)	<b>Guide that takes you quickly to the 1st measured value</b> The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Description of Device Parameters GP01014F (FMR5x, HART)	<b>Reference for your parameters</b> The document provides a detailed explanation of each individual parameter in the operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

-  The document types listed are available:
- On the CD supplied with the device
  - In the Download Area of the Endress+Hauser Internet site: [www.endress.com](http://www.endress.com) → Download

### 1.3.1 Safety Instructions (XA)

Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.

Feature 010	Approval	Available for	Safety Instructions HART	Safety Instructions PROFIBUS FOUNDATION Fieldbus
BA	ATEX: II 1 G Ex ia IIC T6 Ga	<ul style="list-style-type: none"> <li>▪ FMR51</li> <li>▪ FMR52</li> </ul>	XA00677F	XA00685F
BB	ATEX: II 1/2 G Ex ia IIC T6-T1 Ga/Gb	<ul style="list-style-type: none"> <li>▪ FMR51</li> <li>▪ FMR52</li> </ul>	XA00677F	XA00685F
BC	ATEX: II 1/2 G Ex d [ia] IIC T6-T1 Ga/Gb	<ul style="list-style-type: none"> <li>▪ FMR51</li> <li>▪ FMR52</li> </ul>	XA00680F	XA00688F
BD	ATEX: II 1/2/3 G Ex ic [ia Ga] IIC T6-T1 Ga/Gb/Gc	<ul style="list-style-type: none"> <li>▪ FMR51</li> <li>▪ FMR52</li> </ul>	XA00678F	XA00686F
BG	ATEX: II 3 G Ex nA IIC T6-T1 Gc	<ul style="list-style-type: none"> <li>▪ FMR51</li> <li>▪ FMR52</li> </ul>	XA00679F	XA00687F

Feature 010	Approval	Available for	Safety Instructions HART	Safety Instructions PROFIBUS FOUNDATION Fieldbus
BH	ATEX: II 3 G Ex ic IIC T6-T1 Gc	<ul style="list-style-type: none"> <li>■ FMR51</li> <li>■ FMR52</li> </ul>	XA00679F	XA00687F
BL	ATEX: II 1/2/3 G Ex nA [ia Ga] IIC T6-T1 Ga/Gb/Gc	<ul style="list-style-type: none"> <li>■ FMR51</li> <li>■ FMR52</li> </ul>	XA00678F	XA00686F
B2	ATEX: II 1/2 G Ex ia IIC T6-T1 Ga/Gb ATEX: II 1/2 D Ex ia IIIC Txx°C Da/Db	<ul style="list-style-type: none"> <li>■ FMR51</li> <li>■ FMR52</li> </ul>	XA00683F	XA00691F
B3	ATEX: II 1/2 G Ex d [ia] IIC T6-T1 Ga/Gb ATEX: II 1/2 D Ex ta IIIC Txx°C Da/Db	<ul style="list-style-type: none"> <li>■ FMR51</li> <li>■ FMR52</li> </ul>	XA00684F	XA00692F
B4	ATEX: II 1/2 G Ex ia IIC T6-T1 Ga/Gb ATEX: II 1/2 G Ex d [ia] IIC T6-T1 Ga/Gb	<ul style="list-style-type: none"> <li>■ FMR51</li> <li>■ FMR52</li> </ul>	XA00681F	XA00689F
IA	IECEX: Ex ia IIC T6-T1 Ga	<ul style="list-style-type: none"> <li>■ FMR51</li> <li>■ FMR52</li> </ul>	XA00677F	XA00685F
IB	IECEX: Ex ia IIC T6-T1 Ga/Gb	<ul style="list-style-type: none"> <li>■ FMR51</li> <li>■ FMR52</li> </ul>	XA00677F	XA00685F
IC	IECEX: Ex d [ia] IIC T6-T1 Ga/Gb	<ul style="list-style-type: none"> <li>■ FMR51</li> <li>■ FMR52</li> </ul>	XA00680F	XA00688F
ID	IECEX: Ex ic [ia Ga] IIC T6-T1 Ga/Gb/Gc	<ul style="list-style-type: none"> <li>■ FMR51</li> <li>■ FMR52</li> </ul>	XA00678F	XA00686F
IG	IECEX: Ex nA IIC T6-T1 Gc	<ul style="list-style-type: none"> <li>■ FMR51</li> <li>■ FMR52</li> </ul>	XA00679F	XA00687F
IH	IECEX: Ex ic IIC T6-T1 Gc	<ul style="list-style-type: none"> <li>■ FMR51</li> <li>■ FMR52</li> </ul>	XA00679F	XA00687F
IL	IECEX: Ex nA [ia Ga] IIC T6-T1 Ga/Gb/Gc	<ul style="list-style-type: none"> <li>■ FMR51</li> <li>■ FMR52</li> </ul>	XA00678F	XA00686F
I2	IECEX: Ex ia IIC T6-T1 Ga/Gb IECEX: Ex ia IIIC Txx°C Da/Db	<ul style="list-style-type: none"> <li>■ FMR51</li> <li>■ FMR52</li> </ul>	XA00683F	XA00691F
I3	IECEX: Ex d [ia] IIC T6-T1 Ga/Gb IECEX: Ex ta IIIC Txx°C Da/Db	<ul style="list-style-type: none"> <li>■ FMR51</li> <li>■ FMR52</li> </ul>	XA00684F	XA00692F
I4	IECEX: Ex ia IIC T6-T1 Ga/Gb IECEX: Ex d [ia] IIC T6-T1 Ga/Gb	<ul style="list-style-type: none"> <li>■ FMR51</li> <li>■ FMR52</li> </ul>	XA00681F	XA00689F

 For certified devices the relevant Safety Instructions (XA) are indicated on the nameplate.

If the device is prepared for the remote display FHX50 (product structure: feature 030: Display, Operation", option L or M), the Ex marking of some certificates changes according to the following table<sup>1)</sup>:

Feature 010 ("Approval")	Feature 030 ("Display, Operation")	Ex marking
BE	L oder M	ATEX II 1D Ex ta [ia] IIIC T <sub>500</sub> xx°C Da
BF	L oder M	ATEX II 1/2 D Ex ta [ia Db] IIIC Txx°C Da/Db
BG	L oder M	ATEX II 3G Ex nA [ia Ga] IIC T6 Gc
BH	L oder M	ATEX II 3G Ex ic [ia Ga] IIC T6 Gc
B3	L oder M	ATEX II 1/2G Ex d [ia] IIC T6 Ga/Gb, ATEX II 1/2D Ex ta [ia Db] IIIC Txx°C Da/Db
IE	L oder M	IECEX Ex ta [ia] IIIC T500 xx°C Da
IF	L oder M	IECEX ta [ia Db] IIIC Txx°C Da/Db
IG	L oder M	IECEX Ex nA [ia Ga] IIC T6 Gc

1) The marking of certificates not mentioned in this table are not affected by the FHX50.

Feature 010 ("Approval")	Feature 030 ("Display, Operation")	Ex marking
IH	L oder M	IECEx Ex ic  ia Ga  IIC T6 Gc
I3	L oder M	IECEx Ex d  ia  IIC T6 Ga/Gb, IECEx Ex ta  ia Db  IIIC Txx°C Da/Db



## 2 Basic safety instructions

### 2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task
- ▶ Are authorized by the plant owner/operator
- ▶ Are familiar with federal/national regulations
- ▶ Before beginning work, the specialist staff must have read and understood the instructions in the Operating Instructions and supplementary documentation as well as in the certificates (depending on the application)
- ▶ Following instructions and basic conditions

The operating personnel must fulfill the following requirements:

- ▶ Being instructed and authorized according to the requirements of the task by the facility's owner-operator
- ▶ Following the instructions in these Operating Instructions

### 2.2 Designated use

#### Application and measured materials

The measuring device described in these Operating Instructions is intended for the continuous, contactless level measurement of liquids, pastes and sludge. The device can also be freely mounted outside closed metal vessels because of its operating frequency of about 26 GHz, a maximum radiated pulsed power of 5.7 mW and an average power output of 0.015 mW (for the version with advanced dynamics: maximum pulse power: 23.3 mW; average power: 0.076 mW). Operation is completely harmless to humans and animals.

Observing the limit values specified in the "Technical data" and listed in the Operating Instructions and supplementary documentation, the measuring device may be used for the following measurements only:

- ▶ Measured process variables: level, distance, signal strength
- ▶ Calculated process variables: Volume or mass in arbitrarily shaped vessels; flow through measuring weirs or flumes (calculated from the level by the linearization functionality)

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Use the measuring device only for measured materials against which the process-wetted materials are adequately resistant.
- ▶ Observe the limit values in "Technical data".

#### Incorrect use

The manufacturer is not liable for damage caused by improper or non-designated use.

Verification for borderline cases:

- ▶ For special measured materials and cleaning agents, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of wetted materials, but does not accept any warranty or liability.

#### Residual risk

The electronics housing and its built-in components such as display module, main electronics module and I/O electronics module may heat to 80 °C (176 °F) during operation through heat transfer from the process as well as power dissipation within the electronics. During operation the sensor may assume a temperature near the temperature of the measured material.

Danger of burns due to heated surfaces!

- ▶ For high process temperatures: Install protection against contact in order to prevent burns.

## 2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

## 2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

### Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with the manufacturer.

### Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from the manufacturer only.

### Hazardous area

To eliminate a danger for persons or for the facility when the device is used in the hazardous area (e.g. explosion protection, pressure vessel safety):

- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area.
- ▶ Observe the specifications in the separate supplementary documentation that is an integral part of these Instructions.

## 2.5 Product safety


This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which they are safe to operate.

It meets general safety standards and legal requirements. It also complies with the EC directives listed in the device-specific EC Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

### 3 Product description

#### 3.1 Product design

##### 3.1.1 Micropilot FMR51

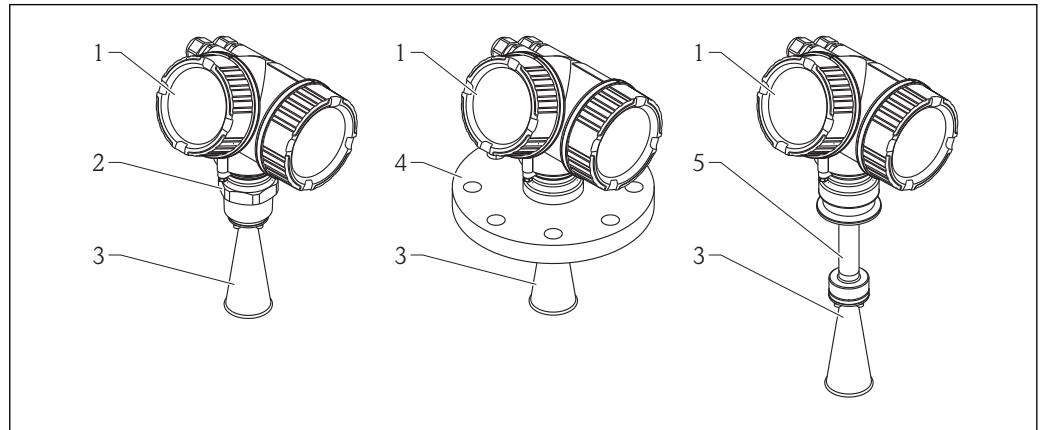


A0016818

1 Design of the Micropilot FMR51 (26 GHz)

- 1 Electronics housing
- 2 Process connection (Thread)
- 3 Horn antenna
- 4 Flange
- 5 Antenna extension

##### 3.1.2 Micropilot FMR52

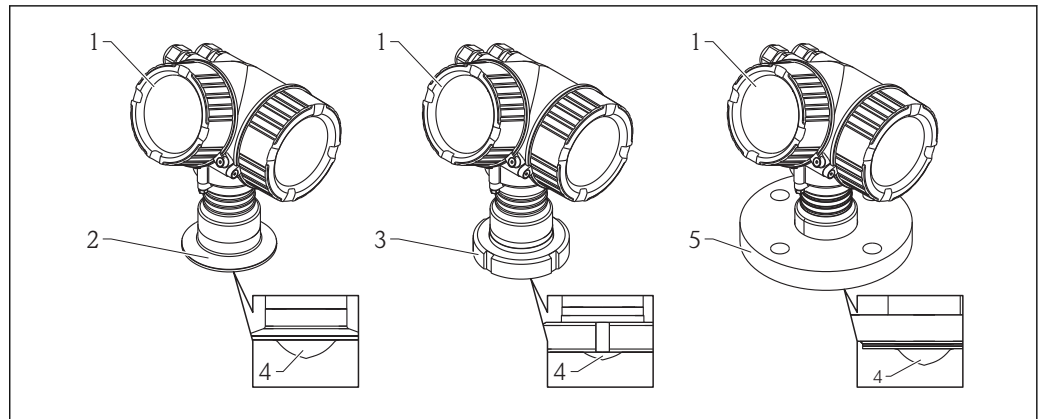


A0016788

2 Design of the Micropilot FMR52 (26 GHz)

- 1 Electronics housing
- 2 Tri-Clamp process connection
- 3 Dairy coupling
- 4 PTFE cladding
- 5 Flange

### 3.1.3 Electronics housing

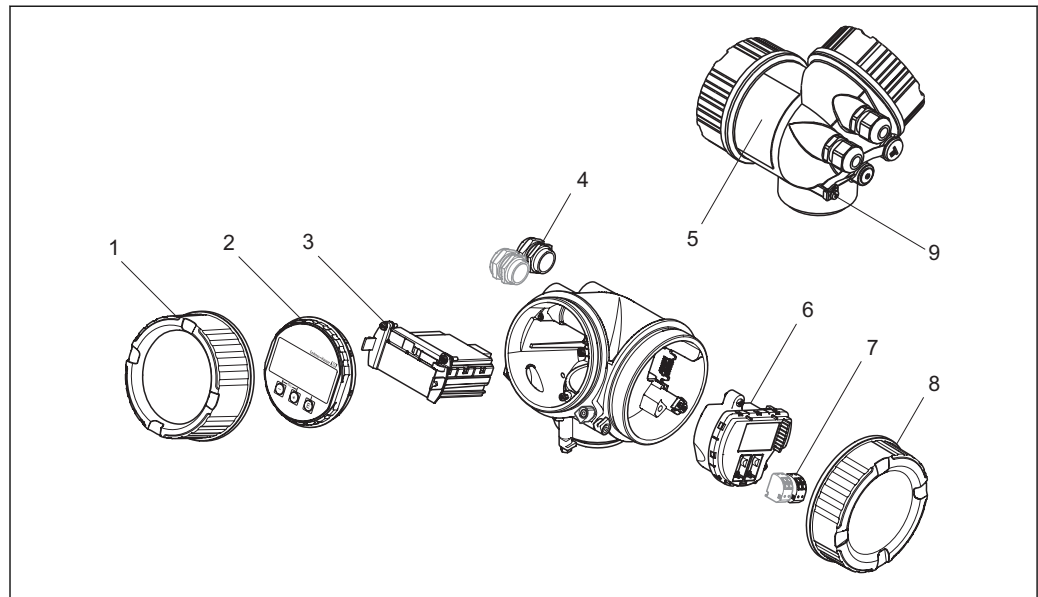

A0012422

3 Design of the electronics housing

- 1 Electronics compartment cover
- 2 Display module
- 3 Main electronics module
- 4 Cable glands (1 or 2, depending on instrument version)
- 5 Nameplate
- 6 I/O electronics module
- 7 Terminals (pluggable spring terminals)
- 8 Connection compartment cover
- 9 Grounding terminal

## 3.2 Registered trademarks

### **HART®**

Registered trademark of the HART Communication Foundation, Austin, USA

### **KALREZ®, VITON®**

Registered trademark of DuPont Performance Elastomers L.L.C., Wilmington, USA

### **TEFLON®**


Registered trademark of E.I. DuPont de Nemours & Co., Wilmington, USA

### **TRI CLAMP®**



Registered trademark of Alfa Laval Inc., Kenosha, USA

# 4 Incoming acceptance and product identification


## 4.1 Incoming acceptance

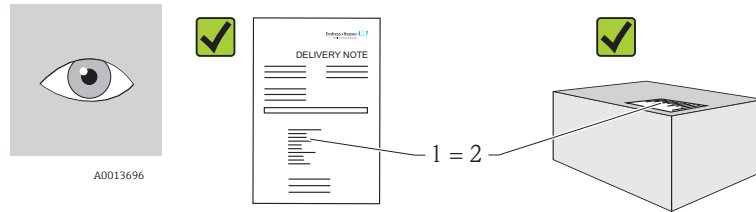


Is the order code on the delivery note (1) identical to the order code on the product sticker (2)?

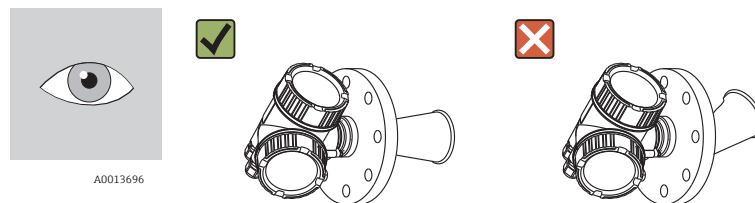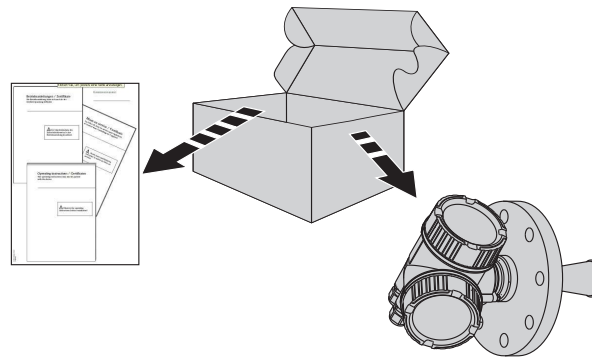


Are the goods undamaged?

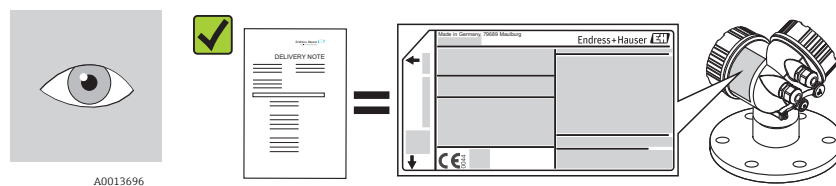

Do the nameplate data match the ordering information on the delivery note?

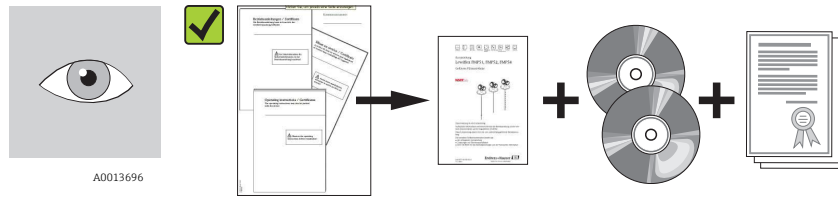

Are the CD-ROMs (product documentation, operating tool) and documentation present?  
 If required (see nameplate): Are the Safety Instructions (XA) present?

 If one of the conditions does not comply, contact your Endress+Hauser distributor.


## 4.2 Product identification

The following options are available for identification of the measuring device:

- Nameplate specifications
- Extended order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): All information about the measuring device is displayed.


For an overview of the scope of the Technical Documentation provided, refer to the following: enter serial numbers from nameplates in *W@M Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer))

### 4.2.1 Nameplate

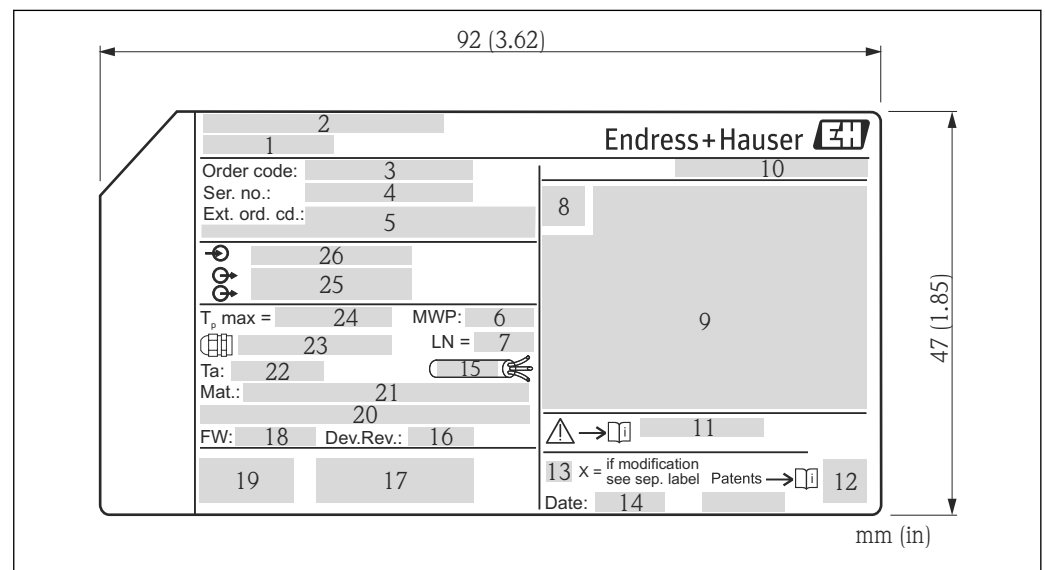

4 Nameplate of the Micropilot

- 1 Device name
- 2 Address of manufacturer
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Process pressure
- 7 Antenna length (only for FMR51 with antenna extension)
- 8 Certificate symbol
- 9 Certificate and approval relevant data
- 10 Degree of protection: e.g. IP, NEMA
- 11 Document number of the Safety Instructions: e.g. XA, ZD, ZE
- 12 Data Matrix Code
- 13 Modification mark
- 14 Manufacturing date: year-month
- 15 Temperature resistance of the cable
- 16 Geräterevision (Dev.Rev.)
- 17 Additional information about the device version (certificates, approvals, communication): e.g. SIL, PROFIBUS
- 18 Firmware version (FW)
- 19 CE mark, C-Tick
- 20 Profibus PA: Profil-Version; FOUNDATION Fieldbus: Device ID
- 21 Material in contact with process
- 22 Permitted ambient temperature ( $T_a$ )
- 23 Size of the thread of the cable glands
- 24 Maximum process temperature
- 25 Signal outputs
- 26 Operating voltage

-  Only 33 digits of the extended order code can be indicated on the nameplate. If the extended order code exceeds 33 digits, the rest will not be shown. However, the complete extended order code can be viewed in the operating menu of the device (Diagnostics → Device info → Extended order code 1/2/3).



## 5 Storage, Transport

### 5.1 Storage conditions

- Permitted storage temperature: -40 to +80 °C (-40 to +176 °F)
- Use the original packaging.


### 5.2 Transport product to the measuring point

#### NOTICE

**Housing or antenna horn may be damaged or break away.**

Risk of injury!

- ▶ Transport the measuring device to the measuring point in its original packaging or at the process connection.
- ▶ Do not fasten lifting devices (hoisting slings, lifting eyes etc.) at the housing or the antenna horn but at the process connection. Take into account the mass center of the device in order to avoid unintended tilting.
- ▶ Comply with the safety instructions, transport conditions for devices over 18kg (39.6lbs).

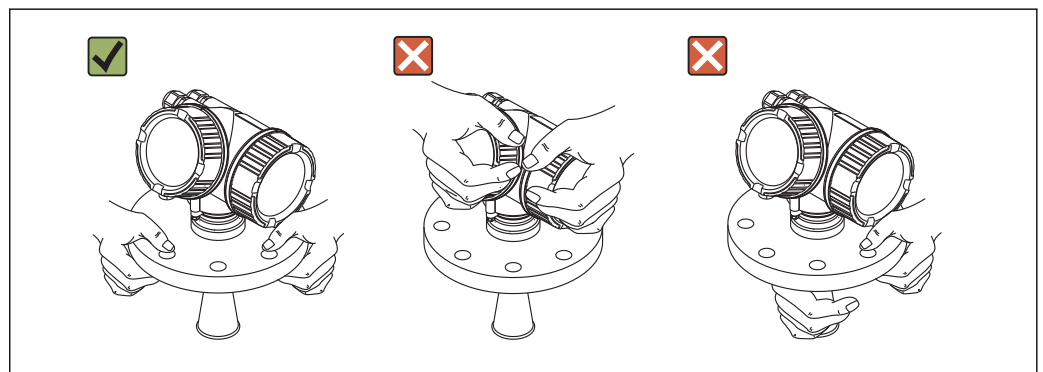


A0016875

## 6 Installation


### 6.1 Installation conditions

#### 6.1.1 Mounting position

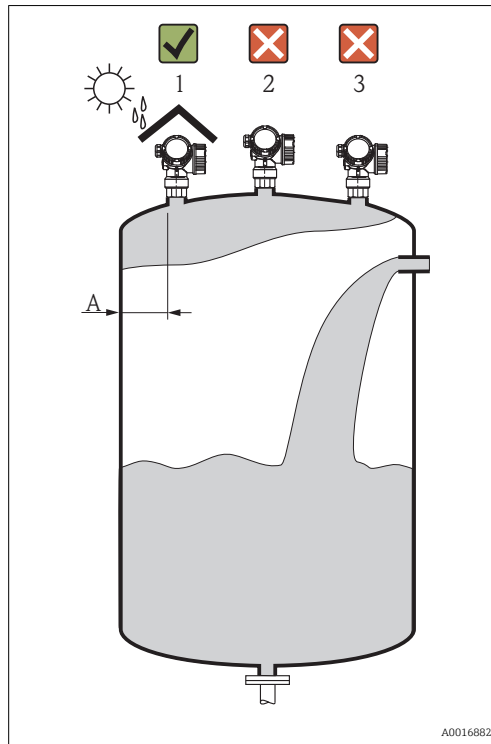


- Recommended distance **A** from wall to outer edge of nozzle:  $\sim 1/6$  of tank diameter. Nevertheless the device should not be installed closer than 15 cm (5.91 in) to the tank wall.
- Not in the center (2), as interference can cause signal loss.
- Not above the fill stream (3).
- It is recommended to use a weather protection cover (1) in order to protect the device from direct sun or rain.

## 6.1.2 Vessel installations

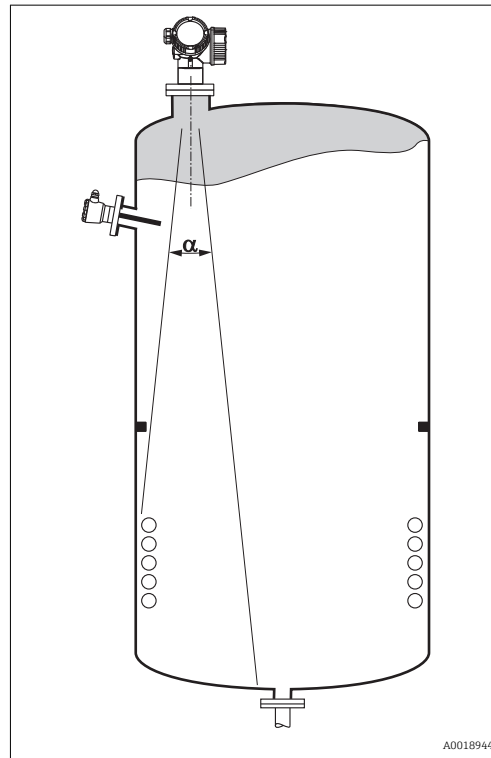

Avoid any installations (limit switches, temperature sensors, braces, vacuum rings, heating coils, baffles etc.) inside the signal beam. Take into account the beam angle ( $\rightarrow$  22).


### 6.1.3 Reduction of interference echoes

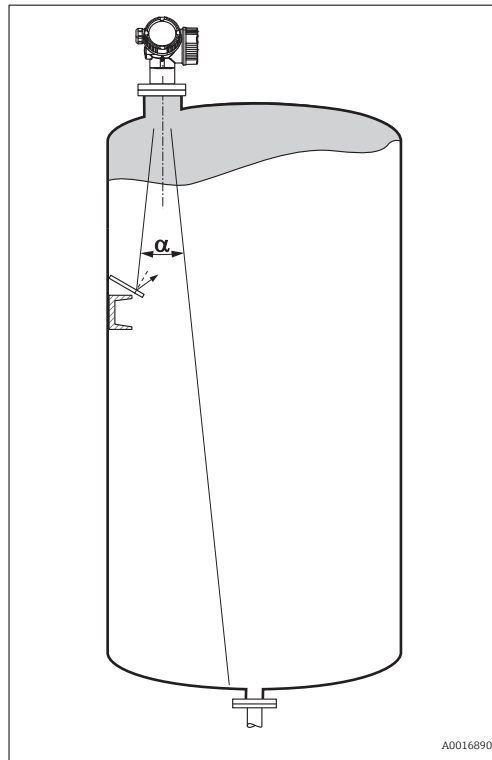






Metallic screens mounted at a slope spread the radar signal and can, therefore, reduce interference echoes.

### 6.1.4 Measurement in a plastic vessel

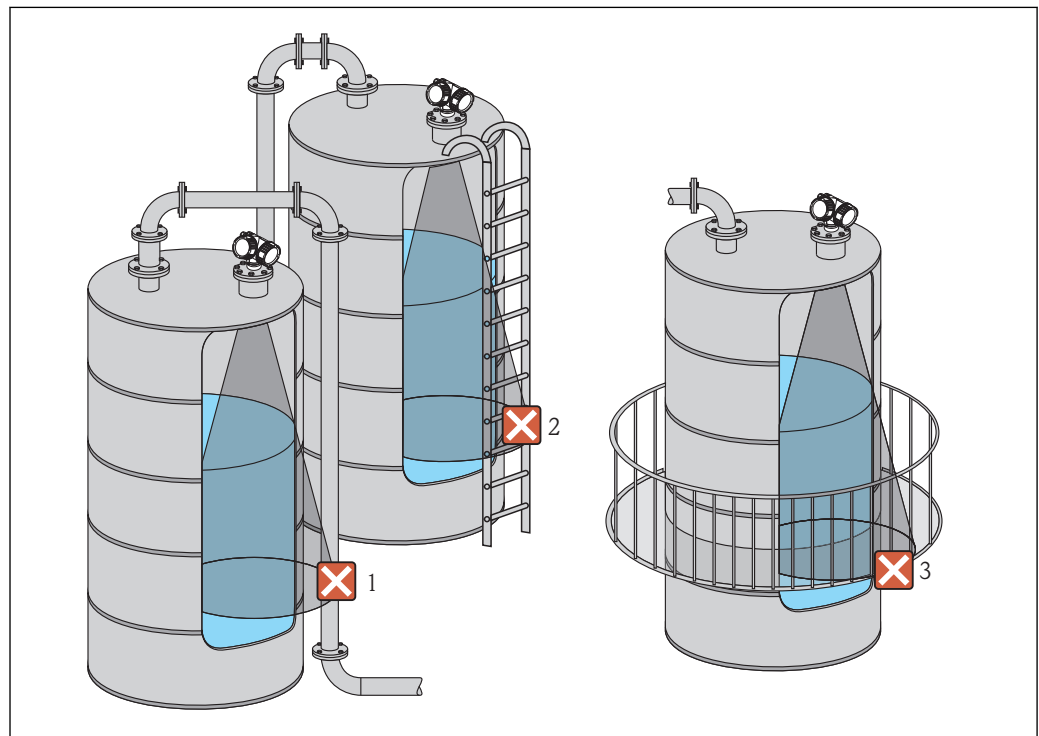
If the outer wall of the vessel is made of a non-conductive material (e.g. GRP), microwaves can also be reflected off interfering installations outside the signal beam (e.g. metallic pipes (1), ladders (2), grates (3), ...). Therefore, there should be no such interfering installations in the signal beam. Please contact Endress+Hauser for further information.



### 6.1.5 Optimization options

- Antenna size  
The bigger the antenna, the smaller the beam angle  $\alpha$  and the fewer interference echoes (→  22).
- Mapping  
The measurement can be optimized by means of electronic suppression of interference echoes.  
See the **Confirm distance** parameter (→  69).
- Antenna alignment  
Take into account the marker on the flange or threaded connection (→  26) (→  28).
- Stilling well  
A stilling well can be applied to avoid interferences (→  30).
- Metallic screens mounted at a slope  
They spread the radar signals and can, therefore, reduce interference echoes.

### 6.1.6 Beam angle

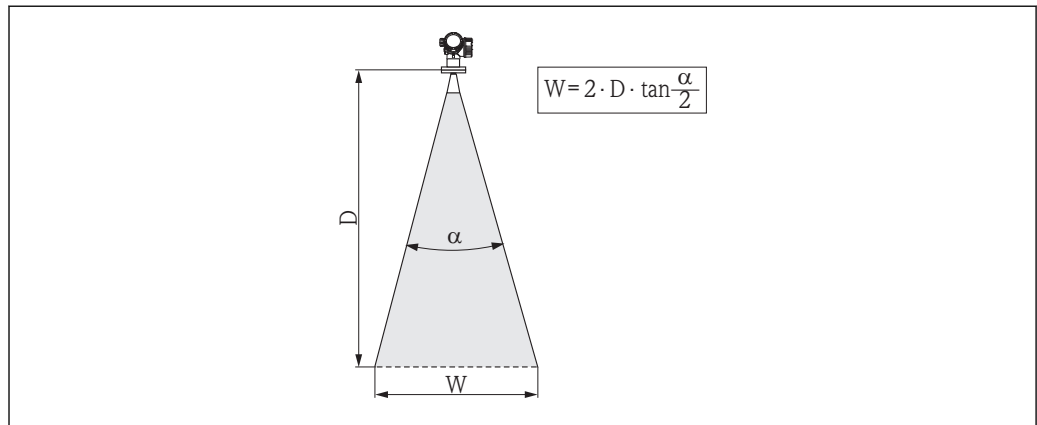

A0016891

5 Relationship between beam angle  $\alpha$ , distance  $D$  and beamwidth diameter  $W$

The beam angle is defined as the angle  $\alpha$  where the energy density of the radar waves reaches half the value of the maximum energy density (3-dB-width). Microwaves are also emitted outside the signal beam and can be reflected off interfering installations.

Beam diameter  $W$  as a function of beam angle  $\alpha$  and measuring distance  $D$ :

FMR51				
Antenna size	40 mm (1½ in)	50 mm (2 in)	80 mm (3 in)	100 mm (4 in)
Beam angle $\alpha$	23°	18°	10°	8°
Measuring distance (D)	Beamwidth diameter W			
3 m (9.8 ft)	1.22 m (4 ft)	0.95 m (3.1 ft)	0.53 m (1.7 ft)	0.42 m (1.4 ft)
6 m (20 ft)	2.44 m (8 ft)	1.9 m (6.2 ft)	1.05 m (3.4 ft)	0.84 m (2.8 ft)
9 m (30 ft)	3.66 m (12 ft)	2.85 m (9.4 ft)	1.58 m (5.2 ft)	1.26 m (4.1 ft)
12 m (39 ft)	4.88 m (16 ft)	3.80 m (12 ft)	2.1 m (6.9 ft)	1.68 m (5.5 ft)
15 m (49 ft)	6.1 m (20 ft)	4.75 m (16 ft)	2.63 m (8.6 ft)	2.10 m (6.9 ft)
20 m (66 ft)	8.14 m (27 ft)	6.34 m (21 ft)	3.50 m (11 ft)	2.80 m (9.2 ft)
25 m (82 ft)	10.17 m (33 ft)	7.92 m (26 ft)	4.37 m (14 ft)	3.50 m (11 ft)
30 m (98 ft)	-	9.50 m (31 ft)	5.25 m (17 ft)	4.20 m (14 ft)
35 m (115 ft)	-	11.09 m (36 ft)	6.12 m (20 ft)	4.89 m (16 ft)
40 m (131 ft)	-	12.67 m (42 ft)	7.00 m (23 ft)	5.59 m (18 ft)
45 m (148 ft)	-	-	7.87 m (26 ft)	6.29 m (21 ft)
60 m (197 ft)	-	-	10.50 m (34 ft)	8.39 m (28 ft)
70 m (230 ft)	-	-	-	9.79 m (32 ft)

FMR52		
Antenna size	50 mm (2 in)	80 mm (3 in)
Beam angle $\alpha$	18°	10°
Measuring distance (D)	Beamwidth diameter W	
3 m (9.8 ft)	0.95 m (3.1 ft)	0.53 m (1.7 ft)
6 m (20 ft)	1.9 m (6.2 ft)	1.05 m (3.4 ft)

9 m (30 ft)	2.85 m (9.4 ft)	1.58 m (5.2 ft)
12 m (39 ft)	3.80 m (12 ft)	2.1 m (6.9 ft)
15 m (49 ft)	4.75 m (16 ft)	2.63 m (8.6 ft)
20 m (66 ft)	6.34 m (21 ft)	3.50 m (11 ft)
25 m (82 ft)	7.92 m (26 ft)	4.37 m (14 ft)
30 m (98 ft)	9.50 m (31 ft)	5.25 m (17 ft)
35 m (115 ft)	11.09 m (36 ft)	6.12 m (20 ft)
40 m (131 ft)	12.67 m (42 ft)	7.00 m (23 ft)
45 m (148 ft)	-	7.87 m (26 ft)
60 m (197 ft)	-	10.50 m (34 ft)

## 6.2 Measuring conditions


- In case of **boiling surfaces, bubbling** or tendency for **foaming** use FMR53 or FMR54. Depending on its consistence, foam can either absorb microwaves or reflect them off the foam surface. Measurement is possible under certain conditions. For FMR50, FMR51 and FMR52, the additional option "Advanced dynamics" is recommended in these cases (feature 540: "Application Package", option EM).
- In case of heavy **steam development** or **condensate**, the maximum measuring range of FMR50, FMR51 and FMR52 may decrease depending on density, temperature and composition of the steam → use FMR53 or FMR54.
- For the measurement of absorbing gases such as **ammonia NH<sub>3</sub>** or some **fluorocarbons**<sup>2)</sup>, please use Levelflex or Micropilot FMR54 in a stilling well.
- The measuring range begins, where the beam hits the tank bottom. Particularly with dish bottoms or conical outlets the level cannot be detected below this point.
- For stilling well applications, the zero should be positioned at the end of the tube, as the electromagnetic waves do not propagate completely outside the tube. It must be taken into account that the accuracy may be reduced in the area **C**. In order to guarantee the required accuracy in these cases, it is recommended to position the zero-point at a distance **C** above the end of the tube (see figure).
- In case of media with a low dielectric constant ( $\epsilon_r = 1.5$  to  $4$ )<sup>3)</sup> the tank bottom can be visible through the medium at low levels (low height **C**). Reduced accuracy has to be expected in this range. If this is not acceptable, we recommend positioning the zero point at a distance **C** (see figure) above the tank bottom in these applications.
- In principle it is possible to measure up to the tip of the antenna with FMR51, FMR53 and FMR54. However, due to considerations regarding corrosion and build-up, the end of the measuring range should not be chosen any closer than **A** (see figure) to the tip of the antenna.
- When using FMR54 with planar antenna, especially for media with low dielectric constants, the end of the measuring range should not be closer than 1 m (3.28 ft) to the flange.
- The smallest possible measuring range **B** depends on the antenna version (see figure).
- The tank height should be at least **H** (see table).

---

2) Affected compounds are e.g. R134a, R227, Dymel 152a.

3) Dielectric constants of important media commonly used in the industry are summarized in the document SD106F, which can be downloaded from the Endress+Hauser web page ([www.endress.com](http://www.endress.com)).



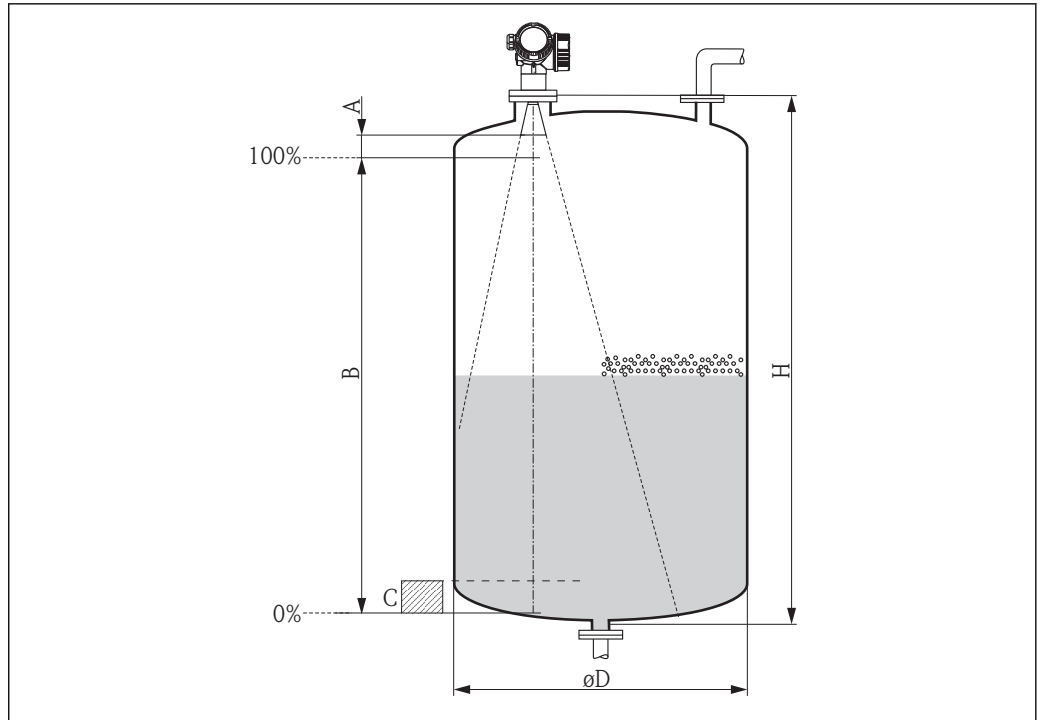

A0018872


Device	A [mm (in)]	B [m (ft)]	C [mm (in)]	H [m (ft)]
FMR51	50(1.97)	> 0.2 (0.7)	50 to 250 (1.97 to 9.84)	> 0.3 (1.0)
FMR52	200(7.87)			

## 6.3 Installation in vessel (free space)

### 6.3.1 Horn antenna (FMR51)

#### Alignment


- Align the antenna vertically to the product surface.  
The maximum range may be reduced if the horn antenna is not vertically aligned.
- A marking at the flange (somewhere between the flange holes) or the boss enables alignment of the antenna. This marking must be aligned towards the tank wall as well as possible.

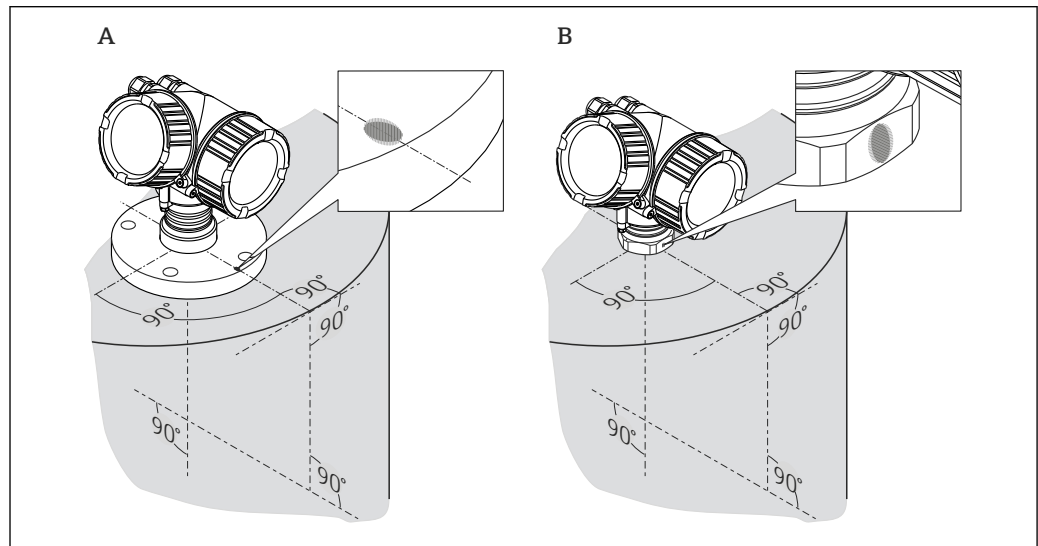

A0018974

#### Nozzle mounting

The horn antenna should extend below the nozzle. Select version with antenna extension up to 500 mm (19.7 in), if necessary<sup>4)</sup>. Nozzle heights up to 500 mm (19.7 in) can be accepted if this should not be possible due to mechanical reasons.

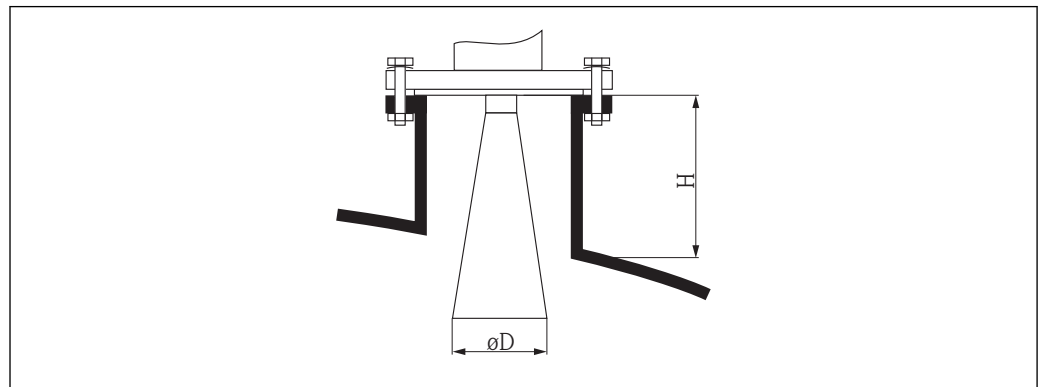


A0016820

6 Nozzle height and diameter for horn antenna (FMR51)

4) In the product structure: feature 610 "Accessory mounted", options OM, OU, OV.

<b>Antenna size</b>	40 mm (1½ in)	50 mm (2 in)	80 mm (3 in)	100 mm (4 in)
<b>D</b>	40 mm (1.57 in)	48 mm (1.89 in)	75 mm (2.95 in)	95 mm (3.74 in)
<b>H</b>	< 85 mm (3.35 in)	< 115 mm (4.53 in)	< 210 mm (8.27 in)	< 280 mm (11.0 in)

 Please contact Endress+Hauser for applications with higher nozzle.

### Threaded connection

- Tighten with the hexagonal nut only.
- Tool : Hexagonal wrench 55 mm
- Maximum permissible torque: 60 Nm (44 lbf ft)

### Mesurement from the outside through plastic walls

- If possible, use an antenna 100 mm (4 in).
- The distance from the lower edge of the antenna to the tank ceiling should be about 100 mm (4 in).
- If possible, avoid mounting locations where condensation or build-up might occur.
- In case of outdoor mounting, the space between antenna and vessel has to be protected from the elements.
- Do not mount any potential reflectors (e.g. pipes) outside the tank in the signal beam.

*Suitable thickness of the tank ceiling:*


Penetrated material	PE	PTFE	PP	Perspex
DK / $\epsilon_r$	2.3	2.1	2.3	3.1
Optimum thickness <sup>1)</sup>	3.8 mm (0.15 in)	4.0 mm (0.16 in)	3.8 mm (0.15 in)	3.3 mm (0.13 in)

- 1) Other possible values for the thickness are multiples of the values listed (e.g. for PE: 7,6 mm (0.3 in), 11,4 mm (0.45 in))

### 6.3.2 Horn antenna, flush mount (FMR52)


#### Alignment

- Align the antenna vertically to the product surface.  
The maximum range may be reduced if the horn antenna is not vertically aligned.
- A marking at the flange (somewhere between the flange holes) or the boss enables alignment of the antenna. This marking must be aligned towards the tank wall as well as possible.

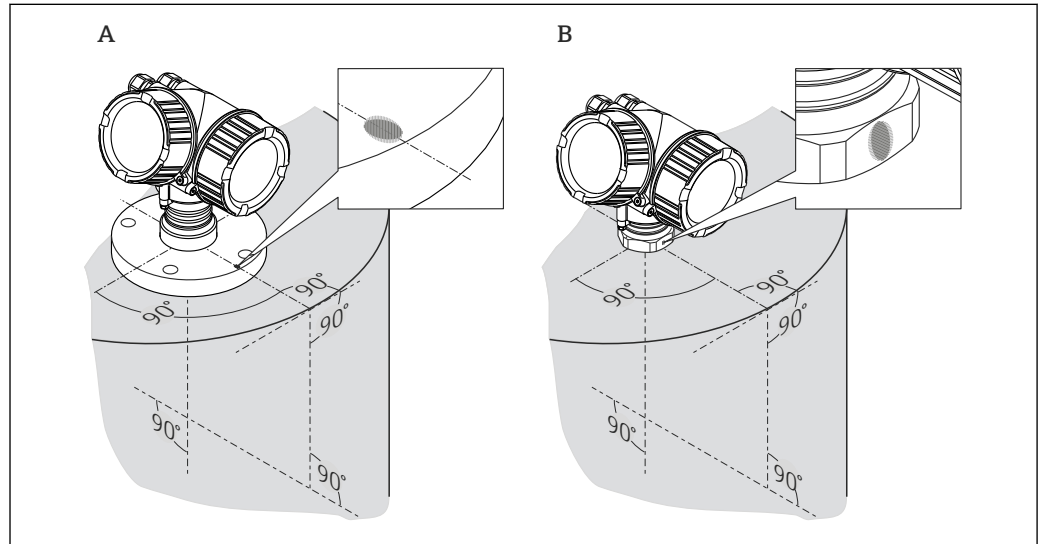

A0018974

#### Nozzle mounting

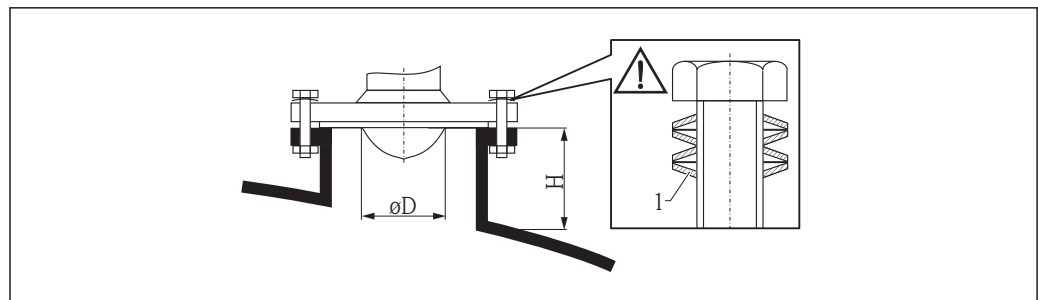

A0016819



7 Nozzle height an diameter for horn antenna, flush mount (FMR52)

1 Spring washers


Antenna size	50 mm (2 in)	80 mm (3 in)
D	44 mm (1.73 in)	75 mm (2.95 in)
H	< 500 mm (19.7 in)	< 500 mm (19.7 in)

**i** Please contact Endress+Hauser for applications with higher nozzle.

**i** For flanges with PTFE cladding: Use spring washers (see figure) to compensate for the sagging of the cladding.  
It is recommended to tighten the the flange bolts periodically, depending on process temperature and pressure.  
Recommended torque: 60 to 100 Nm (44.25 to 73.75 lbf ft)

-  The thickness of the PTFE flange cladding is 4 mm (0.16 in). This corresponds to the maximum adjustment distance of the spring washers.
-  Usually, the PTFE flange cladding also serves as a seal between the nozzle and the device flange.

## 6.4 Installation in stilling well

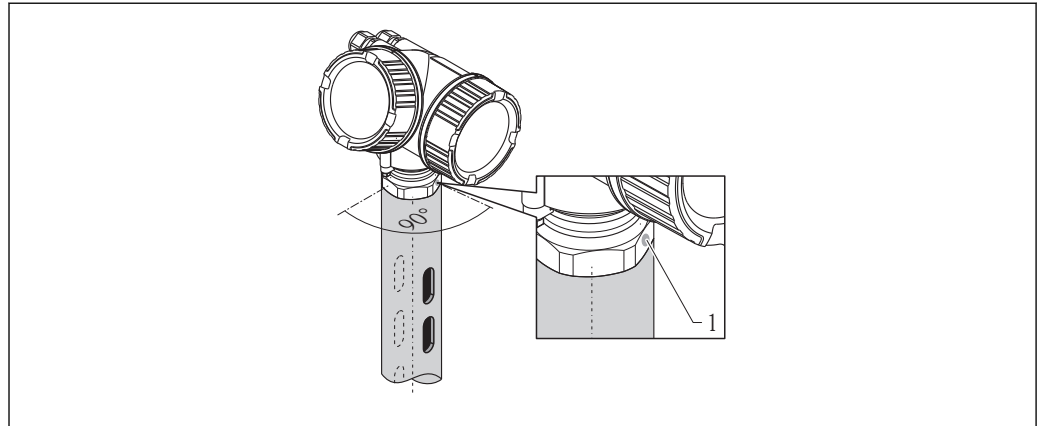


A0016841

8 Installation in stilling well


1 Marking for antenna alignment

- For horn antenna: Align the marking towards the slots of the stilling well.
- Measurements can be performed through an open full bore ball valve without any problems.
- After mounting, the housing can be turned 350° in order to simplify access to the display and the terminal compartment (→ 36).

### 6.4.1 Recommendations for the stilling well

- Metal (no enamel coating; plastic on request).
  - Constant diameter.
  - Diameter of stilling well not larger than antenna diameter.
  - Diameter difference between horn antenna and inner diameter of the stilling well as small as possible.
  - Weld seam as smooth as possible and on the same axis as the slots.
  - Slots offset 180° (not 90°).
  - Slot width or diameter of holes max. 1/10 of pipe diameter, de-burred. Length and number do not have any influence on the measurement.
  - Select horn antenna as big as possible. For intermediate sizes (e.g. 180 mm (7 in)) select next larger antenna and adapt it mechanically (for horn antennas)
  - At any transition (i.e. when using a ball valve or mending pipe segments), no gap may be created exceeding 1 mm (0.04 in).
  - The stilling well must be smooth on the inside (average roughness  $R_z \leq 6.3 \mu\text{m}$  (248  $\mu\text{in}$ )). Use extruded or parallel welded stainless steel pipe. An extension of the pipe is possible with welded flanges or pipe sleeves. Flange and pipe have to be properly aligned at the inside.
  - Do not weld through the pipe wall. The inside of the stilling well must remain smooth. In case of unintentional welding through the pipe, the weld seam and any unevenness on the inside need to be carefully removed and smoothed. Otherwise, strong interference echoes will be generated and material build-up will be promoted.
  - Particularly on smaller nominal widths it needs to be observed that flanges are welded to the pipe such that they allow for a correct orientation (marker aligned toward slots).
-  The performance of Micropilot FMR54 with planar antenna is not dependent on the alignment or geometry of standard stilling wells. No special alignment is required. However, make sure that the planar antenna is installed vertically relative to the stilling well axis.

### 6.4.2 Examples for the construction of stilling wells

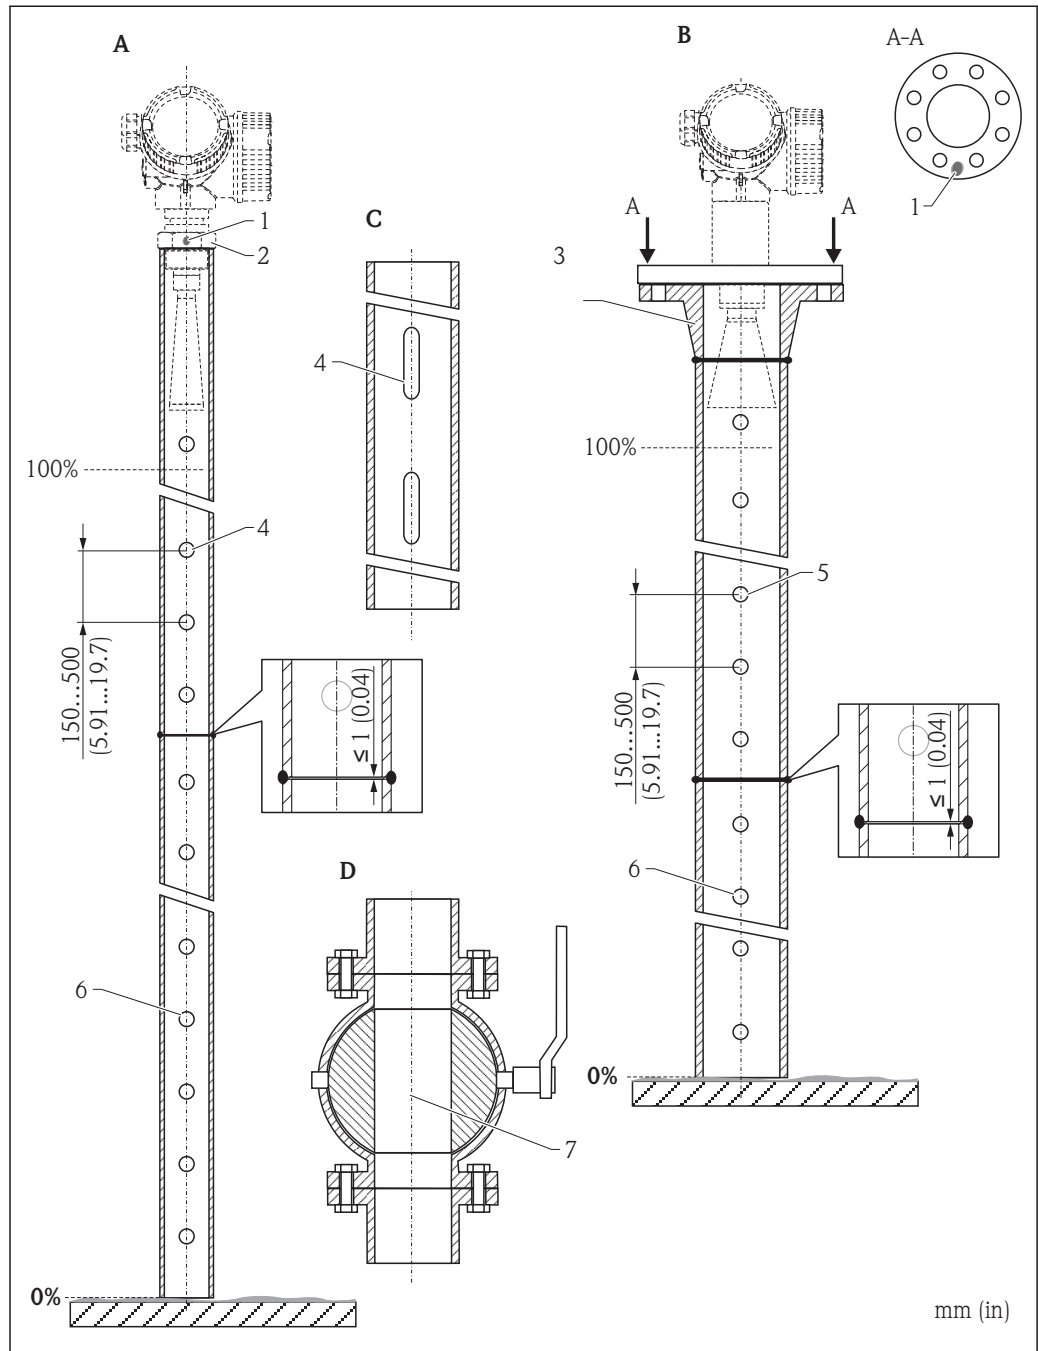


A0019009

- A Micropilot FMR50/FMR51: Horn 40mm(1½")
- B Micropilot FMR50/FMR51/FMR52/FMR54: Horn 80mm(3")
- C Stilling well with slots
- D Full bore ball valve
- 1 Marking for axial alignment
- 2 Threaded connection
- 3 e.g. welding neck flange DIN2633
- 4  $\phi$  hole max. 1/10  $\phi$  stilling well
- 5  $\phi$  hole max. 1/10  $\phi$  stilling well; single sided or drilled through
- 6 Inside of holes deburred
- 7 Diameter of opening of ball valve must always be equivalent to pipe diameter; avoid edges and constrictions.



## 6.5 Installation in bypass

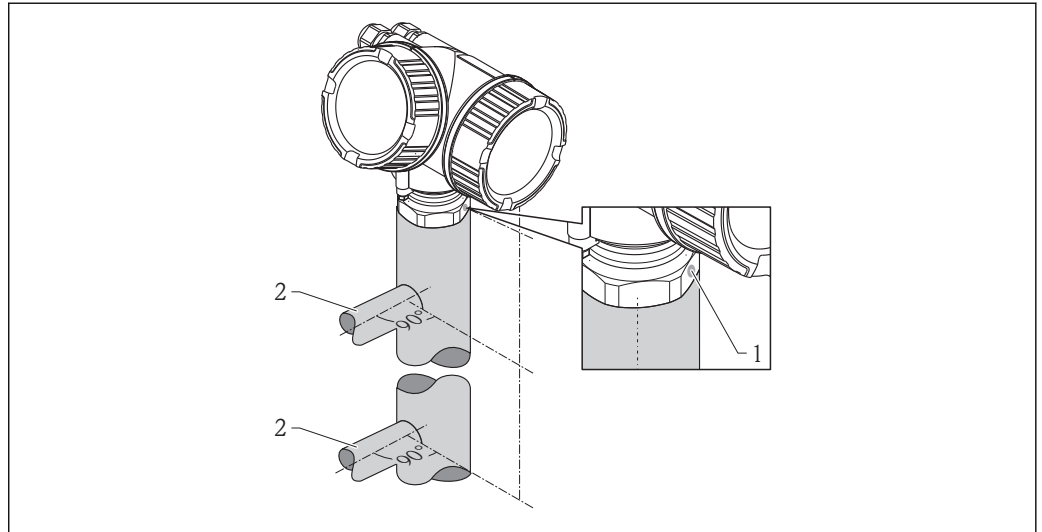

A0019446

### 9 Installation in bypass


- 1 Marking for antenna alignment
- 2 Tank connectors

- Align the marker perpendicular (90°) to the tank connectors.
- Measurements can be performed through an open full bore ball valve without any problems.
- After mounting, the housing can be turned 350° in order to simplify access to the display and the terminal compartment (→ 36).

### 6.5.1 Recommendations for the bypass pipe


- Metal (no plastic or enamel coating).
- Constant diameter.
- Select horn antenna as big as possible. For intermediate sizes (e.g. 95 mm (3.5 in)) select next larger antenna and adapt it mechanically (for horn antennas).
- Diameter difference between horn antenna and inner diameter of the bypass as small as possible.
- At any transition (i.e. when using a ball valve or mending pipe segments), no gap may be created exceeding 1 mm (0.04 in).
- In the area of the tank connections ( $\sim \pm 20$  cm (7.87 in)) a reduced accuracy of the measurement has to be expected.

### 6.5.2 Example for the construction of a bypass

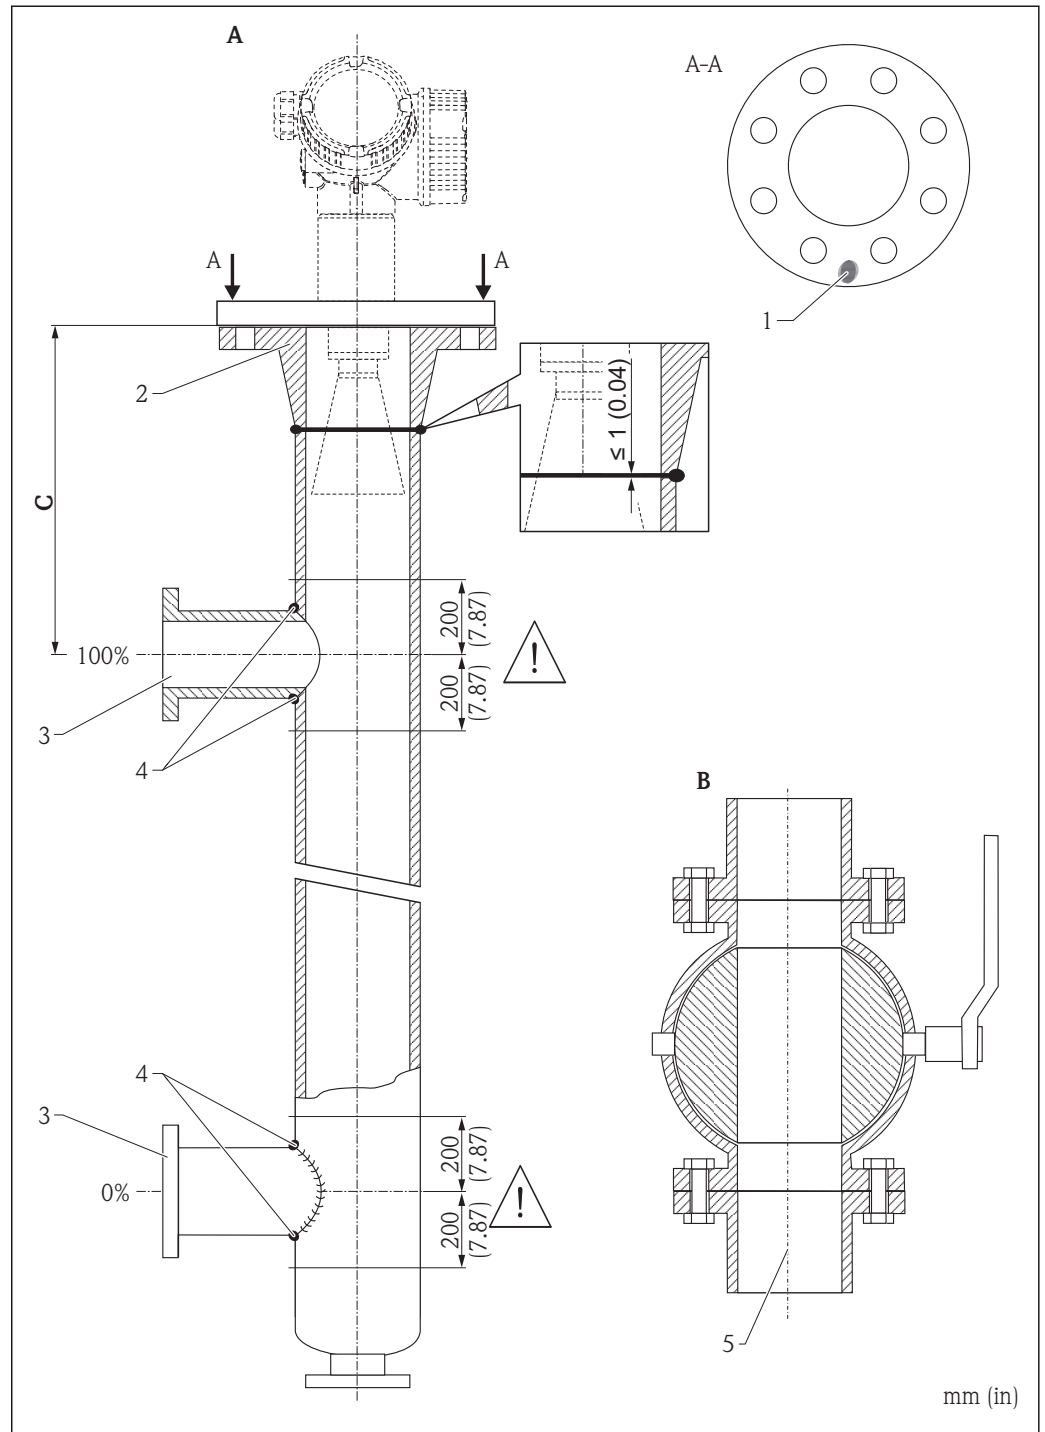

- A Micropilot FMR50/FMR51/FMR52/FMR54: Horn 80mm(3")
- B Full bore ball valve
- C Minimum distance to upper connection pipe: 400 mm (15,7 in)
- 1 Marking for axial alignment
- 2 e.g. welding neck flange DIN2633
- 3 Diameter of the connection pipes as small as possible
- 4 Do not weld through the pipe wall; the inside of the bypass must remain smooth.
- 5 Diameter of opening of ball valve must always be equivalent to pipe diameter. Avoid edges and constrictions.

## 6.6 Vessels with heat insulation

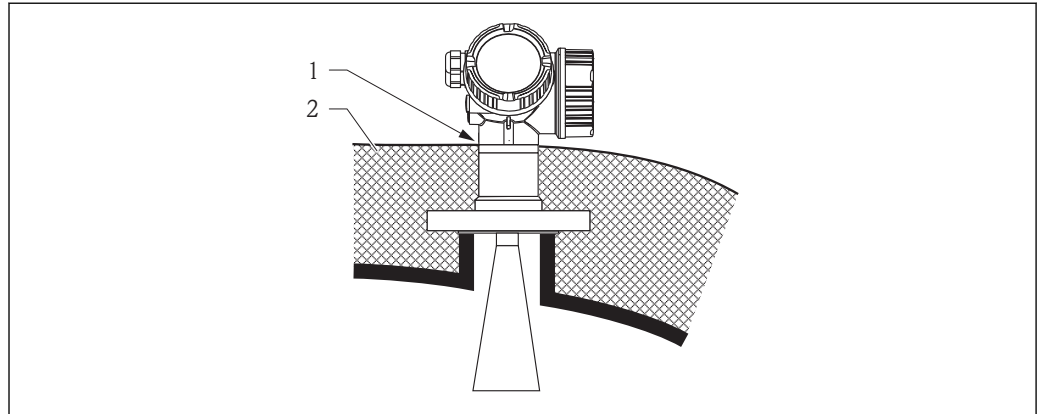


A0019142

If process temperatures are high, the device must be included in normal tank insulation to prevent the electronics heating up as a result of heat radiation or convection. The insulation may not exceed beyond the neck of the housing.

## 6.7 Turning the transmitter housing


To provide easier access to the connection compartment or display module, the transmitter housing can be turned:

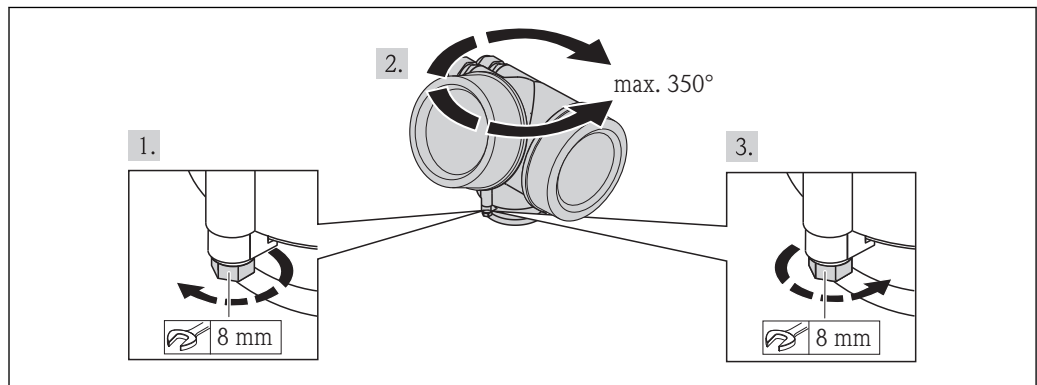

A0013713

1. Unscrew the securing screw using an open-ended wrench.
2. Rotate the housing in the desired direction.
3. Tighten the securing screw (1,5 Nm for plastics housing; 2,5 Nm for aluminium or stainless steel housing).

## 6.8 Turning the display module

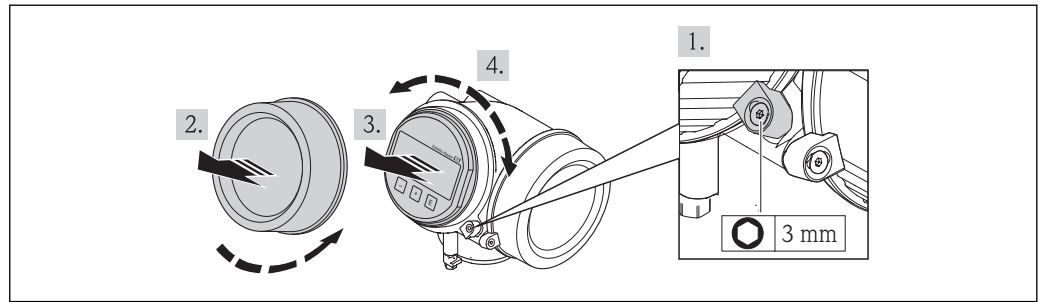

A0013905

1. Loosen the screw of the securing clamp of the electronics compartment cover using an Allen key and turn the clamp 90° counterclockwise.
2. Unscrew cover of the electronics compartment from the transmitter housing.
3. Pull out the display module with a gentle rotation movement.
4. Rotate the display module into the desired position: Max.  $8 \times 45^\circ$  in each direction.
5. Feed the spiral cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment until it engages.
6. Screw the cover of the electronics compartment firmly back onto the transmitter housing.
7. Tighten the securing clamp again using the Allen key.

## 6.9 Post-installation check

<input type="radio"/>	Is the device undamaged (visual inspection)?
<input type="radio"/>	Does the device conform to the measuring point specifications? For example: <ul style="list-style-type: none"> <li>■ Process temperature</li> <li>■ Process pressure (refer to the chapter on "Material load curves" of the "Technical Information" document)</li> <li>■ Ambient temperature range</li> <li>■ Measuring range</li> </ul>
<input type="radio"/>	Are the measuring point identification and labeling correct (visual inspection)?
<input type="radio"/>	Is the device adequately protected from precipitation and direct sunlight?
<input type="radio"/>	Are the securing screw and securing clamp tightened securely?

## 7 Electrical connection

### 7.1 Connection conditions

#### 7.1.1 Cable specification


- Minimum cross-section: See the "Terminal" specification in the Technical Information for the device.
- For ambient temperature  $T_U \geq 60^\circ\text{C}$  ( $140^\circ\text{F}$ ): use cable for temperature  $T_U + 20\text{ K}$ .

#### HART

- A normal device cable suffices if only the analog signal is used.
- A shielded cable is recommended if using the HART protocol. Observe grounding concept of the plant.
- For 4-wire devices: Standard device cable is sufficient for the power line.

### 7.1.2 Terminal assignment

#### 2-wire: 4-20mA HART

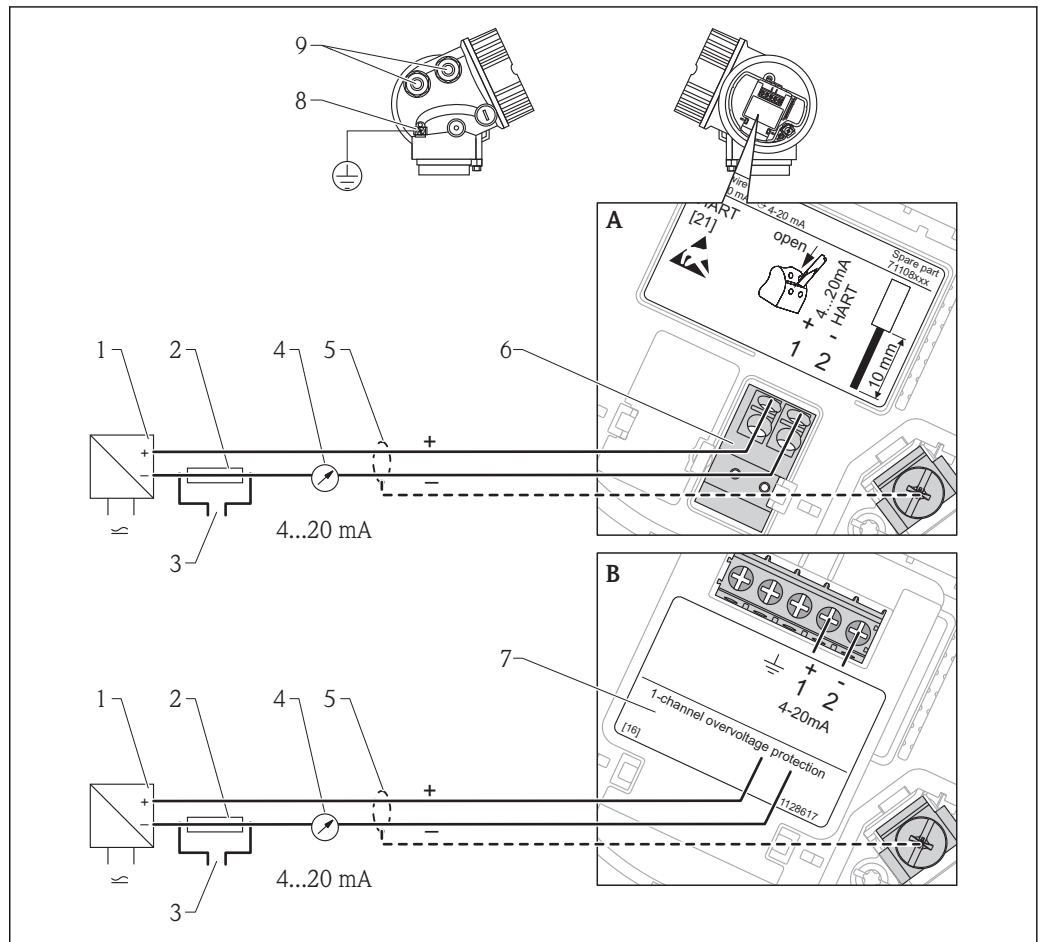


A0011294

10 Terminal assignment 2-wire; 4-20mA HART

- A Without integrated overvoltage protection
- B With integrated overvoltage protection
- 1 Active barrier with power supply (e.g. RN221N): Observe terminal voltage (→ 46)
- 2 HART communication resistor ( $\geq 250 \Omega$ ): Observe maximum load (→ 46)
- 3 Connection for Commubox FXA195 or FieldXpert SFX100 (via VIATOR Bluetooth modem)
- 4 Analog display device: Observe maximum load (→ 46)
- 5 Cable screen; observe cable specification (→ 38)
- 6 Terminals for 4-20mA HART (passive)
- 7 Overvoltage protection module
- 8 Terminal for potential equalization line
- 9 Cable entry

2-wire: 4-20mA HART, switch output

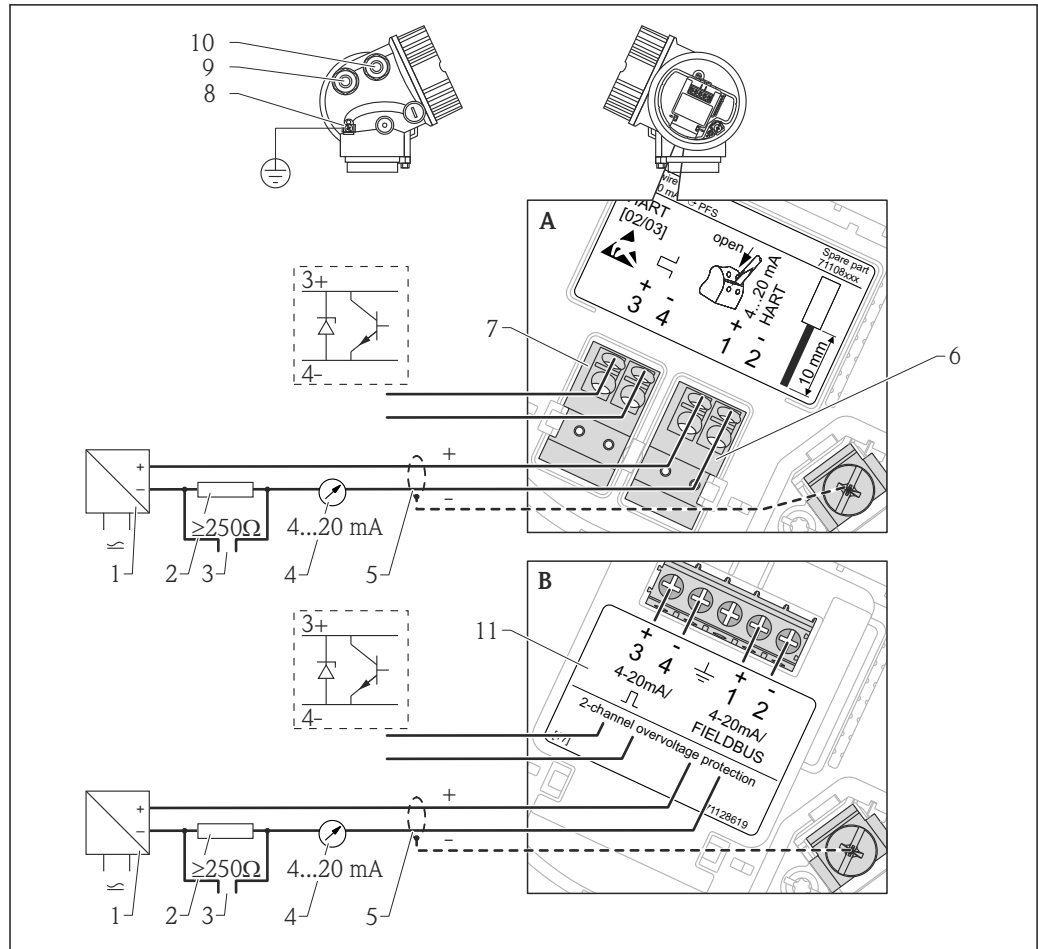


A0013759

11 Terminal assignment 2-wire; 4-20mA HART, switch output

- A Without integrated overvoltage protection
- B With integrated overvoltage protection
- 1 Active barrier with power supply (e.g. RN221N): Observe terminal voltage (→ 46)
- 2 HART communication resistor ( $\geq 250 \Omega$ ): Observe maximum load (→ 46)
- 3 Connection for Commubox FXA195 or FieldXpert SFX100 (via VIATOR Bluetooth modem)
- 4 Analog display device: Observe maximum load (→ 46)
- 5 Cable screen; observe cable specification (→ 38)
- 6 Terminals for 4-20mA HART (passive)
- 7 Terminals for switch output (open collector)
- 8 Terminal for potential equalization line
- 9 Cable entry for 4-20mA HART line
- 10 Cable entry for switch output line
- 11 Overvoltage protection module



**2-wire: 4-20mA HART, 4-20mA**

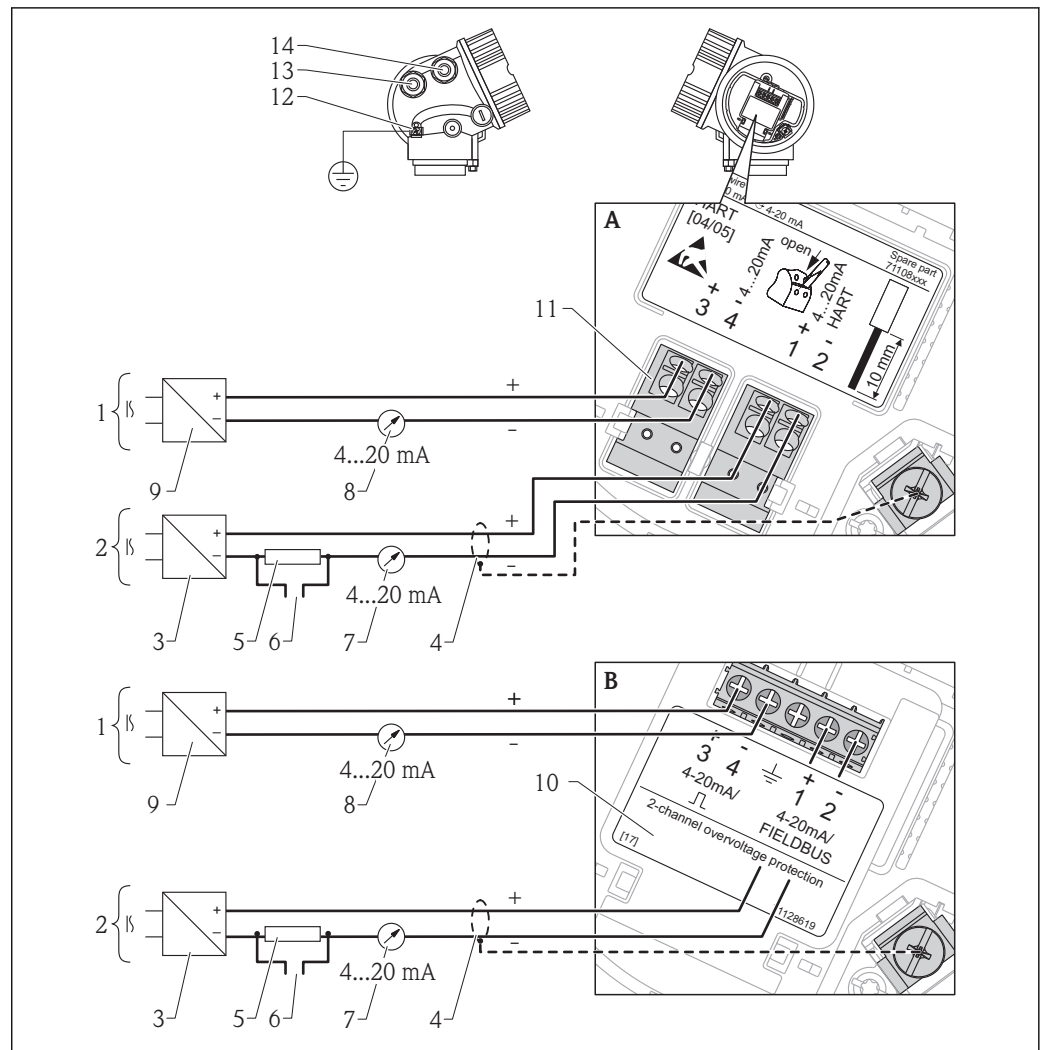


A0013923

12 Terminal assignment 2-wire, 4-20 mA HART, 4...20mA

- A Without integrated overvoltage protection
- B With integrated overvoltage protection
- 1 Connection current output 2
- 2 Connection current output 1
- 3 Supply voltage for current output 1 (e.g. RN221N); Observe terminal voltage (→ 46)
- 4 Cable screen; observe cable specification (→ 38)
- 5 HART communication resistor ( $\geq 250 \Omega$ ); Observe maximum load (→ 46)
- 6 Connection for Commubox FXA195 or FieldXpert SFX100 (via VIATOR Bluetooth modem)
- 7 Analog display device ; observe maximum load (→ 46)
- 8 Analog display device ; observe maximum load (→ 46)
- 9 Supply voltage for current output 2 (e.g. RN221N); Observe terminal voltage (→ 46)
- 10 Overvoltage protection module
- 11 Terminals for current output 2
- 12 Terminal for the potential equalization line
- 13 Cable entry for current output 1
- 14 Cable entry for current output 2

**i** This version is also suited for single-channel operation. In this case, current output 1 (terminals 1 and 2) must be used.

### 4-wire: 4-20mA HART (10.4 to 48 V<sub>DC</sub>)

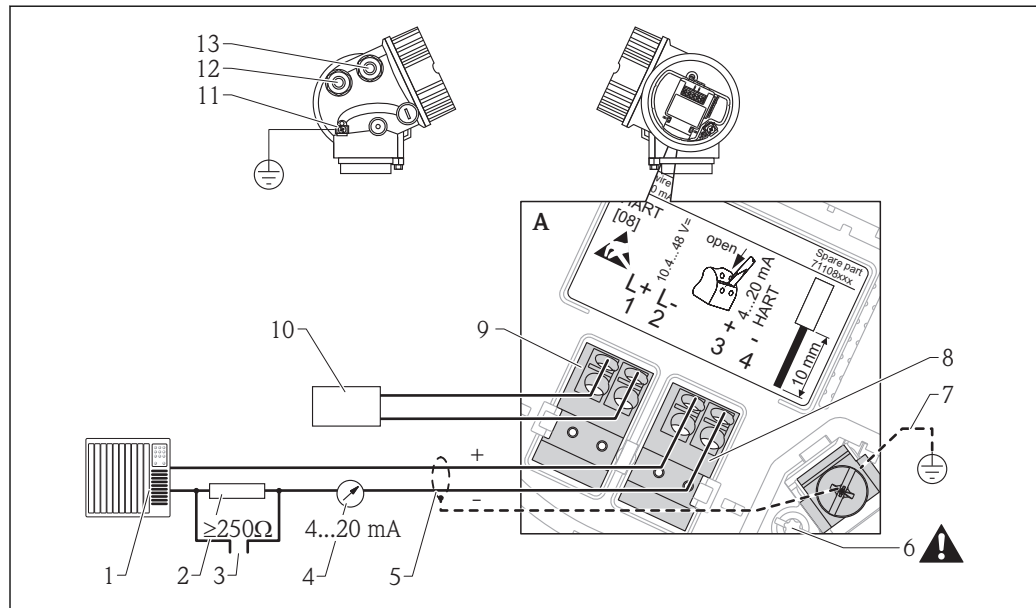

A0011340

**13** Terminal assignment 4-wire; 4-20mA HART (10.4 to 48 VDC)


- 1 Evaluation unit, e.g. PLC
- 2 HART communication resistor ( $\geq 250 \Omega$ ): Observe maximum load ( $\rightarrow$  48)
- 3 Connection for Commubox FXA195 or FieldXpert SFX100 (via VIATOR Bluetooth modem)
- 4 Analog display device: Observe maximum load ( $\rightarrow$  48)
- 5 Signal cable including screening (if required), observe cable specification ( $\rightarrow$  38)
- 6 Protective connection; do not disconnect!
- 7 Protective earth, observe cable specification ( $\rightarrow$  38)
- 8 Terminals for 4...20mA HART (active)
- 9 Terminals for supply voltage
- 10 Supply voltage: Observe terminal voltage ( $\rightarrow$  48), observe cable specification ( $\rightarrow$  38)
- 11 Terminal for potential equalization
- 12 Cable entry for signal line
- 13 Cable entry for power supply

#### **CAUTION**

#### To ensure electrical safety:

- ▶ Do not disconnect the protective connection (7).
  - ▶ Disconnect the supply voltage before disconnecting the protective earth (8).
- i** Connect protective earth to the internal ground terminal (8) before connecting the supply voltage. If necessary, connect the potential matching line to the external ground terminal (12).
  - i** In order to ensure electromagnetic compatibility (EMC): Do not only ground the device via the protective earth conductor of the supply cable. Instead, the functional grounding must also be connected to the process connection (flange or threaded connection) or to the external ground terminal.
  - i** An easily accessible power switch must be installed in the proximity of the device. The power switch must be marked as a disconnector for the device (IEC/EN61010).

**4-wire: 4-20mA HART (90 to 253 V<sub>AC</sub>)**

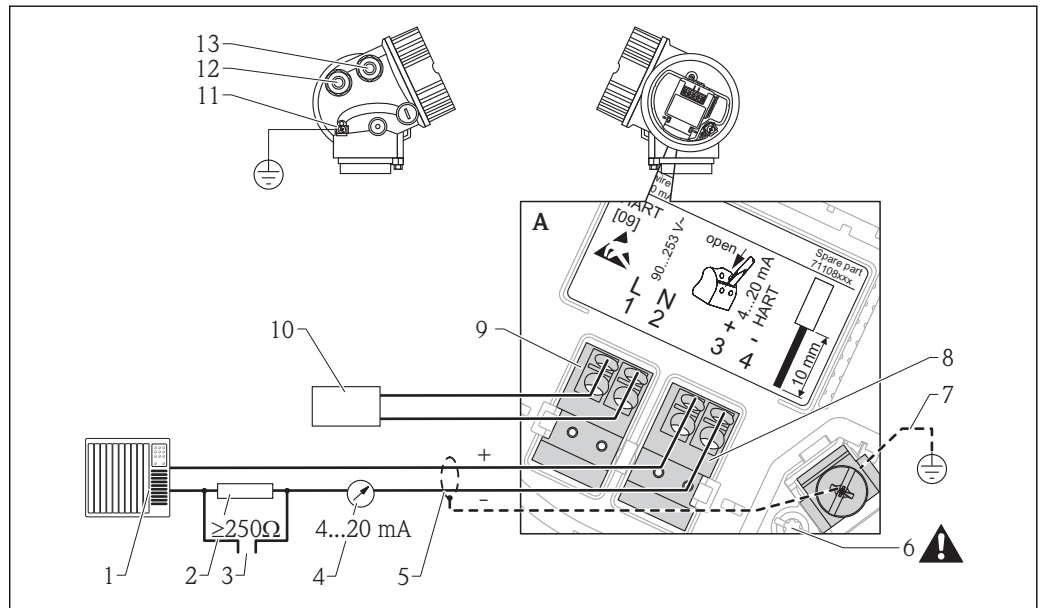

14 Terminal assignment 4-wire; 4-20mA HART (90 to 253 V<sub>AC</sub>)

- 1 Evaluation unit, e.g. PLC
- 2 HART communication resistor ( $\geq 250 \Omega$ ): Observe maximum load ( $\rightarrow$  48)
- 3 Connection for Commubox FXA195 or FieldXpert SFX100 (via VIATOR Bluetooth modem)
- 4 Analog display device: Observe maximum load ( $\rightarrow$  48)
- 5 Signal cable including screening (if required), observe cable specification ( $\rightarrow$  38)
- 6 Protective connection; do not disconnect!
- 7 Protective earth, observe cable specification ( $\rightarrow$  38)
- 8 Terminals for 4...20mA HART (active)
- 9 Terminals for supply voltage
- 10 Supply voltage: Observe terminal voltage ( $\rightarrow$  48), observe cable specification ( $\rightarrow$  38)
- 11 Terminal for potential equalization
- 12 Cable entry for signal line
- 13 Cable entry for power supply



**CAUTION**

**To ensure electrical safety:**

- ▶ Do not disconnect the protective connection (7).
- ▶ Disconnect the supply voltage before disconnecting the protective earth (8).

- i** Connect protective earth to the internal ground terminal (8) before connecting the supply voltage. If necessary, connect the potential matching line to the external ground terminal (12).
- i** In order to ensure electromagnetic compatibility (EMC): Do not only ground the device via the protective earth conductor of the supply cable. Instead, the functional grounding must also be connected to the process connection (flange or threaded connection) or to the external ground terminal.
- i** An easily accessible power switch must be installed in the proximity of the device. The power switch must be marked as a disconnecter for the device (IEC/EN61010).


### Connection examples for the switch output

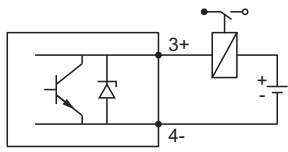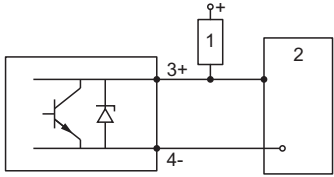 <p style="text-align: right; font-size: small;">A0015909</p> <p>☐ 15 Connection of a relay</p> <p>Suitable relays (examples):</p> <ul style="list-style-type: none"> <li>■ Solid-state relay: Phoenix Contact OV-24DC/480AC/5 with mounting rail connector UMK-1 OM-R/AMS</li> <li>■ Electromechanical relay: Phoenix Contact PLC-RSC-12DC/21</li> </ul>	 <p style="text-align: right; font-size: small;">A0015910</p> <p>☐ 16 Connection of a digital input</p> <p>1 Pull-up resistor 2 Digital input</p>
--	--


### 7.1.3 Device plug connectors

**i** For the versions with fieldbus plug connector (M12 or 7/8"), the signal line can be connected without opening the housing.

*Pin assignment of the M12 plug connector*

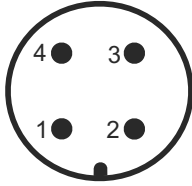 <p style="text-align: right; font-size: small;">A0011175</p>	Pin	Meaning
	1	Signal +
	2	not connected
	3	Signal -
	4	Ground

*Pin assignment of the 7/8" plug connector*

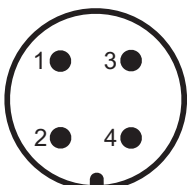 <p style="text-align: right; font-size: small;">A0011176</p>	Pin	Meaning
	1	Signal -
	2	Signal +
	3	Screen
	4	Not connected

### 7.1.4 Supply voltage


#### 2-wire, 4-20mA HART, passive

"Power Supply, Output" <sup>1)</sup>	"Approval" <sup>2)</sup>	Terminal voltage U at the device	Maximum load R, depending on the supply voltage U <sub>0</sub> at the supply unit
A: 2-wire; 4-20mA HART	<ul style="list-style-type: none"> <li>▪ Non-Ex</li> <li>▪ Ex nA</li> <li>▪ Ex ic</li> <li>▪ CSA GP</li> </ul>	10.4 to 35 V <sup>3)</sup>	
	Ex ia / IS	10.4 to 30 V <sup>3)</sup>	
	<ul style="list-style-type: none"> <li>▪ Ex d(ia) / XP</li> <li>▪ Ex ic(ia)</li> <li>▪ Ex nA(ia)</li> <li>▪ Ex ta / DIP</li> </ul>	12 to 35 V <sup>4)</sup>	
	Ex ia + Ex d(ia) / IS + XP	12 to 30 V <sup>4)</sup>	

- 1) Feature 020 of the product structure
- 2) Feature 010 of the product structure
- 3) For ambient temperatures T<sub>a</sub> ≤ -20 °C (-4 °F) a minimum voltage of 15 V is required for the startup of the device at the MIN error current (3,6 mA). The startup current can be parametrized. If the device is operated with a fixed current I ≥ 5,5 mA (HART multidrop mode), a voltage of U ≥ 10,4 V is sufficient throughout the entire range of ambient temperatures.
- 4) For ambient temperatures T<sub>a</sub> ≤ -20 °C (-4 °F) a minimum voltage of 16 V is required for the startup of the device at the MIN error current (3.6 mA).

"Power Supply, Output" <sup>1)</sup>	"Approval" <sup>2)</sup>	Terminal voltage U at the device	Maximum load R, depending on the supply voltage U <sub>0</sub> at the supply unit
B: 2-wire; 4-20 mA HART, switch output	<ul style="list-style-type: none"> <li>▪ Non-Ex</li> <li>▪ Ex nA</li> <li>▪ Ex nA(ia)</li> <li>▪ Ex ic</li> <li>▪ Ex ic(ia)</li> <li>▪ Ex d(ia) / XP</li> <li>▪ Ex ta / DIP</li> <li>▪ CSA GP</li> </ul>	12 to 35 V <sup>3)</sup>	
	<ul style="list-style-type: none"> <li>▪ Ex ia / IS</li> <li>▪ Ex ia + Ex d(ia) / IS + XP</li> </ul>	12 to 30 V <sup>3)</sup>	

- 1) Feature 020 of the product structure
- 2) Feature 010 of the product structure
- 3) For ambient temperatures T<sub>a</sub> ≤ -30 °C (-22 °F) a minimum voltage of 16 V is required for the startup of the device at the MIN error current (3.6 mA).

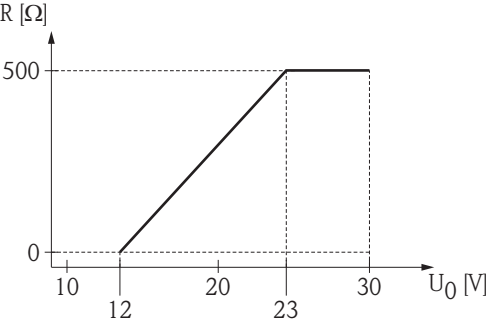"Power Supply, Output" <sup>1)</sup>	"Approval" <sup>2)</sup>	Terminal voltage U at the device	Maximum load R, depending on the supply voltage U <sub>0</sub> at the supply unit
C: 2-wire; 4-20mA HART, 4-20mA	any	12 to 30 V <sup>3)</sup>	 <p>The graph plots Maximum load R [Ω] on the y-axis against supply voltage U<sub>0</sub> [V] on the x-axis. The y-axis has a tick at 0 and 500. The x-axis has ticks at 10, 12, 20, 23, and 30. A solid line starts at (12, 0) and rises linearly to (23, 500). From U<sub>0</sub> = 23 V to U<sub>0</sub> = 30 V, the load R remains constant at 500 Ω. Dashed lines indicate the coordinates of the points (12, 0), (23, 500), and (30, 500).</p>

A0017055

- 1) Feature 020 of the product structure
- 2) Feature 010 of the product structure
- 3) For ambient temperatures  $T_a \leq -30\text{ °C}$  (-22 °F) a minimum voltage of 16 V is required for the startup of the device at the MIN error current (3.6 mA).

<b>Polarity reversal protection</b>	Yes
<b>Admissible residual ripple at f = 0 to 100 Hz</b>	$U_{SS} < 1\text{ V}$
<b>Admissible residual ripple at f = 100 to 10000 Hz</b>	$U_{SS} < 10\text{ mV}$

**4-wire, 4-20mA HART, active**

"Power supply; Output" <sup>1)</sup>	Terminal voltage	Maximum load $R_{\max}$
<b>K:</b> 4-wire 90-253VAC; 4-20mA HART	90 to 253 V <sub>AC</sub> (50 to 60 Hz), overvoltage category II	500 Ω
<b>L:</b> 4-wire 10,4-48VDC; 4-20mA HART	10.4 to 48 V <sub>DC</sub>	

1) Feature 020 of the product structure



### 7.1.5 Overvoltage protection

If the measuring device is used for level measurement in flammable liquids which requires the use of overvoltage protection according to DIN EN 60079-14, standard for test procedures 60060-1 (10 kA, pulse 8/20  $\mu$ s), overvoltage protection has to be ensured by an integrated or external overvoltage protection module.

#### Integrated overvoltage protection

An integrated overvoltage protection module is available for 2-wire HART as well as PROFIBUS PA and FOUNDATION Fieldbus devices.

Product structure: Feature 610 "Accessory mounted", option NA "Overvoltage protection".

Technical data	
Resistance per channel	2 * 0.5 $\Omega$ max
Threshold DC voltage	400 to 700 V
Threshold impulse voltage	< 800 V
Capacitance at 1 MHz	< 1.5 pF
Nominal arrest impulse voltage ( $^{8/20}$ $\mu$ s)	10 kA

#### External overvoltage protection

HAW562 or HAW569 from Endress+Hauser are suited as external overvoltage protection.



For detailed information please refer to the following documents:

- HAW562: TI01012K
- HAW569: TI01013K

## 7.2 Connecting the measuring device


### **⚠ WARNING**

#### Explosion hazard!

- ▶ Comply with the relevant national standards.
- ▶ Observe the specifications in the Safety Instructions (XA).
- ▶ Only use the specified cable glands.
- ▶ Check whether the supply voltage matches the specifications on the nameplate.
- ▶ Before connecting the device: Switch the supply voltage off.
- ▶ Before switching on the supply voltage: Connect the potential bonding line to the exterior ground terminal.


#### Required tools and accessories:

- For instruments with safety pin for the lid: AF 3 Allen key
- Wire stripping pliers
- When using stranded wires: Wire end sleeves.

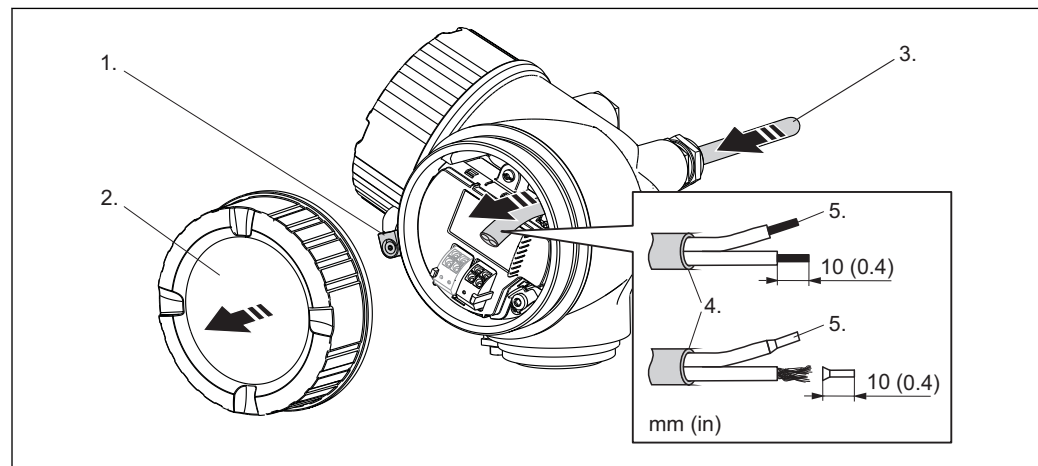

A0012619

1. Loosen the screw of the securing clamp of the connection compartment cover and turn the clamp 90° counterclockwise.
2. Unscrew the connection compartment cover.
3. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable.
5. Strip the cable ends 10 mm (0.4 in). For stranded cables, also attach wire end ferrules.
6. Firmly tighten the cable glands.
- 7.

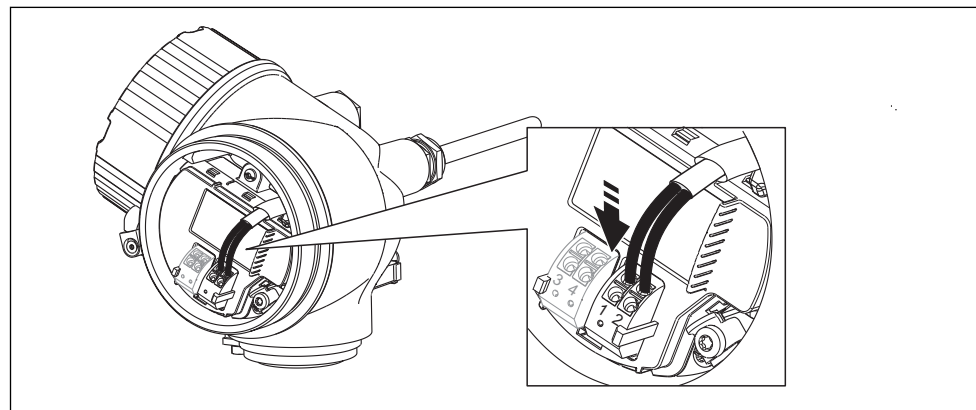

A0013837


Connect the cable in accordance with the terminal assignment (→ 39).

8. When using screened cable: Connect the cable screen to the ground terminal.
9. Screw the cover onto the connection compartment.
10. For instruments with safety pin for the lid: Adjust the safety pin so that its edge is over the edge of the display lid. Tighten the safety pin.



### Pluggable spring-force terminals

Instruments without integrated overvoltage protection have pluggable spring-force terminals. Rigid conductors or flexible conductors with cable sleeve can directly be inserted and are contacted automatically.

To remove cables from the terminal: Press on the groove between the terminals using a flat-tip screwdriver  $\leq 3$  mm (0.12 inch) while pulling the cables out of the terminals.

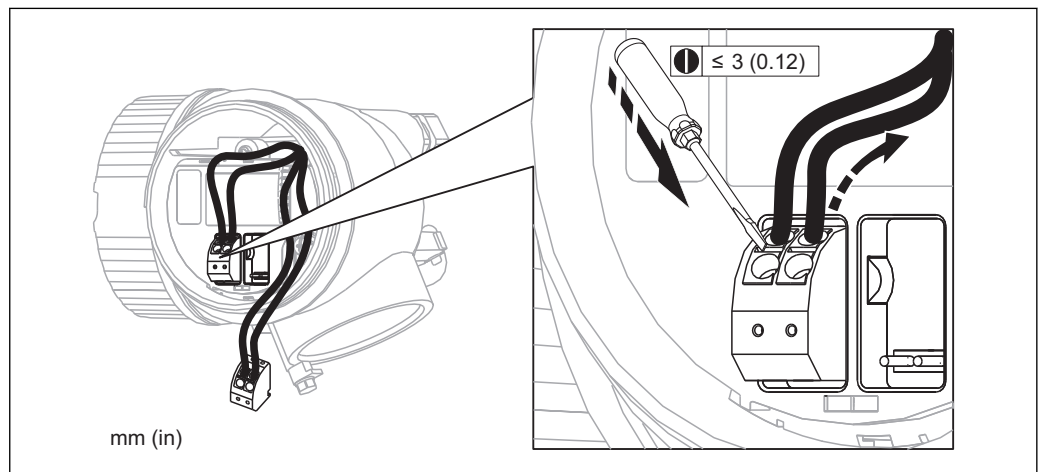



### 7.3 Post-connection check

<input type="radio"/>	Are cables or the device undamaged (visual inspection)?
<input type="radio"/>	Do the cables comply with the requirements?
<input type="radio"/>	Do the cables have adequate strain relief?
<input type="radio"/>	Are all cable glands installed, firmly tightened and correctly sealed?
<input type="radio"/>	Does the supply voltage match the specifications on the transmitter nameplate?
<input type="radio"/>	Is the terminal assignment correct (→  39)?
<input type="radio"/>	If required: Is the protective earth connected correctly (→  39)?
<input type="radio"/>	If supply voltage is present: Is the device ready for operation and do values appear on the display module?
<input type="radio"/>	Are all housing covers installed and firmly tightened?
<input type="radio"/>	Is the securing clamp tightened correctly?


## 8 Operation options

### 8.1 Overview

#### 8.1.1 Local operation

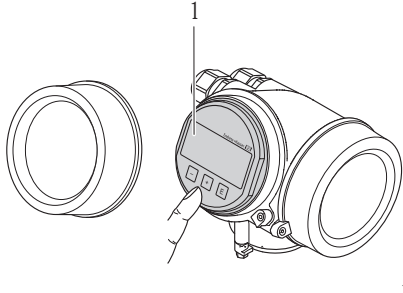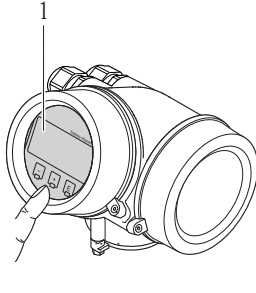Order code for "Display; Operation", option C "SD02"	Order code for "Display; Operation", option E "SD03" (in preparation)
 <p style="text-align: right; font-size: small;">A0015544</p>	 <p style="text-align: right; font-size: small;">A0015546</p>
1 Operation with pushbuttons	1 Operation with touch control

#### 8.1.2 Operation with remote display and operating module FHX50

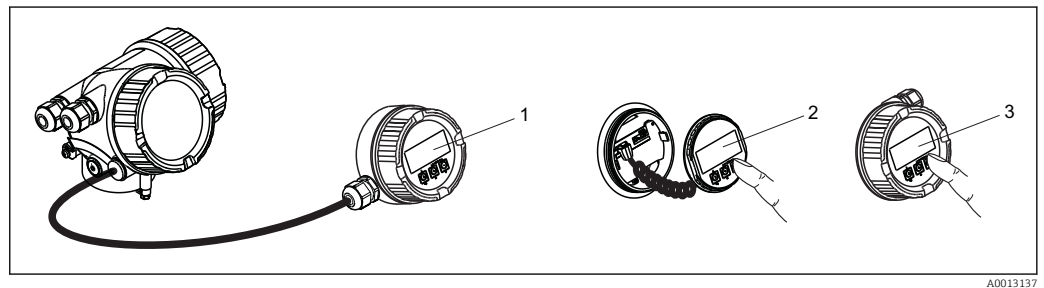


17 FHX50 operating options

- 1 Housing of the remote display and operating module FHX50
- 2 Display and operating module SD02, push buttons; cover must be removed
- 3 Display and operating module SD03, optical keys; can be operated through the glass of the cover (in preparation)

### 8.1.3 Remote operation

#### Via HART protocol

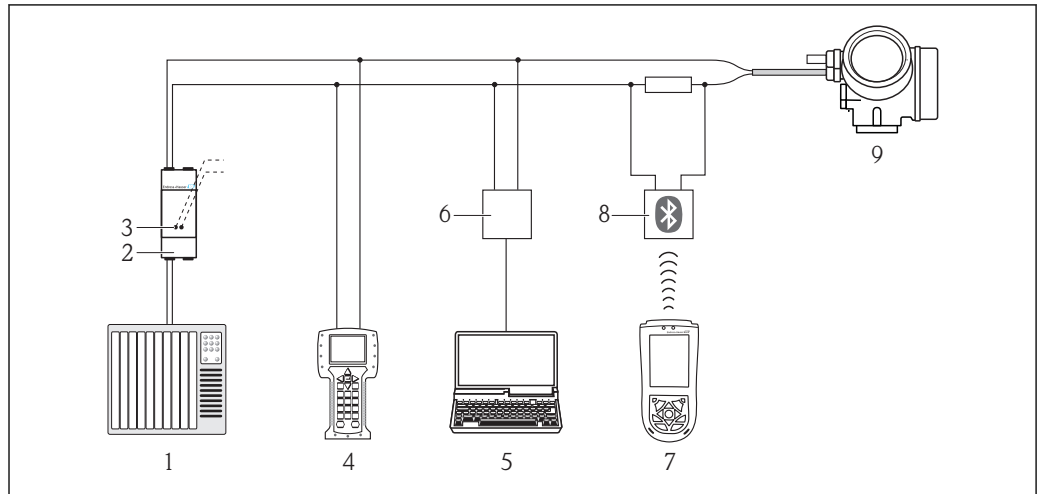


A0013764

18 Options for remote operation via HART protocol

- 1 PLC (programmable logic controller)
- 2 Transmitter power supply unit, e.g. RN221N (with communication resistor)
- 3 Connection for Commubox FXA191, FXA195 and Field Communicator 375, 475
- 4 Field Communicator 375, 475
- 5 Computer with operating tool (e.g. FieldCare, AMS Device Manager, SIMATIC PDM)
- 6 Commubox FXA191 (RS232) or FXA195 (USB)
- 7 Field Xpert SFX100
- 8 VIATOR Bluetooth modem with connecting cable
- 9 Transmitter

#### Via service interface (CDI)

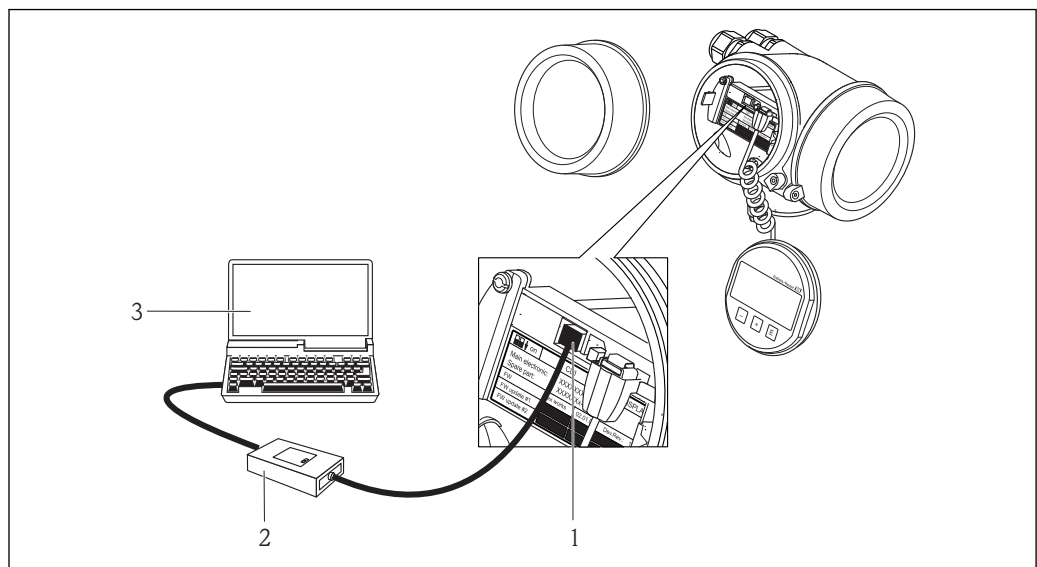

A0014019

- 1 Service interface (CDI) of the measuring device (= Endress+Hauser Common Data Interface)
- 2 Commubox FXA291
- 3 Computer with "FieldCare" operating tool


## 8.2 Structure and function of the operating menu

### 8.2.1 Structure of the operating menu

Menu	Submenu / parameter	Meaning
	Language <sup>1)</sup>	Defines the operating language of the on-site display.
<b>Setup</b>	Parameter 1 ... Parameter N	When all these parameters have been assigned appropriate values, the measured should be completely configured in a standard application.
	<b>Advanced Setup</b>	Contains further submenus and parameters: <ul style="list-style-type: none"> <li>▪ to adapt the device to special measuring conditions.</li> <li>▪ to process the measured value (scaling, linearization).</li> <li>▪ to configure the signal output.</li> </ul>
<b>Diagnostics</b>	<b>Diagnostics list</b>	Contains up to 5 currently active error messages.
	<b>Event logbook</b>	Contains the last 20 messages (which are no longer active).
	<b>Device info</b>	Contains information needed to identify the device.
	<b>Measured values</b>	Contains all current measured values.
	<b>Data logging</b>	Contains the history of the individual measuring values.
	<b>Simulation</b>	Used to simulate measured values or output values.
	<b>Device check</b>	Contains all parameters needed to check the measurement capability of the device.
<b>Expert</b> <sup>2)</sup> Contains all parameters of the device (including those which are already contained in one of the above submenus). This menu is organized according to the function blocks of the device.  The parameter of the <b>Expert</b> menu are described in: GP01014F (HART)	<b>System</b>	Contains all general device parameters which do not affect the measurement or the communication interface.
	<b>Sensor</b>	Contains all parameters needed to configure the measurement.
	<b>Output</b>	<ul style="list-style-type: none"> <li>▪ Contains all parameters needed to configure the current output.</li> <li>▪ Contains all parameters needed to configure the switch output (PFS).</li> </ul>
	<b>Communication</b>	Contains all parameters needed to configure the digital communication interface.
	<b>Diagnostics</b>	Contains all parameters needed to detect and analyze operational errors.

- 1) In case of operation via operating tools (e.g. FieldCare), the "Language" parameter is located at "Setup → Advanced Setup → Display"
- 2) On entering the "Expert" menu, a access code is always requested. If a customer specific access code has not been defined, "0000" has to be entered.


## 8.2.2 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if a device-specific access code has been defined. This protects the device configuration via the local display from unauthorized access (→  57).

### Access authorization to parameters

User role	Read access		Write access	
	Without access code (from the factory)	With access code	Without access code (from the factory)	With access code
Operator	✓	✓	✓	--
Maintenance	✓	✓	✓	✓

If an incorrect access code is entered, the user obtains the access rights of the "Operator" role.

 The user role with which the user is currently logged on is indicated by the **Access status display** parameter.


Navigation path: Setup → Advanced Setup → Access status display



### 8.2.3 Write protection via access code

Using the device-specific access code, the parameters for the measuring device configuration are write-protected and their values can no longer be changed via local operation.




#### Define access code

1. Navigating to the "Define access code" parameter: Setup → Advanced Setup → Administration → Define access code
2. Define a max. 4-digit numeric code as an access code.
3. Repeat the same code in the following parameter: "Confirm access code".
  - ↳ The -symbol appears in front of all write-protected parameters.



#### Parameters that can always be changed

The write protection does not include certain parameters that do not affect the measurement. Despite the defined access code, they can always be modified, even if the other parameters are locked.



If no key is pressed for 10 minutes in the navigation and editing mode, the device automatically locks the write-protected parameters. If the user goes from the navigation and editing mode back to the measured value display mode, the device automatically locks the write-protected parameters after 60 s.

-  If write access is activated via access code, it can be also be deactivated only via the access code (→  57).
- In the "Description of Device Parameters" documents, each write-protected parameter is identified with the .

### 8.2.4 Disabling write protection via access code

If the -symbol appears on the local display in front of a parameter, the parameter is write-protected by a device-specific access code and its value cannot be changed at the moment using the local display (→  57).

The locking of the write access via local operation can be disabled by entering the device-specific access code.

1. After you press , the input prompt for the access code appears.
2. Enter the access code.
  - ↳ The -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.


### 8.2.5 Deactivation of the write protection via access code

1. Navigating to the **Define access code** parameter: Setup → Advanced Setup → Administration → Define access code
2. Enter **0000**.
3. Repeat **0000** in the following parameter: **Confirm access code**.
  - ↳ The write protection is deactivated. Parameters can be changed without entering an access code.


### 8.2.6 Write protection via lock switch


Unlike write protection via device-specific access code, this allows write access to the entire operating menu - other than the **Contrast display** parameter - to be locked.

The values of the parameters are still visible, but can no longer be changed (except for **Contrast display**), either via the local display, CDI interface or bus protocol.

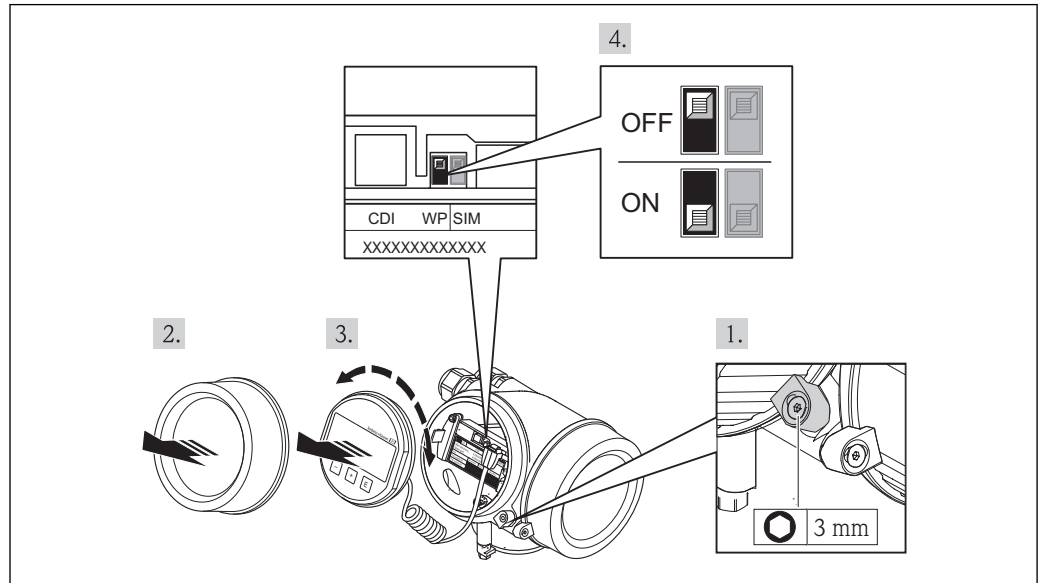


A0013768

1. Loosening the securing clamp.
2. Unscrewing the electronics compartment cover.
3. Pull out the display module with a gentle rotation movement.
4. Installing the lock switch (WP) on the main electronics module in the ON position enables the hardware write protection. Installing the lock switch (WP) on the main electronics module in the OFF position (factory setting) disables the hardware write protection.
  - ↳ If the hardware write protection is enabled, the -symbol appears in the header of the measured value display and in the navigation view in front of the parameters.

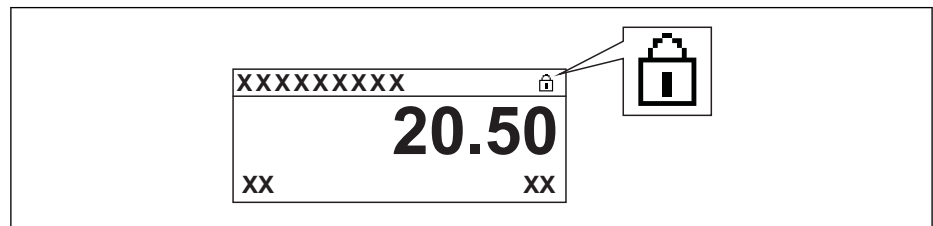

A0015870

If the hardware write protection is disabled, the -symbol disappears in the header of the measured value display and in the navigation view in front of the parameters.

5. Feed the spiral cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
6. Screw the electronics compartment cover closed and tighten the securing clamp.




### 8.2.7 Enabling and disabling the keypad lock


The keypad lock allows you to disable access to the entire operating menu via local operation. Thus navigating through the operating menu or modifying the values of individual parameters is no longer possible. Only the measured values on the measured value display can be read off.

#### Keypad lock for display module SD02 (push buttons)

The keypad lock is enabled and disabled in the same way:


The user is in the measured value display.

- ▶ By simultaneously pressing the  +  +  keys.
  - ↳ After enabling the keypad lock:

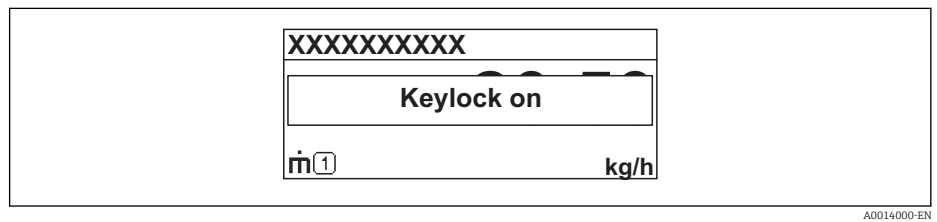


A0014000-EN

After disabling the keypad lock:

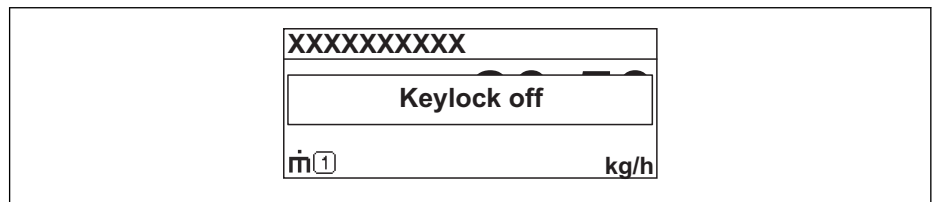

A0014001-EN


-  When attempting to access the operating menu while the keylock is enabled, the message "Keylock on" also appears.

#### Keypad lock for display module SD03 (optical keys)

in preparation

## 8.3 Display and operating module

### 8.3.1 Display appearance

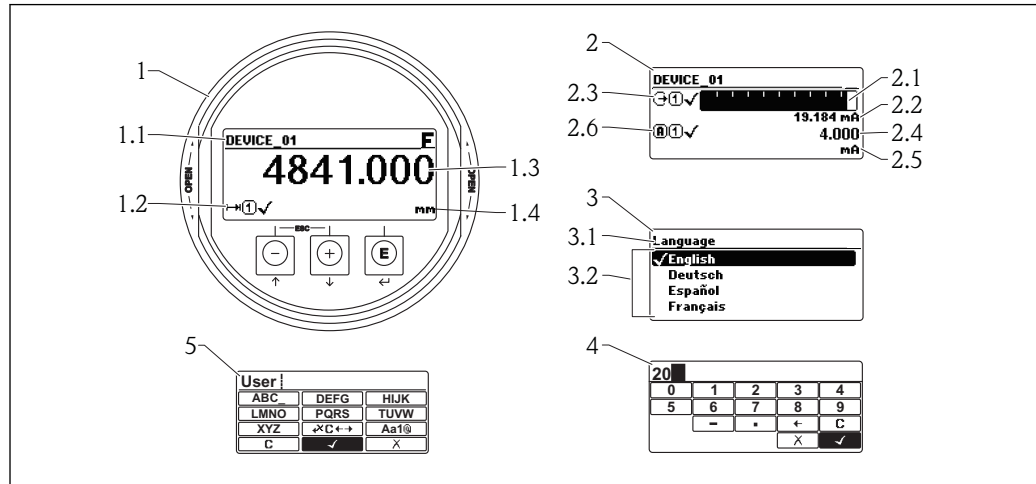





A0012635

**19** Appearance of the display and operation module for on-site operation

- 1 Measured value display (1 value max. size)
- 1.1 Header containing tag and error symbol (if an error is active)
- 1.2 Measured value symbols
- 1.3 Measured value
- 1.4 Unit
- 2 Measured value display (1 bargraph + 1 value)
- 2.1 Bargraph for measured value 1
- 2.2 Measured value 1 (including unit)
- 2.3 Measured value symbols for measured value 1
- 2.4 Measured value 2
- 2.5 Unit for measured value 2
- 2.6 Measured value symbols for measured value 2
- 3 Representation of a parameter (here: a parameter with selection list)
- 3.1 Header containing parameter name and error symbol (if an error is active)
- 3.2 Selection list;  marks the current parameter value.
- 4 Input matrix for numbers
- 5 Input matrix for alphanumeric and special characters



### Display symbols for the submenu

Symbol	Meaning
 <small>A0011975</small>	<b>Display/operation</b> Is displayed: <ul style="list-style-type: none"> <li>in the main menu next to the selection "Display/operation"</li> <li>in the header, if you are in the "Display/operation" menu</li> </ul>
 <small>A0011974</small>	<b>Setup</b> Is displayed: <ul style="list-style-type: none"> <li>in the main menu next to the selection "Setup"</li> <li>in the header, if you are in the "Setup" menu</li> </ul>
 <small>A0011976</small>	<b>Expert</b> Is displayed: <ul style="list-style-type: none"> <li>in the main menu next to the selection "Expert"</li> <li>in the header, if you are in the "Expert" menu</li> </ul>
 <small>A0011977</small>	<b>Diagnostics</b> Is displayed: <ul style="list-style-type: none"> <li>in the main menu next to the selection "Diagnostics"</li> <li>in the header, if you are in the "Diagnostics" menu</li> </ul>











### Status signals

<b>F</b> <small>A0013956</small>	<b>"Failure"</b> A device error is present. The measured value is no longer valid.
<b>C</b> <small>A0013959</small>	<b>"Function check"</b> The device is in service mode (e.g. during a simulation).
<b>S</b> <small>A0013958</small>	<b>"Out of specification"</b> The device is operated: <ul style="list-style-type: none"> <li>Outside of its technical specifications (e.g. during startup or a cleaning)</li> <li>Outside of the configuration carried out by the user (e.g. level outside configured span)</li> </ul>
<b>M</b> <small>A0013957</small>	<b>"Maintenance required"</b> Maintenance is required. The measured value is still valid.








### Display symbols for the locking state

Symbol	Meaning
 <small>A0011978</small>	<b>Display parameter</b> Marks display-only parameters which can not be edited.
 <small>A0011979</small>	<b>Device locked</b> <ul style="list-style-type: none"> <li>In front of a parameter name: The device is locked via software and/or hardware.</li> <li>In the header of the measured value screen: The device is locked via hardware.</li> </ul>


## Measured value symbols

Symbol	Meaning
<b>Measured values</b>	
 A0011995	Level
 A0011996	Distance
 A0011998	Current output
 A0011999	Measured current
 A0012106	Terminal voltage
 A0012104	Temperature of the electronics or the sensor
<b>Measuring channels</b>	
 A0012000	Measuring channel 1
 A0012107	Measuring channel 2
<b>Status of the measured value</b>	
 A0012102	<b>Status "Alarm"</b> The measurement is interrupted. The output assumes the defined alarm value. A diagnostic message is generated.
 A0012103	<b>Status "Warning"</b> The device continues measuring. A diagnostic message is generated.

### 8.3.2 Operating elements

Key	Meaning
 <small>A0013969</small>	<p><b>Minus key</b></p> <p><i>For menu, submenu</i>                      Moves the selection bar upwards in a picklist.</p> <p><i>For text and numeric editor</i>                      In the input mask, moves the selection bar to the left (backwards).</p>
 <small>A0013970</small>	<p><b>Plus key</b></p> <p><i>For menu, submenu</i>                      Moves the selection bar downwards in a picklist.</p> <p><i>For text and numeric editor</i>                      In the input mask, moves the selection bar to the right (forwards).</p>
 <small>A0013952</small>	<p><b>Enter key</b></p> <p><i>For measured value display</i></p> <ul style="list-style-type: none"> <li>■ Pressing the key briefly opens the operating menu.</li> <li>■ Pressing the key for 2 s opens the context menu.</li> </ul> <p><i>For menu, submenu</i></p> <ul style="list-style-type: none"> <li>■ Pressing the key briefly                      Opens the selected menu, submenu or parameter.</li> <li>■ Pressing the key for 2 s for parameter:                      If present, opens the help text for the function of the parameter.</li> </ul> <p><i>For text and numeric editor</i></p> <ul style="list-style-type: none"> <li>■ Pressing the key briefly                             <ul style="list-style-type: none"> <li>- Opens the selected group.</li> <li>- Carries out the selected action.</li> </ul> </li> <li>■ Pressing the key for 2 s confirms the edited parameter value.</li> </ul>
 <small>A0013971</small>	<p><b>Escape key combination (press keys simultaneously)</b></p> <p><i>For menu, submenu</i></p> <ul style="list-style-type: none"> <li>■ Pressing the key briefly                             <ul style="list-style-type: none"> <li>- Exits the current menu level and takes you to the next higher level.</li> <li>- If help text is open, closes the help text of the parameter.</li> </ul> </li> <li>■ Pressing the key for 2 s returns you to the measured value display ("home position").</li> </ul> <p><i>For text and numeric editor</i>                      Closes the text or numeric editor without applying changes.</p>
 <small>A0013953</small>	<p><b>Minus/Enter key combination (press and hold down the keys simultaneously)</b></p> <p>Reduces the contrast (brighter setting).</p>
 <small>A0013954</small>	<p><b>Plus/Enter key combination (press and hold down the keys simultaneously)</b></p> <p>Increases the contrast (darker setting).</p>
 <small>A0013955</small>	<p><b>Minus/Plus/Enter key combination (press and hold down the keys simultaneously)</b></p> <p><i>For measured value display</i>                      Enables or disables the keypad lock.</p>

### 8.3.3 Entering numbers and text

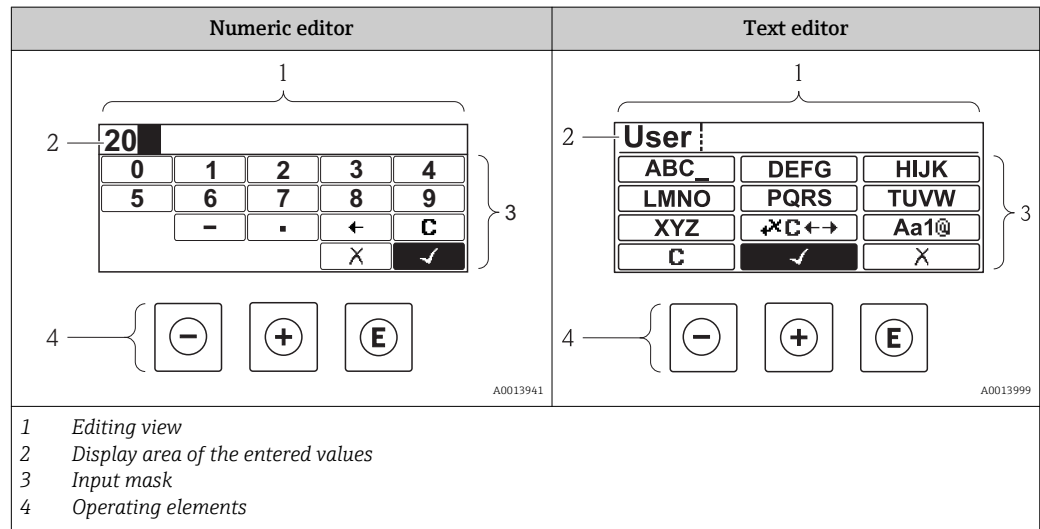

#### Input mask

The following input symbols are available in the input mask of the numeric and text editor:





##### Numeric editor symbols

Symbol	Meaning
	Selection of numbers from 0 to 9.
	Inserts decimal separator at the input position.
	Inserts minus sign at the input position.
	Confirms selection.
	Moves the input position one position to the left.
	Exits the input without applying the changes.
	Clears all entered characters.







##### Text editor symbols

Symbol	Meaning
	Selection of letters from A to Z
	Toggle <ul style="list-style-type: none"> <li>Between upper-case and lower-case letters</li> <li>For entering numbers</li> <li>For entering special characters</li> </ul>









 <small>A0013985</small>	Confirms selection.
 <small>A0013987</small>	Switches to the selection of the correction tools.
 <small>A0013986</small>	Exits the input without applying the changes.
 <small>A0014040</small>	Clears all entered characters.





**Operating symbols in the numeric editor**


 <small>A0013985</small>	 <small>A0016621</small>	 <small>A0013986</small>
Confirms selection.	Moves the input position one position to the left.	Exits the input without applying the changes.
 <small>A0016619</small>	 <small>A0016620</small>	 <small>A0014040</small>
Inserts decimal separator at the input position.	Inserts minus sign at the input position.	Clears all entered characters.





**Operating symbols in the text editor**

 <small>A0013985</small>	 <small>A0013987</small>	 <small>A0013986</small>
Confirms selection.	Switches to the selection of the correction tools.	Exits the input without applying the changes.
 <small>A0014040</small>	 <small>A0013981</small>	
Clears all entered characters.	Toggle <ul style="list-style-type: none"> <li>▪ Between upper-case and lower-case letters</li> <li>▪ For entering numbers</li> <li>▪ For entering special characters</li> </ul>	

**Correction symbols under **


 <small>A0013989</small>	Clears all entered characters.
 <small>A0013991</small>	Moves the input position one position to the right.
 <small>A0013990</small>	Moves the input position one position to the left.
 <small>A0013988</small>	Deletes one character immediately to the left of the input position.

**Correction symbols under **

 <small>A0013989</small>	 <small>A0013990</small>	 <small>A0013991</small>	 <small>A0013988</small>
Clears all entered characters.	Moves the input position one position to the left.	Moves the input position one position to the right.	Deletes one character immediately to the left of the input position.

### 8.3.4 Envelope curve on the display and operating module

In order to assess the measuring signal, the envelope curve and - if a mapping has been recorded - the mapping curve can be displayed:

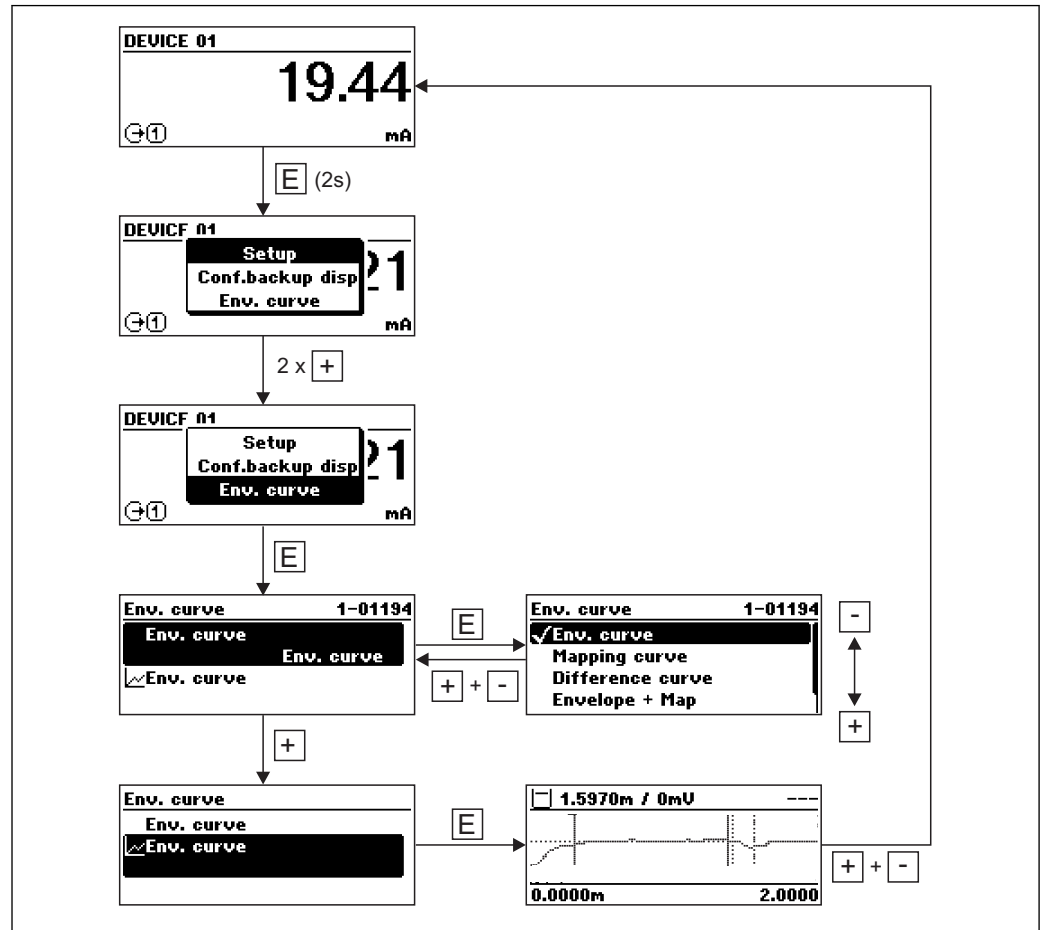

A0014277

## 9 System integration via HART protocol


### 9.1 Overview of the Device Description files (DD)

Manufacturer ID	0x11
Device type	0x28
HART specification	6.0
DD files	For information and files see: <ul style="list-style-type: none"> <li>▪ <a href="http://www.endress.com">www.endress.com</a></li> <li>▪ <a href="http://www.hartcomm.org">www.hartcomm.org</a></li> </ul>

### 9.2 Measured values via HART protocol

On delivery the following measuring values are assigned to the HART device variables:

Device variable	Measuring value
Primary device variable (PV)	Level linearized
Secondary device variable (SV)	Distance
Third device variable (TV)	Absolute echo amplitude
Fourth device variable (QV)	Relative echo amplitude

 The allocation of the device variables can be changed in the operating menu: **Expert** → **Communication** → **Output**.

## 10 Commissioning


### 10.1 Installation and function check

Make sure that all final checks have been completed before you start up your measuring point:

- Checklist "Post-installation check" (→ 📄 37)
- Checklist "Post-connection check" (→ 📄 52)

### 10.2 Setting the operating language


Factory setting: English or ordered local language

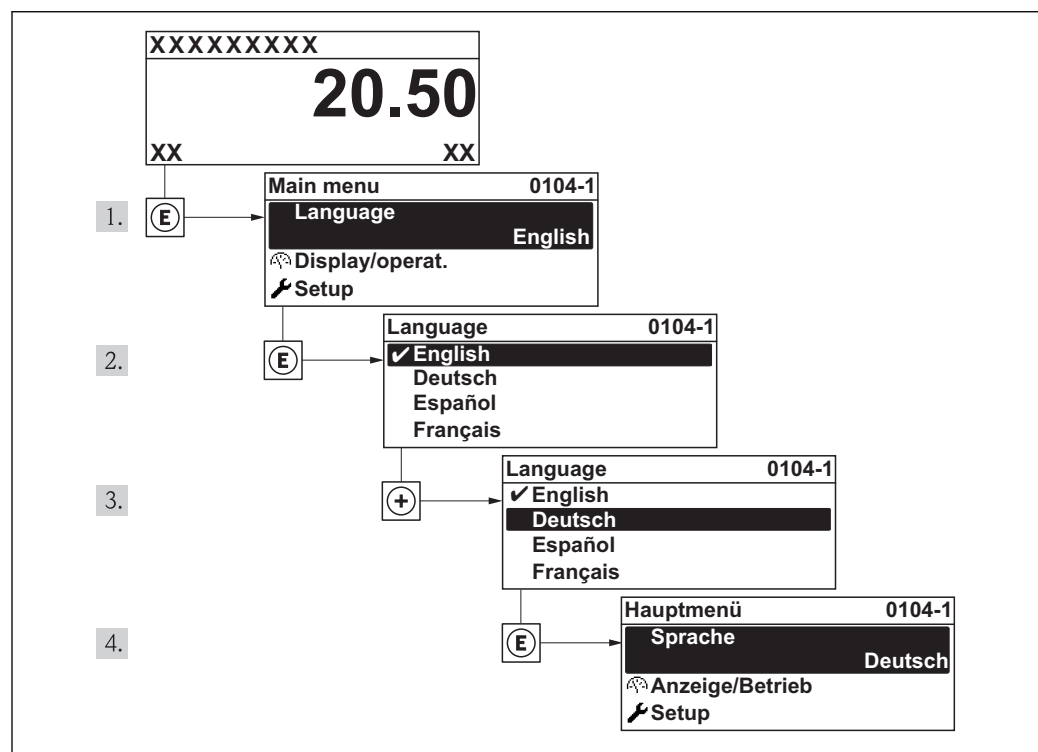

A0013996

📄 20 Taking the example of the local display

## 10.3 Configuration of a level measurement

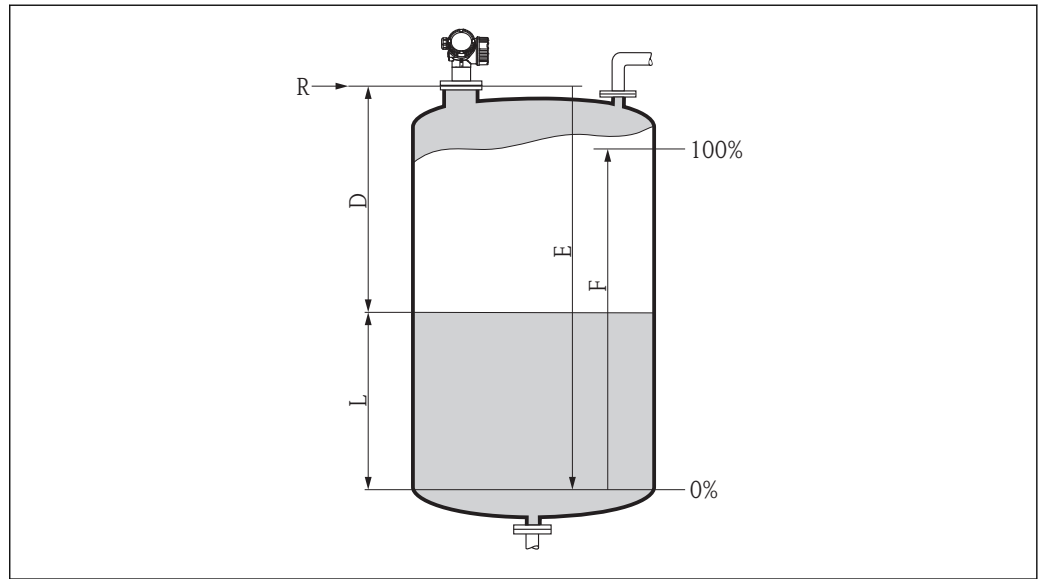

A0016933

1. **Setup → Device tag** (→ ⓘ 94)
  - ↳ Enter device tag.
2. **Setup → Distance unit** (→ ⓘ 94)
  - ↳ Select distance unit.
3. **Setup → Tank type** (→ ⓘ 95)
  - ↳ Select tank type.
4. **Setup → Tube diameter** (only for "Tank type" = "Bypass/pipe") (→ ⓘ 95)
  - ↳ Enter the diameter of the stilling well or bypass.
5. **Setup → Medium group** (→ ⓘ 95)
  - ↳ Specify medium group ("Water based": DC>4 or "Others": DC>1,9)
6. **Setup → Empty calibration** (→ ⓘ 96)
  - ↳ Enter empty distance E (Distance from reference point R to the 0% level)<sup>5)</sup>.
7. **Setup → Full calibration** (→ ⓘ 96)
  - ↳ Enter full distance F (Distance from the 0% to the 100% level).
8. **Setup → Level** (→ ⓘ 97)
  - ↳ Indicates the measured level L.
9. **Setup → Distance** (→ ⓘ 97)
  - ↳ Indicates the measured distance from the reference point R to the level L.
10. **Setup → Signal quality** (→ ⓘ 98)
  - ↳ Indicates the quality of the evaluated level echo.
11. **Setup → Mapping → Confirm distance** (→ ⓘ 99)
  - ↳ Compare distance indicated on the display to real distance in order to start the recording of an interference echo map.
12. **Setup → Advanced setup → Level → Level unit** (→ ⓘ 104)
  - ↳ Select level unit: %, m, mm, ft, in (Factory setting: %)

5) If, for example, the measuring range covers only an upper part of the tank ( $E \ll$  tank height), it is mandatory to enter the actual tank height into the "Setup → Advanced Setup → Level → Tank/silo height" parameter.

 The response time of the device is preset by the **Tank type** parameter. An enhanced setting is possible in the **Advanced setup** submenu.

## 10.4 Configuration of the on-site display

### 10.4.1 Factory settings of the on-site display

Parameter	Factory setting
Format display	1 value, max. size
Value 1 display	Level linearized
Value 2 display	None
Value 3 display	None
Value 4 display	None

### 10.4.2 Adjustment of the on-site display

The on-site display can be adjusted in the following menu:

Setup → ADvanced setup → Display (→  122)

## 10.5 Configuration of the current outputs

### 10.5.1 Factory setting of the current outputs

Current output	Allocated measuring value	4mA value	20mA value
1	Level linearized	0% or the corresponding linearized value	100% or the corresponding linearized value
2 <sup>1)</sup>	Distance	0	Empty calibration

1) for devices with 2 current outputs

### 10.5.2 Adjustment of the current outputs

The current outputs can be adjusted in the following menus:

#### Basic settings


Setup → Advanced setup → Current output 1/2 (→  114)

#### Advanced settings

Expert → Output → Current output 1/2; see document "Description of Device parameters": GPO1014F (HART)

## 10.6 Protection of the settings against unauthorized changes







There are two ways to protect the settings against unauthorized changes:

- Write protection via parameter settings (→  57)
- Write protection via locking switch (→  58)

# 11 Diagnostics and troubleshooting

## 11.1 General trouble shooting

### 11.1.1 General errors

Error	Possible cause	Remedial action
Device does not respond.	Supply voltage does not match the value indicated on the nameplate.	Connect the correct voltage.
	The polarity of the supply voltage is wrong.	Correct the polarity.
	The cables do not contact the terminals properly.	Ensure electrical contact between the cable and the terminal.
Values on the display invisible	Contrast setting is too weak or too strong.	<ul style="list-style-type: none"> <li>▪ Increase contrast by pressing  and  simultaneously.</li> <li>▪ Decrease contrast by pressing  and  simultaneously.</li> </ul>
	The plug of the display cable is not connected correctly.	Connect the plug correctly.
	Display is defective.	Replace display.
"Communication error" is indicated on the display when starting the device or connecting the display	Electromagnetic interference	Check grounding of the device.
	Broken display cable or display plug.	Exchange display.
Output current < 3.6 mA	Signal cable connection incorrect.	Check connection.
	Electronics is defective.	Replace electronics.
HART communication does not function.	Communication resistor missing or incorrectly installed.	Install the communication resistor (250 Ω) correctly (→  39).
	Commubox connected incorrectly.	Connect Commubox correctly (→  54).
	Commubox not switched to HART mode.	Set the selection switch of the Commubox to the HART position.
CDI communication does not work.	Wrong setting of the COM port on the computer.	Check the setting of the COM port on the computer and change it if necessary.
Device measures incorrectly.	Parametrization error	Check parameterization and adjust it if necessary (see table below).

### 11.1.2 Parametrization errors

Error	Possible cause	Remdy
Measured value incorrect	If measured distance ( <b>Setup</b> → <b>Distance</b> ) matches the real distance: Calibration error	<ul style="list-style-type: none"> <li>▪ Check and adjust <b>Setup</b> → <b>Empty calibration</b> if necessary.</li> <li>▪ Check and adjust <b>Setup</b> → <b>Full calibration</b> if necessary.</li> <li>▪ Check and adjust linearization if necessary (<b>Setup</b> → <b>Advanced Setup</b> → <b>Linearization</b>).</li> </ul>
	For measurements in bypass / stilling well: <ul style="list-style-type: none"> <li>▪ Wrong tank type</li> <li>▪ Wrong tube diameter</li> </ul>	<ul style="list-style-type: none"> <li>▪ Select <b>Setup</b> → <b>Tank type = Bypass / pipe</b>.</li> <li>▪ Enter correct diameter in <b>Setup</b> → <b>Tube diameter</b>.</li> </ul>
	Wrong level correction	Enter correct value in <b>Setup</b> → <b>Advanced Setup</b> → <b>Level</b> → <b>Level correction</b> .




Error	Possible cause	Remedy
	If measured distance ( <b>Setup → Distance</b> ) does not match the real distance: Interference echo	Carry out tank mapping ( <b>Setup → Mapping</b> ).
No change of measured value on filling / emptying	Interference echo from installations, nozzle or build-up on the antenna.	<ul style="list-style-type: none"> <li>▪ Carry out tank mapping (<b>Setup → Mapping</b>).</li> <li>▪ If necessary, clean antenna</li> <li>▪ If necessary, select better mounting position</li> </ul>
If the surface is not calm (e.g. filling, emptying, agitator running), the measured value jumps sporadically to a higher level	Signal is weakened by the rough surface - the interference echoes are sometimes stronger.	<ul style="list-style-type: none"> <li>▪ Carry out tank mapping (<b>Setup → Mapping</b>).</li> <li>▪ Select <b>Setup → Tank type = Process vessel with agitator</b>.</li> <li>▪ Increase integration time (<b>Expert → Sensor → Distance → Integration time</b>)</li> <li>▪ Optimize orientation of the antenna</li> <li>▪ If necessary, select a better mounting position and/or larger antenna.</li> </ul>
During filling/emptying the measured value jumps downwards	Multiple echoes	<ul style="list-style-type: none"> <li>▪ Check <b>Setup → Tank type</b>.</li> <li>▪ If possible, do not select central installation position.</li> <li>▪ If appropriate, use a stilling well.</li> </ul>
Error message F941 or S941 "Echo lost"	Level echo is too weak.	<ul style="list-style-type: none"> <li>▪ Check <b>Setup → Medium group</b>.</li> <li>▪ If necessary, select a more detailed setting in <b>Setup → Advanced setup → Level → Medium property</b>.</li> <li>▪ Optimize alignment of antenna</li> <li>▪ If necessary, select a better installation position and/or larger antenna.</li> </ul>
	Level echo suppressed.	Delete mapping and record it again.
Device displays a level when the tank is empty.	Interference echo	Carry out mapping over entire measuring range when the tank is empty ( <b>Setup → Mapping</b> ).
Wrong slope of the level in the entire measuring range	Wrong tank type selected.	Set the <b>Setup → Tank type</b> parameter correctly.

## 11.2 Diagnostic information on local display

### 11.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the measured value display.

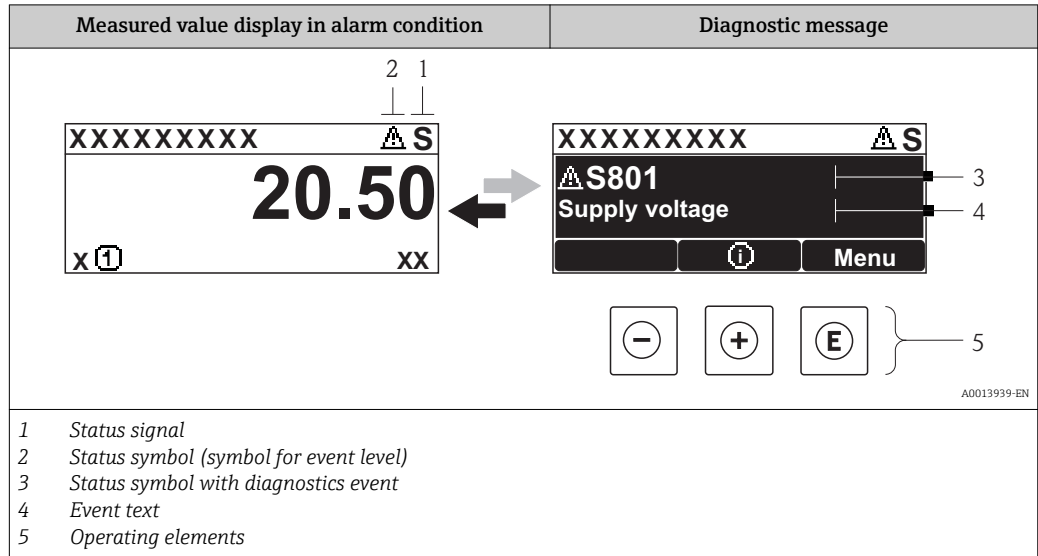

### Status signals


<b>F</b> <small>A0013956</small>	<b>"Failure"</b> A device error is present. The measured value is no longer valid.
<b>C</b> <small>A0013959</small>	<b>"Function check"</b> The device is in service mode (e.g. during a simulation).
<b>S</b> <small>A0013958</small>	<b>"Out of specification"</b> The device is operated: <ul style="list-style-type: none"> <li>▪ Outside of its technical specifications (e.g. during startup or a cleaning)</li> <li>▪ Outside of the configuration carried out by the user (e.g. level outside configured span)</li> </ul>
<b>M</b> <small>A0013957</small>	<b>"Maintenance required"</b> Maintenance is required. The measured value is still valid.


### Status symbol (symbol for event level)


 <small>A0013961</small>	<b>"Alarm" status</b> The measurement is interrupted. The signal outputs take on the defined alarm condition. A diagnostic message is generated.
 <small>A0013962</small>	<b>"Warning" status</b> The device continues to measure. A diagnostic message is generated.

### Diagnostics event and event text

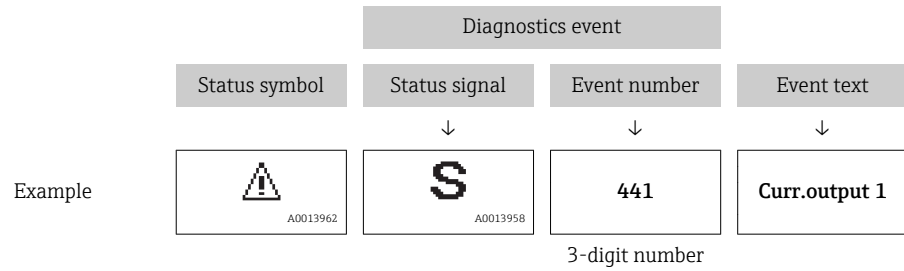

The fault can be identified using the diagnostics event. The event text helps you by providing information about the fault. In addition, the corresponding symbol is displayed before the diagnostics event.




If two or more diagnostic messages are pending simultaneously, only the message with the highest priority is shown. Additional pending diagnostic messages can be shown in the **Diagnostics list** submenu (→  135).

 Past diagnostic messages that are no longer pending are shown in the **Event logbook** submenu (→  136).

### Operating elements

Operating functions in menu, submenu	
 A0013970	<b>Plus key</b> Opens the message about the remedial measures.
 A0013952	<b>Enter key</b> Opens the operating menu.

### 11.2.2 Calling up remedial measures

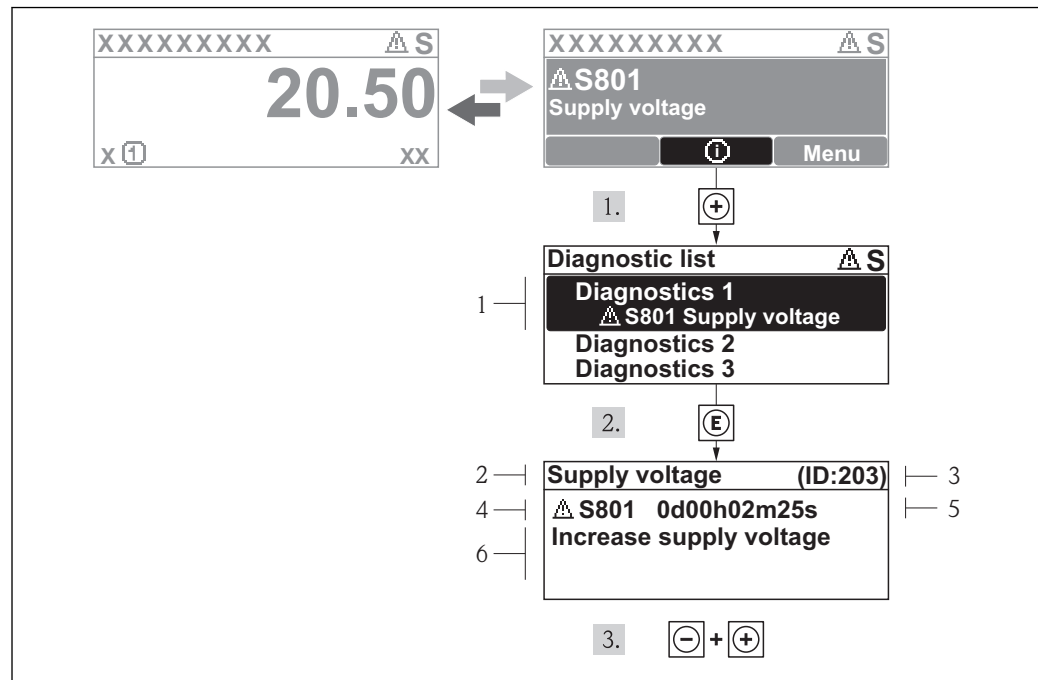

21 Message for remedial measures

- 1 Short text
- 2 Diagnostic behavior with diagnostic code
- 3 Service ID
- 4 Operation time of occurrence
- 5 Remedial measures

The user is in the diagnostic message.

1. Press **+** (**i** symbol).
  - ↳ The **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with **+** or **-** and press **E**.
  - ↳ The message for the remedial measures for the selected diagnostic event opens.
3. Press **-** + **+** simultaneously.
  - ↳ The message about the remedial measures closes.

The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or the **Previous diagnostics** parameter.

1. Press **E**.
  - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press **-** + **+** simultaneously.
  - ↳ The message about the remedial measures closes.

### 11.3 Diagnostic event in the operating tool

If a diagnostic event is present in the device, the status signal appears in the top left status in the operating tool along with the corresponding symbol for event level in accordance with NAMUR NE 107:

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)

**Calling up remedial measures**

1. Navigate to the "Diagnostics" menu.
  - ↳ In the "Actual diagnostics" parameter, the diagnostic event is shown with event text.
2. On the right in the display range, hover the cursor over the "Actual diagnostics" parameter.
  - ↳ A tool tip with remedial measures for the diagnostic event appears.




**11.4 Diagnostic list**



In the **Diagnostics list** submenu, up to 5 currently pending diagnostic messages can be displayed. If more than 5 messages are pending, the messages with the highest priority are shown on the display.

**Navigation path**

Diagnostics → Diagnostics list

**Calling up and closing the remedial measures**

1. Press .
  - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  +  simultaneously.
  - ↳ The message about the remedial measures closes.

 About the structure of the remedial measure message (→  76)

**11.5 Overview of diagnostic information**

**11.5.1 Sensor element failures**

Diagnostic event		Maintenance instructions	Error behavior
Code	Description		
F002	Sensor unknown	1. Check sensor 2. Change sensor	Alarm
F022	Temperature sensor	1. Change main electronic module 2. Change sensor	Alarm
F082	Data storage	1. Change main electronic module 2. Change sensor	Alarm
F083	Sensor memory content	1. Restart device 2. Restore S-Dat data 3. Change sensor	Alarm

**11.5.2 Electronic failures**

Diagnostic event		Maintenance instructions	Error behavior
Code	Description		
F242	Software incompatible	1. Check software 2. Flash or change main electronics module	Alarm
F252	Modules incompatible	1. Check electronic modules 2. Change I/O or main electronic module	Alarm

Diagnostic event		Maintenance instructions	Error behavior
Code	Description		
F261	Electronic modules	1. Restart device 2. Check electronic modules 3. Change I/O module or main electronics	Alarm
F262	Module connection	1. Check module connections 2. Change electronic modules	Alarm
F270	Main electronic failure	Change main electronic module	Alarm
F271	Main electronic failure	1. Restart device 2. Change main electronic module	Alarm
F272	Main electronic failure	1. Restart device 2. Contact service	Alarm
F273	Main electronic failure	1. Emergency operation via display 2. Change main electronics	Alarm
F275	I/O module failure	Change I/O module	Alarm
F276	I/O module failure	1. Restart device 2. Change I/O module	Alarm
F282	Electronic memory	1. Restart device 2. Contact service	Alarm
F283	Memory content	1. Transfer data or reset device 2. Contact service	Alarm
F311	Electronic failure	1. Transfer date or reset device 2. Contact service	Alarm
M311	Electronic failure	Maintenance required! 1. Do not perform reset 2. Contact service	

### 11.5.3 Configuration failures

Diagnostic event		Maintenance instructions	Error behavior
Code	Description		
F410	Data transfer	1. Check connection 2. Retry data transfer	Alarm
C411	Up-/Download	Up-/download active, please wait	Warning
C431	Trim	Carry out trim	Warning
F435	Linearization	Check linearization table	Alarm
F437	Configuration incompatible	1. Restart device 2. Contact service	Alarm
M438	Data set	1. Check data set file 2. Check device configuration 3. Up- and download new configuration	Warning
S441	Current output	1. Check process 2. Check current output settings	Warning
F484	Simulation failure mode	Deactivate simulation	Alarm
C485	Simulation measured value	Deactivate simulation	Warning
C491	Simulation current output	Deactivate simulation	Warning
C494	Simulation switch output	Deactivate simulation switch output	Warning

Diagnostic event		Maintenance instructions	Error behavior
Code	Description		
C585	Simulation distance	Deactivate simulation	Warning
C586	Record map	Recording of mapping; please wait	Warning

### 11.5.4 Process induced failures

Diagnostic event		Maintenance instructions	Error behavior
Code	Description		
F801	Energy too low	Increase supply voltage	Warning
M803	Current loop	1. Check wiring 2. Change I/O module	Alarm
F825	Operating temperature	1. Check ambient temperature 2. Check process temperature	Alarm
S825	Operating temperature	1. Check ambient temperature 2. Check process temperature	Warning
S921	Change of reference	1. Check reference configuration 2. Check pressure 3. Check sensor	Warning/ Alarm
S941	Echo lost	Check parameter "DC value"	Warning/ Alarm
S942	In safety distance	1. Check level 2. Check safety distance 3. Reset self holding	Warning/ Alarm
S943	In blocking distance	Reduced accuracy: check level	Warning
M950	Advanced diagnostics occurred	Maintain your diagnostic event	Warning
S968	Level limited	1. Check level 2. Check limit parameters	Warning
F970	Linearization	1. Check level 2. Check linearization settings	Alarm

## 11.6 Event logbook

### 11.6.1 Event history

A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

#### Navigation path




Diagnostics → Event logbook → Events list

A maximum of 20 event messages can be displayed in chronological order. If the advanced HistoROM function is enabled in the device (order option), up to 100 entries can be displayed.




The event history includes entries for:

- Diagnostic events
- Information events

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
  - : Event has occurred
  - : Event has ended
- Information event
  - : Event has occurred

### Calling up and closing the remedial measures

1. Press .
  - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  +  simultaneously.
  - ↳ The message about the remedial measures closes.

### 11.6.2 Filtering the event logbook

Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Events list** submenu.

#### Navigation path

Diagnostics → Event logbook → Filter options

#### Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

### 11.6.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnose list.

Information event	Event text
I1000	----- (device OK)
I1079	Sensor changed
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	Trend data deleted
I1110	Write protection switch changed
I1137	Electronic changed
I1151	History reset
I1154	Reset terminal voltage min/max
I1155	Reset electronic temperature
I1156	Memory error trend
I1157	Memory error event list
I1184	Display connected
I1185	Display backup done
I1186	Restore via display done



Information event	Event text
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared
I1264	Safety sequence aborted
I1335	Firmware changed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed

## 11.7 Firmware-Historie

Date	Firmware version	Modifications	Documentation (FMR51/FMR52, HART)			
			CD-ROM	Operating Instructions	Description of Parameters	Technical Information
12.2012	01.00.zz	Original software	CD00521F/00/A2/01.12	BA01049F/00/EN/01.12	GP01014F/00/EN/01.12	TI01040F/00/EN/01.12



The firmware version can explicitly be ordered via the product structure. In this way it is possible to ensure compatibility of the firmware version with an existing or planned system integration.

## **12 Maintenance**

The measuring device requires no special maintenance.

### **12.1 Exterior cleaning**

When exterior-cleaning the device, always use cleaning agents that do not attack the surface of the housing and the seals.

### **12.2 Replacing seals**

The process seals of the sensors (at the process connection) must be replaced periodically, particularly if molded seals (aseptic construction) are used. The period between changes depends on the frequency of cleaning cycles and on the temperature of the measured substance and the cleaning temperature.

## 13 Repairs

### 13.1 General information on repairs

#### 13.1.1 Repair concept

The Endress+Hauser repair concept assumes that the devices have a modular design and that repairs can be done by the Endress+Hauser service or specially trained customers.

Spare parts are contained in suitable kits. They contain the related replacement instructions.

For more information on service and spare parts, contact the Service Department at Endress+Hauser.

#### 13.1.2 Repairs to Ex-approved devices

When carrying out repairs to Ex-approved devices, please note the following:


- Repairs to Ex-approved devices may only be carried out by trained personnel or by the Endress+Hauser Service.
- Comply with the prevailing standards, national Ex-area regulations, safety instructions (XA) and certificates.
- Only use original spare parts from Endress+Hauser.
- When ordering a spare part, please note the device designation on the nameplate. Only replace parts with identical parts.
- Carry out repairs according to the instructions. On completion of repairs, carry out the specified routine test on the device.
- Only Endress+Hauser Service may convert a certified device into a different certified variant.
- Document all repair work and conversions.

#### 13.1.3 Replacement of an electronics module

If an electronics module has been replaced, it is not necessary to perform a new basic setup as the calibration parameters are stored in the HistoROM which is located in the housing. However, after exchanging the main electronics module it may be necessary to record a new mapping (interference echo suppression).

#### 13.1.4 Replacement of a device


After a complete device or electronic module has been replaced, the parameters can be downloaded into the instrument again in one of the following ways:

- Via the display module  
Condition: The configuration of the old device has been saved in the display module (→  129).
- Via FieldCare  
Condition: The configuration of the old device has been saved to the computer via FieldCare.

You can continue to measure without carrying out a new setup. Only a linearization and a tank map (interference echo suppression) have to be recorded again.

## 13.2 Spare parts

- A few interchangeable measuring device components are identified by a spare part nameplate. This contains information about the spare part.
- The connection compartment cover of the device contains a spare part nameplate that includes the following information:
  - A list of the most important spare parts for the measuring device, including their ordering information.
  - The URL for the *W@M Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): There, all spare parts for the measuring device are listed, including the order code, and can be ordered. If available, the corresponding Installation Instructions can also be downloaded there.

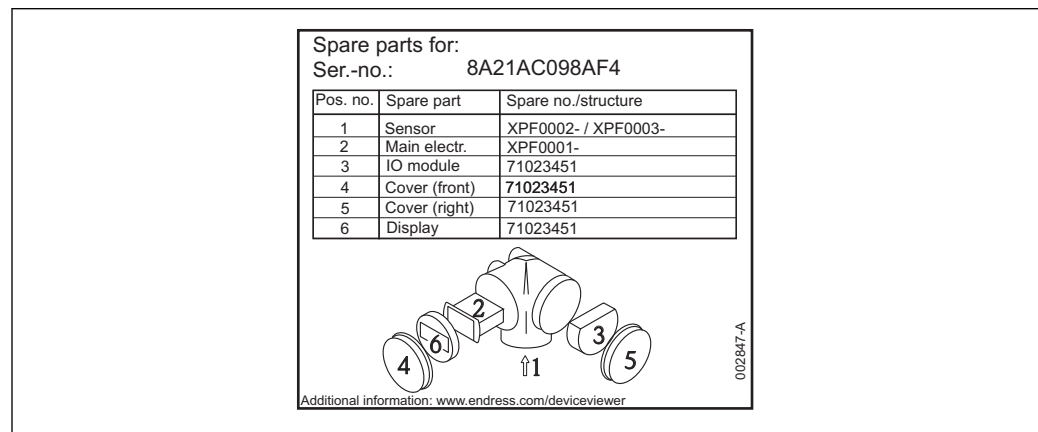

22 Example for spare part nameplate in connection compartment cover

- i** Measuring device serial number:
- Is located on the device and spare part nameplate.
  - Can be read out via the "Serial number" parameter in the "Device information" submenu.

## 13.3 Return

The measuring device must be returned if repairs or a factory calibration are required, or if the wrong measuring device has been ordered or delivered. According to legal regulations, Endress+Hauser, as an ISO-certified company, is required to follow certain procedures when handling returned products that are in contact with medium.

To ensure swift, safe and professional device returns, please read the return procedures and conditions on the Endress+Hauser website at [www.services.endress.com/return-material](http://www.services.endress.com/return-material)


## 13.4 Disposal


Observe the following notes during disposal:


- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.



## 14 Accessories

### 14.1 Device-specific accessories

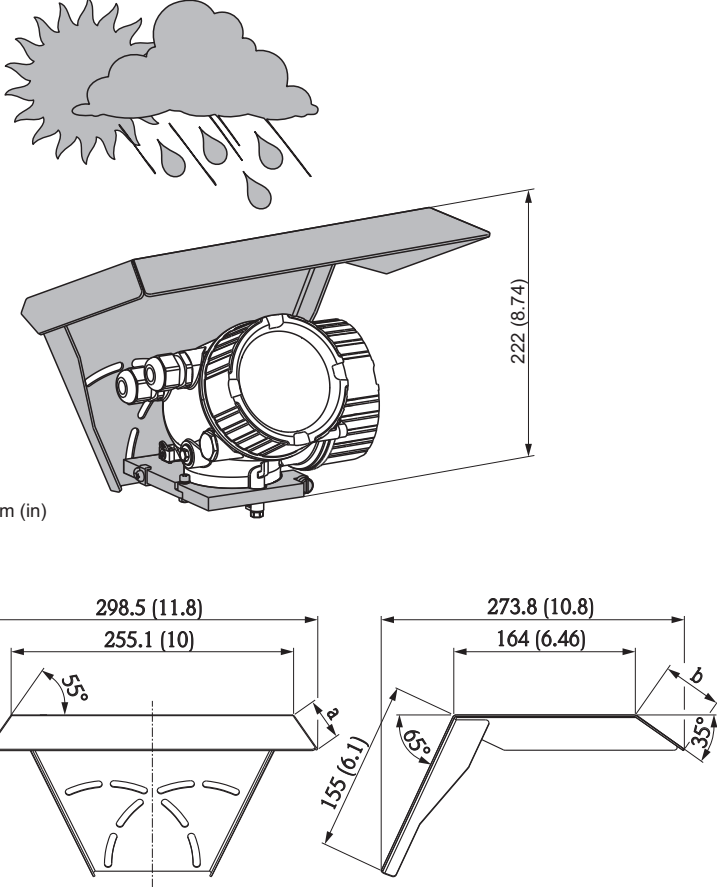Accessory	Description
Weather protection cover	 <p>The diagram illustrates the weather protection cover for the Micropilot FMR51 and FMR52. It includes a weather icon (sun, cloud, rain) and a perspective view of the cover with a height dimension of 222 mm (8.74 in). Two detailed views show the cover's dimensions: a top view with a width of 298.5 mm (11.8 in) and a depth of 255.1 mm (10 in), and a side view with a length of 273.8 mm (10.8 in) and a depth of 164 mm (6.46 in). The side view also shows a 65° angle and a 35° angle. A height dimension of 155 mm (6.1 in) is shown for the side view. Dimensions 'a' and 'b' are indicated at the bottom corners of the side view.</p> <p>mm (in)</p> <p><b>A0015466</b></p> <p>mm (in)</p> <p><b>A0015472</b></p> <p><i>a</i> 37.8 mm (1.49 in)  <i>b</i> 54 mm (2.13 in)</p> <p><b>i</b> The weather protection cover can be ordered together with the device (product structure, feature 620 "Accessory Enclosed", option PB "Weather Protection Cover"). Alternatively, it can be separately ordered as an accessory; order code 71132889.</p>

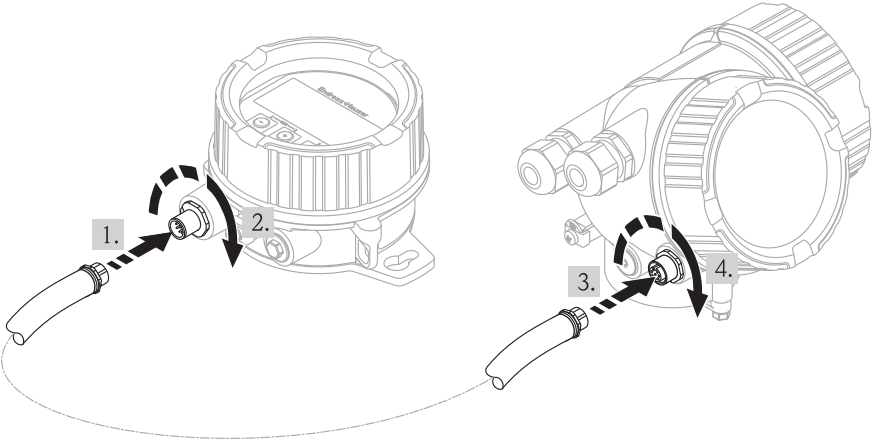
Accessory	Description
Remote display FHX50	<div style="text-align: center;">  </div> <p style="text-align: right;">A0019128</p> <ul style="list-style-type: none"> <li>▪ Material:             <ul style="list-style-type: none"> <li>- Plastics PBT</li> <li>- 316L (in preparation)</li> </ul> </li> <li>▪ Suitable for the display modules:             <ul style="list-style-type: none"> <li>- SD02 (push buttons)</li> <li>- SD03 (touch control) (in preparation)</li> </ul> </li> <li>▪ Connection cable:             <ul style="list-style-type: none"> <li>- Cable with M12 plug; supplied with the FHX50; up to 30 m (98 ft)</li> <li>- Customer supplied standard cable; up to 60 m (196 ft)</li> </ul> </li> </ul> <p><b>i</b> ▪ If the remote display is to be used, the Micropilot must be ordered in the version "Prepared for display FHX50" (feature O30, option L or M). For the FHX50, on the other hand, the option A: "Prepared for display FHX50" has to be selected in feature O50: "Option Measurement Device".</p> <p>▪ If a Micropilot has not been ordered in the version "Prepared for display FHX50", but is nevertheless to be equipped with an FHX50, it is essential to select the option B: "Not prepared for display FHX50" in feature O50: "Option Measurement Device" of the FHX50. In this case, a retrofit kit, needed to prepare the Micropilot for the remote display, is supplied together with the FHX50.</p> <p><b>i</b> For details refer to the document SD01007F.</p>

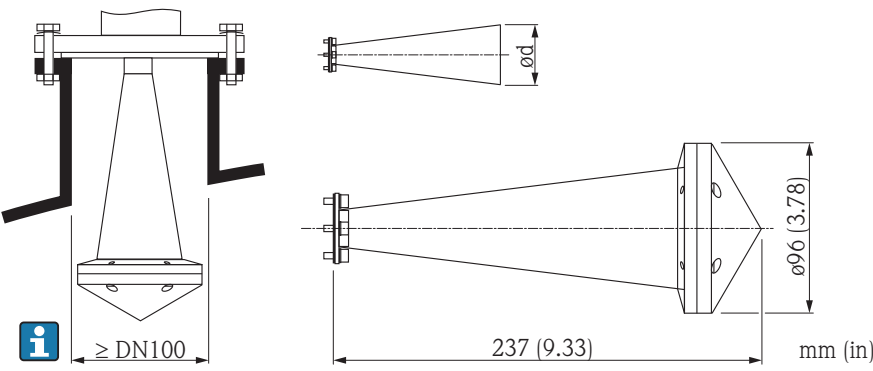
Accessory	Description
Horn protection for 80 mm (3 in) horn antenna	<div style="text-align: center;">  </div> <p style="text-align: right;">A0019143</p> <p>For details please refer to the Mounting Instructions SD01084F.</p> <p><b>Process conditions</b></p> <ul style="list-style-type: none"> <li>▪ Maximum vessel pressure: 0.5 bar (7.252 psi)</li> <li>▪ Maximum process temperature: 130 °C (266 °F)</li> </ul> <p><b>i</b> Danger of explosion Avoid electrostatic charging of the horn protection.</p>

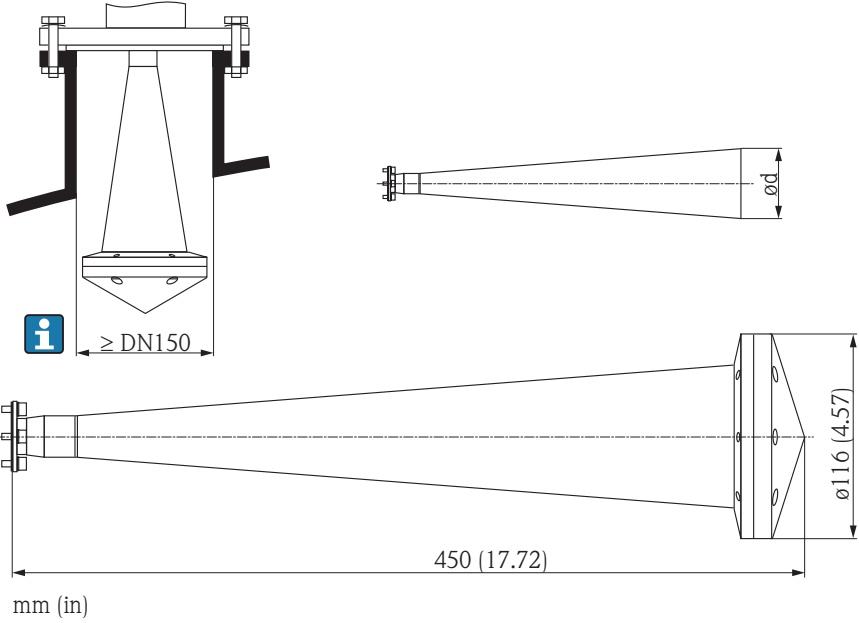
Accessory	Description
Horn protection for 100 mm (4 in) horn antenna	 <p>For details please refer to the Mounting Instructions SD01084F.</p> <p><b>Process conditions</b></p> <ul style="list-style-type: none"> <li>Maximum vessel pressure: 0.5 bar (7.252 psi)</li> <li>Maximum process temperature: 130 °C (266 °F)</li> </ul> <p> Danger of explosion Avoid electrostatic charging of the horn protection.</p>


A0019144


## 14.2 Communication-specific accessories


Accessory	Description
Commubox FXA195 HART	For intrinsically safe HART communication with FieldCare via the USB interface.  For details refer to Technical Information TI00404F


Accessory	Description
Commubox FXA291	Connects Endress+Hauser field devices with CDI interface (= Endress+Hauser Common Data Interface) to the USB interface of a computer.  For details refer to Technical Information TI00405C

Accessory	Description
HART Loop Converter HMX50	Evaluates the dynamic HART variables and converts them to analog current signals or limit values.  For details refer to Technical Information TI00429F and Operating Instructions BA00371F


Accessory	Description
WirelessHART Adapter SWA70	<p>Connects field devices to a WirelessHART network. The WirelessHART adapter can be mounted directly at a HART device and is easily integrated into an existing HART network. It ensures safe data transmission and can be operated in parallel with other wireless networks.</p> <p> For details refer to Operating Instructions BA00061S</p>

Accessory	Description
Fieldgate FXA320	<p>Gateway for remote monitoring of connected 4-20mA measuring devices via web browser.</p> <p> For details refer to Technical Information TI00025S and Operating Instructions BA00053S</p>

Accessory	Description
Fieldgate FXA520	<p>Gateway for remote diagnosis and parametrization of connected HART measuring devices via web browser.</p> <p> For details refer to Technical Information TI00025S and Operating Instructions BA00051S</p>




Accessory	Description
Field Xpert SFX100	<p>Compact, flexible and robust industry handheld terminal for remote parametrization and measured value inspection via the HART output or via FOUNDATION Fieldbus .</p> <p> For details refer to Operating Instructions BA00060S</p>

### 14.3 Service-specific accessories

Accessory	Description
FieldCare	<p>Endress+Hauser's FDT-based Plant Asset Management tool. Helps to configure and maintain all field devices of your plant. By supplying status information it also supports the diagnosis of the devices.</p> <p> For details refer to Operating Instructions BA00027S and BA00059S.</p>
















## 14.4 System components




Accessory	Description
Graphic Data Manager Memograph M	<p>The graphic data manager Memograph M provides information on all the relevant process variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on an SD card or USB stick.</p> <p> For details refer to Technical Information TI00133R and Operating Instructions BA00247R</p>
RN221N	<p>Active barrier with power supply for safe separation of 4 to 20 mA current circuits. Provides bi-directional HART transmission.</p> <p> For details refer to Technical Information TI00073R and Operating Instructions BA00202R</p>
RNS221	<p>Transmitter supply for 2-wire sensors or transmitters exclusively for non-Ex areas. Provides bi-directional communication using the HART communication sockets.</p> <p> For details refer to Technical Information TI00081R and Operating Instructions KA00110R</p>










## 15 Overview of the operating menu










Language	(→  94)
----------	--

<b>Setup →</b>	Device tag	(→  94)
	Distance unit	(→  94)
	Tank type	(→  95)
	Tube diameter	(→  95)
	Medium group	(→  95)
	Empty calibration	(→  96)
	Full calibration	(→  96)
	Level	(→  97)
	Distance	(→  97)
	Signal quality	(→  98)

<b>Setup →</b>	<b>Mapping →</b>	Confirm distance	(→  99)
		Mapping end point	(→  100)
		Record map	(→  100)

<b>Setup →</b>	<b>Advanced setup →</b>	Locking status	(→  100)
		Access status display	(→  101)
		Enter access code	(→  101)

<b>Setup →</b>	<b>Advanced setup →</b>	<b>Level →</b>	Medium type	(→  102)
			Medium property	(→  102)
			Max. filling speed liquid	(→  102)
			Max. draining speed liquid	(→  103)
			Advanced process conditions	(→  103)
			Level unit	(→  104)
			Blocking distance	(→  104)
			Level correction	(→  105)
			Tank/silo height	(→  105)

<b>Setup →</b>	<b>Advanced setup →</b>	<b>Linearization →</b>	Linearization type	(→  106)
			Unit linearized	(→  106)
			Free text	(→  107)
			Maximum value	(→  107)
			Diameter	(→  108)
			Intermediate height	(→  108)
			Table mode	(→  109)
			Table number	(→  109)
			Level	(→  109)

			Customer value	(→ ⓘ 110)
			Activate table	(→ ⓘ 110)

Setup →	Advanced setup →	Safety settings →	Output echo lost	(→ ⓘ 111)
			Value echo lost	(→ ⓘ 111)
			Ramp echo lost	(→ ⓘ 111)
			Blocking distance	(→ ⓘ 104)










Setup →	Advanced setup →	SIL/WHG confirmation →		(→ ⓘ 113)
---------	------------------	------------------------	--	-----------





Setup →	Advanced setup →	Deactivate SIL/WHG →		(→ ⓘ 113)
---------	------------------	----------------------	--	-----------




Setup →	Advanced setup →	Current output 1/2 →	Assign current output	(→ ⓘ 114)
			Current span	(→ ⓘ 114)
			Fixed current	(→ ⓘ 115)
			Damping	(→ ⓘ 115)
			Failure mode	(→ ⓘ 116)
			Failure current	(→ ⓘ 116)
			Output current 1/2	(→ ⓘ 117)





Setup →	Advanced setup →	Switch output →	Switch output function	(→ ⓘ 117)
			Assign status	(→ ⓘ 117)
			Assign limit	(→ ⓘ 118)
			Assign diagnostic level	(→ ⓘ 118)
			Switch-on value	(→ ⓘ 118)
			Switch-on delay	(→ ⓘ 120)
			Switch-off value	(→ ⓘ 118)
			Switch-off delay	(→ ⓘ 120)
			Failure mode	(→ ⓘ 120)
			Switch status	(→ ⓘ 120)
			Invert output signal	(→ ⓘ 121)






Setup →	Advanced setup →	Display →	Language	(→ ⓘ 94)
			Format display	(→ ⓘ 122)
			Value 1 display	(→ ⓘ 124)
			Decimal places 1	(→ ⓘ 124)
			Value 2 display	(→ ⓘ 124)
			Decimal places 2	(→ ⓘ 124)
			Value 3 display	(→ ⓘ 124)
			Decimal places 3	(→ ⓘ 124)
			Value 4 display	(→ ⓘ 124)
			Decimal places 4	(→ ⓘ 124)



	Display interval	(→  125)
	Display damping	(→  125)
	Header	(→  125)
	Header text	(→  126)
	Separator	(→  126)
	Number format	(→  127)
	Decimal places menu	(→  127)
	Backlight	(→  127)
	Contrast display	(→  128)









<b>Setup →</b>	<b>Advanced setup →</b>	<b>Configuration backup display →</b>	Operating time	(→  129)
			Last backup	(→  129)
			Configuration management	(→  129)
			Camparison result	(→  130)

<b>Setup →</b>	<b>Advanced setup →</b>	<b>Administration →</b>	Device reset	(→  133)
			Define access code	(→  132)
			Confirm access code	(→  132)

<b>Diagnostics →</b>	Actual diagnostics	(→  135)
	Previous diagnostics	(→  134)
	Operating time from restart	(→  134)
	Operating time	(→  129)

<b>Diagnostics →</b>	<b>Diagnostics list →</b>	Diagnostics 1	(→  135)
		Diagnostics 2	(→  135)
		Diagnostics 3	(→  135)
		Diagnostics 4	(→  135)
		Diagnostics 5	(→  135)

<b>Diagnostics →</b>	<b>Event logbook →</b>	Filter options	(→  136)
		Event list	(→  136)

<b>Diagnostics →</b>	<b>Device information →</b>	Device tag	(→  138)
		Serial number	(→  138)
		Firmware version	(→  138)
		Device name	(→  138)
		Order code	(→  139)
		Extended order code 1	(→  139)
		Extended order code 2	(→  139)
		Extended order code 3	(→  139)

<b>Diagnostics →</b>	<b>Measured value →</b>	Distance	(→ ⓘ 97)
		Level linearized	(→ ⓘ 140)
		Output current 1/2	(→ ⓘ 117)
		Measured current 1	(→ ⓘ 140)
		Terminal voltage 1	(→ ⓘ 140)
		Switch status	(→ ⓘ 120)
		Electronic temperature	(→ ⓘ 140)





<b>Diagnostics →</b>	<b>Data logging → (in Vorbereitung)</b>	Assign channel 1	(→ ⓘ 141)
		Assign channel 2	(→ ⓘ 141)
		Assign channel 3	(→ ⓘ 141)
		Assign channel 4	(→ ⓘ 141)
		Logging interval	(→ ⓘ 141)
		Clear logging data	(→ ⓘ 142)
		Display channel 1	(→ ⓘ 142)
		Display channel 2	(→ ⓘ 142)
		Display channel 3	(→ ⓘ 142)
Display channel 4	(→ ⓘ 142)		

<b>Diagnostics →</b>	<b>Simulation →</b>	Assign measurement variable	(→ ⓘ 144)
		Value process variable	(→ ⓘ 144)
		Swtich output simulation	(→ ⓘ 144)
		Switch status	(→ ⓘ 145)
		Simulation current output 1/2	(→ ⓘ 145)
		Value current output 1/2	(→ ⓘ 145)
		Simulation device alarm	(→ ⓘ 146)

<b>Diagnostics →</b>	<b>Device check →</b>	Start device check	(→ ⓘ 147)
		Result device check	(→ ⓘ 147)
		Last check time	(→ ⓘ 147)
		Level signal	(→ ⓘ 147)

<b>Experte</b>	The "Expert" menu is described in the document GP01014F ("Description of device parameters").
----------------	---


## 16 Description of device parameters

- i
  - : Marks the navigation path to the parameter via the display and operating module.
  - : Marks the navigation path to the parameter via an operating tool (e.g. FieldCare).
  - : Marks parameters which can be locked via the software locking (→  57).

---

### Language

---

<b>Navigation</b>	 Language
<b>Description</b>	Set display language
<b>Options</b>	<ul style="list-style-type: none"> <li>▪ English</li> <li>▪ One additional operating language (see product structure, feature 500, "Additional Operation Language")</li> </ul>
<b>Factory setting</b>	English



### 16.1 "Setup" menu

---

#### Device tag

---





<b>Navigation</b>	  Setup → Device tag
<b>Description</b>	Enter tag for measuring point
<b>Input range</b>	Up to 32 alphanumerical characters
<b>Factory setting</b>	FMR5x

---


#### Distance unit

---






<b>Navigation</b>	  Setup → Distance unit
<b>Description</b>	Length unit for distance calculation
<b>Options</b>	<ul style="list-style-type: none"> <li>▪ mm</li> <li>▪ m</li> <li>▪ ft</li> <li>▪ in</li> </ul>
<b>Factory setting</b>	m


---

**Tank type**





---

<b>Navigation</b>	  Setup → Tank type
<b>Description</b>	Defines the tank type
<b>Options</b>	<ul style="list-style-type: none"> <li>■ Process vessel with agitator</li> <li>■ Process vessel standard</li> <li>■ Storage vessel</li> <li>■ Bypass / pipe</li> <li>■ Open channel</li> <li>■ Wave guide antenna</li> <li>■ Stilling well</li> <li>■ Sphere</li> <li>■ Workbench test</li> </ul> <p> The antenna type of the device determines which of these options are available.</p>
<b>Factory setting</b>	Process vessel standard
<b>Additional information</b>	The response time of the device is preset by the <b>Tank type</b> parameter. An enhanced setting is possible in the <b>Advanced setup</b> submenu.


---

**Tube diameter**





---

<b>Navigation</b>	  Setup → Tube diameter
<b>Prerequisite</b>	<b>Tank type = Bypass / pipe</b>
<b>Description</b>	Defines the diameter of the bypass or stilling well.
<b>Input range</b>	0 to 9 999 mm (0 to 390 in)
<b>Factory setting</b>	0 mm (0 in)

---

**Medium group**



---

<b>Navigation</b>	  Setup → Medium group
<b>Description</b>	Defines the medium group of the measured product.
<b>Options</b>	<ul style="list-style-type: none"> <li>■ Water based (DC ≥ 4)</li> <li>■ Others (DC ≥ 1.9)</li> </ul>
<b>Factory setting</b>	Others (DC ≥ 1,9)

**Additional information** If required, smaller DC values can be entered into "Expert → Sensor → Medium → Medium property". This, however, may reduce the measuring range.

---

**Empty calibration**



**Navigation** Setup → Empty calibration

**Description** Distance process connection to min. level

**Input range** 0 to 100 m (0 to 328 ft)

**Factory setting** 40 m (131 ft)  
A different value can be defined when ordering the device.

**Additional information** The empty calibration E is the distance between the reference point (lower edge of the flange or threaded connection) and the minimum level (0%).

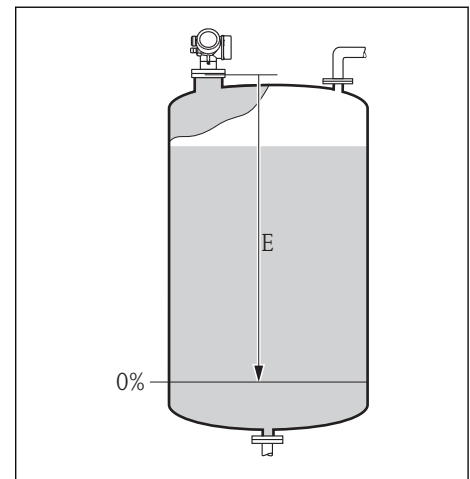

A0019486

---

**Full calibration**


**Navigation** Setup → Full calibration

**Description** Span: max. level - min. level


**Input range** 0.001 to 100 m (0.003 to 328 ft)

**Factory setting** Empty calibration - Blocking distance  
A different value can be defined when ordering the device.



**Additional information**

The full calibration  $F$  is the distance between the minimum level (0%) and the maximum level (100%).

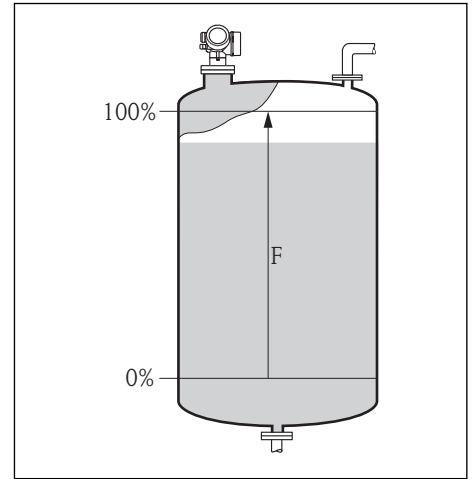

A0019487


**Level**

**Navigation**

  Setup → Level


**Description**

Displays the measured level  $L$  (before linearization)

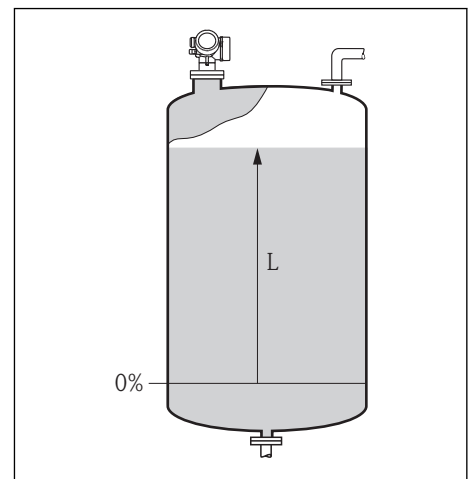



A0019482

**Zusätzliche Information**

The value is displayed in the selected "Level unit" (→  104).


**Distance**

**Navigation**

  Setup → Distance

**Description**

Displays the measured distance D from the reference point (lower edge of the flange or threaded connection) to the level.

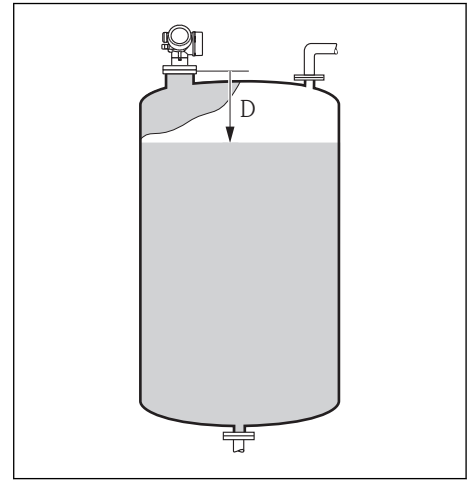

A0019483

**Additional information**

The value is displayed in the selected "Level unit" (→ 104).

**Signal quality****Navigation**

Setup → Signal quality

**Description**

Displays the signal quality

**Display options**





- Strong
- Medium
- Weak
- No signal

**Additional information**




In case of a lost echo ( **No signal**), the device generates the following error message:

- F941 if the **Alarm** option has been selected in the **Output echo lost** parameter (→ 111)
- S941 if another option has been selected in the **Output echo lost** parameter (→ 111).




## 16.1.1 "Mapping" sequence

Confirm distance	
<b>Navigation</b>	  Setup → Mapping → Confirm distance
<b>Description</b>	Confirmation whether the measured distance matches the actual distance. Depending on the selection, the device automatically determines the range over which the mapping will be recorded.
<b>Options</b>	<ul style="list-style-type: none"> <li>■ Manual map</li> <li>■ Distance ok</li> <li>■ Distance unknown</li> <li>■ Distance too small</li> <li>■ Distance too big <sup>1)</sup></li> <li>■ Tank empty</li> <li>■ Factory map</li> </ul>
1)	Only available for "Expert → Sensor → Echo tracking → Evaluation mode" = "Short time history" or "Long time history"
<b>Factory setting</b>	Distance unknown
<b>Additional information</b>	<p>Check whether the displayed distance matches the actual distance. Depending on the selection, the device automatically determines the range over which the mapping will be recorded.</p> <p> For reference purposes the measured distance is displayed together with this parameter.</p>
	<b>Meaning of the options</b>
	<ul style="list-style-type: none"> <li>■ Manual map To be selected if the range of mapping is to be defined manually in the <b>Mapping end point</b> parameter. In this case it is not necessary to confirm the distance.</li> <li>■ Distance ok To be selected if the measured distance matches the actual distance. The device performs a mapping and quits the sequence ("End of sequence" appears on the display).</li> <li>■ Distance unknown To be selected if the actual distance is unknown. A mapping can not be performed and the device quits the sequence ("End of sequence" appears on the display).</li> <li>■ Distance too small To be selected if the measured distance is smaller than the actual distance. The device searches the next echo and returns to the <b>Confirm distance</b> parameter. The new distance is displayed. The comparison must be repeated until the displayed distance matches the actual distance. If this is the case, the recording of the map can be started by selecting <b>Distance ok</b>.</li> <li>■ Distance too big To be selected if the measured distance is bigger than the actual distance. The device adjusts the signal evaluation and returns to the <b>Confirm distance</b> parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance.</li> <li>■ Tank empty To be selected if the tank is completely empty. The device records a mapping covering the complete length of the probe and quits the sequence ("End of sequence" appears on the display).</li> <li>■ Factory map To be selected if the present mapping curve (if one exists) is to be deleted. The device returns to the <b>Confirm distance</b> parameter and a new mapping can be recorded.</li> </ul>

---


<b>Mapping end point</b>		
<b>Navigation</b>	  Setup → Mapping → Map. end point	
<b>Prerequisite</b>	<b>Confirm distance = Manual map</b> or <b>Distance too small.</b>	
<b>Description</b>	New end point of mapping	
<b>Input range</b>	0.1 m (0.33 ft) ... Tanks /silo height <sup>1)</sup>	
	1) Parameter: "Expert → Sensor → Level → Tank/silo height"	
<b>Factory setting</b>	1 m (3.3 ft)	
<b>Additional information</b>	<p>This parameter defines up to which distance the new mapping is to be recorded. The distance is measured from the reference point, i.e. from the lower edge of the mounting flange or the threaded connection.</p> <p>For reference purposes the <b>Present mapping</b> parameter is displayed together with this parameter. <b>Present mapping</b> states up to which distance a mapping has already been recorded.</p>	



---

<b>Record map</b>		
<b>Navigation</b>	  Setup → Mapping → Record map	
<b>Prerequisites</b>	<b>Confirm distance = Manual map</b> or <b>Distance too small.</b>	
<b>Description</b>	Starts the recording of the map.	
<b>Options</b>	<ul style="list-style-type: none"> <li>▪ No</li> <li>▪ Record map</li> <li>▪ Overlay map</li> <li>▪ Factory map</li> <li>▪ Delete partial map</li> </ul>	
<b>Factory setting</b>	No	

### 16.1.2 "Advanced setup" submenu

---







<b>Locking status</b>	
<b>Navigation</b>	 Setup → Advanced setup → Status Verrieg.
<b>Description</b>	Indicates the write protection with the highest priority that is currently active

<b>Display options</b>	<ul style="list-style-type: none"> <li>■ Hardware locked</li> <li>■ Cust. trans. active</li> <li>■ WHG locked</li> <li>■ Temporarily locked</li> </ul>
<b>Additional information</b>	 The  -symbol appears in front of parameters that cannot be modified since they are write-protected.

---

### Access status display






---

<b>Navigation</b>	  Setup → Advanced setup → Access status display
<b>Prerequisite</b>	Only visible for devices with operating and display module (SD02 or SD03)
<b>Description</b>	Indicates access authorization to parameters via local display
<b>Display options</b>	<ul style="list-style-type: none"> <li>■ Operator</li> <li>■ Maintenance</li> <li>■ Service</li> </ul>
<b>Additional information</b>	 <ul style="list-style-type: none"> <li>■ The access authorization can be changed via the <b>Enter access code</b> parameter (→  101).</li> <li>■ If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the <b>Locking status</b> parameter (→  100).</li> <li>■ If a  symbol appears in front of a parameter, the parameter cannot be changed via the local display with the current access authorization.</li> </ul>

---

### Enter access code

---



<b>Navigation</b>	  Setup → Advanced setup → Enter access code
<b>Description</b>	Enter access code to disable write protection
<b>Input range</b>	0 to 9999
<b>Additional information</b>	<p>For local operation, the customer-specific access code defined in the <b>Setup → Advanced setup → Administration → Define access code</b> sequence has to be entered. If an incorrect access code is entered, the user retains his current access authorization. The write protection affects all parameters marked with the -symbol in the document. On the local display, the -symbol in front of a parameter indicates that the parameter is write-protected.</p> <p>If no key is pressed for 10 minutes, or the user goes from the navigation and editing mode back to the measured value display mode, the device automatically locks the write-protected parameters after another 60 s .</p>  Please contact your Endress+Hauser Sales Center if you lose your access code

## The "Level" submenu

---

### Medium type




---

<b>Navigation</b>	  Setup → Advanced Setup → Level → Medium type
<b>Description</b>	Indication of the medium type
<b>Display options</b>	<ul style="list-style-type: none"> <li>■ Liquid</li> <li>■ Solid</li> </ul>
<b>Factory setting</b>	Liquid

---

### Medium property



---

<b>Navigation</b>	  Setup → Advanced Setup → Level → Medium property
<b>Description</b>	DC: Dielectric constant
<b>Options</b>	<ul style="list-style-type: none"> <li>■ Unknown</li> <li>■ DC 1.4 to 1.6</li> <li>■ DC 1.6 to 1.9</li> <li>■ DC 1.9 to 2.5</li> <li>■ DC 2.5 to 4</li> <li>■ DC 4 to 7</li> <li>■ DC 7 to 15</li> <li>■ DC &gt; 15</li> </ul>
<b>Factory setting</b>	Unknown
<b>Additional information</b>	 Dielectric constants of important media commonly used in the industry are summarized in the document SD106F, which can be downloaded from the Endress+Hauser web page ( <a href="http://www.endress.com">www.endress.com</a> ).

---

### Max. filling speed liquid



---

<b>Navigation</b>	  Setup → Advanced setup → Level → Max. filling speed liquid
<b>Prerequisite</b>	<b>Medium type = Liquid</b>
<b>Description</b>	Select expected maximum filling speed

<b>Options</b>	<ul style="list-style-type: none"> <li>■ Slow &lt; 1cm (0.4in)/min</li> <li>■ Medium &lt; 10cm (4in)/min</li> <li>■ Standard &lt; 1m (40in)/min</li> <li>■ Fast &lt; 2m (80in) /min</li> <li>■ Very fast &gt; 2m (80in) /min</li> <li>■ No filter / test</li> </ul>
<b>Factory setting</b>	Standard < 1m (40in)/min
<b>Additional information</b>	<b>Max. filling speed liquid</b> is preset through the parameter <b>Setup</b> → <b>Tank type</b> . It can, however, be adjusted to the process in the vessel at any time. If <b>Tank type</b> is changed again at a later point of time, it may be necessary to repeat the fine adjustment.



---

### Max. draining speed liquid

<b>Navigation</b>	  Setup → Advanced setup → Level → Max. draining speed liquid
<b>Prerequisite</b>	<b>Medium type = Liquid</b>
<b>Description</b>	Select expected maximum filling speed
<b>Options</b>	<ul style="list-style-type: none"> <li>■ Slow &lt; 1cm (0.4in)/min</li> <li>■ Medium &lt; 10cm (4in)/min</li> <li>■ Standard &lt; 1m (40in)/min</li> <li>■ Fast &lt; 2m (80in) /min</li> <li>■ Very fast &gt; 2m (80in) /min</li> <li>■ No filter / test</li> </ul>
<b>Factory setting</b>	Standard < 1m (40in)/min
<b>Additional information</b>	<b>Max. draining speed liquid</b> is preset through the parameter <b>Setup</b> → <b>Tank type</b> . It can, however, be adjusted to the process in the vessel at any time. If <b>Tank type</b> is changed again at a later point of time, it may be necessary to repeat the fine adjustment.

---

### Advanced process conditions

<b>Navigation</b>	  Setup → Advanced setup → Level → Advanced process conditions
<b>Description</b>	Defines additional process conditions (if necessary)
<b>Options</b>	<ul style="list-style-type: none"> <li>■ None</li> <li>■ Many obstacles This option is not recommended for liquids.</li> <li>■ Small tanks (&lt; 1m/3ft)</li> <li>■ Changing DC values</li> <li>■ Foam (&gt; 5cm/0.16ft)</li> </ul>
<b>Factory setting</b>	None

---

**Level unit**


**Navigation**      Setup → Advanced setup → Level → Level unit

**Description**      Defines the level unit

**Options**

- %
- m
- mm
- ft
- in

**Factory setting**      %

**Additional information**      The level unit may differ from the distance unit as defined in the **Distance unit** parameter (→ 94):

- The distance unit is used for the basic calibration ("Empty calibration" and "Full calibration").
- The level unit is used to display the (nonlinearized) level.

---

**Blocking distance**


**Navigation**

Setup → Advanced setup → Level → Blocking dist.  
 Setup → Advanced setup → Safety settings → Blocking dist.


**Description**      Area in which measurement is impossible.

**Input range**      0 to 200 m (0 to 656 ft)

**Factory setting**

- FMR51: Antenna length
- FMR52: Antenna length + 200 mm (7.9 in)

**Additional information**      No echos are evaluated within the blocking distance UB. Therefore, UB can be used to suppress interference echos close to the antenna.

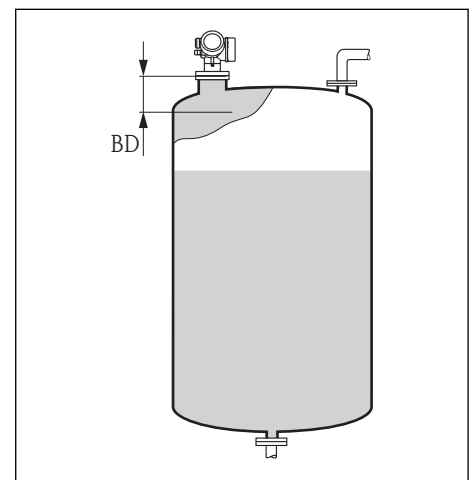

A0019492



---

**Level correction**


<b>Navigation</b>	Setup → Advanced setup → Level → Level correction
<b>Description</b>	Defines a level correction
<b>Input range</b>	<b>Depending on the selected level unit:</b> <ul style="list-style-type: none"> <li>■ -100,0 to 100,0 %</li> <li>■ -200,0 to +200,0 m</li> <li>■ -656,2 to +656,2 ft</li> <li>■ -7874,0 to +7874,0 inch</li> <li>■ -200.000,0 to +200.000,0 mm</li> </ul>
<b>Factory setting</b>	0%
<b>Additional information</b>	The value specified in this parameter is added to the measured level (before linearization).

---



**Tank/silo height**


<b>Navigation</b>	Setup → Advanced setup → Level → Tank/silo height
<b>Description</b>	Total height of the tank/silo, as measured from the process connection
<b>Input range</b>	-999.999 to +999.999 m (-3 280 to +3 280 ft)
<b>Factory setting</b>	Empty calibration
<b>Additional information</b>	<p>If the parametrized measuring range (<b>Empty calibration</b>) differs significantly from the tank or silo height, it is recommended to enter the tank or silo height. On default, <b>Tank/Silo height</b> is always equal to <b>Empty calibration</b>.</p> <p>Example: Continuous level monitoring in the upper third of a tank or silo.</p>

## The "Linearization" submenu

Linearization type 

## Navigation


  Setup → Advanced setup → Linearization → Linearization type

## Description

Defines the type of linearization

## Options

- None  
The level is transmitted without linearization.
- Linear (A)
- Table (B)
- Pyramid bottom (C)
- Conical bottom (D)
- Angled bottom (E)
- Horizontal cylinder (F)
- Sphere (G)

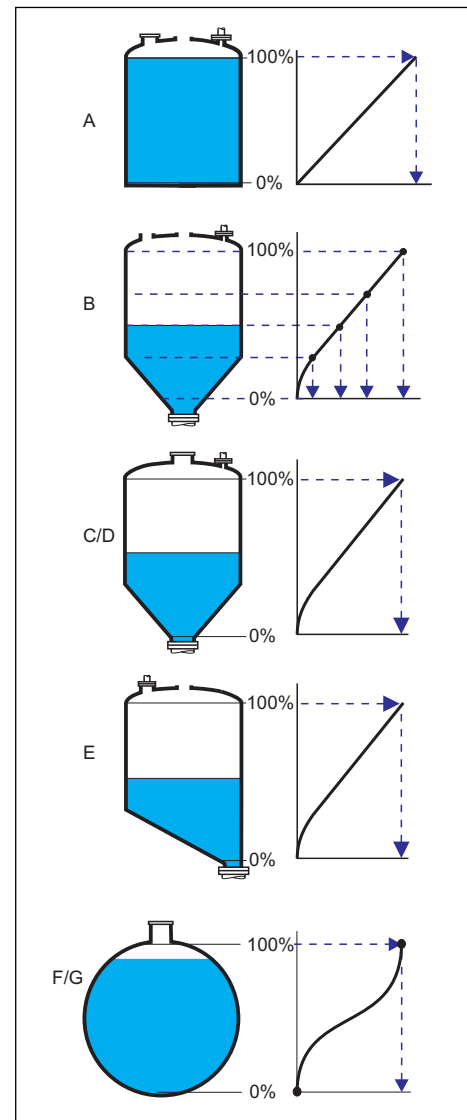



A0013299

## Factory setting

None

Unit linearized 

## Navigation

  Setup → Advanced setup → Linearization → Unit linearized

## Prerequisite

Only visible if a linearization has been selected (i.e. **Linearization type** ≠ **None**)

<b>Description</b>	Defines the unit of the linearized value.
<b>Options</b>	<ul style="list-style-type: none"> <li>■ Free text</li> <li>■ t</li> <li>■ lb</li> <li>■ ton</li> <li>■ kg</li> <li>■ impGal</li> <li>■ UsGal</li> <li>■ ft<sup>3</sup></li> <li>■ cm<sup>3</sup></li> <li>■ dm<sup>3</sup></li> <li>■ m<sup>3</sup></li> <li>■ hl</li> <li>■ l</li> <li>■ %</li> </ul>
<b>Factory setting</b>	%
<b>Additional information</b>	The selected unit is only used to be indicated on the display. The measured value is <b>not</b> transformed according to the selected unit.

---

**Free text**


<b>Navigation</b>	Setup → Advanced setup → Linearization → Free text
<b>Prerequisite</b>	Only visible for <b>Unit linearized = Free text</b> .
<b>Description</b>	Definition of the unit
<b>Input range</b>	Up to 32 alphanumerical characters (letters, numbers, special characters)
<b>Factory setting</b>	<b>Free text</b>

---

**Maximum value**


<b>Navigation</b>	Setup → Advanced setup → Linearization → Maximum value
<b>Prerequisite</b>	Only visible if one of the following linearization types has been selected: <ul style="list-style-type: none"> <li>■ Linear</li> <li>■ Pyramid bottom</li> <li>■ Conical bottom</li> <li>■ Angled bottom</li> <li>■ Horizontal cylinder</li> <li>■ Sphere</li> </ul>
<b>Description</b>	Definition of the maximum content of the vessel (100%), as measured in the <b>Unit linearized</b> .

**Input range** -50000 ... +50000

**Factory setting** 100

---

### Diameter



**Navigation** Setup → Advanced setup → Linearization → Diameter

**Prerequisite** Only visible if one of the following linearization types has been selected:

- Horizontal cylinder
- Sphere

**Description** Definition of the tank diameter

**Input range** 0 ... 9999.999 m (32808 ft)

**Factory setting** 2 m (6.6 ft)

**Additional information** The value must be specified in the selected distance unit (→ 94) .

---

### Intermediate height




**Navigation** Setup → Advanced setup → Linearization → Intermediate height

**Prerequisite** Only visible if one of the following linearization types has been selected:

- Pyramid bottom
- Conical bottom
- Angled bottom

**Description** Definition of the intermediate height H

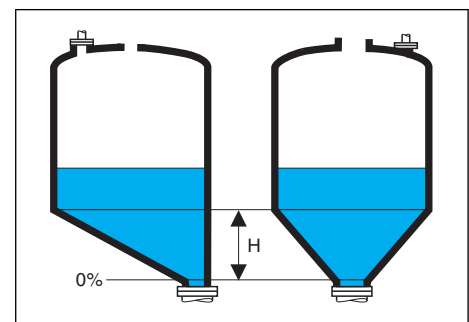

A0013264

**Input range** 0 to 200 m (0 to 656 ft)

**Factory setting** 0 m (0 ft)

**Additional information** The value must be specified in the selected distance unit (→ 94) .













Table mode 	
<b>Navigation</b>	  Setup → Advanced setup → Linearization → Table mode
<b>Prerequisite</b>	Only visible if the "Table" linearization type has been selected.
<b>Description</b>	Defines the method used to enter linearization points into the table.
<b>Options</b>	<ul style="list-style-type: none"> <li>▪ <b>Manual</b> The level and the associated linearized value are entered manually for each linearization point.</li> <li>▪ <b>Semi-automatic</b> The level is measured by the device for each linearization point. The associated linearized value is entered manually.</li> <li>▪ <b>Clear table</b> Deletes the existing linearization table.</li> <li>▪ <b>Sort table</b> Rearranges the linearization points into an ascending order.</li> </ul>
<b>Factory setting</b>	Manual
<b>Additional information</b>	<p>Conditions the linearization table must meet:</p> <ul style="list-style-type: none"> <li>▪ The table may consist of up to 32 pairs of values "Level - Linearized Value".</li> <li>▪ The table must be monotonic (monotonically increasing or decreasing).</li> <li>▪ The first linearization point must refer to the minimum level.</li> <li>▪ The last linearization point must refer to the maximum level.</li> </ul> <p> If a decreasing table is entered and if the measured value is transmitted via the current output, it may be necessary to invert the direction of the current output: <b>Expert → Output → Current output → Measuring mode = Inverted.</b></p>



Table number 	
<b>Navigation</b>	  Setup → Advanced setup → Linearization → Table number
<b>Prerequisite</b>	Only visible if the "Table" linearization type has been selected.
<b>Description</b>	Index of the linearization point which is entered in the subsequent parameters.
<b>Input range</b>	1 ... 32
<b>Factory setting</b>	1

Level 	
<b>Navigation</b>	  Setup → Advanced setup → Linearization → Level

<b>Prerequisite</b>	Only visible if the "Table" linearization type has been selected.
<b>Description</b>	Definition or display of the (unlinearized) level of the respective linearization point.
<b>Input range</b>	Depending on the parametrized measuring range. See the parameters <b>Empty calibration</b> (→  96) and <b>Full calibration</b> (→  96).
<b>Factory setting</b>	0
<b>Additional information</b>	For <b>Table mode = Manual: Level</b> is a writable parameter. For <b>Table mode = Semi-automatic: Level</b> is a read-only parameter.



---

**Customer value**





<b>Navigation</b>	  Setup → Advanced setup → Linearization → Customer value
<b>Prerequisite</b>	Only visible if the "Table" linearization type has been selected.
<b>Description</b>	Specification of the linearized value of the respective linearization point.
<b>Input range</b>	$-3,0 \times 10^{38} \dots +3,0 \times 10^{38}$
<b>Factory setting</b>	0






---




**Activate table**


<b>Navigation</b>	  Setup → Advanced setup → Linearization → Activate table
<b>Prerequisite</b>	Only visible if the "Table" linearization type has been selected.
<b>Description</b>	Enables or disables the linearization table.
<b>Options</b>	<ul style="list-style-type: none"> <li>▪ Disable A linearization is not calculated. If the <b>Linearization type</b> parameter has been set to <b>Table</b>, the error message F435 is generated.</li> <li>▪ Enable The measured value is linearized according to the table before being sent to the output.</li> </ul>
<b>Factory setting</b>	Disable
<b>Additional information</b>	When editing the table, this parameter is automatically reset to the <b>Disable</b> option. After finishing the editing procedure it must be set to the <b>Enable</b> option again.


## The "Safety settings" submenu

Output echo lost 	
<b>Navigation</b>	  Setup → Advanced setup → Safety settings → Output echo lost
<b>Description</b>	Defines the output signal in the case of a lost echo.
<b>Options</b>	<ul style="list-style-type: none"> <li>■ Last valid value The last valid value is kept in the case of a lost echo.</li> <li>■ Ramp at echo lost In the case of a lost echo the output value is continuously shifted towards 0% or 100%. The slope of the ramp is defined in the <b>Ramp echo lost</b> parameter.</li> <li>■ Value echo lost In the case of a lost echo the output assumes the value defined in the <b>Value echo lost</b> parameter.</li> <li>■ Alarm In the case of a lost echo the device generates an alarm.</li> </ul>
<b>Factory settings</b>	Last valid value

Value echo lost 	
<b>Navigation</b>	  Setup → Advanced setup → Safety settings → Value echo lost
<b>Prerequisite</b>	Only visible if the <b>Value echo lost</b> option has been selected in the <b>Output echo lost</b> parameter.
<b>Description</b>	Defines the constant output value in the case of a lost echo.
<b>Input range</b>	0 to 200000
<b>Factory setting</b>	0
<b>Additional information</b>	<p>The unit is the same as for the output value:</p> <ul style="list-style-type: none"> <li>■ Without linearization: As defined in the <b>Level unit</b> parameter (→  104).</li> <li>■ With linearization: As defined in the <b>Unit linearized</b> parameter (→  106).</li> </ul>

Ramp at echo lost 	
<b>Navigation</b>	  Setup → Advanced setup → Safety settings → Ramp at echo lost
<b>Prerequisite</b>	Only visible if the <b>Ramp echo lost</b> option has been selected in the <b>Output echo lost</b> parameter.

**Description** Defines the slope of the ramp in the case of a lost echo.

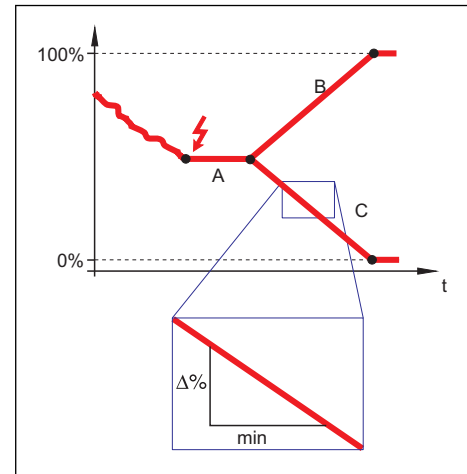

A0013269

- A Delay echo lost  
 B Ramp echo lost (positive value)  
 C Ramp echo lost (negative value)

**Input range** -9999999,0 to + 9999999,0 %/min

**Factory setting** 0 %/min


- Additional information**
- The unit for the slope of the ramp is "percentage of the measuring range per minute" (%/min).
  - For a negative slope of the ramp: The measured value is continuously decreased until it reaches 0%.
  - For a positive slope of the ramp: The measured value is continuously increased until it reaches 100%.

**Blocking distance** (→ 104)






**The "SIL/WHG confirmation" sequence**

 The "SIL/WHG confirmation" sequence is only available for devices with SIL or WHG approval (feature 590: "Additional Approval", option LA: "SIL" or LC: "WHG overfill prevention") which are currently **not** in the SIL- or WHG-locked state.

The **SIL/WHG confirmation** sequence is required to lock the device according to SIL or WHG.

For details refer to the "Functional Safety Manual", SD01087F which describes the locking procedure and the parameters of the sequence.






**The "Deactivate SIL/WHG" sequence**

 The "Deactivate SIL/WHG" sequence is only available for devices with SIL or WHG approval (feature 590: "Additional Approval", option LA: "SIL" or LC: "WHG overfill prevention") which are currently in the SIL- or WHG-locked state.










The **Deactivate SIL/WHG** sequence is required to unlock the device if it has been locked according to SIL or WHG.

For details refer to the "Functional Safety Manual", SD01087F which describes the unlocking procedure and the parameters of the sequence.

## The "Current output 1"/"Current output 2" submenus <sup>6)</sup>

Assign current output 	
<b>Navigation</b>	<ul style="list-style-type: none"> <li>  Setup → Advanced setup → Curr. output 1 → Assign current output</li> <li>  Setup → Advanced setup → Curr. output 2 → Assign current output</li> </ul>
<b>Description</b>	Select process variable for current output
<b>Options</b>	<ul style="list-style-type: none"> <li>▪ Level linearized</li> <li>▪ Distance</li> <li>▪ Electronic temperature (-50 °C / -58 °F = 4mA; 100 °C / 212 °F = 20 mA)</li> <li>▪ Relative echo amplitude (0 dB = 4 mA; 150 dB = 20 mA)</li> <li>▪ Analog output adv. diagnostics 1</li> <li>▪ Analog output adv. diagnostics 2</li> </ul>
<b>Factory setting</b>	<ul style="list-style-type: none"> <li>▪ Current output 1: Level linearized</li> <li>▪ Current output 2: Relative echo amplitude <sup>1)</sup></li> </ul>

1) only for devices with 2 current outputs

Current span 	
<b>Navigation</b>	<ul style="list-style-type: none"> <li>  Setup → Advanced setup → Current output 1 → Current span</li> <li>  Setup → Advanced setup → Current output 2 → Current span</li> </ul>
<b>Description</b>	<p>Select current range for process value output and upper/lower level for alarm signal.</p> <ul style="list-style-type: none"> <li> ▪ In the event of an error, the current output adopts the value defined in the <b>Failure mode</b> parameter (→  116).</li> <li>▪ If the measured value is outside the measuring range, the device displays the message <b>S441 Current output</b>. The measuring range is defined by the <b>Empty calibration</b> (4 mA) (→  96) and <b>Full calibration</b> (20 mA) (→  96) parameters.</li> </ul>
<b>Options</b>	<ul style="list-style-type: none"> <li>▪ 4 to 20 mA NAMUR</li> <li>▪ 4 to 20 mA US</li> <li>▪ 4 to 20 mA</li> <li>▪ Fixed current</li> </ul>
<b>Factory setting</b>	4 to 20 mA NAMUR

6) The "Current output 2" submenu is only available for devices with two current outputs.


**Additional information**

*Fixed current*

The current value is set via the **Fixed current** parameter (→  115).

*Example*

Shows the relationship between the current span for the output of the process variable and the lower and upper alarm levels.

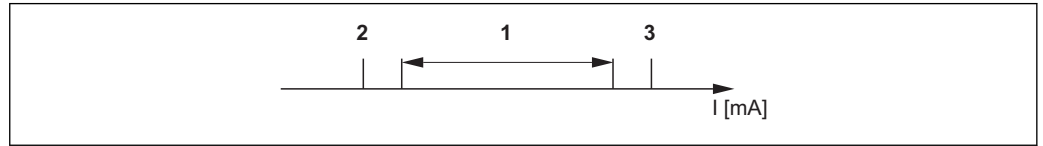

A0013316





- I Current
- 1 Current span for process value
- 2 Lower level for signal on alarm
- 3 Upper level for signal on alarm

Options	1	2	3
4 to 20 mA NAMUR	3.8 to 20.5 mA	≤ 3.6 mA	> 21.95 mA
4 to 20 mA US	3.9 to 20.8 mA US	≤ 3.6 mA	> 21.95 mA
4 to 20 mA	4 to 20.5 mA	≤ 3.6 mA	> 21.95 mA

**Fixed current**



**Navigation**

-   Setup → Advanced setup → Curr. output 1 → Fixed current
-   Setup → Advanced setup → Curr. output 2 → Fixed current

**Condition**

Only visible if the **Fixed current** option has been selected in the **Current span** parameter.

**Description**

Defines the fixed value of the current.

**Input range**

4 to 22.5 mA



**Factory setting**

4.0 mA

**Damping**



**Navigation**

-   Setup → Advanced setup → Current output 1/2 → Damping

**Description**

Defines the time constant for the damping of the output current.

**Input range**

0 to 999.9 s

**Factory setting**





0 s (i.e.: no damping)


**Additional information** Fluctuations of the measured value affect the output current with an exponential delay, the time constant of which is defined in this parameter. With a small time constant the output reacts immediately to changes of the measured value. With a big time constant the reaction of the output is more delayed.

---

## Failure mode

---


**Navigation**   Setup → Advanced setup → Curr. output 1 → Failure mode  
  Setup → Advanced setup → Curr. output 2 → Failure mode

**Prerequisite** One of the following options is selected in the **Current span** parameter (→  114):

- 4 to 20 mA NAMUR
- 4 to 20 mA US
- 4 to 20 mA

**Description** Select alarm condition for current output value.



**Options**

- **Min.**  
The current output adopts the value of the lower level for signal on alarm.
- **Max.**  
The current output adopts the value of the upper level for signal on alarm.
- **Last valid value**  
The current output is based on the last measured value that was valid before the error occurred.
- **Actual value**  
The current output is based on the actual measured value on the basis of the current measurement; the error is ignored.
- **Defined value**  
The current output value is defined in the **Failure current** parameter (→  116).

**Factory setting** Max.

**Additional information** This setting does not affect the error response mode of other outputs and totalizers. This is specified in separate parameters.





*Min. and Max.*


 With this setting, the signal on alarm level is specified using the **Current span** parameter (→  114).

---

## Failure current

---

**Navigation**   Setup → Advanced setup → Curr. output 1 → Failure current  
  Setup → Advanced setup → Curr. output 2 → Failure current

**Prerequisite** The **Defined value** option is selected in the **Failure mode** parameter (→  116).

**Description** Enter current output value in alarm condition

**Input range** 3.6 to 22.5 mA









**Factory setting** 22.5 mA

---

### Output current 1 / Output current 2

---

**Navigation**

-   Setup → Advanced setup → Curr. output 1 → Output curr. 1
-   Diagnostics → Measured value → Output curr. 1
-   Setup → Advanced setup → Curr. output 2 → Output curr. 2
-   Diagnostics → Measured value → Output curr. 2


**Description** Displays the output current in mA.

### "Switch output" submenu

---





### Switch output function

---

**Navigation**   Setup → Advanced setup → Switch output → Switch output function

**Description** Select function for switch output

**Options**

- **Off**  
The output is always open (not conductive).
- **On**  
The output is always closed (conductive).
- **Diagnostic behavior**  
The output is normally closed and is only opened if a diagnostic event is present. The **Assign diagnostic level** (→  118) parameter determines at which type of event the output is opened.
- **Limit**  
The output is normally closed and is only opened if a measured variable exceeds or falls below a defined limit. The limit values are defined by the parameters **Assign limit** (→  118), **Switch-on value** (→  118) and **Switch-off value** (→  118).
- **Digital output**  
The switching state of the output tracks the output value of a DI function block. The function block is selected in the **Assign status** parameter.

**Factory setting** Off

**Additional information** The **On** and **Off** settings can be used to simulate the switch output.

---

### Assign status

---

**Navigation**   Setup → Advanced setup → Switch output → Assign status

**Prerequisite** Only visible for **Switch output function = Digital output**.

**Description** Select device status for switch output



<b>Options</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Digital output AD 1</li> <li>▪ Digital output AD 2</li> </ul>
----------------	---

<b>Factory setting</b>	Off
------------------------	-----

---

### Assign limit

---

<b>Navigation</b>	  Setup → Advanced setup → Switch output → Assign limit
-------------------	---

<b>Prerequisite</b>	Only visible for <b>Switch output function = Limit</b> .
---------------------	--

<b>Description</b>	Defines the variable to be checked for limit transgression and allocates it to the switch output.
--------------------	---

<b>Options</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Level linearized</li> <li>▪ Distance</li> <li>▪ Terminal voltage</li> <li>▪ Electronic temperature</li> <li>▪ Relative echo amplitude</li> </ul>
----------------	--

<b>Factory setting</b>	Off
------------------------	-----

---

### Assign diagnostic level

---

<b>Navigation</b>	  Setup → Advanced setup → Switch output → Assign diagnostic level
-------------------	--

<b>Prerequisite</b>	Only visible for <b>Switch output function = Event level</b> .
---------------------	--

<b>Description</b>	Defines to which class of diagnostic events the output reacts.
--------------------	--

<b>Options</b>	<ul style="list-style-type: none"> <li>▪ Alarm</li> <li>▪ Alarm or warning</li> <li>▪ Warning</li> </ul>
----------------	--

<b>Factory setting</b>	Alarm
------------------------	-------

---

### Switch-on value Switch-off value

---

<b>Navigation</b>	  Setup → Advanced setup → Switch output → Switch-on value / Switch-off value
-------------------	---

<b>Prerequisite</b>	Only visible for <b>Switch output function = Limit</b> and <b>Assign limit ≠ Off</b> .
---------------------	--

<b>Description</b>	Define the switch-on point and switch-off point for the limit evaluation.
--------------------	---

**Input range** Depending on the selected measuring variable (Parameter **Assign limit**).


**Factory setting** Depending on the selected measuring variable (Parameter **Assign limit**).

**Additional information** The switching behavior depends on the relative position of the two switch points.

**Switch-on point > Switch-off point:**

The output is closed if the measured value exceeds the switch-on point.

The output is opened if the measured value falls below the switch-off point.

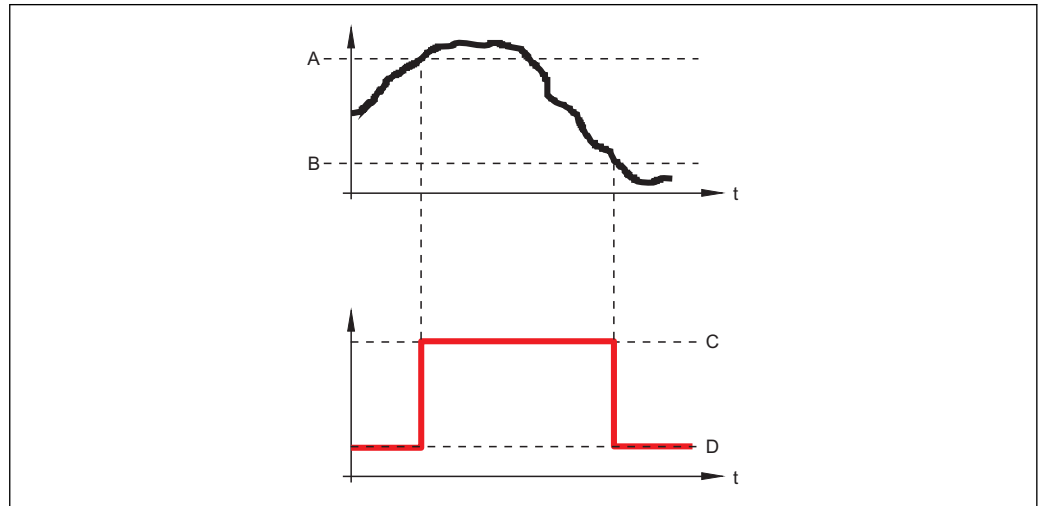

A0015585

A Switch-on point

B Switch-off point


C Output closed

D Output opened

**Switch-on point < Switch-off point:**

The output is closed if the measured value falls below the switch-on point.

The output is opened if the measured value exceeds the switch-off point.

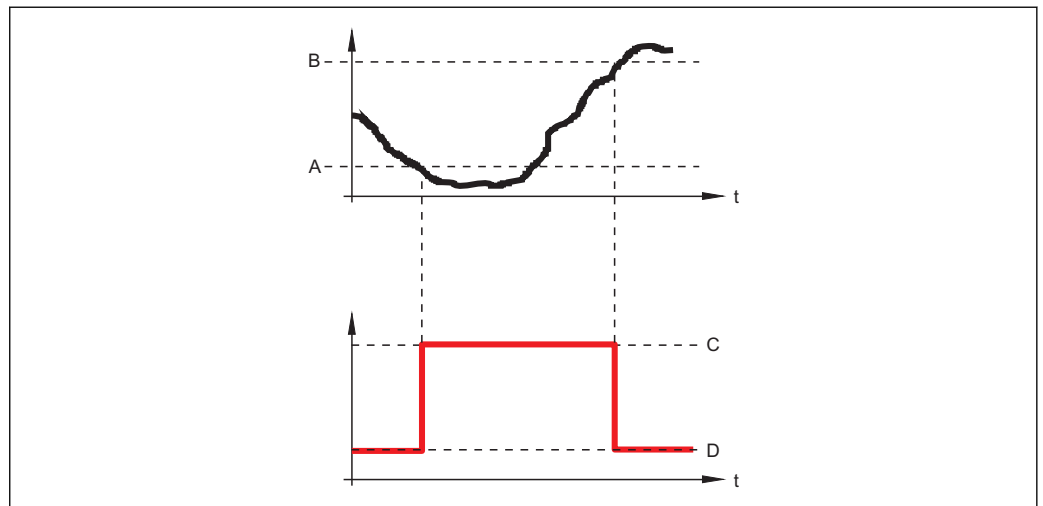

A0015586

A Switch-on point

B Switch-off point



C Output closed

D Output opened

---

**Switch-on delay**




---

<b>Navigation</b>	  Setup → Advanced setup → Switch output → Switch-on delay
<b>Prerequisite</b>	Only visible for <b>Switch output function = Limit</b> and <b>Assign limit ≠ Off</b> .
<b>Description</b>	Defines the delay for the switching on of the output.
<b>Input range</b>	0 to 100 s
<b>Factory setting</b>	0 s

---

**Switch-off delay**




---

<b>Navigation</b>	  Setup → Advanced setup → Switch output → Switch-off delay
<b>Prerequisite</b>	Only visible for <b>Switch output function = Limit</b> and <b>Assign limit ≠ Off</b> .
<b>Description</b>	Defines the delay for the switching off of the output.
<b>Input range</b>	0 to 100 s
<b>Factory setting</b>	0 s

---

**Failure mode**






---

<b>Navigation</b>	  Setup → Advanced setup → Switch output → Failure mode
<b>Description</b>	Defines the switching state of the output in the case of an error.
<b>Options</b>	<ul style="list-style-type: none"> <li>▪ Actual status           <ul style="list-style-type: none"> <li>The switch output remains in the state it was in when the error occurred</li> </ul> </li> <li>▪ Open</li> <li>▪ Closed</li> </ul>
<b>Factory setting</b>	Open

---

**Switch status**


---

<b>Navigation</b>	  Setup → Advanced setup → Switch output → Switch status   Diagnostics → Measured value → Switch status
<b>Description</b>	Indicates the current state of the switch output.



- Display options**
- Open
  - Closed

---

### Invert output signal


---

**Navigation**   Setup → Advanced setup → Switch output → Invert output signal

**Description** Allows to invert the behavior of the switch output.

- Options**
- No  
The behavior of the switch output is as described above.
  - Yes  
The states **Open** and **Closed** are inverted as compared to the description above.

**The "Display" submenu**

 For operating tools: The **Display** submenu is only visible if a display module is connected to the device.

---

**Language**(→  94)

---

**Format display**

---

**Navigation**  Setup → Advanced Setup → Display → Format display**Description**

Select how measured values are shown on the display.

**Options**


- 1 value, max. size
- 1 bargraph + 1 value
- 2 values
- 1 value large + 2 values
- 4 values

**Factory setting**


1 value, max. size

**Additional information**


*1 value, max. size*

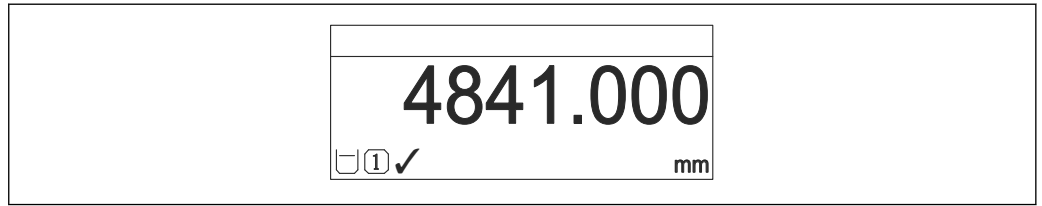


*1 bargraph + 1 value*

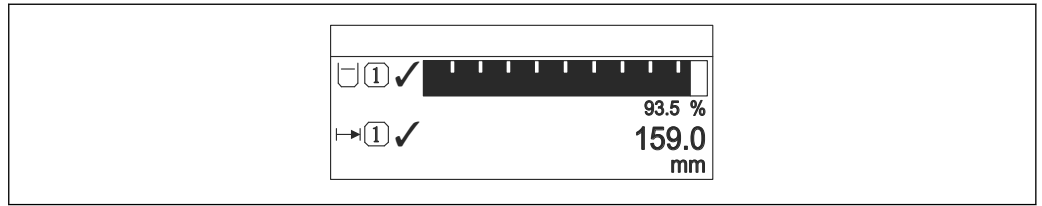


*2 values*

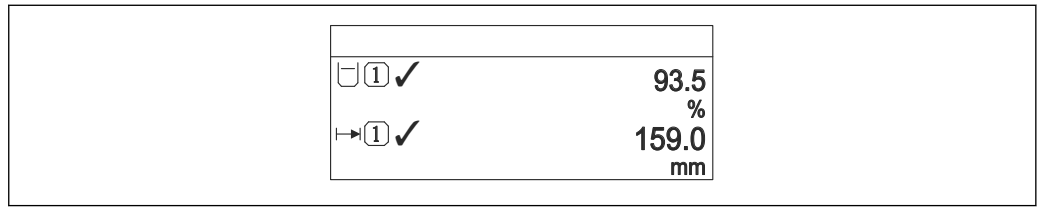

*1 value large + 2 values*

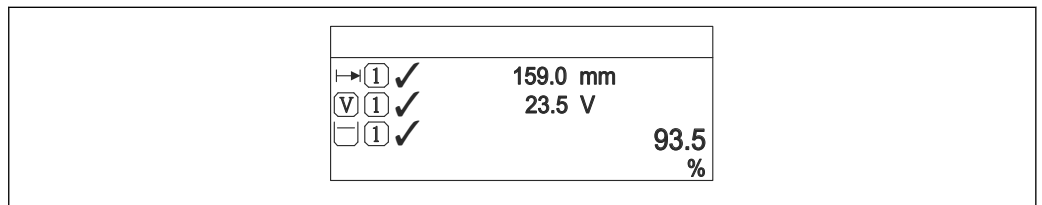



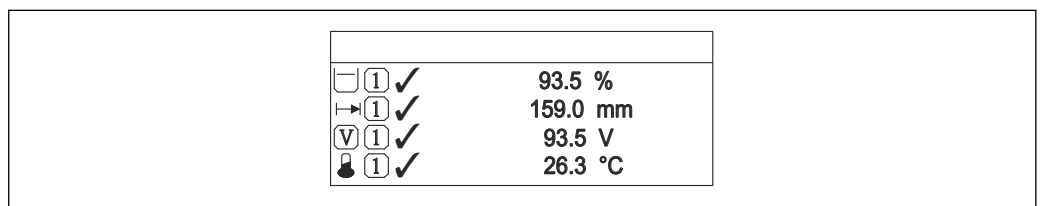





*4 values*




- i






 ▪ The **Value 1 display - Value 4 display** parameters are used to specify what measured values are shown on the display and in what order (→ [124](#)).
- If more measured values are specified than the display mode selected permits, the values alternate on the device display. The display time until the next change is configured using the **Display interval** parameter (→ [125](#)).

<b>Value 1 display</b> <b>Value 2 display</b> <b>Value 3 display</b> <b>Value 4 display</b>	
<b>Navigation</b>	  Setup → Advanced setup → Display → Value 1/2/3/4 display
<b>Description</b>	Select the measured value that is shown on the local display.
<b>Options</b>	<ul style="list-style-type: none"> <li>■ None <sup>1)</sup></li> <li>■ Level linearized</li> <li>■ Distance</li> <li>■ Current output 1</li> <li>■ Measured current</li> <li>■ Current output 2 (only for devices with 2 current outputs)</li> <li>■ Terminal voltage</li> <li>■ Electronics temperature</li> <li>■ Absolute echo amplitude</li> <li>■ Relative echo amplitude</li> <li>■ Analog output advanced diagnostics 1</li> <li>■ Analog output advanced diagnostics 2</li> </ul>
	1) Can not be selected for "Value 1 display".
<b>Factory setting</b>	<ul style="list-style-type: none"> <li>■ Value 1 display: Level linearized</li> <li>■ Value 2 display: None</li> <li>■ Value 3 display: None</li> <li>■ Value 4 display: None</li> </ul>
<b>Additional information</b>	The <b>Format display</b> parameter is used to specify how many measured values are displayed simultaneously and how (→  122).
<b>Decimal places 1</b> <b>Decimal places 2</b> <b>Decimal places 3</b> <b>Decimal places 4</b>	
<b>Navigation</b>	  Setup → Advanced setup → Display → Decimal places 1/2/3/4
<b>Prerequisite</b>	A measured value is specified in the <b>Value 1/2/3/4 display</b> parameter (→  124).
<b>Description</b>	Select the number of decimal places for the display value.
<b>Options</b>	<ul style="list-style-type: none"> <li>■ x</li> <li>■ x.x</li> <li>■ x.xx</li> <li>■ x.xxx</li> <li>■ x.xxxx</li> </ul>
<b>Factory setting</b>	x.xx
<b>Additional information</b>	This setting does not affect the measuring or computational accuracy of the device.


---

**Display interval**





---

<b>Navigation</b>	  Setup → Advanced Setup → Display → Display interval
<b>Description</b>	Set time measured values are shown on display if display alternates between values.
<b>Input range</b>	1 to 10 s
<b>Factory setting</b>	5 s
<b>Additional information</b>	<p>An alternating display only occurs automatically if the number of measured values defined exceeds the number of values the selected display format can display simultaneously.</p> <ul style="list-style-type: none"> <li> The <b>Value 1 display - Value 4 display</b> parameters are used to specify what measured values are shown on the display (→  124).</li> <li>The display format of the displayed measured values is specified using the <b>Format display</b> parameter (→  122).</li> </ul>

---

**Display damping**



---



<b>Navigation</b>	  Setup → Advanced setup → Display → Display damping
<b>Description</b>	Set display reaction time to fluctuations in the measured value.
<b>Input range</b>	0 to 999 s
<b>Factory setting</b>	0 s


---

**Header**



---


<b>Navigation</b>	  Setup → Advanced setup → Display → Header
<b>Description</b>	Select header contents on local display
<b>Options</b>	<ul style="list-style-type: none"> <li>▪ Device tag</li> <li>▪ Free text</li> </ul>
<b>Factory setting</b>	Device tag

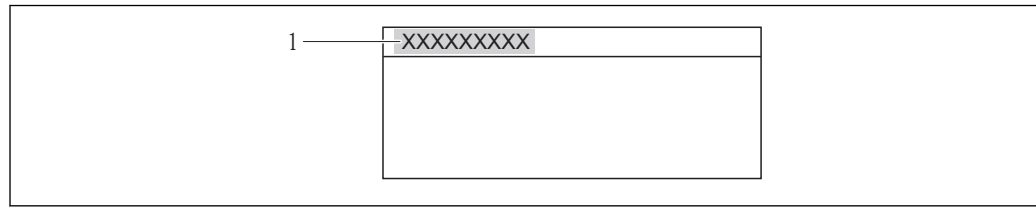**Additional information**


A0013375

1 Position of the header text on the display

*Device tag*

Is defined in the **Device tag** parameter (→  94).


*Free text*

Is defined in the **Header text** parameter (→  126).

**Header text****Navigation**

  Setup → Advanced setup → Display → Header text

**Prerequisite**

The **Free text** option is selected in the **Header** parameter (→  125).

**Description**


Enter display header text

**Input range**

Max. 12 characters, such as letters, numbers or special characters (e.g. @, %, /)

**Factory setting**

-----

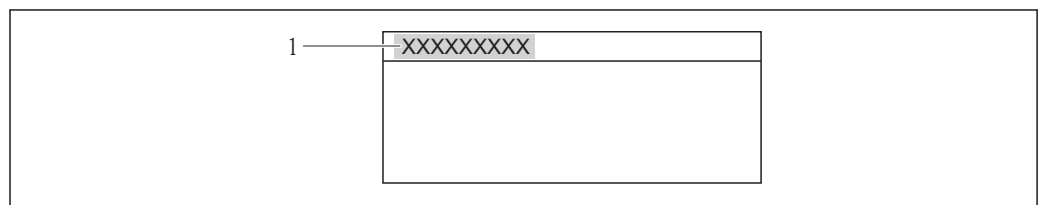**Additional information**



A0013375

1 Position of the header text on the display

*User entry*

The number of characters displayed depends on the characters used.

**Separator****Navigation**

  Setup → Advanced setup → Display → Separator

**Description**

Select decimal separator for displaying numerical values

**Options**

- . (point)
- , (comma)

**Factory setting**

. (point)

---

**Number format**


<b>Navigation</b>	Setup → Advanced setup → Display → Number format
<b>Description</b>	Choose number format for the display
<b>Options</b>	<ul style="list-style-type: none"> <li>▪ Decimal</li> <li>▪ ft-in-1/16" (Only valid for distance units)</li> </ul>
<b>Factory setting</b>	Decimal

---

**Decimal places menu**


<b>Navigation</b>	Setup → Advanced setup → Display → Dec. places menu
<b>Description</b>	Select number of decimal places for the representation of numbers within the operating menu.
<b>Options</b>	<ul style="list-style-type: none"> <li>▪ x</li> <li>▪ x.x</li> <li>▪ x.xx</li> <li>▪ x.xxx</li> <li>▪ x.xxxx</li> </ul>
<b>Factory setting</b>	x.xxxx
<b>Additional information</b>	<p>This parameter only determines the representation of numbers within the operating menu (e.g. <b>Empty calibration</b>, <b>Full calibration</b>). It does not affect the measured value representation.</p> <p>For measured values, the number of decimal places is defined in the <b>Decimal places 1</b> to <b>Decimal places 4</b> parameters (→  124).</p>

---

**Backlight**

<b>Navigation</b>	Setup → Advanced setup → Display → Backlight
<b>Prerequisite</b>	Only visible if the display module SD03 with optical keys is connected (SD02 with push buttons does not have a backlight).
<b>Description</b>	Switch the local display backlight on and off.
<b>Options</b>	<ul style="list-style-type: none"> <li>▪ Disable</li> <li>▪ Enable</li> </ul>
<b>Factory setting</b>	Disable


---

**Additional information** Irrespective of the setting in this parameter the backlight may be automatically switched off by the device if the supply voltage is too low.

---

### Contrast display


---





**Navigation**  Display/operation → Contrast display

**Description** Adjust local display contrast setting to ambient conditions.

**Input range** 20 to 80 %

**Factory setting** 30 %

**Additional information**  Set the contrast via push-buttons:

- Brighter: press the   buttons simultaneously
- Darker: press the   buttons simultaneously



### The "Configuration backup display" submenu



The **Configuration backup display** submenu is only visible if a display module is connected to the device.

The configuration of the device can be saved to the display module at a certain point of time (backup). The saved configuration can be restored to the device if required, e.g. in order to bring the device back into a defined state. The configuration can also be transferred to a different device of the same type using the display module.

---

## Operating time

---

<b>Navigation</b>	Setup → Advanced setup → Conf. backup display → Operating time Diagnostics → Operating time
<b>Description</b>	Indicates how long the device has been in operation.
<b>Display format</b>	Days (d), hours (h), minutes (m) and seconds (s)
<b>Additional information</b>	<i>Display</i> The maximum number of days is 9999, which is equivalent to 27 years.

---

## Last backup

---




<b>Navigation</b>	Setup → Advanced setup → Conf. backup display → Last backup
<b>Description</b>	Indicates when the last data backup was saved to the display module.
<b>Display format</b>	Days (d), hours (h), minutes (m) and seconds (s)

---

## Configuration management



---

<b>Navigation</b>	Setup → Advanced setup → Conf. backup display → Config. managem.
<b>Description</b>	Select action for managing the device data in the display module.

<b>Options</b>	<ul style="list-style-type: none"> <li>▪ <b>Cancel</b> No action is executed and the user exits the parameter.</li> <li>▪ <b>Execute backup</b> A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device. The backup copy comprises the transmitter and sensor data of the device.</li> <li>▪ <b>Restore</b> The last backup copy of the device configuration is copied from the display module to the HistoROM of the device. The backup copy comprises the transmitter and sensor data of the device.</li> <li>▪ <b>Duplicate</b> The transmitter configuration is duplicated to another device using the transmitter display module.</li> <li>▪ <b>Compare</b> The device configuration saved in the display module is compared to the current device configuration of the HistoROM.</li> <li>▪ <b>Clear backup data</b> The backup copy of the device configuration is deleted from the display module of the device.</li> </ul>
<b>Factory setting</b>	Cancel
<b>Additional information</b>	<p><i>Compare</i> The comparison result can be viewed in the <b>Comparison result</b> parameter (→  130).</p> <p> If <b>Restore</b> is selected, all parameters are transmitted. If <b>Duplicate</b> is selected all parameters but the following are transmitted:</p> <ul style="list-style-type: none"> <li>▪ HART date code</li> <li>▪ HART short tag</li> <li>▪ HART message</li> <li>▪ HART descriptor</li> <li>▪ Final assembly number</li> <li>▪ HART address</li> <li>▪ Device tag</li> <li>▪ Medium type</li> <li>▪ Sensor type</li> </ul> <p><i>HistoROM</i> A HistoROM is a non-volatile device memory in the form of an EEPROM.</p> <p> While the respective action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.</p>

---



**Comparison result**


<b>Navigation</b>	  Setup → Advanced setup → Conf. backup display → Compar. result
<b>Description</b>	Comparison between present device data and display backup

**Display options**











- Settings identical  
The current device configuration of the HistoROM is identical to the backup copy in the display module.
- Settings not identical  
The current device configuration of the HistoROM is not identical to the backup copy in the display module.
- No backup available  
There is no backup copy of the device configuration of the HistoROM in the display module.
- Backup settings corrupt  
The current device configuration of the HistoROM is corrupt or not compatible with the backup copy in the display module.
- Check not done  
The device configuration of the HistoROM has not yet been compared to the backup copy in the display module.
- Dataset incompatible  
The comparison is impossible due to incompatibility.




**Additional information**

-  The comparison is started via the **Compare settings** option in the **Configuration management** parameter (→  129).

## The "Administration" submenu

The "Define access code" sequence <sup>7)</sup>

Define access code 	
<b>Navigation</b>	  Setup → Advanced setup → Administration → Define access code → Define access code
<b>Description</b>	Define user-specific access code in order to protect the device against unintended changes via the display module.
<b>Input range</b>	0 to 9 999
<b>Factory setting</b>	0
<b>Additional information</b>	<p><i>User entry</i> A message is displayed if the access code is not in the input range.</p> <p><i>Factory setting</i> If the factory setting is not changed or 0 is defined as the access code, the parameters are not write-protected and the configuration data of the device can then always be modified. The user is logged on in the role of <i>Maintenance</i> .</p> <ul style="list-style-type: none"> <li> The write protection affects all parameters marked with the  symbol in the document. On the local display, the  symbol in front of a parameter indicates that the parameter is write-protected.</li> <li> Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the <b>Enter access code</b> parameter (→  101).</li> <li> Please contact your Endress+Hauser Sales Center if you lose your access code.</li> <li> For display operation: The new access code is only valid after it has been confirmed in the <b>Confirm access code</b> parameter and after the user has returned to the main screen (measured value display).</li> </ul>

Confirm access code 	
<b>Navigation</b>	  Setup → Advanced setup → Administration → Define access code → Confirm access code
<b>Description</b>	Confirm the access code by repeating the value entered in the <b>Define access code</b> parameter.
<b>Input range</b>	0 to 9 999
<b>Factory setting</b>	0

<sup>7)</sup> This sequence only exists for operation via the display module. For operation via operating software (e.g. FieldCare), the "Define access code" parameter is located directly in the "Administration" submenu.

*Further parameters*

---

**Device reset**

---

**Navigation**

Setup → Advanced Setup → Administration → Device reset

**Description**

Use this function to reset the device configuration - either entirely or in part - to a defined state.

**Options**

- **Cancel**  
No action is executed and the user exits the parameter.
- **To factory defaults**  
Every parameter is reset to the order-code specific factory setting.
- **To delivery settings**  
Every parameter is reset to the delivery setting. The delivery setting may differ from the factory default if customer specific settings have been ordered.
- **Of customer settings**  
Every customer parameter is reset to its factory setting. Service parameters, however, retain their current value.
- **Restart device**  
The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration is not modified.

**Factory setting**






Cancel

## 16.2 The "Diagnostics" menu

---

<b>Actual diagnostics</b>	
---------------------------	--






---

<b>Navigation</b>	  Diagnostics → Actual diagnos.
<b>Description</b>	Use this function to display the current diagnostics message. If two or more messages occur simultaneously, the message with the highest priority is shown on the display.  Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.
<b>Display format</b>	Symbol for event behavior, diagnostics event, time the event occurred and event text
<b>Additional information</b>	<i>User interface</i> Example for display format:  S441 01d4h12min30s Current output 1

---

<b>Previous diagnostics</b>	
-----------------------------	--



---

<b>Navigation</b>	  Diagnostics → Prev. diagsotics
<b>Description</b>	Use this function to display the diagnostics message last displayed before the current message. This condition can still apply.  Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.
<b>Additional information</b>	<i>User interface</i> Example for display format:  C411 01d5h14min20s Upload/download active


---

<b>Operating time from restart</b>	
------------------------------------	--

---

<b>Navigation</b>	  Diagnostics → Operatint time fr. restart
<b>Description</b>	Use this function to display the time the device has been in operation since the last device restart.
<b>Display format</b>	Days (d), hours (h), minutes (m) and seconds (s)



---



<b>Operating time</b>	(→  129)
-----------------------	---

---

### 16.2.1 "Diagnostics list" submenu

Up to 5 diagnostics messages currently pending are displayed in this submenu. If more than 5 messages are pending, the messages with the highest priority are shown on the display.

 Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.











 Information on diagnostics measures in the device and an overview of all the diagnostics messages: (→  74)

---

**Diagnostics 1**  
**Diagnostics 2**  
**Diagnostics 3**  
**Diagnostics 4**  
**Diagnostics 5**

---

#### Navigation

  Diagnostics → Diagnose list → Diagnostics 1  
  Diagnostics → Diagnose list → Diagnostics 2  
  Diagnostics → Diagnose list → Diagnostics 3  
  Diagnostics → Diagnose list → Diagnostics 4  
  Diagnostics → Diagnose list → Diagnostics 5

#### Description

Use this function to display the current diagnostics messages with the highest priority to the fifth-highest priority.


#### Display format

Symbol for event behavior, diagnostics event, time the event occurred and event text

#### Additional information


*User interface*

Example 1 for display format:

 S441 01d4h12min30s













Current output 1

Example 2 for display format:

 F276 10d8h12min22s

I/O module error

## 16.2.2 The "Event logbook" submenu

Filter options	
<b>Navigation</b>	  Diagnostics → Event logbook → Filter options
<b>Description</b>	<p>Use this function to select the category (status signal) whose event messages are displayed in the events list.</p> <p> The status signals are categorized according to NAMUR NE 107: F = failure, M = maintenance request, C = function check, S = out of specification</p>
<b>Options</b>	<ul style="list-style-type: none"> <li>▪ All</li> <li>▪ Failure (F)</li> <li>▪ Maintenance required (M)</li> <li>▪ Function check (C)</li> <li>▪ Out of specification (S)</li> <li>▪ Information (I)</li> </ul>
<b>Factory setting</b>	All
Event list	
<b>Navigation</b>	  Diagnostics → Event logbook → Event list
<b>Description</b>	<p>Use this function to display the history of event messages of the category selected in the <b>Filter options</b> parameter (→  136). A maximum of 20 event messages are displayed in chronological order. If the advanced HistoROM function is enabled in the device, the event list can contain up to 100 entries.</p> <p>The following symbols indicate whether an event has occurred or has ended (status symbols):</p> <ul style="list-style-type: none"> <li>▪ : Event has occurred</li> <li>▪ : Event has ended</li> </ul> <p> Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.</p>
<b>Display format</b>	<ul style="list-style-type: none"> <li>▪ For event messages in category I (status signal): status signal, event number, time event occurred, event text</li> <li>▪ For event messages in category F, M, C, S (status signal): diagnostics event, status symbol, time event occurred, event text</li> </ul>



**Additional information***User interface*

Example 1 for display format:

I 1091 ↻ 24d12h13m00s

Configuration modified

Example 2 for display format:

S441 ↻ 01d4h12min30s

Current output 1

*HistoROM*



A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

### 16.2.3 "Device information" submenu

---

#### Device tag




---

<b>Navigation</b>	  Diagnostics → Device info → Device tag
<b>Description</b>	Enter tag for measuring point
<b>Display</b>	Max. 32-digit character string comprising letters, numbers or special characters (e.g. @, %, /)
<b>Factory setting</b>	FMR5x

---

#### Serial number



---

<b>Navigation</b>	  Diagnostics → Device info → Serial number
<b>Description</b>	Use this function to view the serial number of the device. It can also be found on the nameplate.  <b>Uses of the serial number</b> <ul style="list-style-type: none"> <li>▪ To identify the device quickly, e.g. when contacting Endress+Hauser.</li> <li>▪ To obtain specific information on the device using the Device Viewer: <a href="http://www.endress.com/deviceviewer">www.endress.com/deviceviewer</a></li> </ul>
<b>Display</b>	Max. 11-digit character string comprising letters and numbers

---

#### Firmware version



---

<b>Navigation</b>	  Diagnostics → Device info → Firmware version
<b>Description</b>	Use this function to view the device firmware version installed.
<b>Display</b>	Max. 6-digit character string in the format xx.yy.zz

---

#### Device name

---

<b>Navigation</b>	  Diagnostics → Device info → Device name
<b>Description</b>	Use this function to view the name of the transmitter. It can also be found on the nameplate of the transmitter.

---

**Order code**

---

**Navigation**

 Diagnostics → Device info → Order code

**Description**

Use this function to view the order code of the device. It can also be found on the nameplate. The order code is generated by a one-to-one transformation from the extended order code, which defines all the device features of the product structure. In contrast, the device features can not be read directly from the order code.

**Uses of the order code**


- To order an identical spare device.
- To identify the device quickly and easily, e.g. when contacting Endress+Hauser.


---


**Extended order code 1****Extended order code 2****Extended order code 3**

---

**Navigation**

 Diagnostics → Device info → Extended order code 1

 Diagnostics → Device info → Extended order code 2

 Diagnostics → Device info → Extended order code 3

**Description**

Use this function to display the first, second or third part of the extended order code. On account of length restrictions, the extended order code is split into a maximum of 3 parameters.

The extended order code indicates the selected options of all the features of the product structure for the device and thus uniquely identifies the device. It can also be found on the nameplate.

**Uses of the extended order code**

- To order an identical spare device.
- To check the ordered device features against the shipping note.

## 16.2.4 "Measured value" submenu

---

**Distance** (→  97)



---




---

### Level linearized


---

**Navigation**   Diagnostics → Measured val. → Level linearized

**Description** Displays the linearized level.

**Additional information** The level is displayed in the **Unit linearized** (→  106).

---

**Output current 1 / Output current 2** (→  117)



---



---

### Measured current 1

---

**Navigation**   Diagnostics → Measured val. → Measured current 1

**Description** Use this function to view the current value of the current output currently measured.

---



---

### Terminal voltage 1

---

**Navigation**   Diagnostics → Measured val. → Terminal volt. 1

**Description** Use this function to view the current terminal voltage that is present at the current output.

---

**Switch status** (→  120)

---



---


### Electronic temperature

---

**Navigation**   Diagnostics → Measured val. → Electronic temperature

**Description** Indicates the currently measured temperature of the electronics

### 16.2.5 "Data logging" submenu

 This submenu is only available if the advanced functionality of the HistoROM has been activated in the device.

Das Menü wird nur angezeigt, wenn im Gerät die erweiterter Funktion des HistoROM freigeschaltet ist.





---

Assign channel 1  
Assign channel 2  
Assign channel 3  
Assign channel 4

---



#### Navigation

-  Diagnostics → Data logging → Assign channel 1
-  Diagnostics → Data logging → Assign channel 2
-  Diagnostics → Data logging → Assign channel 3
-  Diagnostics → Data logging → Assign channel 4

#### Description

Use this function to assign a process variable to the data logging channel.

A total of 500 measured values can be logged. This means:

- 500 data points if 1 logging channel is used
- 250 data points if 2 logging channels are used
- 166 data points if 3 logging channels are used
- 125 data points if 4 logging channels are used

If the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 500, 250, 166 or 125 measured values are always in the log (ring memory principle).

 The log contents are cleared if the option selected is changed.

#### Options

- Off
- Level
- Distance
- Current output 1
- Measured current
- Current output 2 (only for devices with two current outputs)
- Terminal voltage
- Electronics temperature
- Absolute echo amplitude
- Relative echo amplitude
- Area of incopupling
- Analog output adv. diagnostics 1
- Analog output adv. diagnostics 2

#### Factory setting

Off

---


### Logging interval

---



#### Navigation



-  Diagnostics → Data logging → Logging interval

<b>Description</b>	<p>Definition of the logging interval <math>t_{\log}</math> for data logging. This defines the interval between the individual data points in the data log, and thus the maximum loggable process time <math>T_{\log}</math>:</p> <ul style="list-style-type: none"> <li>▪ If 1 logging channel is used: <math>T_{\log} = 500 \cdot t_{\log}</math></li> <li>▪ If 2 logging channels are used: <math>T_{\log} = 250 \cdot t_{\log}</math></li> <li>▪ If 3 logging channels are used: <math>T_{\log} = 166 \cdot t_{\log}</math></li> <li>▪ If 4 logging channels are used: <math>T_{\log} = 125 \cdot t_{\log}</math></li> </ul> <p>Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of <math>T_{\log}</math> always remains in the memory (ring memory principle).</p> <p> The log contents are cleared if the length of the logging interval is changed.</p>
<b>Input range</b>	1.0 to 3 600.0 s
<b>Factory setting</b>	10.0 s
<b>Additional information</b>	<p><i>Example</i></p> <p>If 1 logging channel is used:</p> <ul style="list-style-type: none"> <li>▪ <math>T_{\log} = 500 \cdot 1 \text{ s} = 500 \text{ s} \approx 8.5 \text{ min}</math></li> <li>▪ <math>T_{\log} = 500 \cdot 10 \text{ s} = 5\,000 \text{ s} \approx 1.5 \text{ h}</math></li> <li>▪ <math>T_{\log} = 500 \cdot 80 \text{ s} = 40\,000 \text{ s} \approx 11 \text{ h}</math></li> <li>▪ <math>T_{\log} = 500 \cdot 3\,600 \text{ s} = 1\,800\,000 \text{ s} \approx 20 \text{ d}</math></li> </ul>

---

## Clear logging data









---

<b>Navigation</b>	  Diagnostics → Data logging → Clear logging data
<b>Description</b>	Use this function to clear the entire logging data.
<b>Options</b>	<ul style="list-style-type: none"> <li>▪ Cancel The data are not cleared. All the data are retained.</li> <li>▪ Clear data The logging data are cleared. The logging process starts from scratch.</li> </ul>
<b>Factory setting</b>	Cancel

---


## Display channel 1 Display channel 2 Display channel 3 Display channel 4

---

<b>Navigation</b>	  Diagnostics → Data logging → Display channel 1   Diagnostics → Data logging → Display channel 2   Diagnostics → Data logging → Display channel 3   Diagnostics → Data logging → Display channel 4
-------------------	--



**Description**

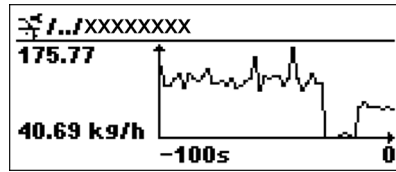Use this function to view the measured value trend for the logging channel in the form of a chart.





A0013859

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

 The process variable whose measured value curve is displayed is specified in the **Assign channel 1 - Assign channel 4** parameter (→  141).

**Additional information**





After calling up one of these parameters a diagram appears which shows the change of the respective measured value in the course of time. By pressing  and  simultaneously the diagram can be quitted and the display returns to the operating menu.

## 16.2.6 "Simulation" submenu

---

### Assignment of measured variable



---

<b>Navigation</b>	  Diagnostics → Simulation → Assign. meas. var.
<b>Description</b>	Use this function to select a process variable for the simulation process that is activated. The display alternates between the measured value and a diagnostics message of the <i>"function check" category (C)</i> while simulation is in progress:   The simulation value of the selected process variable is defined in the <b>Value process variable</b> parameter (→  144).
<b>Options</b>	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ Level</li> <li>■ Level linearized</li> </ul>
<b>Factory setting</b>	Off

---

### Value process variable



---

<b>Navigation</b>	  Diagnostics → Simulation → Value proc. var.
<b>Prerequisite</b>	One of the following options is selected in the <b>Assignment of measured variable</b> parameter : <ul style="list-style-type: none"> <li>■ Level</li> <li>■ Level linearized</li> </ul>
<b>Description</b>	Use this function to enter a simulation value for the selected process variable. Subsequent measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.
<b>Input range</b>	Depends on the process variable selected
<b>Factory setting</b>	The current value of the selected process variable (at the moment the simulation is activated).

---

### Switch output simulation

---

<b>Navigation</b>	  Diagnostics → Simulation → Switch output simulation
<b>Description</b>	Use this parameter to activate or deactivate the simulation of the switch output.
<b>Options</b>	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul>
<b>Factory setting</b>	Off (i.e. no simulation)





**Additional information** The switch output can also be simulated by selecting the **On** or **Off** option in **Setup → Advanced setup → Switch output → Switch output function**.

---

### Switch status

---

**Navigation**   Diagnostics → Simulation → Switch status

**Prerequisite** Only visible for **Switch output simulation = On**.

**Options**





- Open
- Closed

**Factory settings** Open



---

### Simulation current output 1 Simulation current output 2

---

**Navigation**   Diagnostics → Simulation → Sim.curr.out. 1  
  Diagnostics → Simulation → Sim.curr.out. 2 (for devices with 2 current outputs)

**Description** Use this function to switch simulation of the current output on and off. The display alternates between the measured value and a diagnostics message of the "function check" category (C) while simulation is in progress:

 The simulation value is defined in the **Value current output 1-2** parameter (→  145).

**Options**





- On  
Current simulation is active.
- Off  
Current simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.

**Factory setting** Off

---

### Value current output 1 Value current output 2

---

**Navigation**   Diagnostics → Simulation → Value curr.out. 1  
  Diagnostics → Simulation → Value curr.out. 2 (only for devices with 2 current outputs)

**Prerequisite** The **On** option is selected in the **Simulation current output 1-2** parameter .

**Description** Use this function to enter a current value for the simulation. In this way, users can verify the correct adjustment of the current output and the correct function of downstream switching units.

---

<b>Input range</b>	3.6 to 22.5 mA
<b>Factory setting</b>	Current value at the moment the simulation is activated.

---

**Simulation device alarm**

**Navigation**   Diagnostics → Simulation → Sim. alarm









**Description** Use this function to switch the device alarm on and off. In this way, users can verify the correct adjustment of the current output and the correct function of downstream switching units.  
The display alternates between the measured value and a diagnostics message of the "function check" category (C) while simulation is in progress:

**Options**

- On
- Off

**Factory setting** Off

## 16.2.7 The "Device check" submenu

Start device check 	
<b>Navigation</b>	  Diagnostics → Device check → Start device check
<b>Description</b>	Start of a device check.
<b>Options</b>	<ul style="list-style-type: none"> <li>■ No No device check is performed.</li> <li>■ Yes A device check is performed.</li> </ul> <p> If the error S941 "Echo lost" is present, a device check is not possible. First you have to eliminate the cause of this error.</p>
<b>Factory setting</b>	No
Result device check	
<b>Navigation</b>	  Diagnostics → Device check → Result device check
<b>Description</b>	Indicates the result of the device check.
<b>Display</b>	<ul style="list-style-type: none"> <li>■ Installation ok</li> <li>■ Accuracy reduced A measurement is possible. However, the measuring accuracy may be reduced due to the signal amplitudes.</li> <li>■ Measurement capability reduced A measurement is currently possible. However, there is the risk of an echo loss. Check the mounting position of the device and the dielectric constant of the medium.</li> <li>■ Check not done</li> </ul>
Last check time	
<b>Navigation</b>	  Diagnostics → Device check → Last check time
<b>Description</b>	Displays the operating time at which the last device check has been performed.
<b>Additional information</b>	<p><i>Display format</i></p> <p>Days (d), hours (h), minutes (m), seconds (s): 0000d00h00m00s</p>
Level signal	

**Navigation** Diagnostics → Device check → Level signal**Prerequisite**

Only visible if a device check has been performed.

**Description**

Displays the result of the device check for the level signal.

**Display options**

- Check not done
- Check not ok
  - Check the mounting position of the device and the dielectric constant of the medium.
- Check ok

# Index

## A

Access authorization to parameters	
Read access	56
Write access	56
Access code	56
Incorrect input	56
Access status display (Parameter)	101
Accessories	
Communication specific	87
Device specific	85
Service specific	88
Activate table (Parameter)	110
Actual diagnostics (Parameter)	134
Administration (Untermenü)	132
Advanced process conditions (Parameter)	103
Advanced setup (Submenu)	100
Anzeige (Untermenü)	122
Application	9
Residual risk	9
Assign channel 1 (Parameter)	141
Assign channel 2 (Parameter)	141
Assign channel 3 (Parameter)	141
Assign channel 4 (Parameter)	141
Assign current (Parameter)	114
Assign diagnostic level (Parameter)	118
Assign limit (Parameter)	118
Assign status (Parameter)	117
Assignment of measured variable (Parameter)	144

## B

Backlight (Parameter)	127
Blocking distance (Parameter)	104

## C

CE mark	10
Cleaning	82
Clear logging (Parameter)	142
Comparison result (Parameter)	130
Configuration backup display (Submenu)	129
Configuration failures	78
Configuration management (Parameter)	129
Configuration of a level measurement	69
Confirm access code (Parameter)	132
Confirm distance (Parameter)	99
Contrast display (Parameter)	128
Current output 1 (Submenu)	114
Current output 2 (Submenu)	114
Current span (Parameter)	114
Customer value (Parameter)	110

## D

Damping (Parameter)	115
Data logging (Submenu)	141
DD	67
Decimal places 1 (Parameter)	124
Decimal places 2 (Parameter)	124

Decimal places 3 (Parameter)	124
Decimal places 4 (Parameter)	124
Decimal places menu (Parameter)	127
Declaration of Conformity	10
Define access code	57
Define access code (Parameter)	132
Designated use	9
Device check (Submenu)	147
Device Descriptions	67
Device information (Submenu)	138
Device name (Parameter)	138
Device replacement	83
Device reset (Parameter)	133
Device tag (Parameter)	94, 138
Diagnostic event	
In the operating tool	76
Diagnostic events	74
Diagnostic list	77
Diagnostic message	74
Diagnostics	
Symbols	74
Diagnostics (Menu)	134
Diagnostics 1 (Parameter)	135
Diagnostics 2 (Parameter)	135
Diagnostics 3 (Parameter)	135
Diagnostics 4 (Parameter)	135
Diagnostics 5 (Parameter)	135
Diagnostics event	75
Diagnostics list (Submenu)	135
Diameter (Parameter)	108
DIP switch	
see Lock switch	
Display and operating module FHX50	53
Display channel 1 (Parameter)	142
Display channel 2 (Parameter)	142
Display channel 3 (Parameter)	142
Display channel 4 (Parameter)	142
Display damping (Parameter)	125
Display interval (Parameter)	125
Display module	60
Display symbols for submenus	61
Display symbols for the locking state	61
Disposal	84
Distance (Parameter)	97
Distance unit (Parameter)	94
Document	
Function	4
Document function	4

## E

Electrical connection	
Commubox FXA191, 195	54
Commubox FXA291	54
Field Communicator	54
Handheld terminals	54
Operating tools	54

Via HART protocol . . . . . 54  
 Via service interface (CDI) . . . . . 54  
 Electronic failures . . . . . 77  
 Electronic temperature (Parameter) . . . . . 140  
 Electronics housing  
   Design . . . . . 12  
   Turning  
     see Turning the transmitter housing  
 Empty calibration (Parameter) . . . . . 96  
 Enter access code (Parameter) . . . . . 101  
 Envelope curve display . . . . . 66  
 Error messages  
   Configuration failures . . . . . 78  
   Electronic failures . . . . . 77  
   Process induced failures . . . . . 79  
   Sensor errors . . . . . 77  
 Event history . . . . . 79  
 Event level  
   Explanation . . . . . 74  
   Symbols . . . . . 74  
 Event list (Parameter) . . . . . 136  
 Event logbook (Submenu) . . . . . 136  
 Event text . . . . . 75  
 Events list . . . . . 79  
 Extended order code 1 (Parameter) . . . . . 139  
 Extended order code 2 (Parameter) . . . . . 139  
 Extended order code 3 (Parameter) . . . . . 139  
 Exterior cleaning . . . . . 82

**F**

Failure current (Parameter) . . . . . 116  
 Failure mode (Parameter) . . . . . 116, 120  
 FHX50 . . . . . 53  
 Filter options (Parameter) . . . . . 136  
 Filtering the event logbook . . . . . 80  
 Firmware version (Parameter) . . . . . 138  
 Fixed current (Parameter) . . . . . 115  
 Format display (Parameter) . . . . . 122  
 Free text (Parameter) . . . . . 107  
 Full calibration (Parameter) . . . . . 96  
 FV (HART device variable) . . . . . 67

**H**

HART device variables . . . . . 67  
 HART integration . . . . . 67  
 Header (Parameter) . . . . . 125  
 Header text (Parameter) . . . . . 126  
 Housing  
   Design . . . . . 12

**I**

Input mask . . . . . 64  
 Intermediate height (Parameter) . . . . . 108  
 Invert output signal (Parameter) . . . . . 121

**K**

Keypad lock  
   Disabling . . . . . 59  
   Switch-on . . . . . 59

**L**

Language (Parameter) . . . . . 94  
 Last backup (Parameter) . . . . . 129  
 Last check time (Parameter) . . . . . 147  
 Level (Parameter) . . . . . 97, 109  
 Level (Submenu) . . . . . 102  
 Level correction (Parameter) . . . . . 105  
 Level linearized (Parameter) . . . . . 140  
 Level measurement configuration . . . . . 69  
 Level signal (Parameter) . . . . . 147  
 Level unit (Parameter) . . . . . 104  
 Linearization (Submenu) . . . . . 106  
 Linearization type (Parameter) . . . . . 106  
 Local display . . . . . 53  
   see Diagnostics message  
   see In alarm condition  
 Lock switch . . . . . 58  
 Locking status (Parameter) . . . . . 100  
 Logging interval (Parameter) . . . . . 141

**M**

Maintenance . . . . . 82  
 Mapping (Sequence) . . . . . 99  
 Mapping end point (Parameter) . . . . . 100  
 Max. draining speed liquid (Parameter) . . . . . 103  
 Max. filling speed liquid (Parameter) . . . . . 102  
 Maximum value (Parameter) . . . . . 107  
 Measured current 1 (Parameter) . . . . . 140  
 Measured materials . . . . . 9  
 Measured value (Submenu) . . . . . 140  
 Measured value symbols . . . . . 62  
 Medium group (Parameter) . . . . . 95  
 Medium property (Parameter) . . . . . 102  
 Medium type (Parameter) . . . . . 102  
 Menu  
   Description of parameters . . . . . 94

**N**

Number format (Parameter) . . . . . 127

**O**

Operating elements  
   Diagnostics message . . . . . 75  
 Operating menu  
   Description of parameters . . . . . 94  
   Overview . . . . . 90  
 Operating module . . . . . 60  
 Operating time (Parameter) . . . . . 129  
 Operating time from restart (Parameter) . . . . . 134  
 Operational safety . . . . . 10  
 Order code (Parameter) . . . . . 139  
 Output current 1 (Parameter) . . . . . 117  
 Output current 2 (Parameter) . . . . . 117  
 Output echo lost (Parameter) . . . . . 111  
 Overvoltage protection  
   General information . . . . . 49

**P**

Previous diagnostics (Parameter) . . . . . 134

- Process induced failures . . . . . 79  
 Product safety . . . . . 10  
 PV (HART device variable) . . . . . 67
- R**
- Ramp at echo lost (Parameter) . . . . . 111  
 Read access . . . . . 56  
 Record map (Parameter) . . . . . 100  
 Registered trademarks . . . . . 12  
 Remedial measures  
   Calling up . . . . . 76  
   Closing . . . . . 76  
 Remote operation . . . . . 54  
 Repair concept . . . . . 83  
 Replacing a device . . . . . 83  
 Requirements for personnel . . . . . 9  
 Result device check (Parameter) . . . . . 147  
 Returning devices . . . . . 84
- S**
- Safety instructions  
   Basic . . . . . 9  
 Safety Instructions (XA) . . . . . 6  
 Safety settings (Submenu) . . . . . 111  
 Schaltzustand (Parameter) . . . . . 145  
 Sensor errors . . . . . 77  
 Separator (Parameter) . . . . . 126  
 Serial number (Parameter) . . . . . 138  
 Setting the operating language . . . . . 68  
 Settings  
   Operating language . . . . . 68  
 Setup (Menu) . . . . . 94  
 Signal quality (Parameter) . . . . . 98  
 Simulation (Submenu) . . . . . 144  
 Simulation current output 1 (Parameter) . . . . . 145  
 Simulation device alarm (parameter) . . . . . 146  
 Spare parts . . . . . 84  
   Nameplate . . . . . 84  
 Start device check (Parameter) . . . . . 147  
 Status signals . . . . . 61, 74  
 Störungsbehebung . . . . . 72  
 Submenu  
   Events list . . . . . 79  
 SV (HART device variable) . . . . . 67  
 Switch output function (Parameter) . . . . . 117  
 Switch output simulation (Parameter) . . . . . 144  
 Switch status (Parameter) . . . . . 120  
 Switch-off delay (Parameter) . . . . . 120  
 Switch-off value (Parameter) . . . . . 118  
 Switch-on delay (Parameter) . . . . . 120  
 Switch-on value (Parameter) . . . . . 118  
 Symbols  
   For correction . . . . . 64  
   In the text and numeric editor . . . . . 64  
 System components . . . . . 89
- T**
- Table mode (Parameter) . . . . . 109  
 Table number (Parameter) . . . . . 109
- Tank type (Parameter) . . . . . 95  
 Tank/silo height (Parameter) . . . . . 105  
 Terminal voltage 1 (Parameter) . . . . . 140  
 Transmitter  
   Turning the display module . . . . . 37  
   Turning the housing . . . . . 36  
 Transmitter housing  
   Turning . . . . . 36  
 Tube diameter (Parameter) . . . . . 95  
 Turning the display module . . . . . 37  
 TV (HART device variable) . . . . . 67
- U**
- Unit linearized (Parameter) . . . . . 106
- V**
- Value 1 display (Parameter) . . . . . 124  
 Value 2 display (Parameter) . . . . . 124  
 Value 3 display (Parameter) . . . . . 124  
 Value 4 display (Parameter) . . . . . 124  
 Value current output 1 (Parameter) . . . . . 145  
 Value current output 2 (Parameter) . . . . . 145  
 Value echo lost (Parameter) . . . . . 111  
 Value measured variable (Parameter) . . . . . 144
- W**
- W@M Device Viewer . . . . . 84  
 Workplace safety . . . . . 10  
 Write access . . . . . 56  
 Write protection  
   Via access code . . . . . 57  
   via lock switch . . . . . 58

[www.addresses.endress.com](http://www.addresses.endress.com)

---