



Level



Pressure



Flow



Temperature



Liquid
Analysis



Registration



Systems
Components



Services




Solutions

Operating Instructions

Proline Prosonic Flow B 200 HART

Ultrasonic flow measuring system

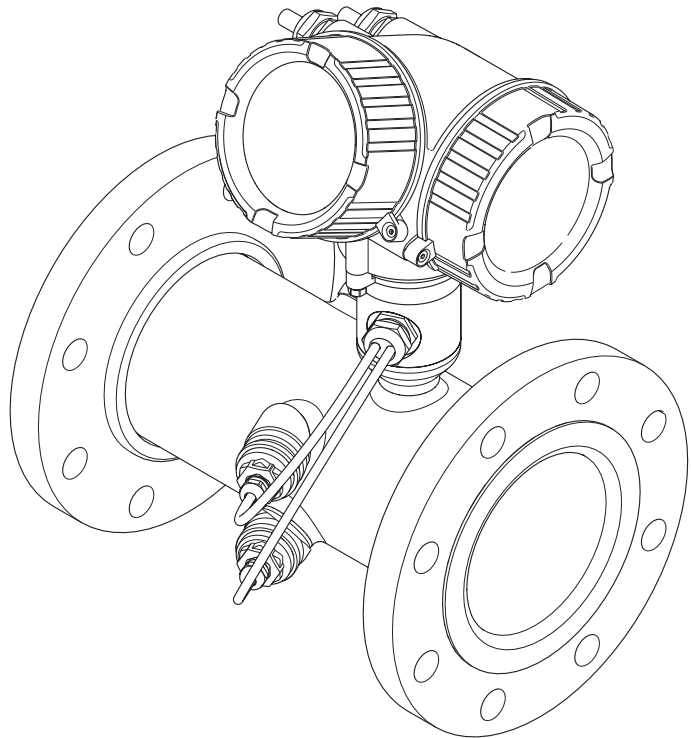

- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress +Hauser Sales Center will supply you with current information and updates to these Instructions.

Table of contents

1	Document information	5	7	Electrical connection	22
1.1	Document function	5	7.1	Connection conditions	22
1.2	Symbols used	5	7.1.1	Required tools	22
1.2.1	Safety symbols	5	7.1.2	Requirements for connecting cable	22
1.2.2	Electrical symbols	5	7.1.3	Terminal assignment	23
1.2.3	Tool symbols	5	7.1.4	Requirements for the supply unit	23
1.2.4	Symbols for certain types of information	6	7.1.5	Preparing the measuring device	24
1.2.5	Symbols in graphics	6	7.2	Connecting the measuring device	24
1.3	Documentation	7	7.2.1	Connecting the transmitter	25
1.3.1	Standard documentation	7	7.3	Special connection instructions	26
1.3.2	Supplementary device-dependent documentation	7	7.3.1	Connection examples	26
2	Basic safety instructions	8	7.4	Ensuring the degree of protection	26
2.1	Requirements for the personnel	8	7.5	Post-connection check	27
2.2	Designated use	8	8	Operation options	28
2.3	Workplace safety	9	8.1	Overview of operation options	28
2.4	Operational safety	9	8.2	Structure and function of the operating menu	29
2.5	Product safety	9	8.2.1	Structure of the operating menu	29
3	Product description	10	8.2.2	Operating philosophy	30
3.1	Product design	10	8.3	Access to the operating menu via the local display	31
3.2	Registered trademarks	10	8.3.1	Operational display	31
4	Incoming acceptance and product identification	11	8.3.2	Navigation view	33
4.1	Incoming acceptance	11	8.3.3	Editing view	35
4.2	Product identification	12	8.3.4	Operating elements	36
4.2.1	Transmitter nameplate	12	8.3.5	Opening the context menu	37
4.2.2	Sensor nameplate	13	8.3.6	Navigating and selecting from list	39
5	Storage and transport	14	8.3.7	Calling the parameter directly	39
5.1	Storage conditions	14	8.3.8	Calling up help text	40
5.2	Transporting the product	14	8.3.9	Changing the parameters	41
5.3	Packaging disposal	15	8.3.10	User roles and related access authorization	42
6	Mounting	16	8.3.11	Disabling write protection via access code	42
6.1	Installation conditions	16	8.3.12	Enabling and disabling the keypad lock	42
6.1.1	Mounting position	16	8.4	Access to the operating menu via the operating tool	44
6.1.2	Requirements from environment and process	18	8.4.1	Connecting the operating tool	44
6.2	Mounting the measuring device	19	8.4.2	Field Xpert SFX100	45
6.2.1	Required tools	19	8.4.3	FieldCare	45
6.2.2	Preparing the measuring device	19	8.4.4	AMS Device Manager	46
6.2.3	Mounting the measuring device	19	8.4.5	SIMATIC PDM	46
6.2.4	Turning the transmitter housing	19	8.4.6	Field Communicator 475	47
6.2.5	Turning the display module	20	9	System integration	48
6.3	Post-mounting check	20	9.1	Overview of device description files	48
			9.1.1	Current version data for the device	48
			9.1.2	Operating tools	48
			9.2	Measured variables via HART protocol	48
			9.3	Other settings	49
			10	Commissioning	50
			10.1	Function check	50

10.2	Switching on the measuring device	50	13	Repair	110
10.3	Setting the operating language	50	13.1	General notes	110
10.4	Configuring the measuring device	51	13.2	Spare parts	110
10.4.1	Selecting and setting the medium	52	13.3	Endress+Hauser services	111
10.4.2	Configuring the HART input	53	14	Maintenance	112
10.4.3	Configuring the current output	56	14.1	Maintenance tasks	112
10.4.4	Configuring the pulse/frequency/switch output	59	14.1.1	Exterior cleaning	112
10.4.5	Configuring the local display	69	14.2	Measuring and test equipment	112
10.4.6	Configuring the output conditioning	72	14.3	Endress+Hauser services	112
10.4.7	Configuring the low flow cut off	73	15	Return	113
10.5	Advanced settings	74	16	Disposal	114
10.5.1	Defining the tag name	75	16.1	Removing the measuring device	114
10.5.2	Setting the system units	75	16.2	Disposing of the measuring device	114
10.5.3	Configuring the totalizer	77	17	Technical data	115
10.5.4	Carrying out additional display configurations	79	17.1	Application	115
10.6	Configuration management	80	17.2	Function and system design	115
10.7	Simulation	82	17.3	Input	115
10.8	Protecting settings from unauthorized access	84	17.4	Output	116
10.8.1	Write protection via access code	84	17.5	Power supply	119
10.8.2	Write protection via write protection switch	85	17.6	Performance characteristics	121
11	Operation	87	17.7	Mounting	123
11.1	Adjusting the operating language	87	17.8	Environment	123
11.2	Configuring the display	87	17.9	Process	124
11.3	Reading off measured values	87	17.10	Mechanical construction	124
11.3.1	Process variables	87	17.11	Operability	128
11.3.2	System values	88	17.12	Certificates and approvals	129
11.3.3	Totalizer	89	17.13	Application packages	130
11.3.4	Output values	90	17.14	Accessories	130
11.4	Adapting the measuring device to the process conditions	91	18	Appendix	131
11.5	Performing a totalizer reset	91	18.1	Overview of the Operator/Maintenance operating menu	131
11.6	Showing data logging	92	Index	133	
12	Diagnostics and troubleshooting	95			
12.1	General troubleshooting	95			
12.2	Diagnostic information on local display	97			
12.2.1	Diagnostic message	97			
12.2.2	Calling up remedial measures	99			
12.3	Diagnostic information in FieldCare	100			
12.3.1	Diagnostic options	100			
12.3.2	Calling up remedy information	100			
12.4	Adapting the diagnostic information	101			
12.4.1	Adapting the diagnostic behavior	101			
12.5	Overview of diagnostic information	101			
12.6	Diagnostic list	104			
12.7	Event logbook	104			
12.7.1	Event history	104			
12.7.2	Filtering the event logbook	105			
12.7.3	Overview of information events	105			
12.8	Resetting the measuring device	106			
12.9	Device information	106			
12.10	Firmware history	108			





1 Document information

1.1 Document function







These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols used


1.2.1 Safety symbols



Symbol	Meaning
 A0011189-EN	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
 A0011190-EN	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
 A0011191-EN	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
 A0011192-EN	NOTICE! This symbol contains information on procedures and other facts which do not result in personal injury.

1.2.2 Electrical symbols







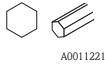

Symbol	Meaning
 A0011197	Direct current A terminal to which DC voltage is applied or through which direct current flows.
 A0011198	Alternating current A terminal to which alternating voltage is applied or through which alternating current flows.
 A0017381	Direct current and alternating current <ul style="list-style-type: none"> ■ A terminal to which alternating voltage or DC voltage is applied. ■ A terminal through which alternating current or direct current flows.
 A0011200	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
 A0011199	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.
 A0011201	Equipotential connection A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.

1.2.3 Tool symbols




Symbol	Meaning
 A0011220	Flat blade screwdriver

 A0011221	Allen key
 A0011222	Open-ended wrench

1.2.4 Symbols for certain types of information

Symbol	Meaning
 A0011182	Allowed Indicates procedures, processes or actions that are allowed.
 A0011183	Preferred Indicates procedures, processes or actions that are preferred.
 A0011184	Forbidden Indicates procedures, processes or actions that are forbidden.
 A0011193	Tip Indicates additional information.
 A0011194	Reference to documentation Refers to the corresponding device documentation.
 A0011195	Reference to page Refers to the corresponding page number.
 A0011196	Reference to graphic Refers to the corresponding graphic number and page number.
1., 2., 3., ...	Series of steps
✓	Result of a sequence of actions
 A0013502	Help in the event of a problem

1.2.5 Symbols in graphics

Symbol	Meaning
1, 2, 3, ...	Item numbers
1., 2., 3., ...	Series of steps
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections
 A0013441	Flow direction
 A0011187	Hazardous area Indicates a hazardous area.
 A0011188	Safe area (non-hazardous area) Indicates a non-hazardous area.

1.3 Documentation



The following document types are available:

- On the CD-ROM supplied with the device
- In the Download Area of the Endress+Hauser Internet site: www.endress.com → Download



For a detailed list of the individual documents along with the documentation code

1.3.1 Standard documentation

Document type	Purpose and content of the document
Technical Information	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Description of Device Parameters	Reference for your parameters The document provides a detailed explanation of each individual parameter in the operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

1.3.2 Supplementary device-dependent documentation

Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task
- ▶ Are authorized by the plant owner/operator
- ▶ Are familiar with federal/national regulations
- ▶ Before beginning work, the specialist staff must have read and understood the instructions in the Operating Instructions and supplementary documentation as well as in the certificates (depending on the application)
- ▶ Following instructions and basic conditions

The operating personnel must fulfill the following requirements:

- ▶ Being instructed and authorized according to the requirements of the task by the facility's owner-operator
- ▶ Following the instructions in these Operating Instructions

2.2 Designated use

Application and media

The measuring device described in these Instructions is intended only for flow measurement of gases.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or in applications where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- ▶ Use the measuring device only for media against which the process-wetted materials are adequately resistant.
- ▶ If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the device documentation provided (on the CD-ROM) is absolutely essential.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

NOTICE

Danger of breakage of the sensor due to corrosive or abrasive fluids!

- ▶ Verify the compatibility of the process fluid with the sensor material.
- ▶ Ensure the resistance of all fluid-wetted materials in the process.
- ▶ Observe the specified maximum process pressure.

Verification for borderline cases:

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks

The external surface temperature of the housing can increase by max. 20 K due to the power consumption of the electronic components. Hot process fluids passing through the measuring device will further increase the surface temperature of the housing. The surface of the sensor, in particular, can reach temperatures which are close to the fluid temperature.

Possible burn hazard due to fluid temperatures!

- ▶ For elevated fluid temperature, ensure protection against contact to prevent burns.

2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

- ▶ Do not ground the welding unit via the measuring device.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with Endress+Hauser.

Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from Endress+Hauser only.


2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which they are safe to operate.

It meets general safety standards and legal requirements. It also complies with the EC directives listed in the device-specific EC Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

3 Product description

3.1 Product design

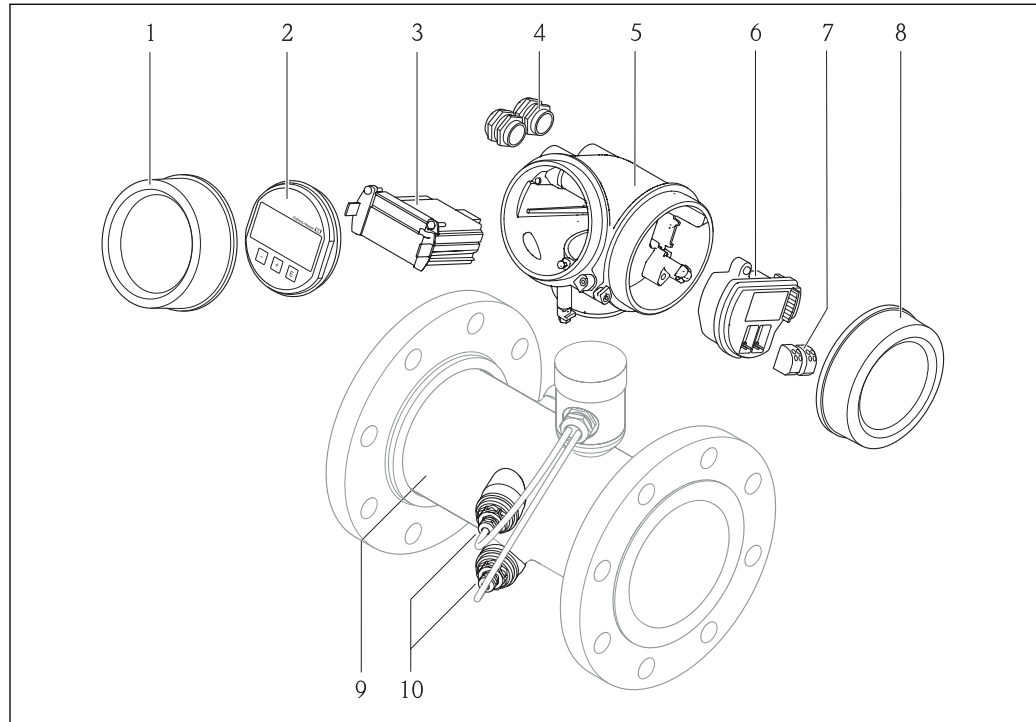

A0016199

1 Important components of a measuring device

- 1 Electronics compartment cover
- 2 Display module
- 3 Main electronics module
- 4 Cable glands
- 5 Transmitter housing
- 6 I/O electronics module
- 7 Terminals (spring loaded terminals, pluggable)
- 8 Connection compartment cover
- 9 Sensor
- 10 Transducer

3.2 Registered trademarks

HART®


Registered trademark of the HART Communication Foundation, Austin, USA

Applicator®, FieldCare®, Field Xpert™, HistoROM®

Registered or registration-pending trademarks of the Endress+Hauser Group


4 Incoming acceptance and product identification

4.1 Incoming acceptance

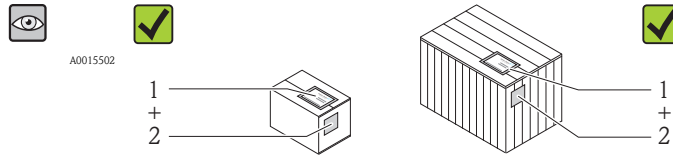


A0013843

Is the order code on the delivery note (1) identical to the order code on the product sticker (2)?

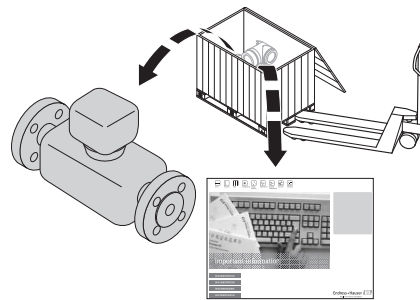


A0013695

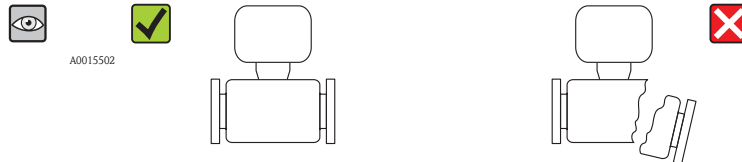


A0013698

Are the goods undamaged?

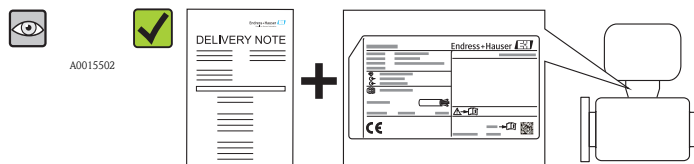


A0013699

Do the nameplate data match the ordering information on the delivery note?

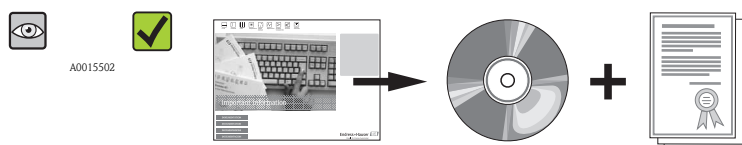

A0013697

Is the CD-ROM with the Technical Documentation and documents present?



 If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.

4.2 Product identification


The following options are available for identification of the measuring device:


- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the measuring device is displayed.

For an overview of the scope of the Technical Documentation provided, refer to the following:

- The "Additional standard documentation on the device" (→  7) and "Supplementary device-dependent documentation" (→  7) sections
- The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)


4.2.1 Transmitter nameplate

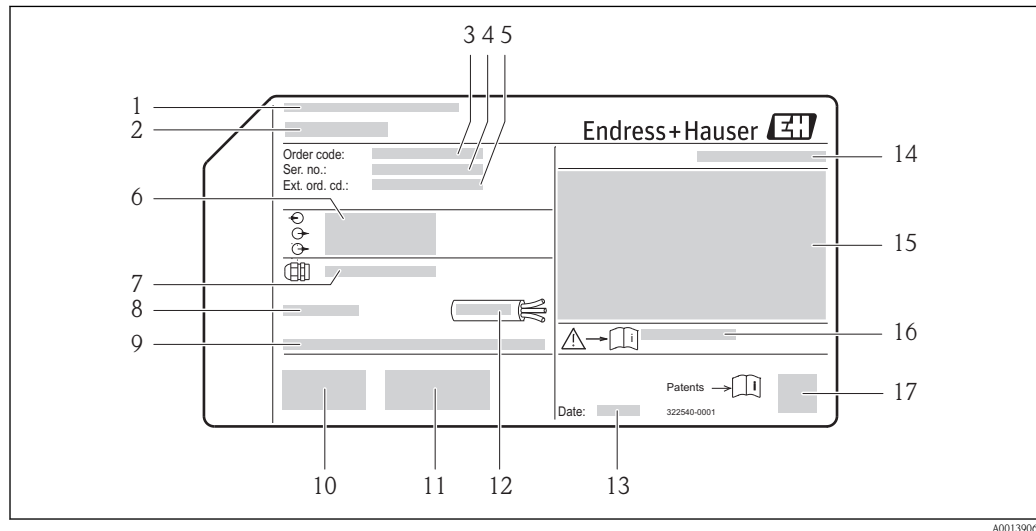


 2 Example of a transmitter nameplate

- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number
- 5 Extended order code
- 6 Electrical connection data, e.g. available inputs and outputs, supply voltage
- 7 Type of cable glands
- 8 Permitted ambient temperature range (T_a)
- 9 Firmware version (FW) and device revision (Dev.Rev.) from the factory
- 10 CE mark, C-Tick
- 11 Additional information on version: certificates, approvals
- 12 Permitted temperature range for cable
- 13 Manufacturing date: year-month
- 14 Degree of protection
- 15 Explosion protection approval information
- 16 Document number of safety-related supplementary documentation
- 17 2-D matrix code

4.2.2 Sensor nameplate

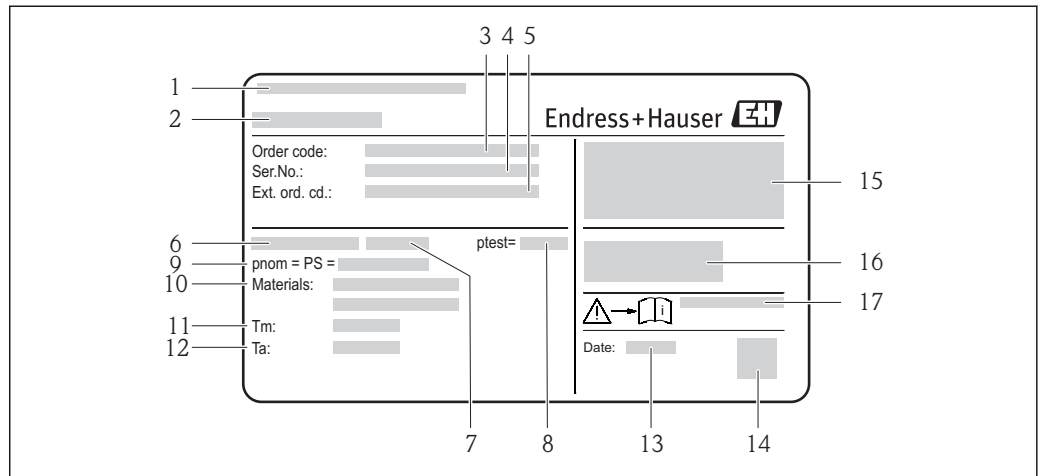

 3 Example of 1st sensor nameplate

- 1 Manufacturing location
- 2 Name of the sensor
- 3 Order code
- 4 Serial number
- 5 Extended order code
- 6 Nominal diameter of the sensor
- 7 Flange type
- 8 Test pressure of the sensor
- 9 Nominal pressure of the sensor (max. permitted pressure)
- 10 Material of measuring tube and seal
- 11 Fluid temperature range
- 12 Ambient temperature range
- 13 Manufacturing date: year-month
- 14 2-D matrix code
- 15 Degree of protection, approval information for explosion protection and Pressure Equipment Directive
- 16 CE mark, C-Tick
- 17 Document number of safety-related supplementary documentation

Order code

The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approval-related specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE+).

5 Storage and transport

5.1 Storage conditions

Observe the following notes for storage:

- Store in the original packaging to ensure protection from shock.
- Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and fouling in the measuring tube.
- Protect from direct sunlight to avoid unacceptably high surface temperatures.
- Storage temperature: -40 to $+80$ °C (-40 to $+176$ °F), preferable for $+20$ °C ($+68$ °F)
- Store in a dry and dust-free place.
- Do not store outdoors.


5.2 Transporting the product

⚠ WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- ▶ Secure the measuring device from rotating or slipping.
- ▶ Observe the weight specified on the packaging (stick-on label).
- ▶ Observe the transport instructions on the stick-on label on the electronics compartment cover.

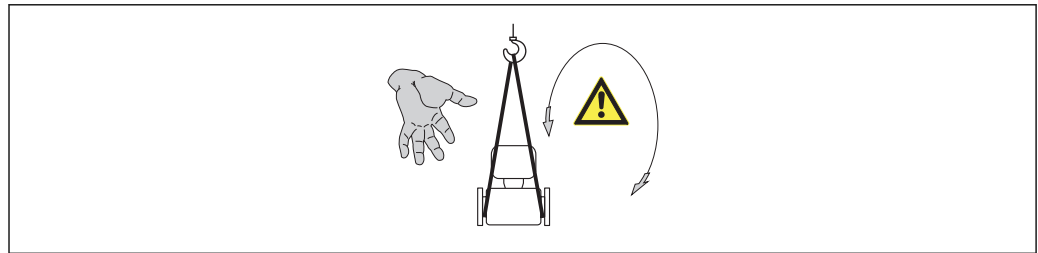

A0015606

Observe the following notes during transport:

- Transport the measuring device to the measuring point in the original packaging.
- Lifting gear
 - Webbing slings: Do not use chains, as they could damage the housing.
 - For wood crates, the floor structure enables these to be loaded lengthwise or broadside using a forklift.
- For measuring device $> DN 40$ ($1\frac{1}{2}$ in): lift the measuring device using the webbing slings at the process connections; do not lift at the transmitter housing.
- Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and fouling in the measuring tube.

5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:

- Measuring device secondary packaging: polymer stretch film that conforms to EC Directive 2002/95/EC (RoHS).
- Packaging:
 - Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
 - or
 - Carton in accordance with European Packaging Directive 94/62EC; recyclability is confirmed by the affixed RESY symbol.
- Seaworthy packaging (optional): Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
- Carrying and mounting hardware:
 - Disposable plastic pallet
 - Plastic straps
 - Plastic adhesive strips
- Dunnage: Paper cushion


6 Mounting

6.1 Installation conditions

No special measures such as supports are necessary. External forces are absorbed by the construction of the device.

6.1.1 Mounting position

Mounting location

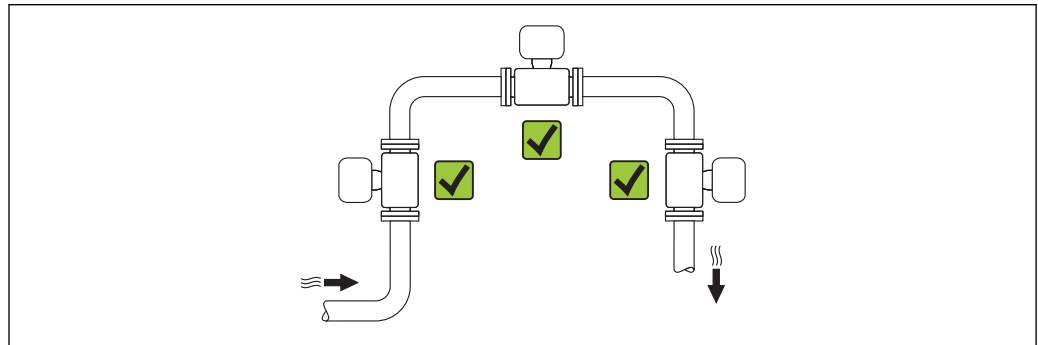


A0015543



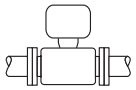

Orientation



The direction of the arrow on the sensor helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

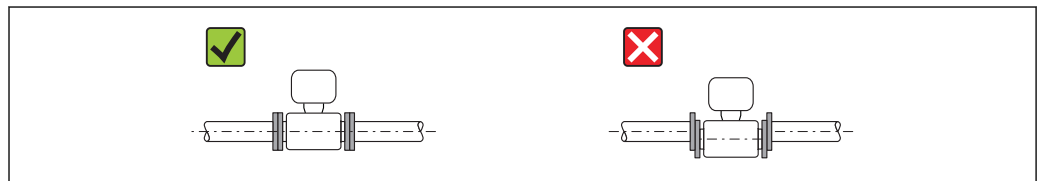
- i** ■ Install the measuring device in a parallel plane free of external mechanical stress.
- The internal diameter of the pipe must match the internal diameter of the sensor: see the "Technical Information" device document, "Design and dimensions" section.

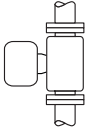


A0015895

Orientation		Compact version
A	Vertical orientation	 <small>A0015545</small> 
B	Horizontal orientation, transmitter head up *	 <small>A0015589</small> 

Orientation		Compact version
C	Horizontal orientation, transmitter head down *	
D	Horizontal orientation, transmitter head at side	

 * A maximum deviation of only $\pm 3^\circ$ is permitted for the horizontal alignment of the transducers.

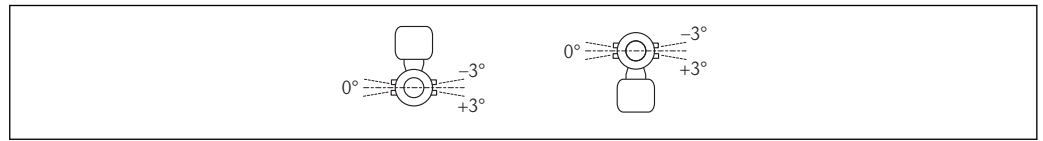


A0016534


Inlet and outlet runs

The sensor should be mounted upstream of assemblies such as valves, T-sections, elbows etc. where possible. As a minimum, the inlet and outlet runs shown below must be observed to achieve the specific accuracy of the device. The longest inlet run shown must be observed if two or more flow disturbances are present.

Single-path version: DN 50 (2"), DN 80 (3")

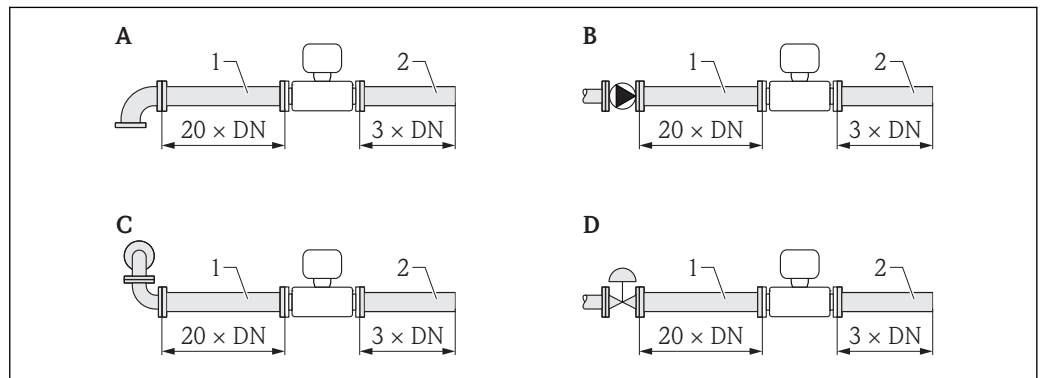


A0015453

 4 *Single-path version: minimum inlet and outlet runs with various flow obstructions*

- A 90° elbow or T-section
- B Pump
- C 2x 90° elbow 3-dimensional
- D Control valve
- 1 Inlet run
- 2 Outlet run

Two-path version: DN 100 to 200 (4 to 8")

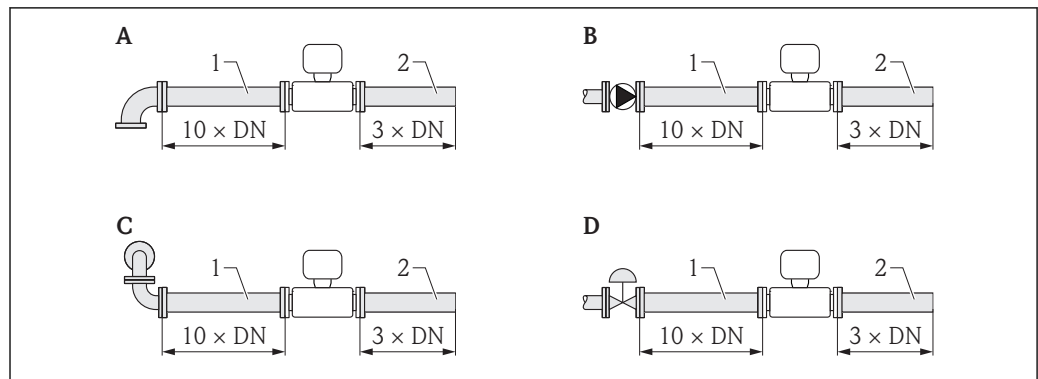

5 Two-path version: minimum inlet and outlet runs with various flow obstructions

- A 90 ° elbow or T-section
- B Pump
- C 2x 90 ° elbow 3-dimensional
- D Control valve
- 1 Inlet run
- 2 Outlet run

Installation dimensions

For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section

6.1.2 Requirements from environment and process

Ambient temperature range

Transmitter	-40 to +60 °C (-40 to +140 °F)
Local display	-20 to +60 °C (-4 to +140 °F), the readability of the display may be impaired at temperatures outside the temperature range.
Sensor	<ul style="list-style-type: none"> ■ Flange material carbon steel: -10 to +60 °C (+14 to +140 °F) ■ Flange material stainless steel: -40 to +60 °C (-40 to +140 °F) ■ Version without flange: -40 to +60 °C (-40 to +140 °F)

- ▶ If operating outdoors:
Avoid direct sunlight, particularly in warm climatic regions.

System pressure

Sensor
Max. 10 bar (145 psi)

Thermal insulation

For optimum temperature and methane fraction measurement (order characteristic for "Sensor version", option 2 "Volume flow + Biogas analysis"), make sure that heat is neither lost nor applied to the sensor. Thermal insulation can ensure that such heat transfer does not take place.

Thermal insulation is particularly recommended in situations where there is a large difference between the process temperature and the ambient temperature. This can result in heat convection errors during temperature measurement. A further factor which can lead to measurement errors due to heat convection is a low flow velocity.

6.2 Mounting the measuring device

6.2.1 Required tools

For transmitter

- For turning the transmitter housing: Open-ended wrench 8 mm
- For opening the securing clamps: Allen key 3 mm

For sensor

For flanges and other process connections: Corresponding mounting tools

6.2.2 Preparing the measuring device


1. Remove all remaining transport packaging.
2. Remove any protective covers or protective caps present from the sensor.
3. Remove stick-on label on the electronics compartment cover.

6.2.3 Mounting the measuring device

⚠ WARNING

Danger due to improper process sealing!


- ▶ Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
 - ▶ Ensure that the gaskets are clean and undamaged.
 - ▶ Install the gaskets correctly.
1. Ensure that the direction of the arrow on the sensor matches the flow direction of the medium.
 2. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

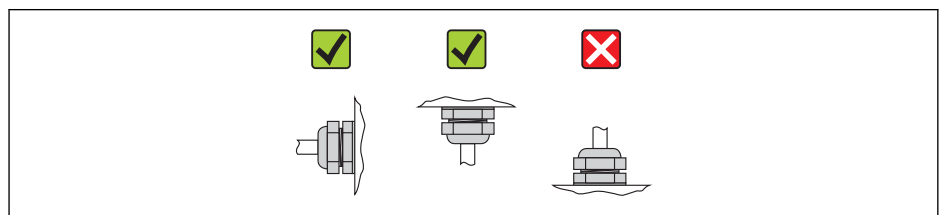

A0013964

6.2.4 Turning the transmitter housing


To provide easier access to the connection compartment or display module, the transmitter housing can be turned:

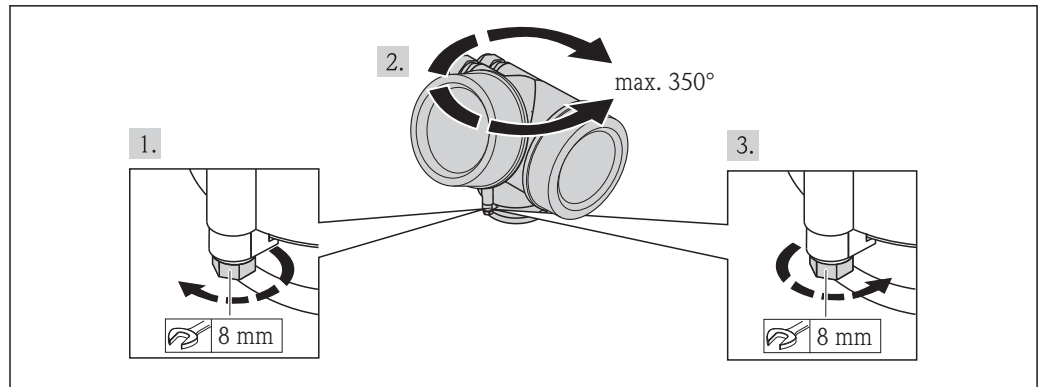

A0013713

1. Release the fixing screw.
2. Turn the housing to the desired position.
3. Firmly tighten the securing screw.

6.2.5 Turning the display module

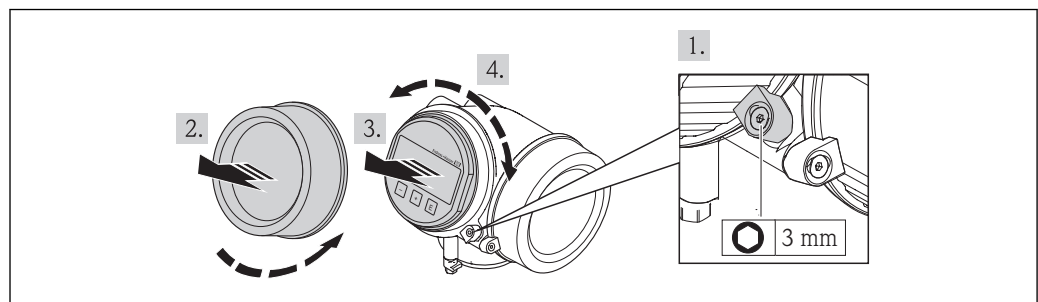

A0013905

1. Loosen the securing clamp of the electronics compartment cover using an Allen key.
2. Unscrew cover of the electronics compartment from the transmitter housing.
3. Optional: pull out the display module with a gentle rotational movement.
4. Rotate the display module into the desired position: Max. $8 \times 45^\circ$ in each direction.
5. Without display module pulled out:
Allow display module to engage at desired position.
6. With display module pulled out:
Feed the spiral cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment until it engages.
7. Reverse the removal procedure to reassemble the transmitter.

6.3 Post-mounting check

Is the device undamaged (visual inspection)?	<input type="checkbox"/>
Does the measuring device conform to the measuring point specifications? For example: <ul style="list-style-type: none"> ■ Process temperature (→ 124) ■ Process pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document) ■ Ambient temperature range (→ 18) ■ Measuring range (→ 115) 	<input type="checkbox"/>

Has the correct orientation for the sensor been selected (→ 16)? <ul style="list-style-type: none">■ According to sensor type■ According to medium temperature■ According to medium properties (outgassing, with entrained solids)	<input type="checkbox"/>
Does the arrow on the sensor match the direction of flow of the medium through the piping (→ 16)?	<input type="checkbox"/>
Are the measuring point identification and labeling correct (visual inspection)?	<input type="checkbox"/>
Is the device adequately protected from precipitation and direct sunlight?	<input type="checkbox"/>
Are the securing screw and securing clamp tightened securely?	<input type="checkbox"/>

7 Electrical connection

7.1 Connection conditions

7.1.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: Crimping tool for wire end ferrule
- For removing cables from terminal: Flat blade screwdriver ≤ 3 mm (0.12 in)

7.1.2 Requirements for connecting cable

The connecting cables provided by the customer must fulfill the following requirements.

Electrical safety

In accordance with applicable federal/national regulations.

Permitted temperature range

- -40 °C (-40 °F)... ≥ 80 °C (176 °F)
- Minimum requirement: cable temperature range \geq ambient temperature + 20 K

Signal cable

Current output

- For 4-20 mA: standard installation cable is sufficient.
- For 4-20 mA HART: Shielded cable recommended. Observe grounding concept of the plant.

Pulse/frequency/switch output

Standard installation cable is sufficient.

Cable diameter

- Included cable glands: M20 \times 1.5 with cable \varnothing 6 to 12 mm (0.24 to 0.47 in)
- Plug-in spring terminals for device version without integrated overvoltage protection: wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)
- Screw terminals for device version with integrated overvoltage protection: wire cross-sections 0.2 to 2.5 mm² (24 to 14 AWG)

7.1.3 Terminal assignment

Transmitter

4-20 mA HART connection version with additional outputs

<p style="text-align: right; font-size: small;">A0013570</p>	<p style="text-align: right; font-size: small;">A0018161</p>
<p>Maximum number of terminals, without integrated overvoltage protection</p>	<p>Maximum number of terminals, with integrated overvoltage protection</p>
<p>1 Output 1 (passive): supply voltage and signal transmission 2 Output 2 (passive): supply voltage and signal transmission 3 Ground terminal for cable shield</p>	

Order code for "Output"	Terminal numbers			
	Output 1		Output 2	
	1 (+)	2 (-)	3 (+)	4 (-)
Option A	4-20 mA HART (passive)		-	
Option B ¹⁾	4-20 mA HART (passive)		Pulse/frequency/switch output (passive)	
Option C ¹⁾	4-20 mA HART (passive)		4-20 mA (passive)	

1) Output 1 must always be used; output 2 is optional.

7.1.4 Requirements for the supply unit

Supply voltage

An external power supply is required for each output. The following supply voltage values apply for the 4-20 mA and 4-20 mA HART current output:

Order code for "Output"	Minimum terminal voltage	Maximum terminal voltage
<ul style="list-style-type: none"> ■ Option A ^{1), 2)}: 4-20 mA HART ■ Option B ^{1), 2)}: 4-20 mA HART, Pulse/frequency/switch output 	For 4 mA: ≥ DC 16 V For 20 mA: ≥ DC 12 V	DC 35 V
Option C ^{1), 2)} : 4-20 mA HART, 4-20 mA	For 4 mA: ≥ DC 16 V For 20 mA: ≥ DC 12 V	DC 30 V

1) External supply voltage of the power supply unit with load (→ 23)

2) For device versions with local display SD03: The terminal voltage must be increased by DC 2 V if backlighting is used.


Load

Load for current output: 0 to 500 Ω, depending on the external supply voltage of the power supply unit

Calculation of the maximum load

Depending on the supply voltage of the power supply unit (U_S), the maximum load (R_B) including line resistance must be observed to ensure adequate terminal voltage at the device. In doing so, observe the minimum terminal voltage (\rightarrow 23)

- For $U_S = 16.0$ to 16.8 V: $R_B \leq (U_S - 16.0 \text{ V}) : 0.0036 \text{ A}$
- For $U_S = 16.8$ to 23.0 V: $R_B \leq (U_S - 12.0 \text{ V}) : 0.022 \text{ A}$
- For $U_S = 23.0$ to 30.0 V: $R_B \leq 500 \Omega$

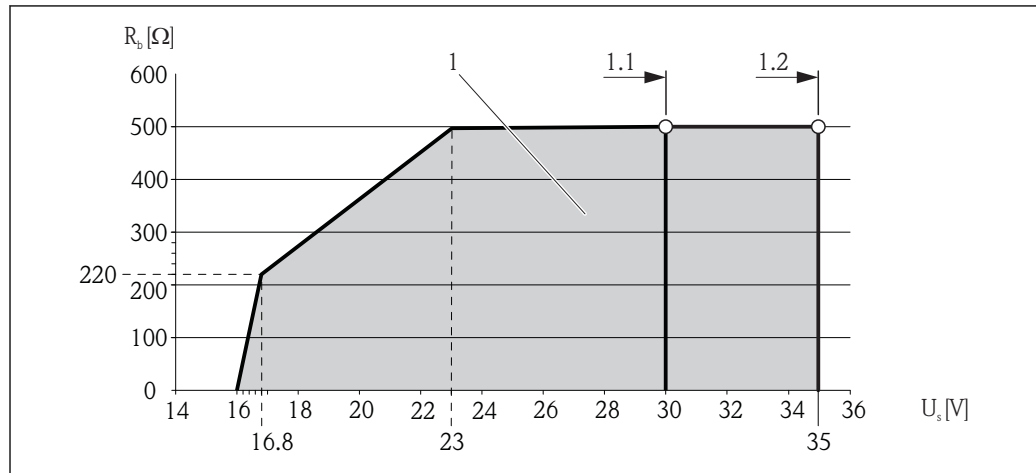

1 Operating range

1.1 For order code for "Output", option A "4-20 mA HART"/option B "4-20 mA HART, pulse/frequency/switch output" with Ex i and option C "4-20 mA HART, 4-20 mA"

1.2 For order code for "Output", option A "4-20 mA HART"/option B "4-20 mA HART, pulse/frequency/switch output" with non-Ex and Ex d

Sample calculation

Supply voltage of the power supply unit: $U_S = 17.5 \text{ V}$

Maximum load: $R_B \leq (17.5 \text{ V} - 12.0 \text{ V}) : 0.022 \text{ A} = 250 \Omega$

7.1.5 Preparing the measuring device

1. Remove dummy plug if present.
2. **NOTICE!** Insufficient sealing of the housing! Operational reliability of the measuring device could be compromised. Use suitable cable glands corresponding to the degree of protection. If measuring device is delivered without cable glands:
Provide suitable cable gland for corresponding connecting cable (\rightarrow 22).
3. If measuring device is delivered with cable glands:
Observe cable specification (\rightarrow 22).

7.2 Connecting the measuring device


NOTICE

Limitation of electrical safety due to incorrect connection!

- ▶ Have electrical connection work carried out by correspondingly trained specialists only.
- ▶ Observe applicable federal/national installation codes and regulations.
- ▶ Comply with local workplace safety regulations.
- ▶ For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.

7.2.1 Connecting the transmitter


Connection via terminals

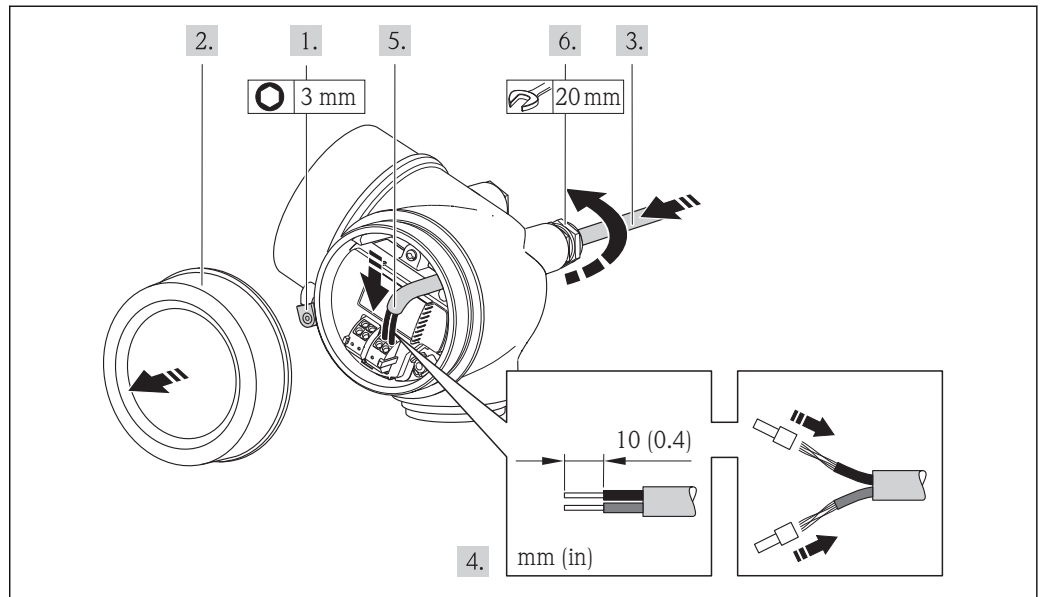

A0013836

1. Loosen the securing clamp of the connection compartment cover.
2. Unscrew the connection compartment cover.
3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
5. Connect the cable in accordance with the terminal assignment . For HART communication: When connecting the cable shielding to the ground terminal, observe the grounding concept of the facility.
6. Firmly tighten the cable glands.
7. **NOTICE!** Housing degree of protection voided due to insufficient sealing of the housing. Screw in the screw without using any lubricant. The threads on the cover are coated with a dry lubricant.
Reverse the removal procedure to reassemble the transmitter.

Removing a cable

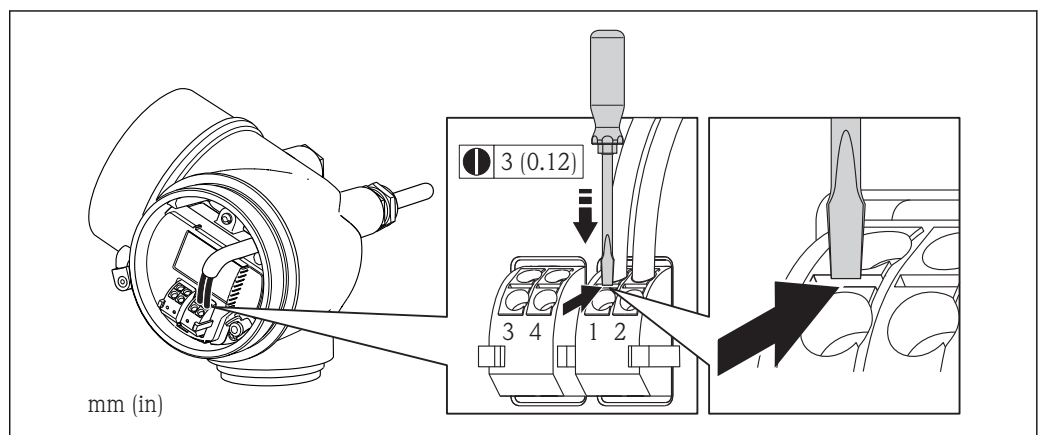


A0013835

- To remove a cable from the terminal, use a flat-blade screwdriver to push the slot between the two terminal holes while simultaneously pulling the cable end out of the terminal.

7.3 Special connection instructions

7.3.1 Connection examples

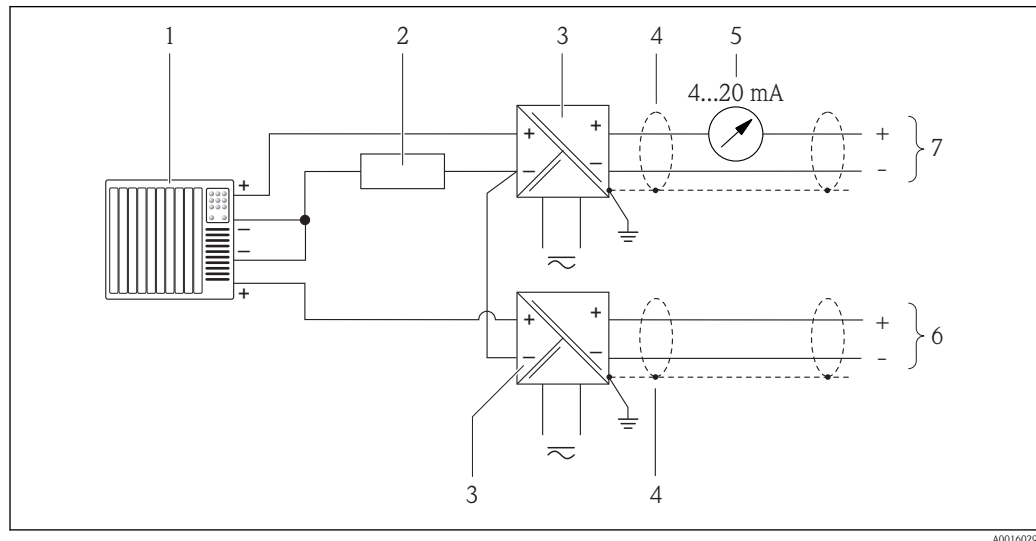

6 Connection example for HART input with a common negative

- Automation system with HART output (e.g. PLC)
- Resistor for HART communication ($\geq 250 \Omega$): observe maximum load (\rightarrow 24)
- Active barrier for power supply (e.g. RN221N) (\rightarrow 23)
- Observe cable specification (\rightarrow 121)
- Analog display unit: observe maximum load (\rightarrow 24)
- Pressure transmitter (e.g. Cerabar M, Cerabar S): see requirements (\rightarrow 116)
- Transmitter


i To configure the HART input (\rightarrow 53)

7.4 Ensuring the degree of protection

The measuring device fulfills all the requirements for the IP66/67 degree of protection, Type 4X enclosure.

To guarantee IP66/67 degree of protection, Type 4X enclosure, carry out the following steps after the electrical connection:

1. Check that the housing seals are clean and fitted correctly. Dry, clean or replace the seals if necessary.
2. Tighten all housing screws and screw covers.
3. Firmly tighten the cable glands.
4. To ensure that moisture does not enter the cable entry, route the cable so that it loops down before the cable entry ("water trap").

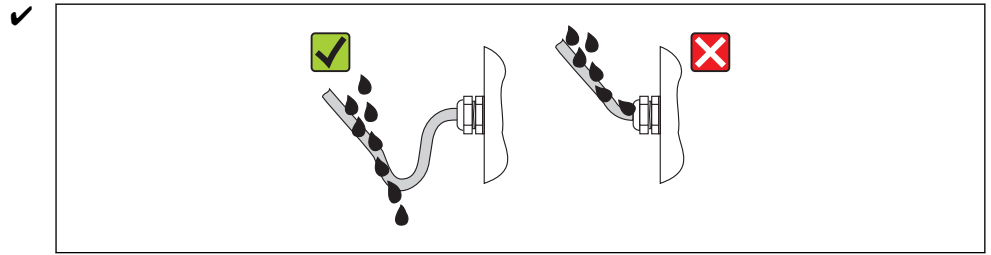

A0013960


- 5. Insert dummy plugs into unused cable entries.

7.5 Post-connection check

Are cables or the device undamaged (visual inspection)?	<input type="checkbox"/>
Do the cables comply with the requirements (→ 22)?	<input type="checkbox"/>
Do the cables have adequate strain relief?	<input type="checkbox"/>
Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" (→ 26) ?	<input type="checkbox"/>
Does the supply voltage match the specifications on the transmitter nameplate (→ 23)?	<input type="checkbox"/>
Is the terminal assignment correct (→ 23)?	<input type="checkbox"/>
If supply voltage is present, do values appear on the display module?	<input type="checkbox"/>
Are all housing covers installed and firmly tightened?	<input type="checkbox"/>
Is the securing clamp tightened correctly?	<input type="checkbox"/>

8 Operation options

8.1 Overview of operation options

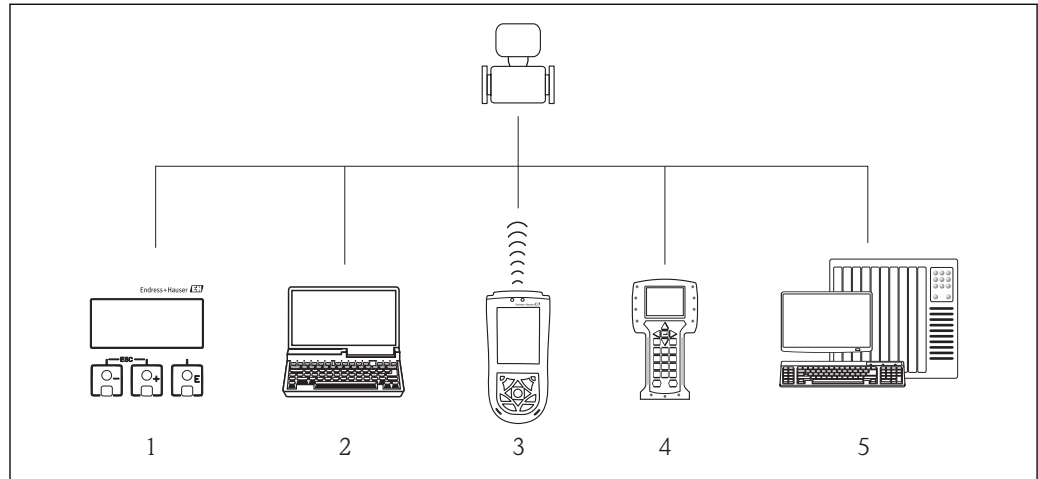



- 1 Local operation via display module
- 2 Computer with operating tool (e.g. FieldCare, AMS Device Manager, SIMATIC PDM)
- 3 Field Xpert SFX100
- 4 Field Communicator 475
- 5 Control system (e.g. PLC)

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

 For an overview of the operating menu with menus and parameters (→  131)

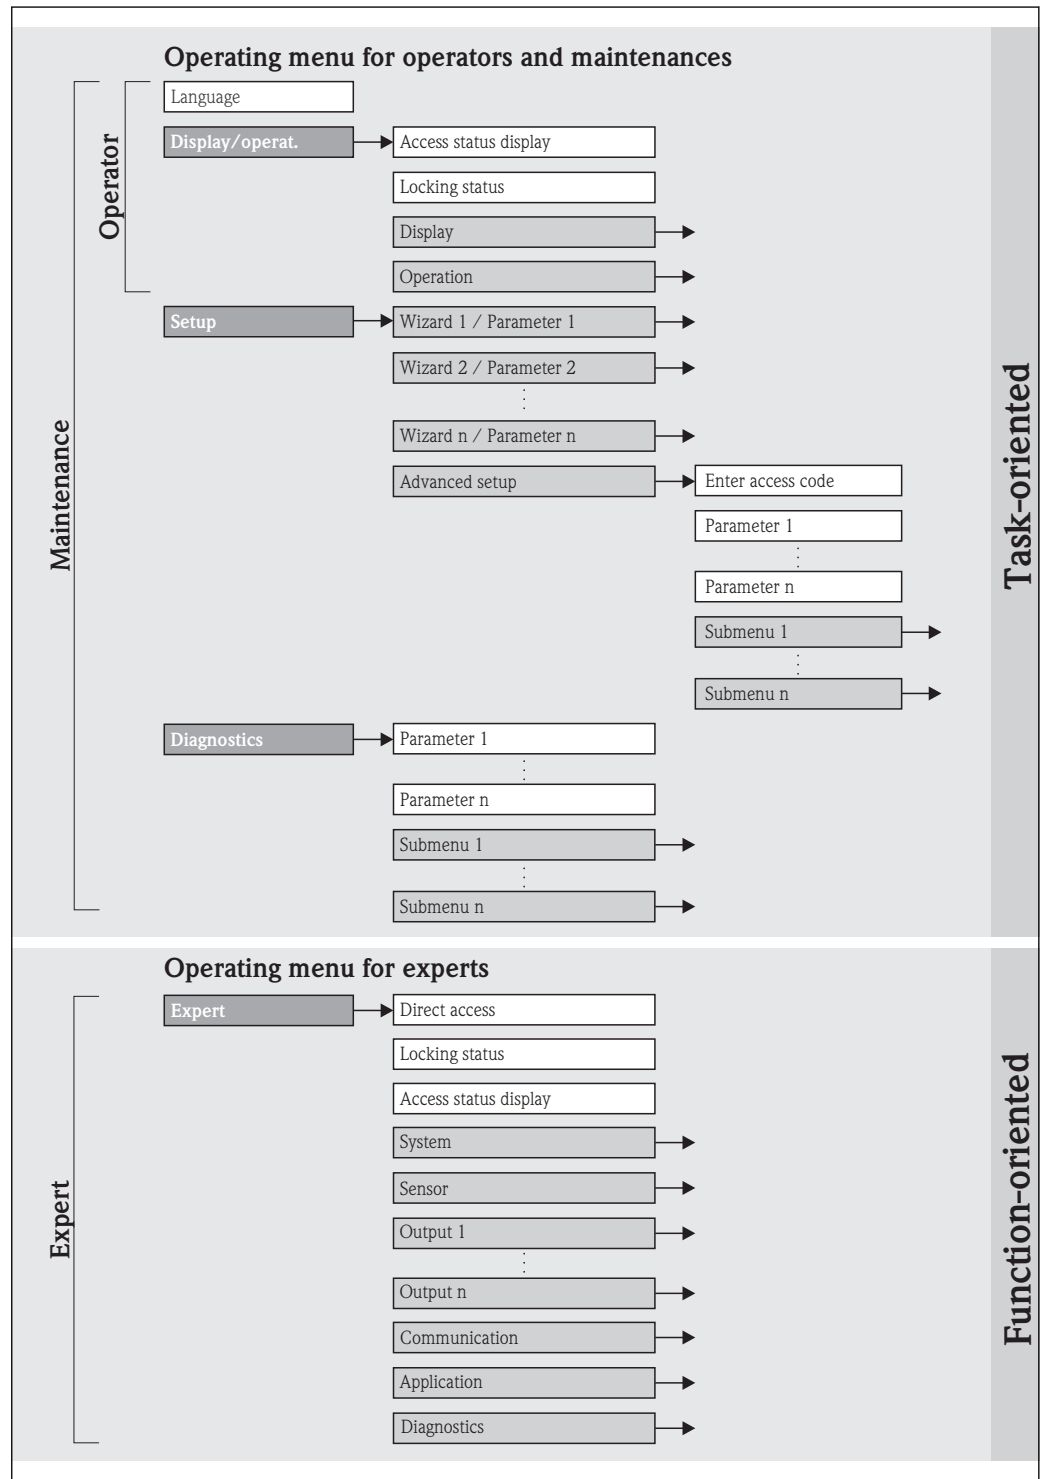

 7 Taking the example of the local display

A0018237-EN


8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles. Each user role corresponds to typical tasks within the device lifecycle.

Menu		User role and tasks	Content/meaning
Language	task-oriented	Role "Operator", "Maintenance" Tasks during operation: <ul style="list-style-type: none"> ■ Configuring the operational display ■ Reading measured values 	Defining the operating language
Display/operat.			<ul style="list-style-type: none"> ■ Configuring the operational display (e.g. display format, display contrast) ■ Resetting and controlling totalizers
Setup		"Maintenance" role Commissioning: <ul style="list-style-type: none"> ■ Configuration of the measurement ■ Configuration of the outputs 	Wizards for fast commissioning: <ul style="list-style-type: none"> ■ Defining the medium ■ Configuring the outputs ■ Configuring the operational display ■ Configuring the HART input ■ Defining the output conditioning ■ Configuring the low flow cut off "Advanced setup" submenu: <ul style="list-style-type: none"> ■ For more customized configuration of the measurement (adaptation to special measuring conditions) ■ Configuration of totalizers
Diagnostics		"Maintenance" role Fault elimination: <ul style="list-style-type: none"> ■ Diagnostics and elimination of process and device errors ■ Measured value simulation 	Contains all parameters for error detection and analyzing process and device errors: <ul style="list-style-type: none"> ■ "Diagnostic list" submenu Contains up to 5 currently pending diagnostic messages. ■ "Event logbook" submenu Contains up to 20 or 100 (order option "Extended HistoROM") event messages that have occurred. ■ "Device information" submenu Contains information for identifying the device. ■ "Measured values" submenu Contains all current measured values. ■ "Data logging" submenu (order option "Extended HistoROM") Storage and visualization of up to 1000 measured values ■ "Simulation" submenu Is used to simulate measured values or output values. ■ "Device reset" submenu Resets the device configuration to certain settings
Expert	function-oriented	Tasks that require detailed knowledge of the function of the device: <ul style="list-style-type: none"> ■ Commissioning measurements under difficult conditions ■ Optimal adaptation of the measurement to difficult conditions ■ Detailed configuration of the communication interface ■ Error diagnostics in difficult cases 	Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: <ul style="list-style-type: none"> ■ "System" submenu Contains all higher-order device parameters that do not pertain either to measurement or the measured value communication. ■ "Sensor" submenu Contains all parameters for configuring the measurement. ■ "Output" submenu Contains all parameters for configuring the analog current outputs. ■ "Communication" submenu Contains all parameters for configuring the digital communication interface. ■ "Application" submenu Contains all parameters for configuring the functions that go beyond the actual measurement (e.g. totalizer). ■ "Diagnostics" submenu Contains all parameters for error detection and analyzing process and device errors and for device simulation.

8.3 Access to the operating menu via the local display

8.3.1 Operational display

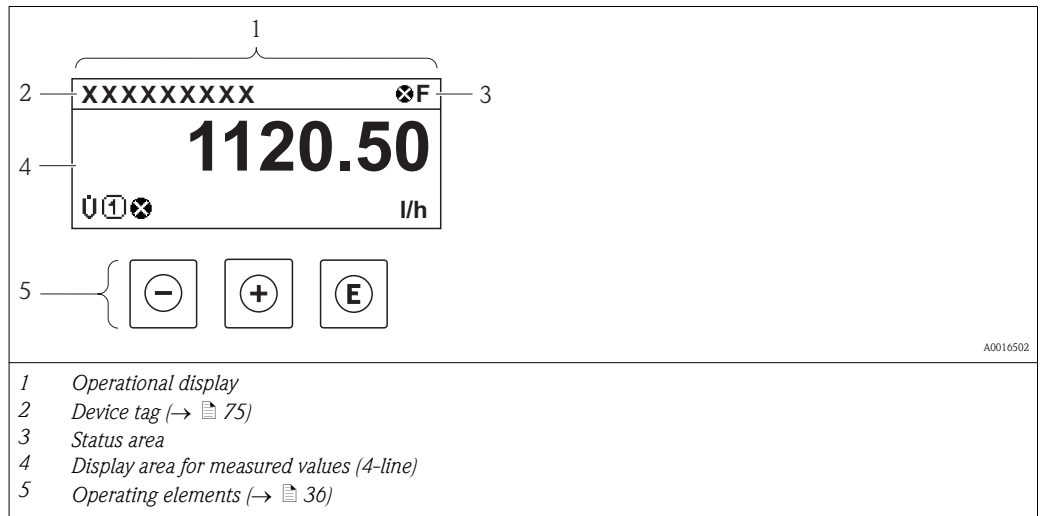


Status area


The following symbols appear in the status area of the operational display at the top right:

- Status signals(→ 97)
- Diagnostic behavior(→ 98)
- Locking
- Communication

Locking


Symbol	Meaning
 <small>A0013963</small>	Device locked The measuring device is hardware locked (→ 85).

Communication

Symbol	Meaning
 <small>A0013965</small>	Communication via remote operation is active.

Display area



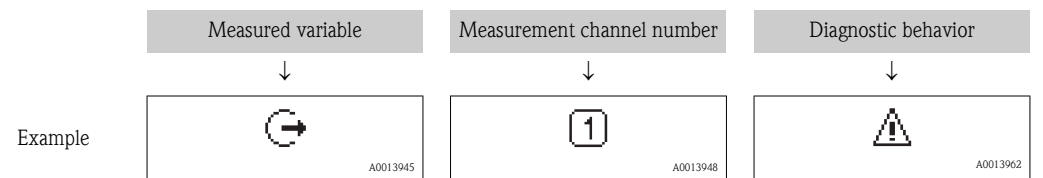








In the display area, each measured value is prefaced by certain symbol types for further description:




Appears only if a diagnostics event is present for this measured variable.

Measured variables

Symbol	Meaning
--------	---------



 <small>A0013711</small>	<ul style="list-style-type: none"> ▪ Volume flow ▪ Corrected volume flow
 <small>A0016223</small>	Energy flow
 <small>A0016225</small>	Methane fraction
 <small>A0013710</small>	Mass flow
 <small>A0016224</small>	Calorific value
 <small>A0016226</small>	Wobbe index
 <small>A0013947</small>	Temperature
 <small>A0013943</small>	Totalizer  The measurement channel number indicates which of the three totalizers is displayed.
 <small>A0013945</small>	Output  The measurement channel number indicates which of the two current outputs is displayed.

Measurement channel numbers


Symbol	Meaning
 <small>A0016325</small>	Measurement channel 1 to 4
The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. Totalizer 1 to 3).	

Diagnostic behavior

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable.
 For information on the symbols (→  98)


 The number and display of the measured values can be configured via the parameter **Format display** (→  69). Navigation path: Display/operat. → Display → Format display

8.3.2 Navigation view

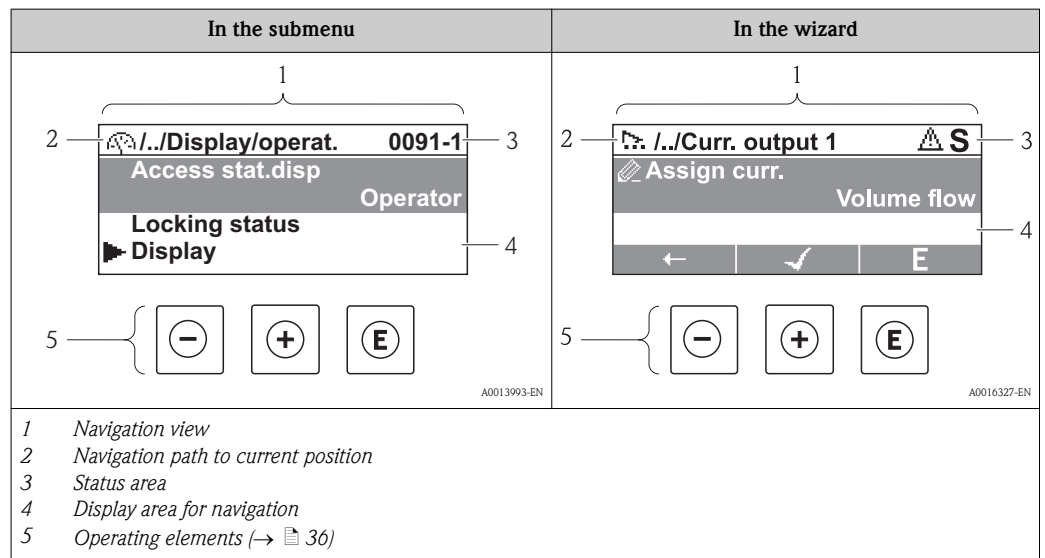

Navigation path

The navigation path - displayed at the top left in the navigation view - consists of the following elements:

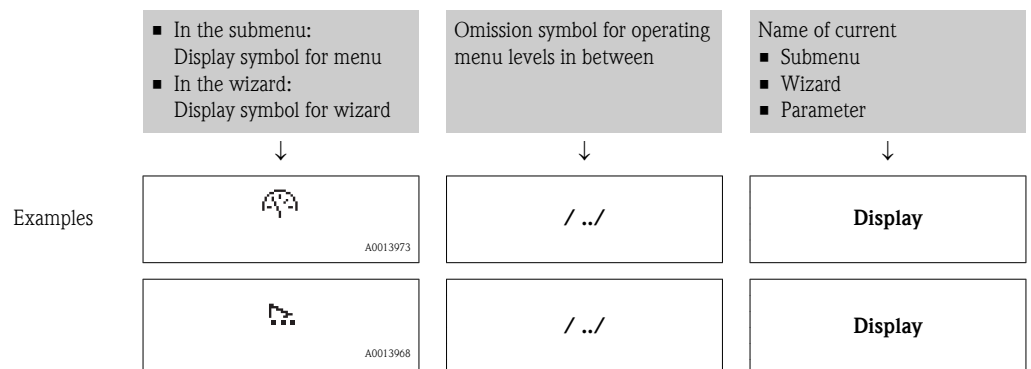

For more information about the menu icons, refer to the "Display area" section (→ 34)

Status area





The following appears in the status area of the navigation view in the top right corner:

- Of the submenu
 - The direct access code for the parameter you are navigating to (e.g. 0022-1)
 - If a diagnostic event is present, the diagnostic behavior and status signal
- In the wizard
 - If a diagnostic event is present, the diagnostic behavior and status signal





- For information on the diagnostic behavior and status signal (→ 97)
- For information on the function and entry of the direct access code (→ 39)

Display area


Menus

Symbol	Meaning
 A0013973	Display/operat. Appears: <ul style="list-style-type: none"> In the menu next to the "Display/operat." selection At the left in the navigation path in the "Display/operat." menu
 A0013974	Setup Appears: <ul style="list-style-type: none"> In the menu next to the "Setup" selection At the left in the navigation path in the "Setup" menu
 A0013975	Diagnostics Appears: <ul style="list-style-type: none"> In the menu next to the "Diagnostics" selection At the left in the navigation path in the "Diagnostics" menu
 A0013966	Expert Appears: <ul style="list-style-type: none"> In the menu next to the "Expert" selection At the left in the navigation path in the "Expert" menu




Submenus, wizards, parameters

Symbol	Meaning
 A0013967	Submenu
 A0013968	Wizard
 A0013972	Parameters within a wizard  No display symbol exists for parameters in submenus.


Locking

Symbol	Meaning
 A0013963	Parameter locked When displayed in front of a parameter name, indicates that the parameter is locked. <ul style="list-style-type: none"> By a user-specific access code (→ 84) By the hardware write protection switch (→ 85)

Wizard operation

Symbol	Meaning
 A0013978	Switches to the previous parameter.
 A0013976	Confirms the parameter value and switches to the next parameter.
 A0013977	Opens the editing view of the parameter.


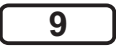


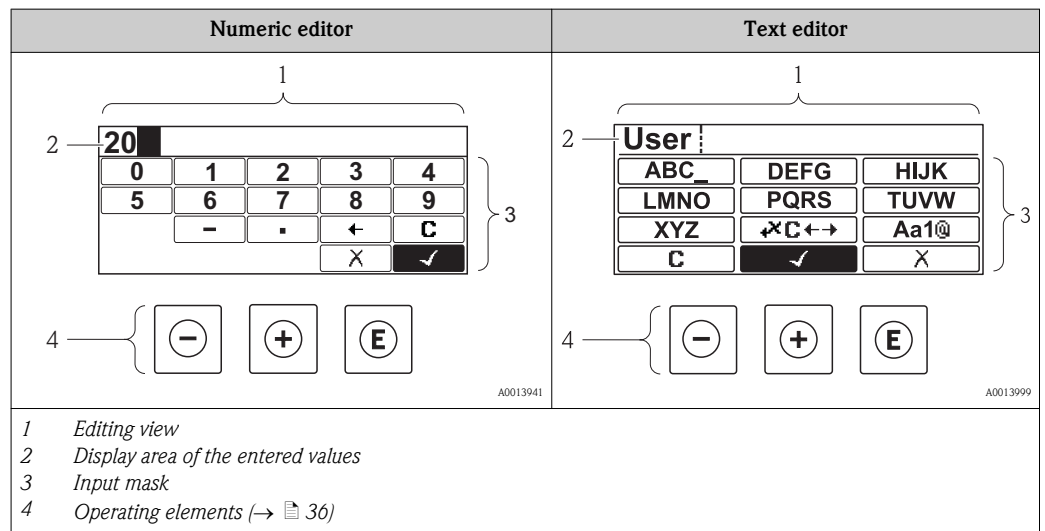



8.3.3 Editing view






Input mask









The following input symbols are available in the input mask of the numeric and text editor:


Numeric editor





Symbol	Meaning
 ... 	Selection of numbers from 0 to 9.
	Inserts decimal separator at the input position.
	Inserts minus sign at the input position.
	Confirms selection.
	Moves the input position one position to the left.
	Exits the input without applying the changes.
	Clears all entered characters.

Text editor



Symbol	Meaning
	Toggle <ul style="list-style-type: none"> Between upper-case and lower-case letters For entering numbers For entering special characters
 ... 	Selection of letters from A to Z.




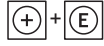

  <small>A0019094</small>	Selection of letters from a to z.
  <small>A0019095</small>	Selection of special characters.
 <small>A0013985</small>	Confirms selection.
 <small>A0013987</small>	Switches to the selection of the correction tools.
 <small>A0013986</small>	Exits the input without applying the changes.
 <small>A0014040</small>	Clears all entered characters.

Correction symbols under 

Symbol	Meaning
 <small>A0013989</small>	Clears all entered characters.
 <small>A0013991</small>	Moves the input position one position to the right.
 <small>A0013990</small>	Moves the input position one position to the left.
 <small>A0013988</small>	Deletes one character immediately to the left of the input position.

8.3.4 Operating elements

Key	Meaning
 <small>A0013969</small>	<p>Minus key</p> <p><i>In a menu, submenu</i> Moves the selection bar upwards in a choose list.</p> <p><i>With a Wizard</i> Confirms the parameter value and goes to the previous parameter.</p> <p><i>With a text and numeric editor</i> In the input mask, moves the selection bar to the left (backwards).</p>
 <small>A0013970</small>	<p>Plus key</p> <p><i>In a menu, submenu</i> Moves the selection bar downwards in a choose list.</p> <p><i>With a Wizard</i> Confirms the parameter value and goes to the next parameter.</p> <p><i>With a text and numeric editor</i> Moves the selection bar to the right (forwards) in an input screen.</p>

Key	Meaning
 <small>A0013952</small>	<p>Enter key</p> <p><i>For operational display</i></p> <ul style="list-style-type: none"> Pressing the key briefly opens the operating menu. Pressing the key for 2 s opens the context menu. <p><i>In a menu, submenu</i></p> <ul style="list-style-type: none"> Pressing the key briefly: <ul style="list-style-type: none"> Opens the selected menu, submenu or parameter. Starts the wizard. If help text is open, closes the help text of the parameter. Pressing the key for 2 s for parameter: <ul style="list-style-type: none"> If present, opens the help text for the function of the parameter. <p><i>With a Wizard</i></p> <p>Opens the editing view of the parameter.</p> <p><i>With a text and numeric editor</i></p> <ul style="list-style-type: none"> Pressing the key briefly: <ul style="list-style-type: none"> Opens the selected group. Carries out the selected action. Pressing the key for 2 s confirms the edited parameter value.
 <small>A0013971</small>	<p>Escape key combination (press keys simultaneously)</p> <p><i>In a menu, submenu</i></p> <ul style="list-style-type: none"> Pressing the key briefly: <ul style="list-style-type: none"> Exits the current menu level and takes you to the next higher level. If help text is open, closes the help text of the parameter. Pressing the key for 2 s returns you to the operational display ("home position"). <p><i>With a Wizard</i></p> <p>Exits the wizard and takes you to the next higher level.</p> <p><i>With a text and numeric editor</i></p> <p>Closes the text or numeric editor without applying changes.</p>
 <small>A0013953</small>	<p>Minus/Enter key combination (press the keys simultaneously)</p> <p>Reduces the contrast (brighter setting).</p>
 <small>A0013954</small>	<p>Plus/Enter key combination (press and hold down the keys simultaneously)</p> <p>Increases the contrast (darker setting).</p>
 <small>A0013955</small>	<p>Minus/Plus/Enter key combination (press the keys simultaneously)</p> <p><i>For operational display</i></p> <p>Enables or disables the keypad lock.</p>


8.3.5 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Conf. backup disp.
- Simulation



Calling up and closing the context menu

The user is in the operational display.

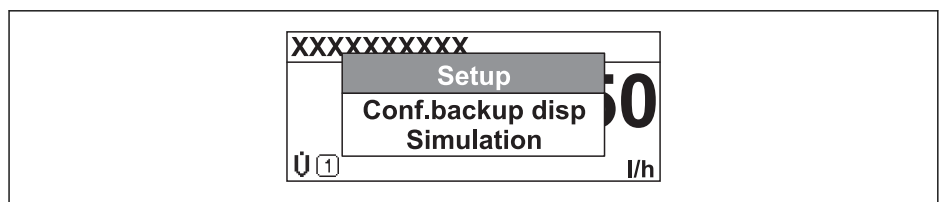

1. Press  for 2 s.
 - ✓ The context menu opens.



A0016326-EN



2. Press  +  simultaneously.
 - ✓ The context menu is closed and the operational display appears.

Calling up the menu via the context menu


1. Open the context menu.
2. Press  to navigate to the desired menu.
3. Press  to confirm the selection.
 - ✓ The selected menu opens.

8.3.6 Navigating and selecting from list

Different operating elements are used to navigate through the operating menu. The navigation path is displayed on the left in the header. Icons are displayed in front of the individual menus. These icons are also shown in the header during navigation.

 For an explanation of the navigation view with symbols and operating elements (→  33)

Example: Setting the number of displayed measured values to "2 values"

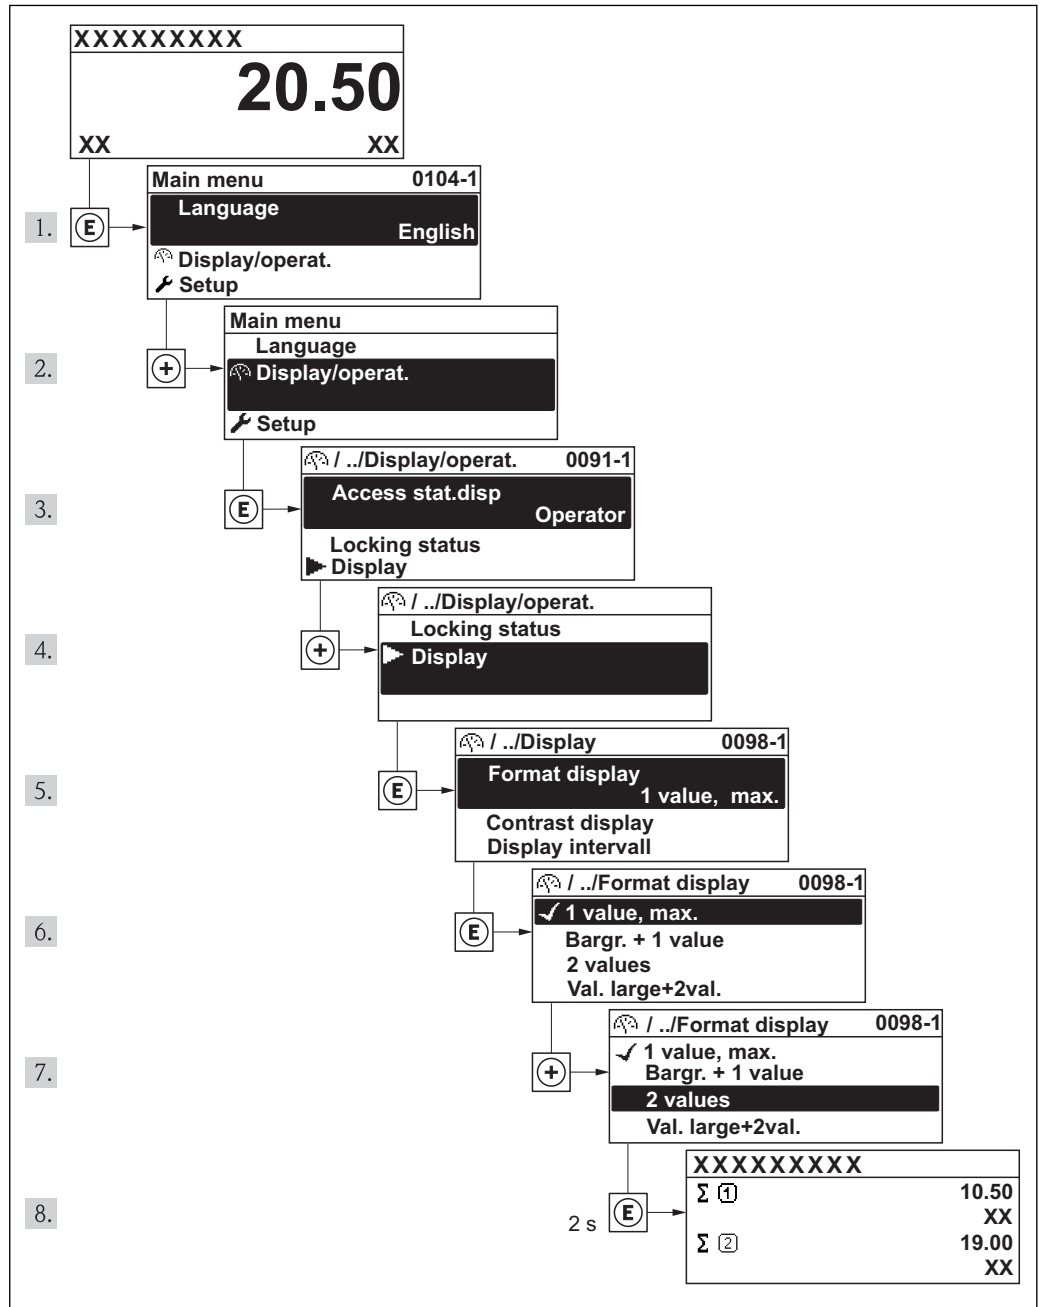

A0014010-EN


8.3.7 Calling the parameter directly

A parameter number is assigned to every parameter to be able to access a parameter directly via the onsite display. Entering this access code in the **Direct access** parameter calls up the desired parameter directly.

Navigation path

"Expert" menu → Direct access

The direct access code consists of a 4-digit number and the channel number, which identifies the channel of a process variable: e.g. 0914-1. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

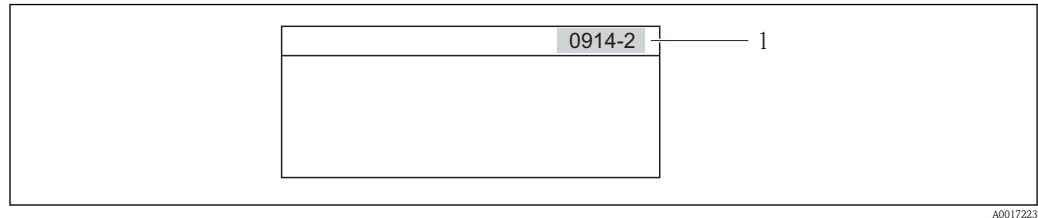

1 Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered.
Example: Input of "914" instead of "0914"
- If no channel number is entered, channel 1 is jumped to automatically.
Example: Input of "0914" → Parameter **Totalizer 1**
- If a different channel is jumped to: Enter the direct access code with the corresponding channel number.
Example: Input of "0914-2" → Parameter **Totalizer 2**


8.3.8 Calling up help text

For some parameters, help texts exist, which the user can call up from the navigation view. These briefly describe the function of the parameter and thus support fast and reliable commissioning.

Calling up and closing the help text

The user is in the navigation view and the selection bar is on a parameter.

1. Press **Enter** for 2 s.
 - ✓ The help text for the selected parameter opens.

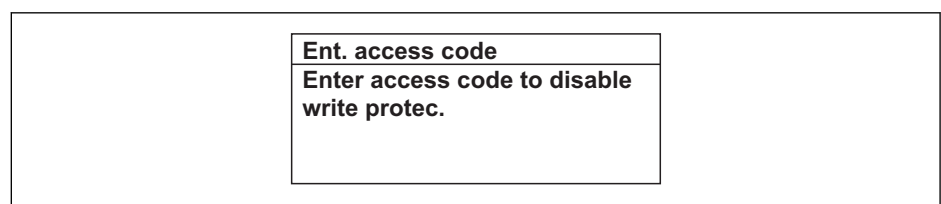


8 Example: Help text for parameter "Enter access code"

2. Press **Left** + **Right** simultaneously.
 - ✓ The help text is closed.

8.3.9 Changing the parameters


i For a description of the editing display - consisting of text editor and numeric editor - with symbols (→ 35), for a description of the operating elements (→ 36)

Example: Changing the parameter "20 mA value" to 20 l/h

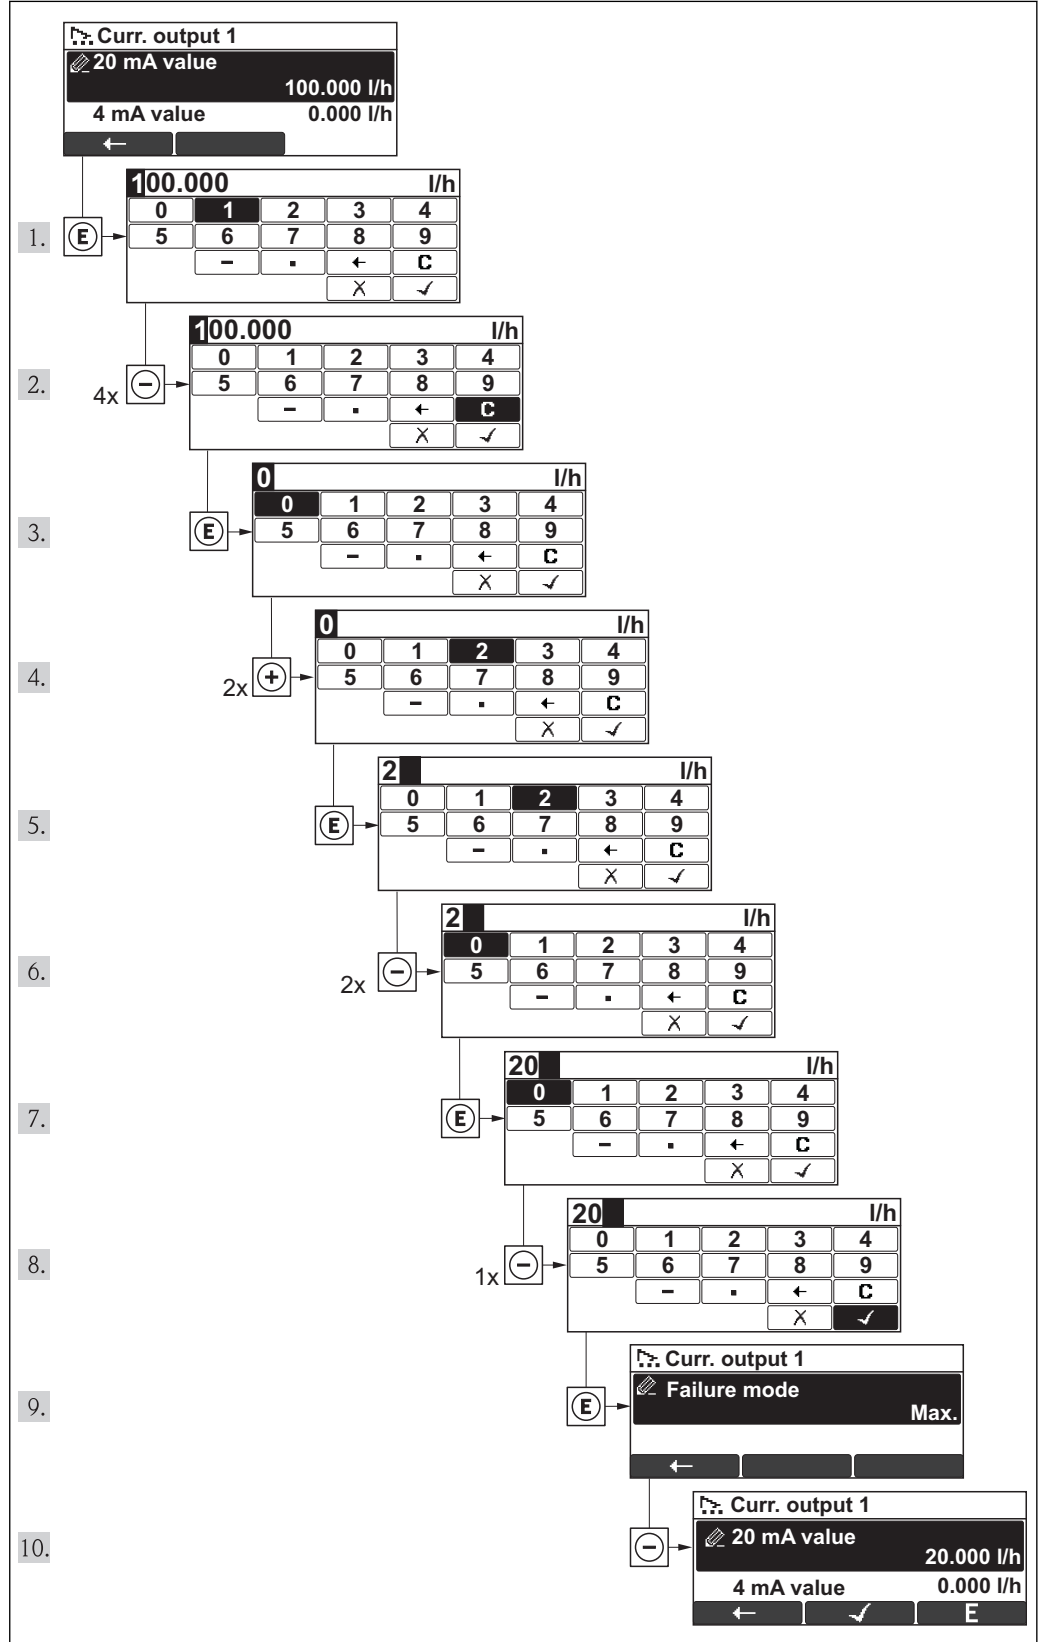

A0016332-EN

A message is displayed if the value entered is outside the permitted value range.

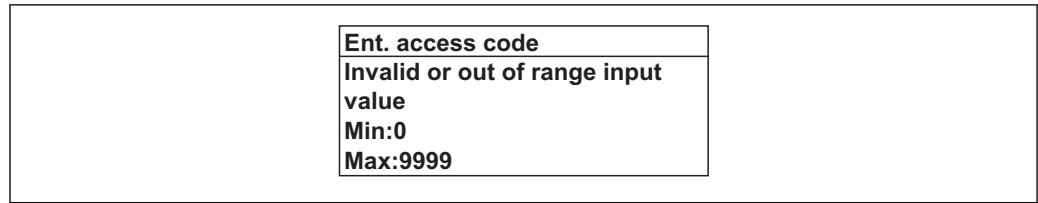

A0014049-EN

8.3.10 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration via the local display from unauthorized access (→ 84).

Access authorization to parameters

User role	Read access		Write access	
	Without access code (from the factory)	With access code	Without access code (from the factory)	With access code
Operator	✓	✓	✓	— ¹⁾
Maintenance	✓	✓	✓	✓

1) Despite the defined access code, certain parameters can always be modified and thus are excepted from the write protection, as they do not affect the measurement. Refer to the "Write protection via access code" section

If an incorrect access code is entered, the user obtains the access rights of the "Operator" role.

i The user role with which the user is currently logged on is indicated by the **Access status display** parameter. Navigation path: Display/operation → Access status display

8.3.11 Disabling write protection via access code

If the -symbol appears on the local display in front of a parameter, the parameter is write-protected by a user-specific access code and its value cannot be changed at the moment using the local display (→ 84).

The locking of the write access via local operation can be disabled by entering the customer-defined access code via the respective access option.

1. After you press , the input prompt for the access code appears.
2. Enter the access code.
 - ✓ The -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

8.3.12 Enabling and disabling the keypad lock


The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is enabled and disabled in the same way:

The user is in the operational display.


- ▶ By simultaneously pressing the + + keys.

- ✓ After enabling the keypad lock:

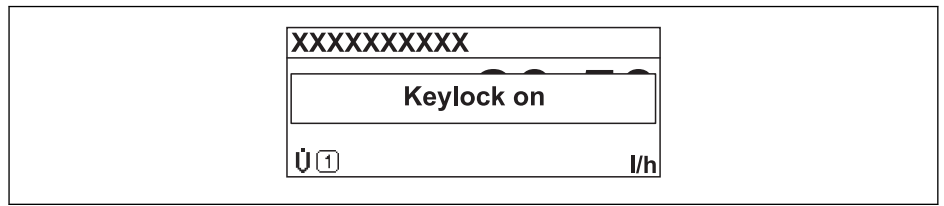

A0016215-EN

- After disabling the keypad lock:

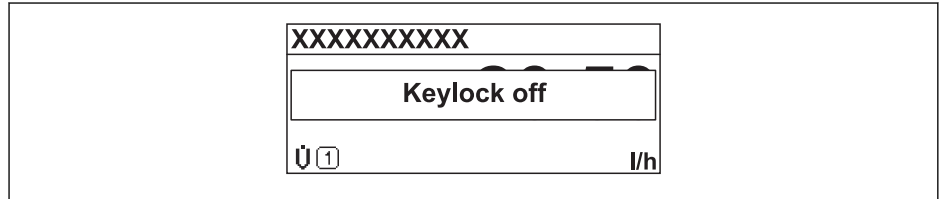

A0016216-EN


-  If the user attempts to access the operating menu while the keylock is enabled, the message **Keypad lock** also appears.

8.4 Access to the operating menu via the operating tool

The structure of the operating menu in the operating tools is the same as for operation via the local display.

8.4.1 Connecting the operating tool

Via HART protocol

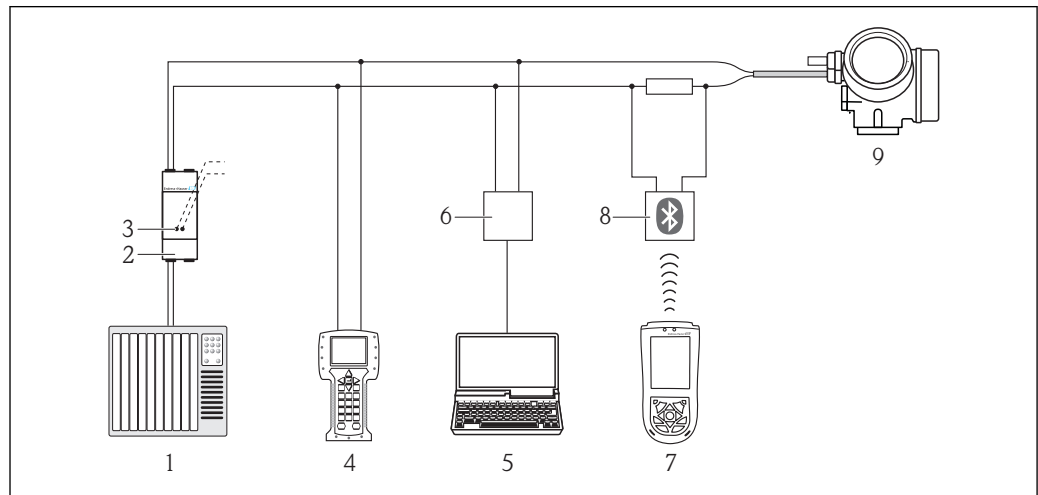


A0013764

9 Options for remote operation via HART protocol

- 1 Control system (e.g. PLC)
- 2 Transmitter power supply unit, e.g. RN221N (with communication resistor)
- 3 Connection for Commubox FXA195 and Field Communicator 475
- 4 Field Communicator 475
- 5 Computer with operating tool (e.g. FieldCare, AMS Device Manager, SIMATIC PDM)
- 6 Commubox FXA195 (USB)
- 7 Field Xpert SFX100
- 8 VIATOR Bluetooth modem with connecting cable
- 9 Transmitter

Via service interface (CDI)

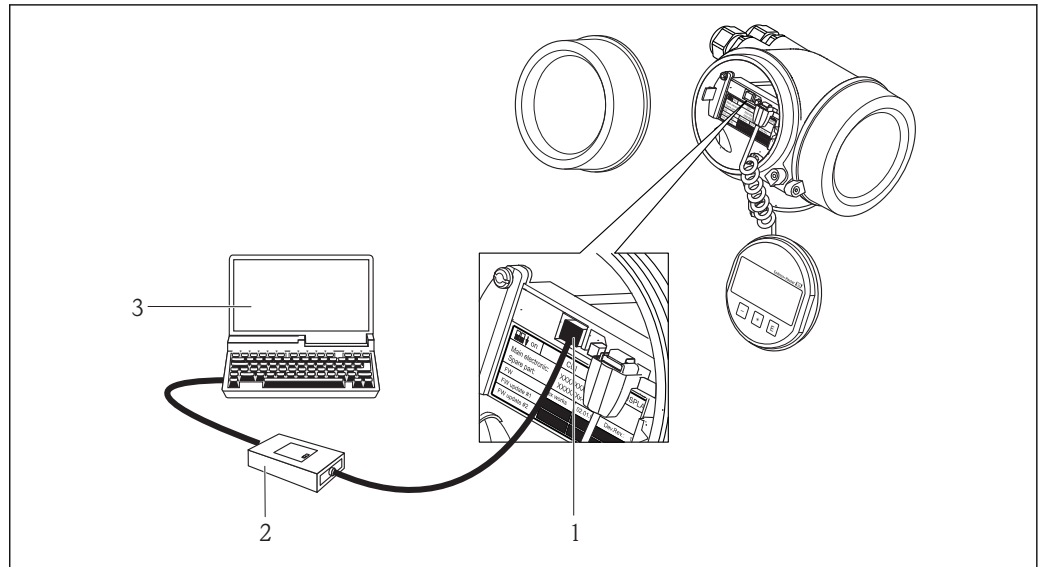


- 1 Service interface (CDI = Endress+Hauser Common Data Interface) of the measuring device
 2 Commubox FXA291
 3 Computer with "FieldCare" operating tool with COM DTM "CDI Communication FXA291"

A0014019


8.4.2 Field Xpert SFX100

Function scope

Compact, flexible and robust industrial handheld terminal for remote configuration and measured value display via HART protocol.

 For details, see Operating Instructions BA00060S

Source for device description files



See data (→  48)

8.4.3 FieldCare

Function scope

FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access takes place via:

- HART protocol(→  44)
- Service interface CDI (→  45)

Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook

 For details, see Operating Instructions BA00027S and BA00059S

Source for device description files

See data (→ 48)

User interface

1 Header
 2 Picture of device
 3 Device tag (→ 75)
 4 Status area with status signal (→ 97)
 5 Display area for current measured values
 6 Event list with additional functions such as save/load, events list and document creation
 7 Navigation area with operating menu structure
 8 Working area

8.4.4 AMS Device Manager

Function scope

Program from Emerson Process Management for operating and configuring measuring devices via HART protocol.

Source for device description files

See data (→ 48)

8.4.5 SIMATIC PDM

Function scope

SIMATIC PDM is a standardized, manufacturer-independent program from Siemens for the operation, configuration, maintenance and diagnosis of intelligent field devices via HART protocol.

Source for device description files


See data (→ 48)

8.4.6 Field Communicator 475

Function scope

Industrial handheld terminal from Emerson Process Management for remote configuration and measured value display via HART protocol.

Source for device description files

See data (→  48)

9 System integration

9.1 Overview of device description files

9.1.1 Current version data for the device

Firmware version	01.01.zz	<ul style="list-style-type: none"> ■ On the title page of the Operating instructions ■ On transmitter nameplate ■ Parameter firmware version Diagnostics → Device info → Firmware version
Release date of firmware version	11.2012	—
Manufacturer ID	0x11	Manufacturer ID parameter Diagnostics → Device info → Manufacturer ID
Device type ID	0x5A	Device type parameter Diagnostics → Device info → Device type
HART protocol revision	6.0	—
Device revision	2	<ul style="list-style-type: none"> ■ On transmitter nameplate ■ Device revision parameter Diagnostics → Device info → Device revision

9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

Operating tool via HART protocol	Sources for obtaining device descriptions
Field Xpert SFX100	Use update function of handheld terminal
FieldCare	<ul style="list-style-type: none"> ■ www.endress.com → Download Area ■ CD-ROM (contact Endress+Hauser) ■ DVD (contact Endress+Hauser)
AMS Device Manager (Emerson Process Management)	www.endress.com → Download Area
SIMATIC PDM (Siemens)	www.endress.com → Download Area
Field Communicator 475 (Emerson Process Management)	Use update function of handheld terminal

9.2 Measured variables via HART protocol

The following measured variables (HART device variables) are assigned to the dynamic variables at the factory:

Dynamic variables	Measured variables (HART device variables)
Primary dynamic variable (PV)	Volume flow
Secondary dynamic variable (SV)	Totalizer 1
Tertiary dynamic variable (TV)	None
Quaternary dynamic variable (QV)	None

The assignment of the measured variables to the dynamic variables can be modified and assigned as desired via local operation and the operating tool using the following parameters:

- Expert → Communication → HART output → Output → Assign PV
- Expert → Communication → HART output → Output → Assign SV
- Expert → Communication → HART output → Output → Assign TV
- Expert → Communication → HART output → Output → Assign QV

The following measured variables can be assigned to the dynamic variables:

Measured variables for PV (primary dynamic variable)

- Volume flow
- Corrected volume flow
- Corrected methane volume flow
- Energy flow
- Mass flow
- Methane fraction
- Gross calorific value
- Wobbe index
- Temperature

Measured variables for SV, TV, QV (secondary, tertiary and quaternary dynamic variable)

- Volume flow
- Corrected volume flow
- Corrected methane volume flow
- Energy flow
- Mass flow
- Methane fraction
- Gross calorific value
- Wobbe index
- Temperature
- Totalizer 1
- Totalizer 2
- Totalizer 3

9.3 Other settings

In the **Configuration** submenu, you can configure other settings for the HART protocol (e.g. Burst mode)

Navigation path

"Expert" menu → Communication → HART output → Configuration

10 Commissioning

10.1 Function check

Before commissioning the device, make sure that the post-installation and post-connection checks have been performed.

- "Post-mounting check" checklist (→ [20](#))
- "Post-connection check" checklist (→ [27](#))

10.2 Switching on the measuring device


After a successful function check, switch on the measuring device.

After a successful startup, the local display switches automatically from the startup display to the operational display.

- i** If nothing appears on the local display or a diagnostic message is displayed, refer to the section on "Diagnostics and troubleshooting" (→ [95](#)).

10.3 Setting the operating language

Factory setting: English or ordered local language

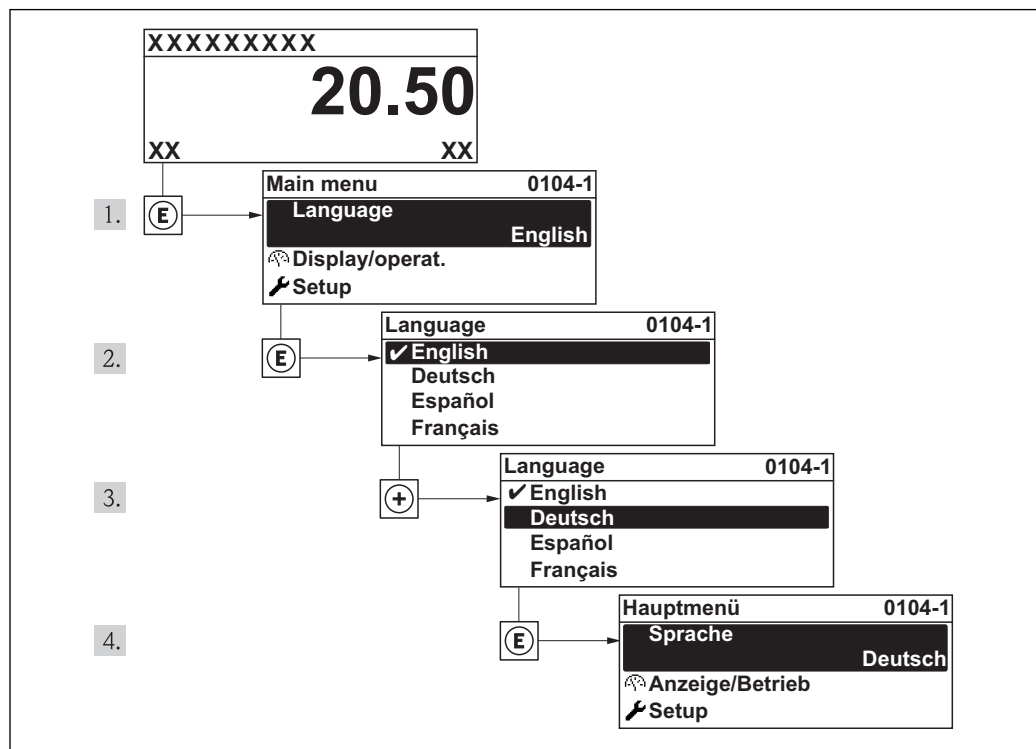

10 Taking the example of the local display


A0013990

10.4 Configuring the measuring device

The **Setup** menu with its guided wizards contains all parameters needed for standard operation.

Navigation to the "Setup" menu

Overview of the wizards in the "Setup" menu

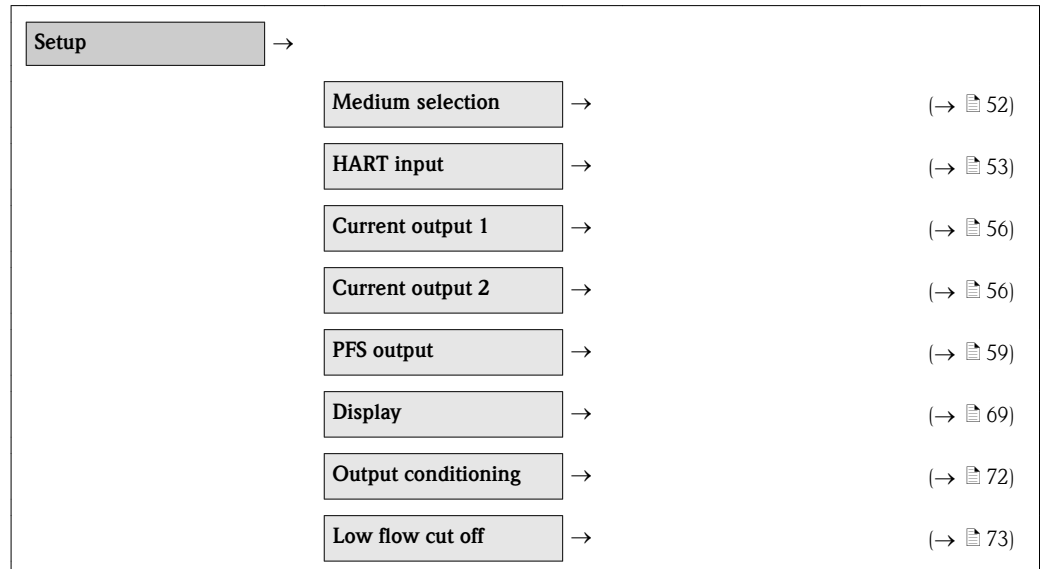


10.4.1 Selecting and setting the medium

The **Medium selection** wizard guides you systematically through all parameters that have to be configured for selecting and setting the medium.

Navigation path

"Setup" menu → Medium selection

Structure of the wizard

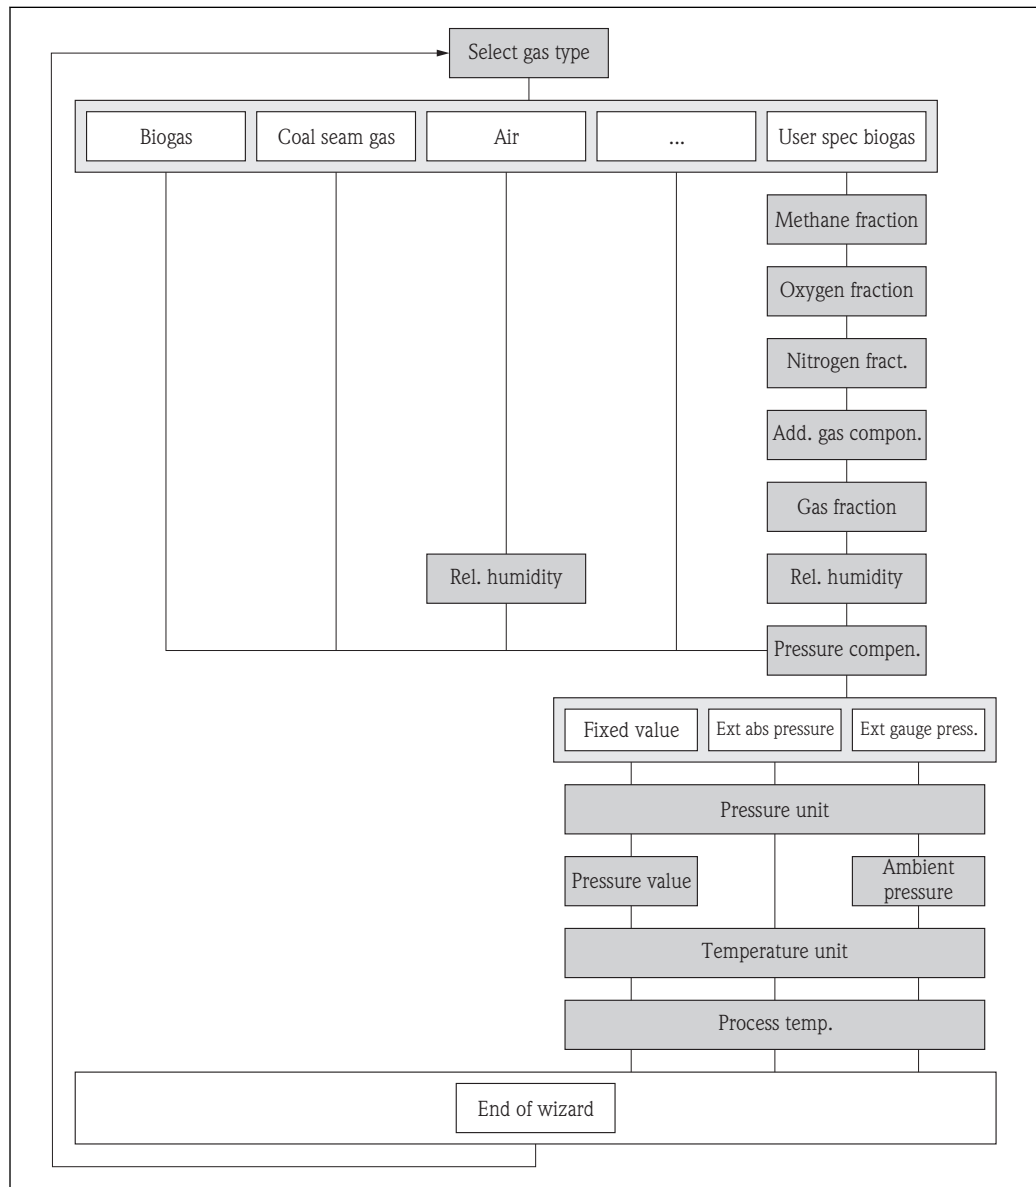

A0015980-EN

11 "Medium selection" wizard in the "Setup" menu

Parameter overview with brief description

Parameter	Description	Selection/ User entry	Factory setting
Select gas type	Select measured gas type.	Gas type choose list	Biogas
Methane fraction	Biogas analysis not ordered: Enter the methane fraction of the biogas.	30 to 100 %	55 %

Oxygen fraction	Enter the O ₂ fraction of the biogas to reduce the measuring uncertainty of the methane analysis.	0 to 10 %	0 %
Nitrogen fraction	Enter the N ₂ fraction of the biogas to reduce the measuring uncertainty of the methane analysis.	0 to 25 %	0 %
Additional gas component	Enter the additional gas component of the biogas to reduce the measuring uncertainty of the methane analysis.	Additional gas component choose list	None
Gas fraction	If an additional gas component has been selected: Enter the gas fraction to reduce the measuring uncertainty of the methane analysis.	0 to 5 %	0 %
Relative humidity	Enter the relative humidity of the air.	0 to 100 %	50 %
Relative humidity	Relative humidity of the user-specific biogas.	0 to 100 %	100 %
Pressure compensation	Select pressure compensation type.	<ul style="list-style-type: none"> ■ Fixed value ■ External absolute pressure ■ External gauge pressure 	Fixed value
Pressure unit	Select process pressure unit.	Pressure unit choose list	Country-dependent: <ul style="list-style-type: none"> ■ mbar a ■ psi a
Pressure value	Enter fixed pressure value.	800 to 11 000 mbar a	Country-dependent: <ul style="list-style-type: none"> ■ 1 043 mbar a ■ 15.1 psi a
Ambient pressure	Enter a value for the ambient pressure to be used for pressure correction.	800 to 1 100 mbar a	Country-dependent: <ul style="list-style-type: none"> ■ 1 013.25 mbar a ■ 14.696 psi a
Temperature unit	Select temperature unit.	Temperature unit choose list	Country-dependent: <ul style="list-style-type: none"> ■ °C ■ °F
Process temperature	Biogas analysis not ordered: Enter fixed temperature value.	0 to 80 °C (32 to 176 °F)	Country-dependent: <ul style="list-style-type: none"> ■ 30 °C ■ 86 °F

10.4.2 Configuring the HART input

The **HART input** wizard guides you systematically through all parameters that have to be set for configuring the HART input.

Navigation path


"Setup" menu → HART input



For the **HART input** wizard to appear:

The **External value** option must be selected in the **Pressure compensation** parameter in the **Medium selection** wizard.

Structure of the wizard

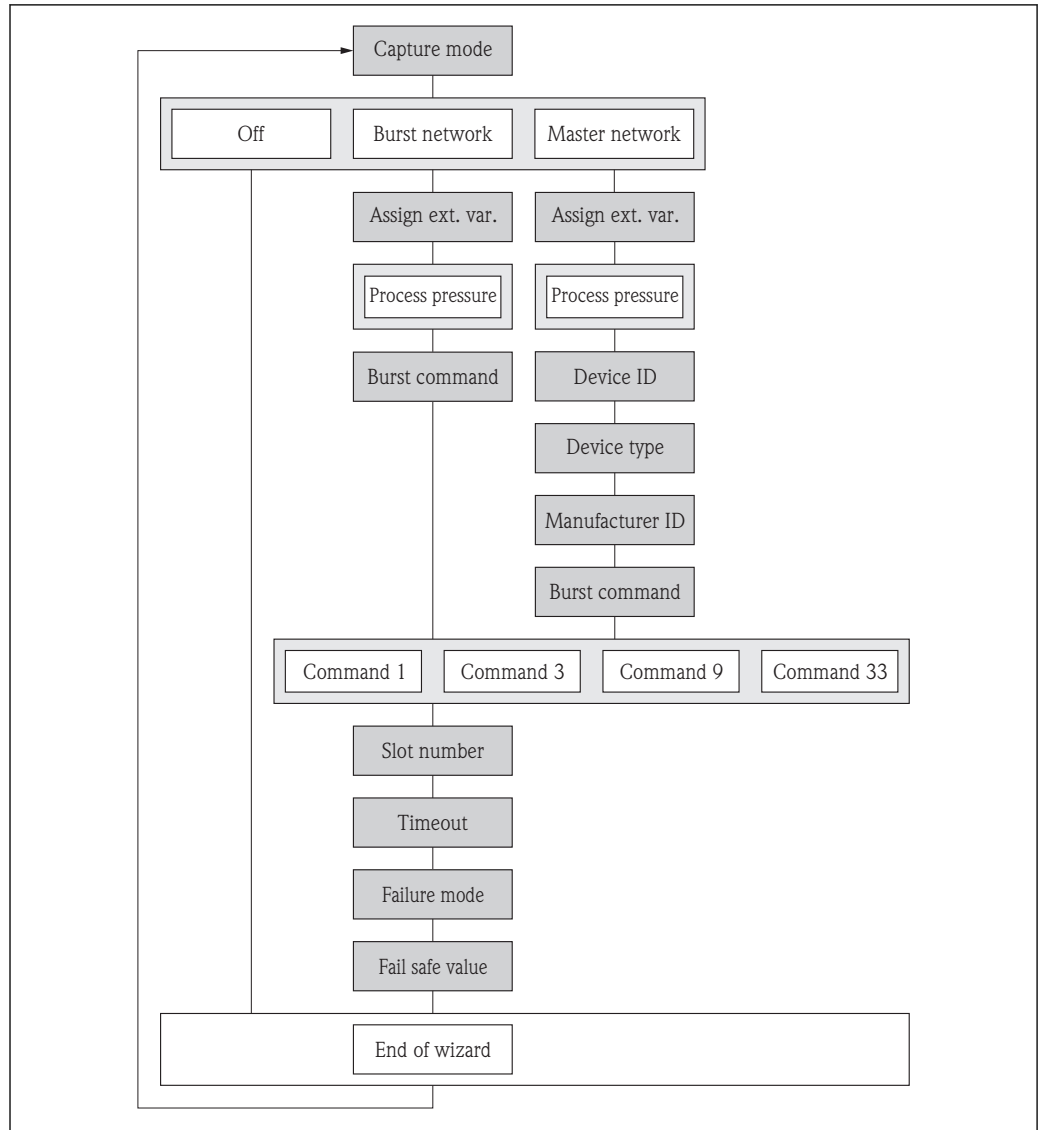


A0016338-EN

12 "HART input" wizard in the "Setup" menu

Parameter overview with brief description

Parameter	Description	Selection/ User entry	Factory setting
Capture mode	Select capture mode via burst or master communication.	<ul style="list-style-type: none"> ■ Off ■ Burst network ■ Master network 	Off
Assign external process variable	Assign variable from external device to process variable.	Process pressure	Process pressure
Device ID	Enter device ID of external device.	6-digit value: <ul style="list-style-type: none"> ■ Via local operation: enter as hexadecimal or decimal number ■ Via operating tool: enter as decimal number 	0

Device type	Enter device type of external device.	2-digit value: <ul style="list-style-type: none"> ■ Via local operation: enter as hexadecimal or decimal number ■ Via operating tool: enter as decimal number 	0
Manufacturer ID	Enter manufacturer ID of external device.	2-digit value: <ul style="list-style-type: none"> ■ Via local operation: enter as hexadecimal or decimal number ■ Via operating tool: enter as decimal number 	0
Burst command	Select command to read in external process variable.	<ul style="list-style-type: none"> ■ Command 1 ■ Command 3 ■ Command 9 ■ Command 33 	Command 1
Slot number	Define position of external process variable in burst command.	1 to 4	1
Timeout	Enter deadline for process variable of external device.  If the deadline is exceeded, diagnostic message F410 data transmission is output.	1 to 120 s	5 s
Failure mode	Specify how the device should behave when it does not receive a process variable from the external device.	<ul style="list-style-type: none"> ■ Alarm ■ Last valid value ■ Defined value 	Alarm
Failure value	Enter the value which the device uses when it does not receive an input signal from the external device.	800 to 1 100 mbar a	1 013.25 mbar a

 For information on the electrical connection of the HART input (→  26)

10.4.3 Configuring the current output


The two wizards **Current output 1-2** guide you systematically through all parameters that have to be set in the configuration of the respective current output.

Navigation path

- "Setup" menu → Current output 1
- "Setup" menu → Current output 2

Structure of the wizard


Part 1 (corresponding part 2: next page)

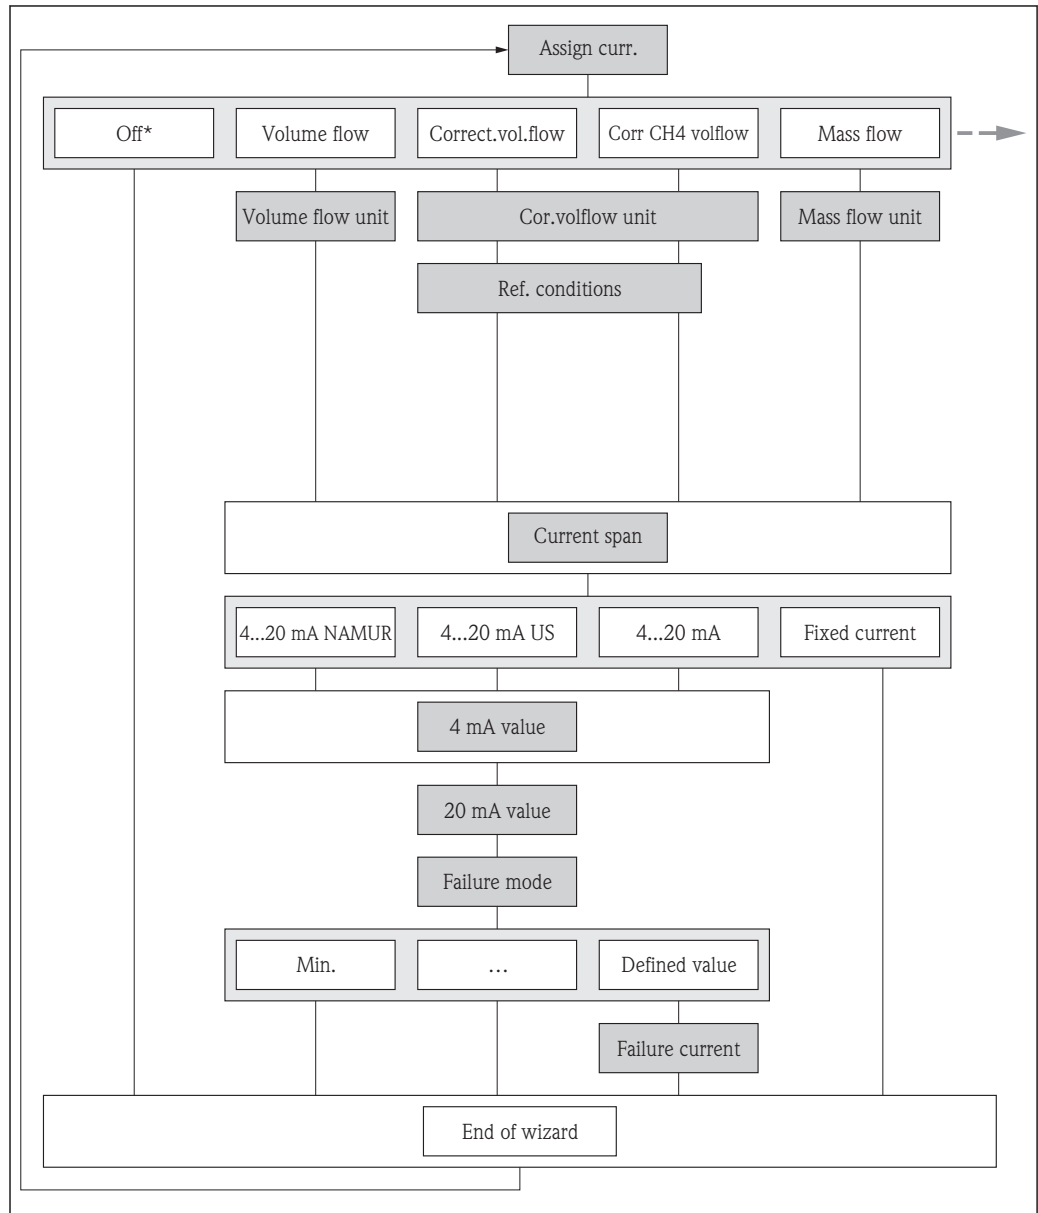

A0015986-EN

13 "Current output 1-2" wizard in the "Setup" menu (Part 1)

Off = Option only for current output 2*

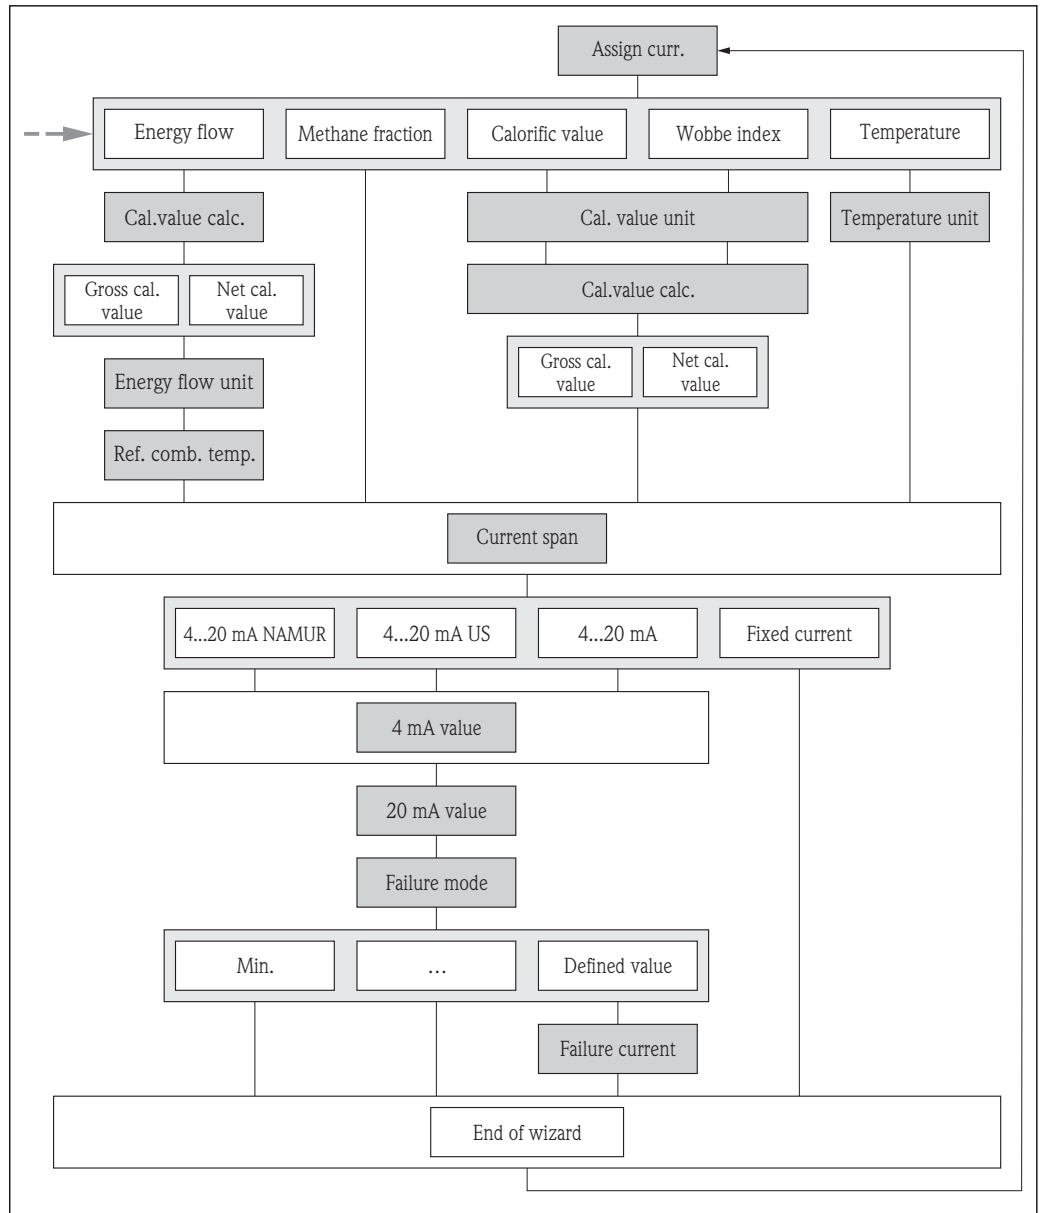

A0015990-EN

14 "Current output 1-2" wizard in the "Setup" menu (Part 2)

Parameter overview with brief description

Parameter	Description	Selection/ User entry	Factory setting
Assign current output 1-2	Select process variable for current output.	<ul style="list-style-type: none"> ■ Off (only for current output 2) ■ Volume flow ■ Corrected volume flow ■ Corrected methane volume flow ■ Mass flow ■ Energy flow ■ Methane fraction ■ Gross calorific value ■ Wobbe index ■ Temperature 	Depends on the order option.

Mass flow unit	Select the unit for mass flow. <i>Result</i> The selected unit applies for: – Outputs – Low flow cut off – Simulation process variable	Unit choose list	Country-dependent: ■ kg/h ■ lb/min
Volume flow unit	Select volume flow unit. <i>Result</i> The selected unit applies for: – Outputs – Low flow cut off – Simulation process variable	Unit choose list	Country-dependent: ■ m ³ /h ■ ft ³ /min
Corrected volume flow unit	Select corrected volume flow unit. <i>Result</i> The selected unit applies for: – Outputs – Low flow cut off – Simulation process variable	Unit choose list	Country-dependent: ■ Nm ³ /h ■ Sft ³ /min
Reference conditions	Select reference conditions for calculation of the corrected volume flow.	Conditions choose list	Country-dependent: ■ 1013.25 hPa, 0 °C ■ 14.696 Psi, 59 °F
Temperature unit	Select temperature unit. <i>Result</i> The selected unit applies for: – Outputs – Simulation process variable	Unit choose list	Country-dependent: ■ °C (Celsius) ■ °F (Fahrenheit)
Calorific value unit	Select calorific value unit.	Unit choose list	Country-dependent: ■ kWh/Nm ³ ■ Btu/Sft ³
Calorific value calculation	Select calculation based on gross calorific value or net calorific value. <i>Result</i> The selected calculation basis applies for: – Wobbe index – Energy flow	■ Gross calorific value ■ Net calorific value	Gross calorific value
Energy flow unit	Select energy flow unit. <i>Result</i> The selected unit applies for: – Outputs – Low flow cut off	Unit choose list	Country-dependent: ■ kW ■ Btu/h
Reference combustion temperature	Select reference temperature for calculation of the gas energy value.	Temperature choose list	Country-dependent: ■ 25 °C ■ 60 °F

Current span	Select the current range for the process value output and for the upper and lower level for signal on alarm.	<ul style="list-style-type: none"> ■ 4 to 20 mA NAMUR ■ 4 to 20 mA US ■ 4 to 20 mA ■ Fixed current 	Country-dependent: <ul style="list-style-type: none"> ■ 4 to 20 mA NAMUR ■ 4 to 20 mA US
4 mA value	Enter 4 mA value.	Max. 15-digit floating-point number with sign	Country-dependent: <ul style="list-style-type: none"> ■ 0 m³/h ■ 0 ft³/min
20 mA value	Enter 20 mA value.	Max. 15-digit floating-point number with sign	Depends on country and nominal diameter
Failure mode	Select the value the current output adopts in an alarm condition.	<ul style="list-style-type: none"> ■ Min. ■ Max. ■ Last valid value ■ Actual value ■ Defined value 	Max.
Failure current	Select the current value the current output adopts in an alarm condition.	3.59 to 22.5 mA	22.5 mA


10.4.4 Configuring the pulse/frequency/switch output

The **Pulse/frequency/switch output** wizard guides you systematically through all parameters that can be set for the configuration of the selected output type.

Navigation path

"Setup" menu → Pulse/frequency/switch output

Structure of the wizard for the pulse output

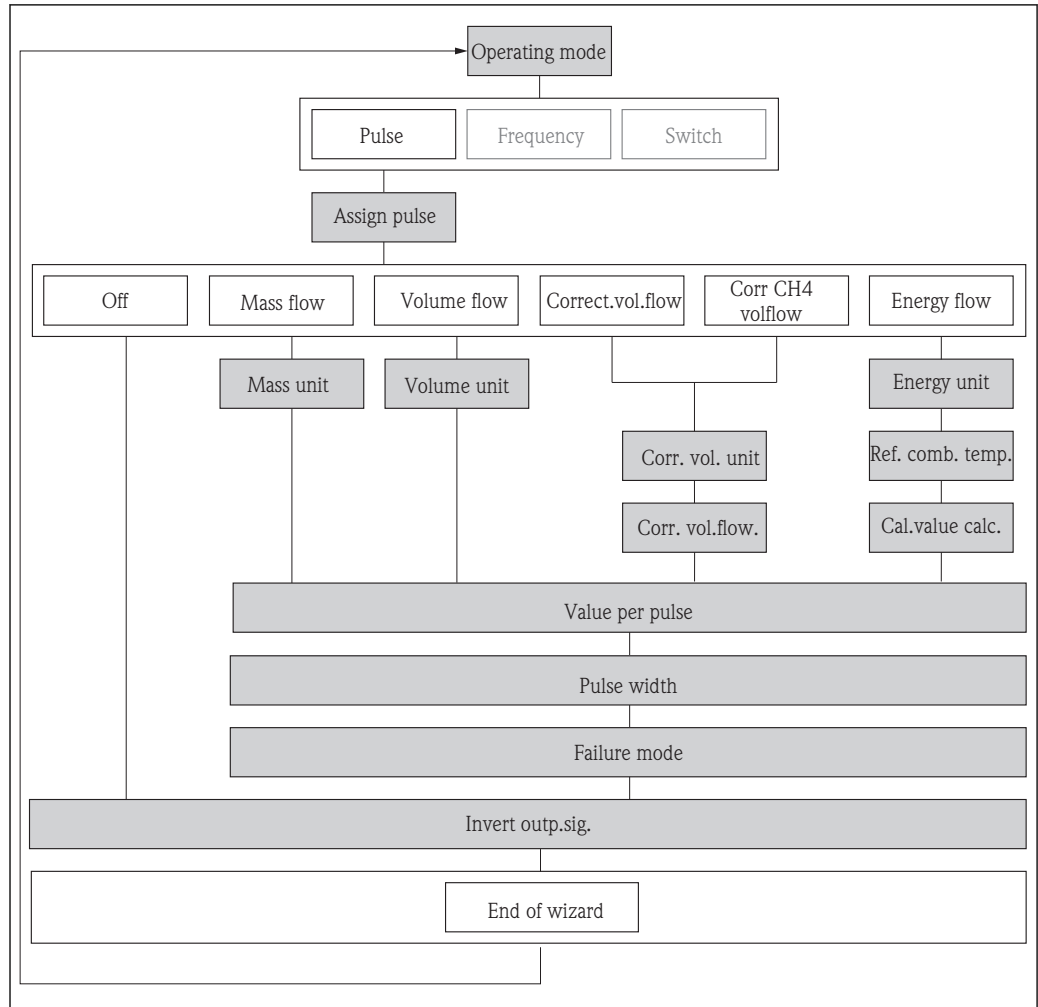

A0019210-EN

15 "Pulse/frequency/switch output" wizard in the "Setup" menu: "Pulse" operating mode


Parameter overview with brief description for pulse output

Parameter	Description	Selection/ User entry	Factory setting
Operating mode	Specify the output as a pulse, frequency or switch output.	<ul style="list-style-type: none"> ■ Pulse ■ Frequency ■ Switch <p> The picklist depends on the selected device order (→ 23).</p>	Pulse
Assign pulse output	Select the process variable for the pulse output.	<ul style="list-style-type: none"> ■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Corrected methane volume flow ■ Energy flow 	Off

Mass unit	Select the unit for mass. <i>Result</i> The selected unit is taken from: Mass flow unit	Unit choose list	Country-dependent: ■ kg ■ lb
Volume unit	Select volume unit. <i>Result</i> The selected unit is taken from: Volume flow unit	Unit choose list	Country-dependent ■ l ■ gal (us)
Corrected volume unit	Select the unit for standard volume. <i>Result</i> The selected unit is taken from: Corrected volume flow unit	Unit choose list	Country-dependent: ■ NI ■ Scf
Reference conditions	Select reference conditions for calculation of the corrected volume flow. <i>Result</i> The selected unit is taken from: Reference conditions ("Expert" menu → Sensor → Calculated values → Reference values)	Reference conditions picklist	1013.25hPa, 0°C
Energy flow unit	Select energy flow unit. <i>Result</i> The selected unit is taken from: Energy flow unit	Unit choose list	kWh
Reference combustion temperature	Select reference temperature for calculation of the gas energy value.	Temperature choose list	25 °C
Calorific value calculation	Select calculation based on gross calorific value or net calorific value. <i>Result</i> The selected calorific value calculation is taken from: Calorific value calculation ("Expert" menu → Sensor → Calculated values → Reference values)	■ Gross calorific value ■ Net calorific value	Gross calorific value
Pulse value	Enter the measured value for the pulse output.	Depends on the process variable selected	-
Pulse width	Specify the duration of the output pulse. <i>Result</i> The selected pulse width also applies for: Fixed simulation value of the pulse output	5 to 2000 ms	100 ms
Failure mode	Specify the output behavior in the event of a device alarm.	■ Actual value ■ No pulses	No pulses

Invert output signal	Invert the output signal.	<input type="checkbox"/> No <input checked="" type="checkbox"/> Yes	No
----------------------	---------------------------	--	----

Structure of the wizard for the frequency output

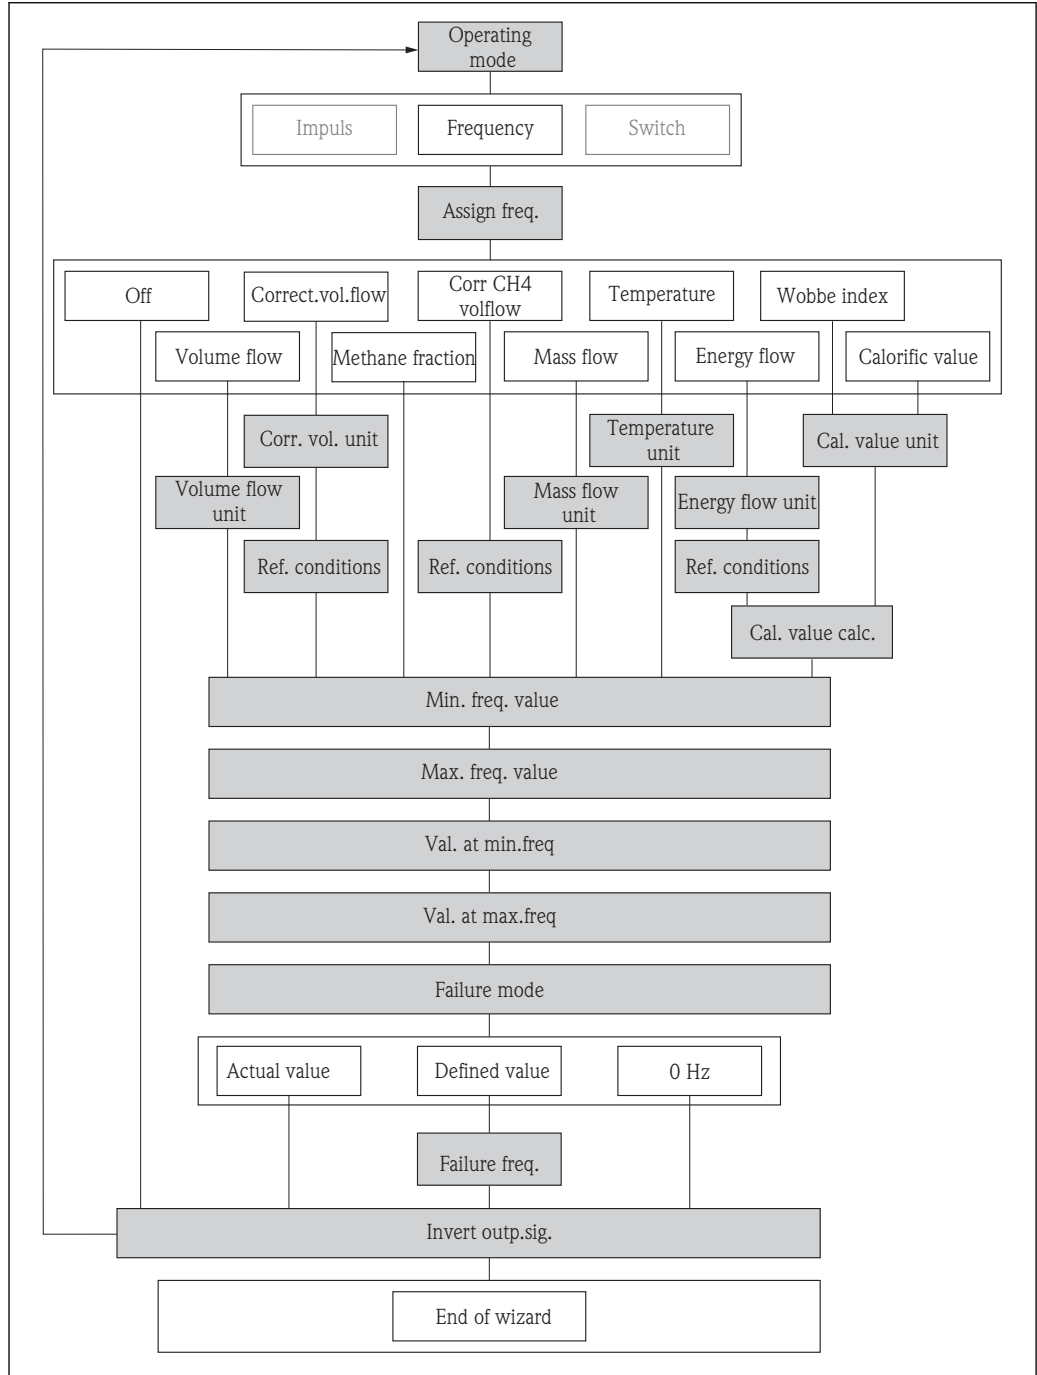


A0019213-EN

16 "Pulse/frequency/switch output" wizard in the "Setup" menu: "Frequency" operating mode


Parameter overview with brief description for frequency output

Parameter	Description	Selection/ User entry	Factory setting
-----------	-------------	--------------------------	-----------------

Operating mode	Specify the output as a pulse, frequency or switch output.	<ul style="list-style-type: none"> ■ Pulse ■ Frequency ■ Switch <p> The picklist depends on the selected device order (→ 23).</p>	Pulse
Assign frequency output	Select the process variable for the frequency output.	<ul style="list-style-type: none"> ■ Off ■ Volume flow ■ Corrected volume flow ■ Methane fraction ■ Methane corrected volume flow ■ Mass flow ■ Temperature ■ Energy flow ■ Wobbe index ■ Gross calorific value 	Off
Mass flow unit	Select the unit for mass flow. <i>Result</i> The selected unit applies for: – Outputs – Low flow cut off – Simulation process variable	Unit choose list	Country-dependent: <ul style="list-style-type: none"> ■ kg/h ■ lb/min
Volume flow unit	Select volume flow unit. <i>Result</i> The selected unit applies for: – Outputs – Low flow cut off – Simulation process variable	Unit choose list	Country-dependent: <ul style="list-style-type: none"> ■ l/h ■ gal/min (us)
Corrected volume flow unit	Select corrected volume flow unit. <i>Result</i> The selected unit applies for: – Outputs – Low flow cut off – Simulation process variable	Unit choose list	Country-dependent: <ul style="list-style-type: none"> ■ Nm³/h ■ Scf/min
Reference conditions	Select reference conditions for calculation of the corrected volume flow. <i>Result</i> The selected unit is taken from: Reference conditions ("Expert" menu → Sensor → Calculated values → Reference values)	Reference conditions picklist	1013.25hPa, 0°C
Temperature unit	Select temperature unit. <i>Result</i> The selected unit applies for: – Outputs – Reference temperature – Simulation process variable	Unit choose list	Country-dependent: <ul style="list-style-type: none"> ■ °C (Celsius) ■ °F (Fahrenheit)


Energy flow unit	Select energy flow unit. <i>Result</i> The selected unit is taken from: Energy flow unit	Unit choose list	kWh
Reference combustion temperature	Select reference temperature for calculation of the gas energy value.	Temperature choose list	25 °C
Calorific value unit	Select net calorific value unit. <i>Result</i> The selected unit is taken from: Calorific value unit	Calorific value unit picklist	kWh/m ³
Calorific value calculation	Select calculation based on gross calorific value or net calorific value. <i>Result</i> The selected calorific value calculation is taken from: Calorific value calculation ("Expert" menu → Sensor → Calculated values → Reference values)	<ul style="list-style-type: none"> ■ Gross calorific value ■ Net calorific value 	Gross calorific value
Minimum frequency value	Enter the minimum frequency value.	0.0 to 1 000.0	0.0 Hz
Maximum frequency value	Enter the maximum frequency value.	0 to 1 000 Hz	1 000 Hz
Measuring value at minimum frequency	Enter the measured value at the minimum frequency.	Depends on the process variable selected	-
Measuring value at maximum frequency	Specify the measured value at maximum frequency.	Depends on the process variable selected	-
Failure mode	Specify the output behavior in the event of a device alarm.	<ul style="list-style-type: none"> ■ Actual value ■ Defined value ■ 0 Hz 	0 Hz
Failure frequency	Enter the value for the frequency output in the event of a device alarm.	0.0 to 1 250.0 Hz	0.0 Hz
Invert output signal	Invert the output signal.	<ul style="list-style-type: none"> ■ No ■ Yes 	No

Structure of the wizard for the switch output

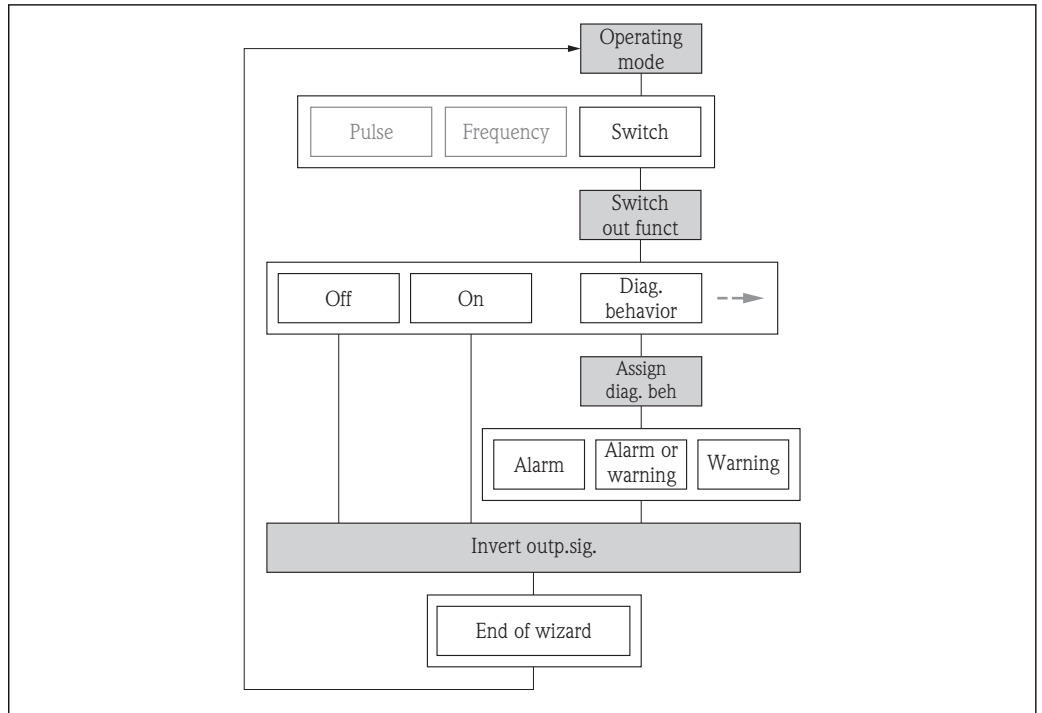


A0019214-EN

17 "Pulse/frequency/switch output" wizard in the "Setup" menu: "Switch" operating mode (Part 1)

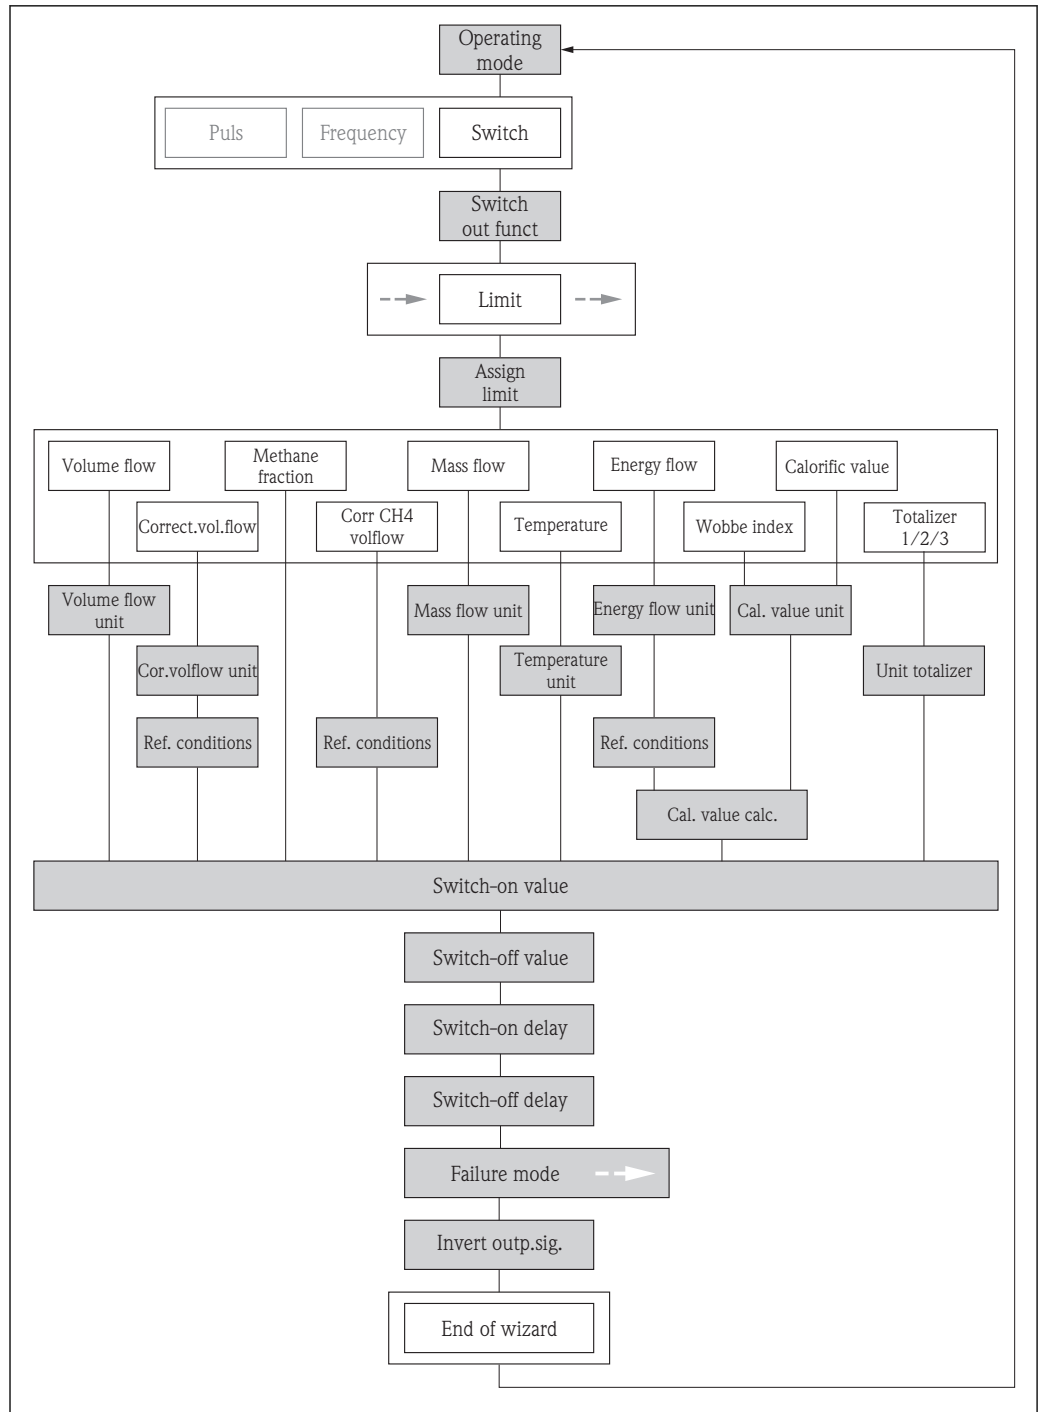

A0019226-EN

18 "Pulse/frequency/switch output" wizard in the "Setup" menu: "Switch" operating mode (Part 2)

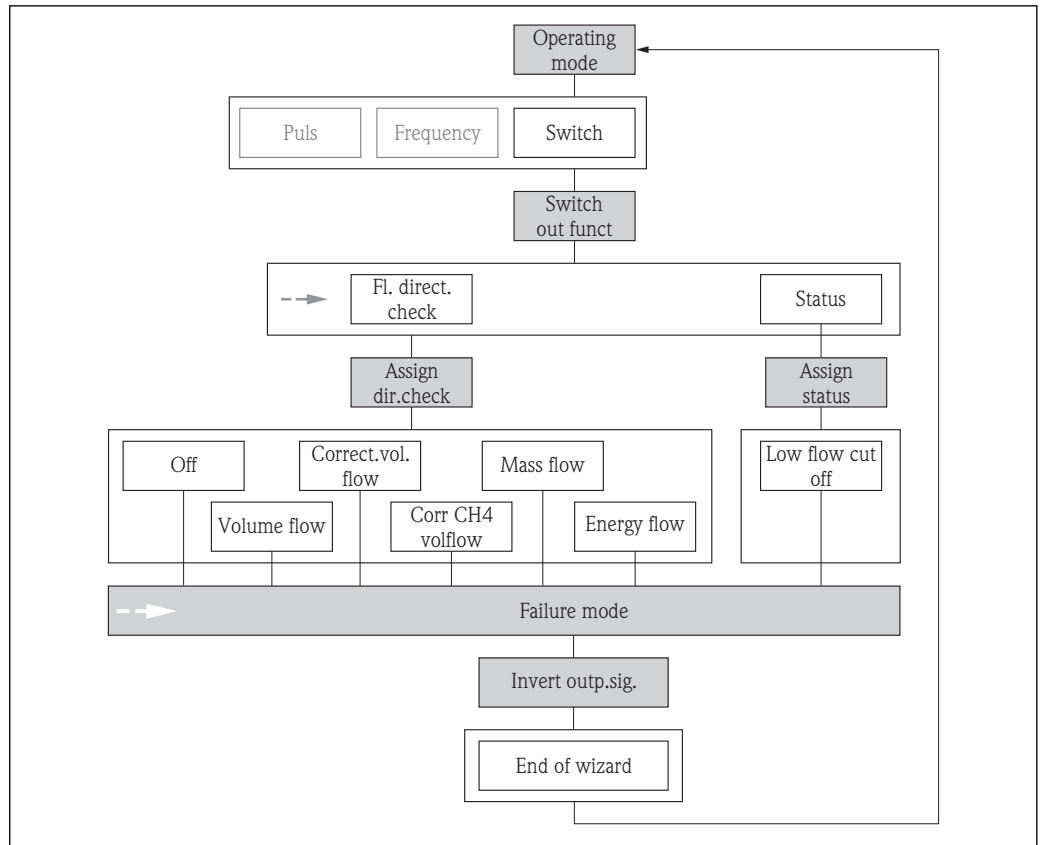

A0019227-EN

19 "Pulse/frequency/switch output" wizard in the "Setup" menu: "Switch" operating mode (Part 3)

Parameter overview with brief description for switch output

Parameter	Description	Selection/ User entry	Factory setting
Operating mode	Specify the output as a pulse, frequency or switch output.	<ul style="list-style-type: none"> ■ Pulse ■ Frequency ■ Switch <p>i The picklist depends on the selected device order (→ 23).</p>	Pulse
Switch output function	Select the function for the switch output.	<ul style="list-style-type: none"> ■ Off ■ On ■ Diagnostic behavior ■ Limit value ■ Flow direction monitoring ■ Status 	Off
Assign diagnostic behavior	Select the diagnostic behavior for the switch output.	<ul style="list-style-type: none"> ■ Alarm ■ Alarm or warning ■ Warning 	Alarm

Assign limit	Select the process variable for the limit function.	<ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Methane fraction ■ Methane corrected volume flow ■ Mass flow ■ Temperature ■ Energy flow ■ Wobbe index ■ Gross calorific value ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 	Volume flow
Assign flow direction check	Select the process variable for monitoring the direction of flow in your process.	<ul style="list-style-type: none"> ■ Off ■ Volume flow ■ Corrected volume flow ■ Methane corrected volume flow ■ Mass flow ■ Energy flow 	Volume flow
Assign status	Select the device status for the switch output.	Low flow cut off	Low flow cut off
Mass flow unit	Select the unit for mass flow. <i>Result</i> The selected unit applies for: – Outputs – Low flow cut off – Simulation process variable	Unit choose list	Country-dependent: <ul style="list-style-type: none"> ■ kg/h ■ lb/min
Volume flow unit	Select volume flow unit. <i>Result</i> The selected unit applies for: – Outputs – Low flow cut off – Simulation process variable	Unit choose list	Country-dependent: <ul style="list-style-type: none"> ■ l/h ■ gal/min (us)
Corrected volume flow unit	Select corrected volume flow unit. <i>Result</i> The selected unit applies for: – Outputs – Low flow cut off – Simulation process variable	Unit choose list	Country-dependent: <ul style="list-style-type: none"> ■ NI/h ■ Scf/min
Reference conditions	Select reference conditions for calculation of the corrected volume flow. <i>Result</i> The selected unit is taken from: Reference conditions ("Expert" menu → Sensor → Calculated values → Reference values)	Reference conditions picklist	1013.25hPa, 0°C

Temperature unit	Select temperature unit. <i>Result</i> The selected unit applies for: – Outputs – Reference temperature – Simulation process variable	Unit choose list	Country-dependent: ■ °C (Celsius) ■ °F (Fahrenheit)
Energy flow unit	Select energy flow unit. <i>Result</i> The selected unit is taken from: Energy flow unit	Unit choose list	kWh
Reference combustion temperature	Select reference temperature for calculation of the gas energy value.	Temperature choose list	25 °C
Calorific value unit	Select net calorific value unit. <i>Result</i> The selected unit is taken from: Calorific value unit	Calorific value unit picklist	kWh/m ³
Calorific value calculation	Select calculation based on gross calorific value or net calorific value. <i>Result</i> The selected calorific value calculation is taken from: Calorific value calculation ("Expert" menu → Sensor → Calculated values → Reference values)	<ul style="list-style-type: none"> ■ Gross calorific value ■ Net calorific value 	Gross calorific value
Unit totalizer	Select the unit for the process variable of the totalizer.	Unit choose list	Depends on country and nominal diameter
Switch-on value	Enter the measured value for the switch-on value.	Depends on the process variable selected	-
Switch-off value	Enter the measured value for the switch-off value.	Depends on the process variable selected	-
Switch-on delay	Specify the delay time for switching on the switch output.	0.0 to 100.0 s	0.0 s
Switch-off delay	Specify the delay time for switching off the switch output.	0.0 to 100.0 s	0.0 s
Failure mode	Specify the output behavior in the event of a device alarm.	<ul style="list-style-type: none"> ■ Current status ■ Open ■ Closed 	Open
Invert output signal	Invert the output signal.	<ul style="list-style-type: none"> ■ No ■ Yes 	No


10.4.5 Configuring the local display

The **Display** wizard guides you systematically through all parameters that can be set for configuring the local display.

Navigation path

"Setup" menu → Display

Structure of the wizard

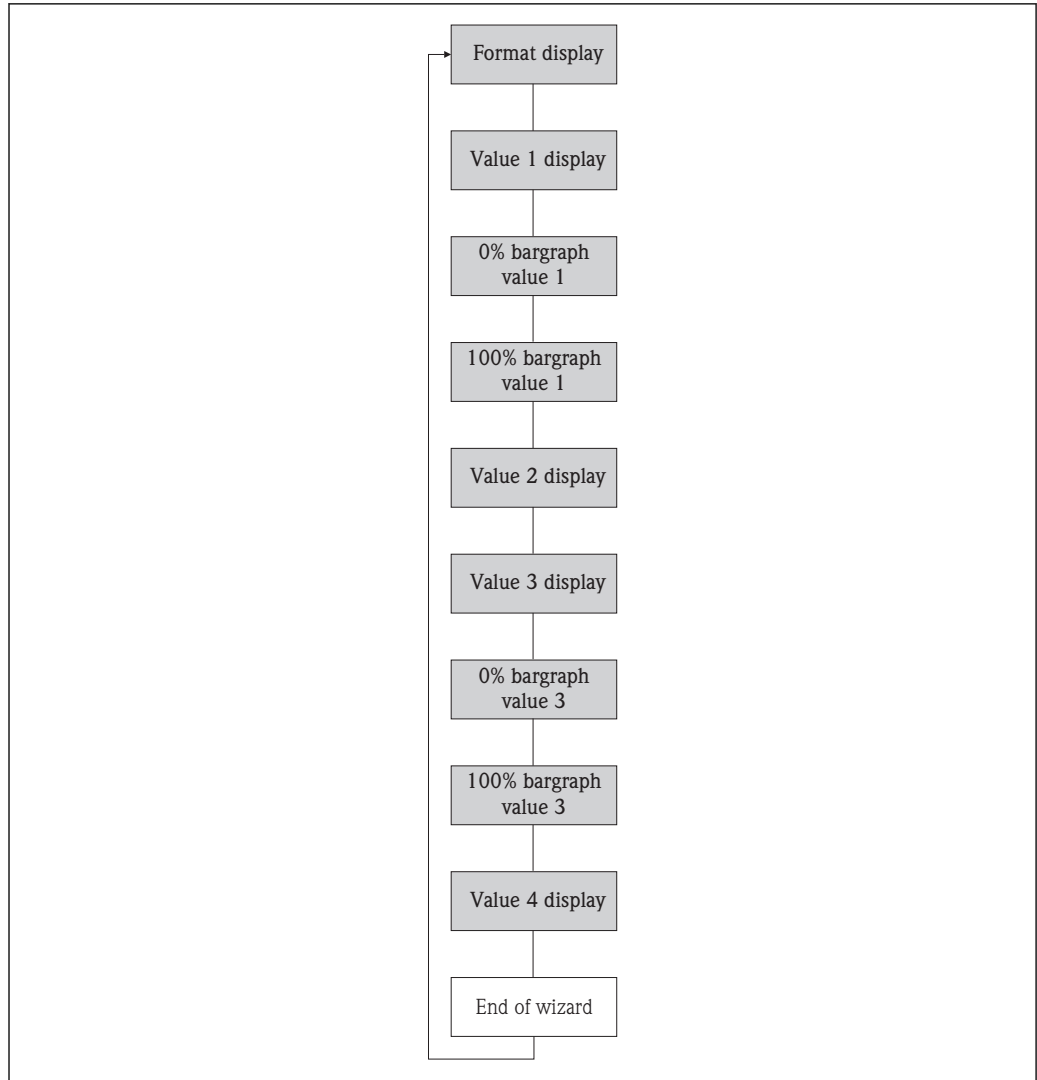

A0013797-EN

20 "Display" wizard in the "Setup" menu

Parameter overview with brief description

Parameter	Description	Selection/ User entry	Factory setting
Format display	Select how measured values are shown on the display.	<ul style="list-style-type: none"> ■ 1 value, max. ■ 1 bargraph + 1 value ■ 2 values ■ 1 value large + 2 values ■ 4 values 	Depends on the order option

Value 1 display	Select the measured value that is shown on the local display.	<ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Corrected methane volume flow ■ Mass flow ■ Energy flow ■ Methane fraction ■ Gross calorific value ■ Wobbe index ■ Temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 ■ Current output 1 ■ Current output 2 	Volume flow
0% bargraph value 1	Enter the 0% value to be shown on the bargraph display for the measured value 1.	Floating point number with sign	Country-dependent: <ul style="list-style-type: none"> ■ 0 m³/h ■ 0 ft³/min
100% bargraph value 1	Enter the 100% value to be shown on the bargraph display for the measured value 1.	Floating point number with sign	Depends on country and nominal diameter
Value 2 display	Select the measured value that is shown on the local display.	<ul style="list-style-type: none"> ■ None ■ Volume flow ■ Corrected volume flow ■ Corrected methane volume flow ■ Mass flow ■ Energy flow ■ Methane fraction ■ Gross calorific value ■ Wobbe index ■ Temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 ■ Current output 1 ■ Current output 2 	Depends on the order option
Value 3 display	Select the measured value that is shown on the local display.	<ul style="list-style-type: none"> ■ None ■ Volume flow ■ Corrected volume flow ■ Corrected methane volume flow ■ Mass flow ■ Energy flow ■ Methane fraction ■ Gross calorific value ■ Wobbe index ■ Temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 ■ Current output 1 ■ Current output 2 	None
0% bargraph value 3	Enter the 0% value to be shown on the bargraph display for the measured value 3.	Floating point number with sign	Country-dependent: <ul style="list-style-type: none"> ■ 0 m³/h ■ 0 ft³/min
100% bargraph value 3	Enter the 100% value to be shown on the bargraph display for the measured value 3.	Floating point number with sign	Depends on country and nominal diameter

Value 4 display	Select the measured value that is shown on the local display.	<ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Corrected methane volume flow ■ Mass flow ■ Energy flow ■ Methane fraction ■ Gross calorific value ■ Wobbe index ■ Temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 ■ Current output 1 ■ Current output 2 	None
-----------------	---	---	------


10.4.6 Configuring the output conditioning

The **Output conditioning** wizard guides you systematically through all parameters that have to be set for configuring the output conditioning.

Navigation path

"Setup" menu → Output conditioning

Structure of the wizard

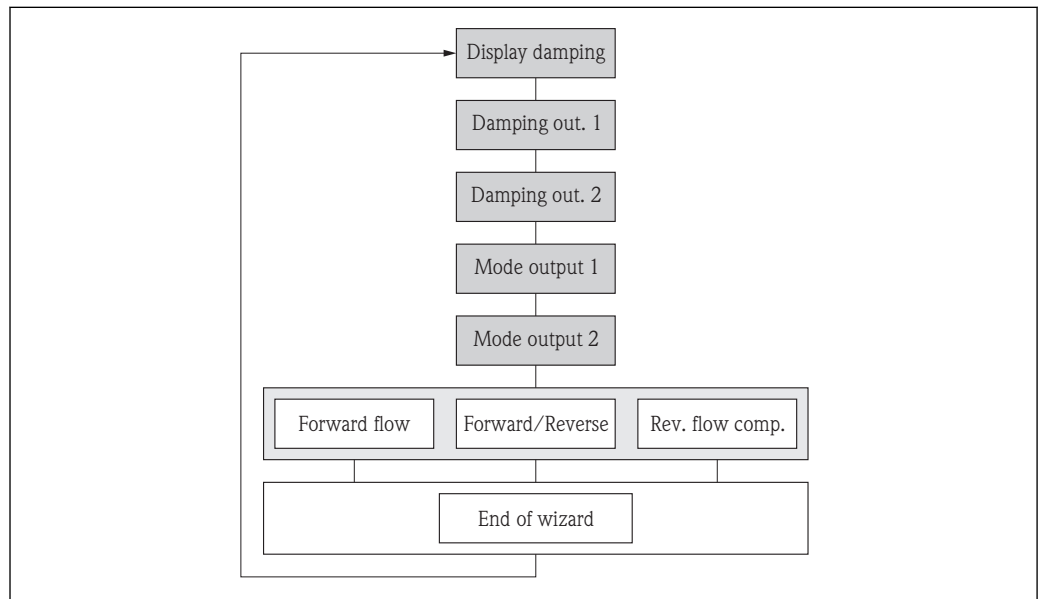

A0015993-EN

21 "Output conditioning" wizard in the "Setup" menu

Parameter overview with brief description

Parameter	Description	Selection/ User entry	Factory setting
Display damping	Set the reaction time of the local display to fluctuations in the measured value caused by process conditions.	0 to 999 s	3 s

Damping output 1-2	Set the reaction time of the output signal to fluctuations in the measured value caused by process conditions.	0 to 999 s	3 s
Measuring mode output 1-2	Select the measuring mode for output.	<ul style="list-style-type: none"> ■ Forward flow ■ Forward/reverse flow ■ Reverse flow compensation 	Forward flow


10.4.7 Configuring the low flow cut off

The **Low flow cut off** wizard guides you systematically through all parameters that have to be set for configuring the low flow cut off.

Navigation path

"Setup" menu → Low flow cut off

Structure of the wizard

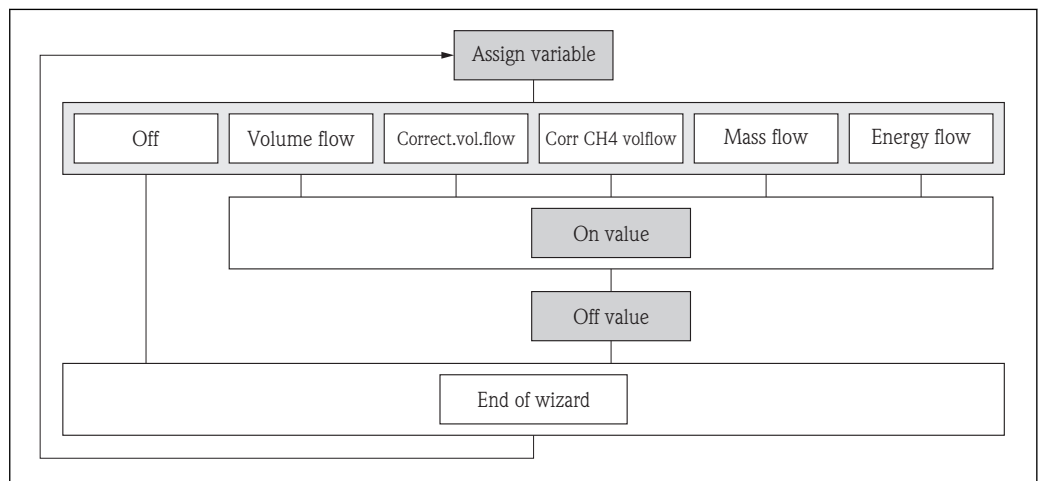

A0015995-EN

22 "Low flow cut off" wizard in the "Setup" menu

Parameter overview with brief description

Parameter	Description	Selection/ User entry	Factory setting
Assign process variable	Select process variable for low flow cut off.	<ul style="list-style-type: none"> ■ Off ■ Volume flow ■ Corrected volume flow ■ Corrected methane volume flow ■ Mass flow ■ Energy flow 	Volume flow (depends on nominal diameter)
On value	Enter the on value for low flow cutoff.	Positive floating point number	Depends on country and nominal diameter
Off value	Enter the off value for low flow cutoff.	0 to 100 %	50 %


10.5 Advanced settings

The **Advanced setup** menu with its submenus contains all parameters needed for specific settings.

Navigation path

"Setup" menu → Advanced setup


Navigation to the "Advanced setup" submenu

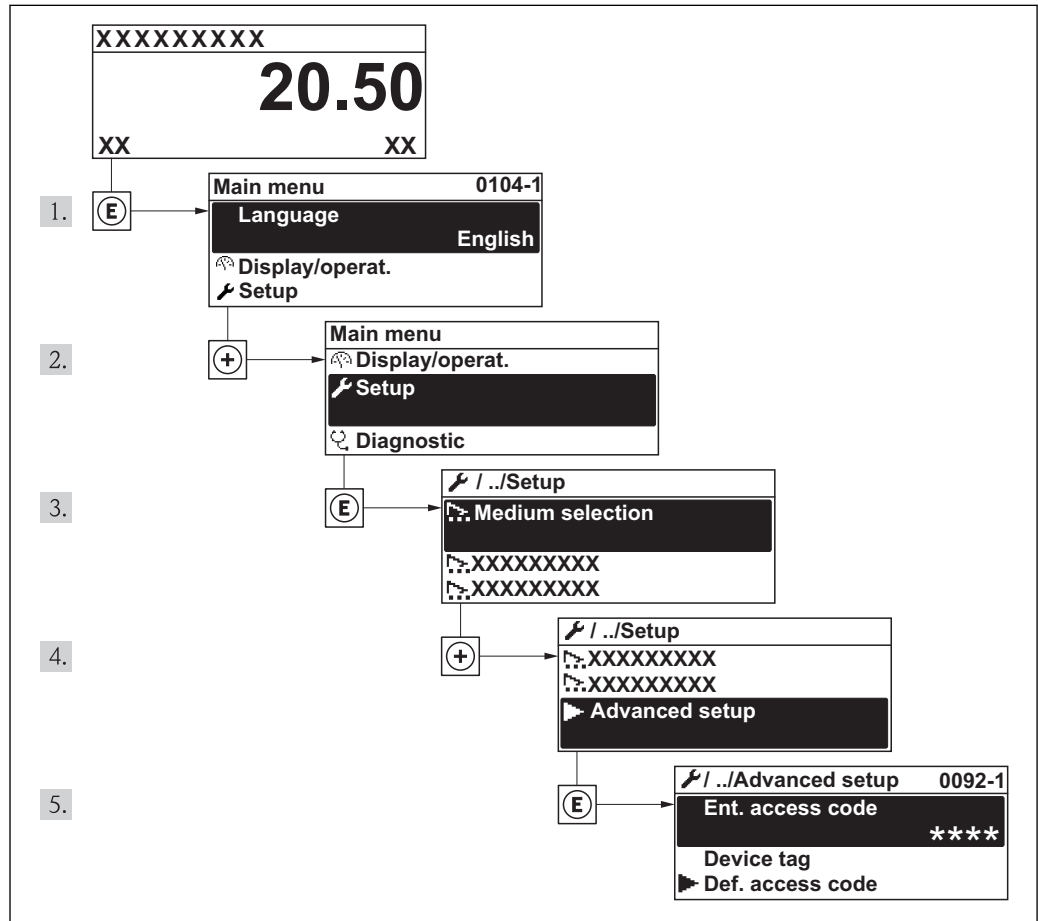

A0014009-EN

23 Taking the example of the local display

Overview of the parameters and submenus in the "Advanced setup" menu

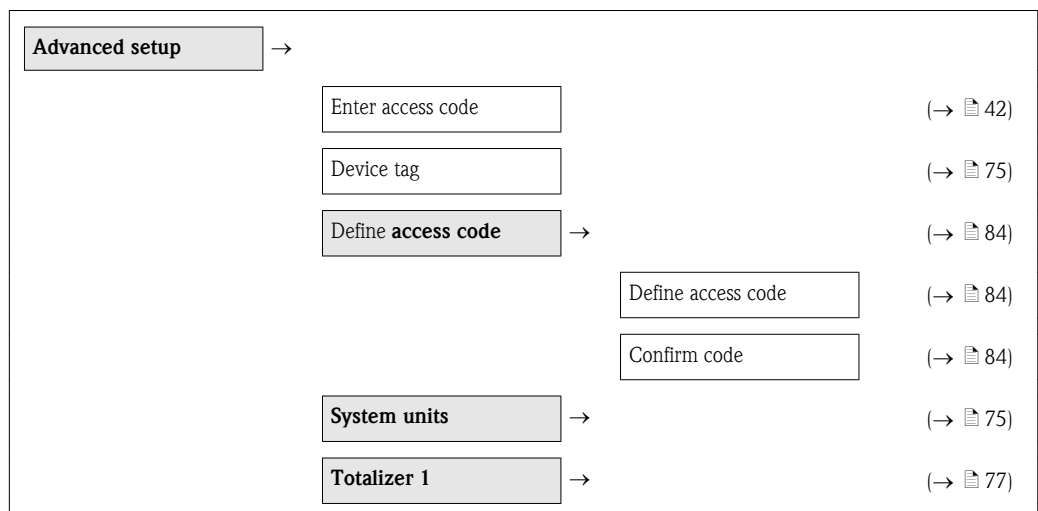


Totalizer 2	→	(→ ⓘ 77)
Totalizer 3	→	(→ ⓘ 77)
Display	→	(→ ⓘ 79)
Data backup Display module	→	(→ ⓘ 80)

10.5.1 Defining the tag name

To enable quick identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.

Navigation path

Setup → Advanced setup → Device tag

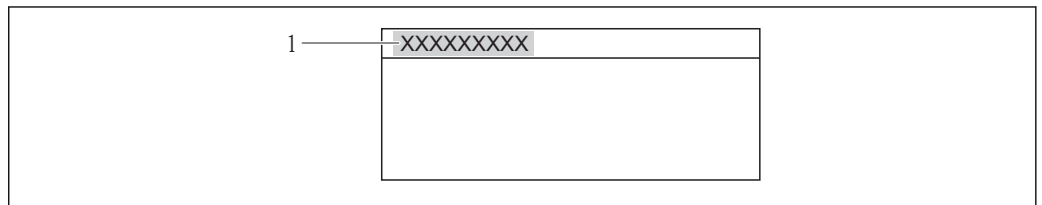

A0013375

24 Header of the operational display with tag name

1 Device tag

Parameter overview with brief description

Parameter	Prerequisite	Description	User entry	Factory setting
Device tag	The following option is selected in the Header parameter: Device tag	Enter the name for the measuring point.	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /)	Prosonic Flow

i The number of characters displayed depends on the characters used.


10.5.2 Setting the system units

In the **System units** submenu, you can configure the units of all measured values.

Navigation path

"Setup" menu → Advanced setup → System units

Structure of the submenu

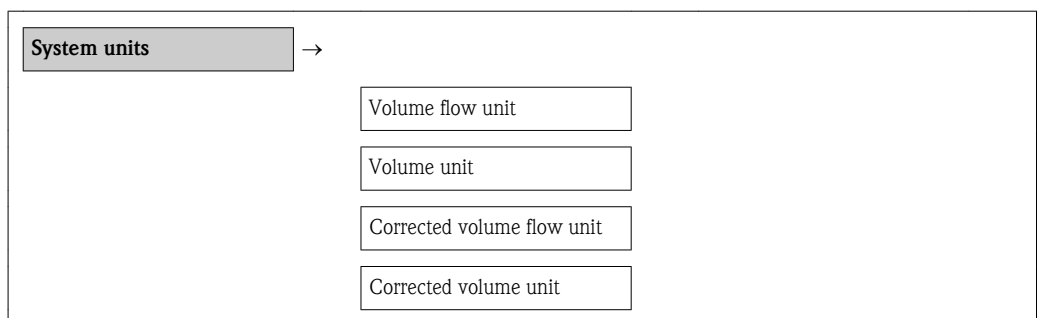

Mass flow unit
Mass unit
Temperature unit
Pressure unit
Energy flow unit
Energy unit
Calorific value unit
Velocity unit

Parameter overview with brief description

Parameter	Description	Selection/ User entry	Factory setting
Volume flow unit	Select volume flow unit. <i>Result</i> The selected unit also applies for: – Outputs – Low flow cut off – Simulation process variable	Unit choose list	Country-dependent: ■ m ³ /h ■ ft ³ /min
Volume unit	Select volume unit.	Unit choose list	Country-dependent: ■ m ³ ■ ft ³
Corrected volume flow unit	Select corrected volume flow unit. <i>Result</i> The selected unit also applies for: – Outputs – Low flow cut off – Simulation process variable	Unit choose list	Country-dependent: ■ Nm ³ /h ■ Sft ³ /min
Corrected volume unit	Select volume unit.	Unit choose list	Country-dependent: ■ Nm ³ ■ Sft ³
Mass flow unit	Select the unit for mass flow. <i>Result</i> The selected unit also applies for: Outputs	Unit choose list	Country-dependent: ■ kg/h ■ lb/min
Mass unit	Select the unit for mass.	Unit choose list	Country-dependent: ■ kg ■ lb

Temperature unit	Select temperature unit. <i>Result</i> The selected unit also applies for: – Outputs – Process variable	Unit choose list	Country-dependent: ■ °C (Celsius) ■ °F (Fahrenheit)
Pressure unit	Select process pressure unit. <i>Result</i> The selected unit also applies for: – Process pressure – Reference pressure	Unit choose list	Country-dependent: ■ mbar a ■ psi a
Energy flow unit	Select energy flow unit. <i>Result</i> The selected unit also applies for: – Outputs – Low flow cut off	Unit choose list	Country-dependent: ■ kW ■ Btu/h
Energy unit	Select energy unit.	Unit choose list	Country-dependent: ■ kWh ■ Btu
Calorific value unit	Select calorific value unit.	Unit choose list	Country-dependent: ■ kWh/Nm ³ ■ Btu/Sft ³
Velocity unit	Select velocity unit.	Unit choose list	Country-dependent: ■ m/s ■ ft/s


10.5.3 Configuring the totalizer

You can configure each totalizer in the three submenus **Totalizer 1-3**.

Navigation path

"Setup" menu → Advanced setup → Totalizer 1-3

Structure of the submenu

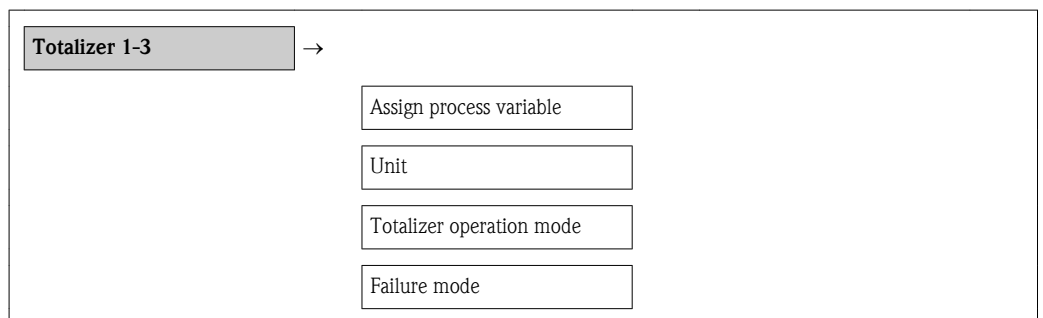

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection/	Factory setting
-----------	--------------	-------------	------------	-----------------

Assign process variable	-	Select process variable for totalizer. <i>Result</i> The selection determines the choose list of the Unit parameter.	<ul style="list-style-type: none"> ■ Off ■ Volume flow ■ Corrected volume flow ■ Corrected methane volume flow ■ Mass flow ■ Energy flow 	Volume flow
Unit	One of the following options is selected in the Assign process variable parameter: <ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Corrected methane volume flow ■ Energy flow 	Select the unit for the process variable of the totalizer.	Unit choose list	Country-dependent: <ul style="list-style-type: none"> ■ m³ ■ ft³
Totalizer operation mode	One of the following options is selected in the Assign process variable parameter: <ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Corrected methane volume flow ■ Energy flow 	Select totalizer calculation mode.	<ul style="list-style-type: none"> ■ Net flow total ■ Forward flow total ■ Reverse flow total 	Net flow total
Failure mode	One of the following options is selected in the Assign process variable parameter: <ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Corrected methane volume flow ■ Energy flow 	Define how the totalizer behaves in an alarm condition.	<ul style="list-style-type: none"> ■ Stop ■ Actual value ■ Last valid value 	Stop


10.5.4 Carrying out additional display configurations

In the **Display** submenu, you can set all parameters involved in the configuration of the local display.

Navigation path

"Setup" menu → Advanced setup → Display

Structure of the submenu

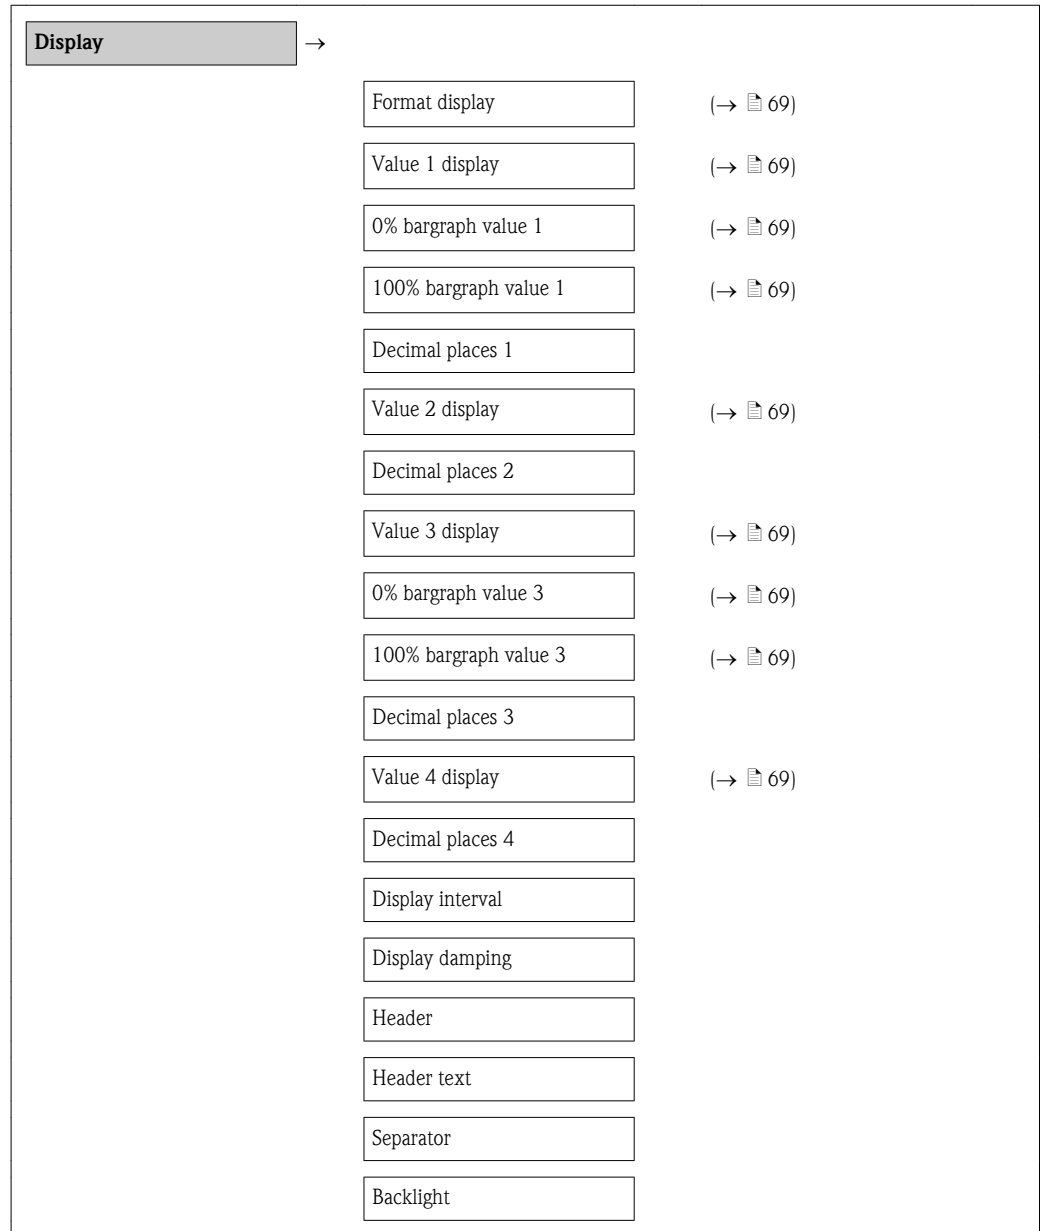

Parameter overview with brief description

Parameters	Prerequisite	Description	Selection/ User entry	Factory setting
Decimal places 1	A measured value is specified in the parameter Value 1 display .	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx

Decimal places 2	A measured value is specified in the parameter Value 2 display .	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx
Decimal places 3	A measured value is specified in the parameter Value 3 display .	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx
Decimal places 4	A measured value is specified in the parameter Value 4 display .	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx
Display interval	-	Set time measured values are shown on display if display alternates between values.	1 to 10 s	5 s
Display damping	-	Set the reaction time of the local display to fluctuations in the measured value caused by process conditions.	0 to 999 s	0 s
Header	-	Select header contents on local display	<ul style="list-style-type: none"> ■ Device tag ■ Free text 	Device tag
Header text	The Free text option is selected in the Header parameter.	Enter display header text.	Max. 12 characters such as letters, numbers or special characters	-----
Separator	-	Select decimal separator for displaying numerical values.	<ul style="list-style-type: none"> ■ . (point) ■ , (comma) 	. (point)
Backlight	-	Switch the backlight of the local display on and off.	<ul style="list-style-type: none"> ■ Disable ■ Enable 	Enable

10.6 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration.


You can do so using the **Configuration management** parameter and the related options found in the **Conf. backup disp.** submenu.

Navigation path


"Setup" menu → Advanced setup → Conf. backup disp.

Function scope of the "Configuration management" parameter


Options	Description
Execute backup	The current device configuration is backed up from the integrated HistoROM to the device's display module. The backup copy includes the transmitter data of the device.
Restore	The last backup copy of the device configuration is restored from the display module to the device's integrated HistoROM DAT. The backup copy includes the transmitter data of the device.
Duplicate	The transmitter configuration from another device is duplicated to the device using the display module.
Compare	The device configuration saved in the display module is compared with the current device configuration of the integrated HistoROM.
Clear backup data	The backup copy of the device configuration is deleted from the display module of the device.

 **Integrated HistoROM**

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

 While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

Structure of the submenu

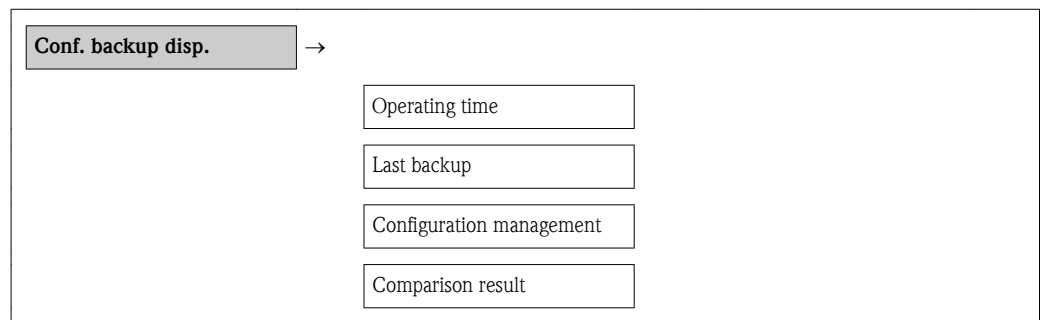

Parameter overview with brief description

Parameters	Description	Selection/Display	Factory setting
Operating time	Indicates how long the device has been in operation up to this point.	Days (d), hours (h), minutes (m), seconds (s)	-
Last backup	Indicates when the last data backup was saved to the display module	Days (d), hours (h), minutes (m), seconds (s)	-
Configuration management	Select action for managing the device data in the display module	<ul style="list-style-type: none"> ■ Cancel ■ Execute backup ■ Restore ■ Duplicate ■ Compare ■ Clear backup data 	Cancel

Comparison result	Comparison between present device data and display backup	<ul style="list-style-type: none"> ■ Set. identical ■ Set. not ident. ■ No backup ■ Backup corrupt ■ Check not done ■ Dataset incomp. 	Check not done
-------------------	---	---	----------------


10.7 Simulation

The **Simulation** submenu enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).

Navigation path


"Diagnostics" menu → Simulation

Structure of the submenu

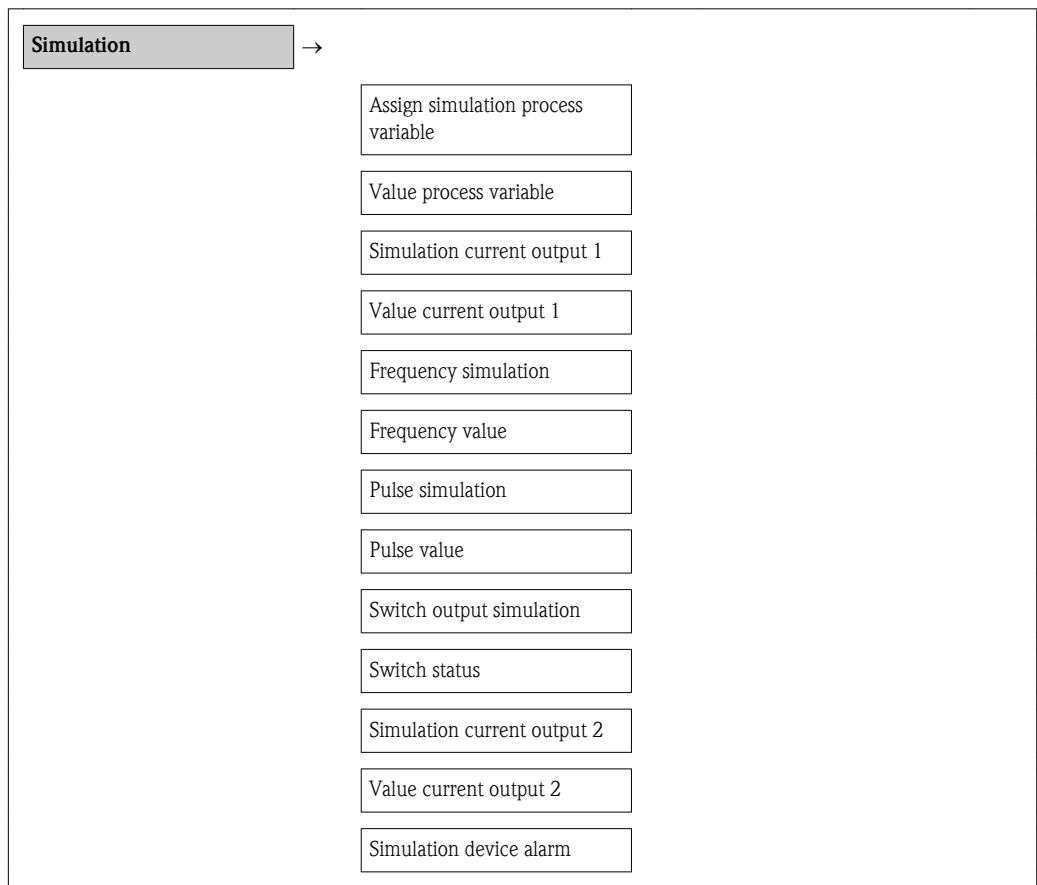

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection/ User entry	Factory setting
-----------	--------------	-------------	--------------------------	-----------------

Assign simulation process variable	-	Select a process variable for the simulation process that is activated.	<ul style="list-style-type: none"> ■ Off ■ Volume flow ■ Corrected volume flow ■ Methane fraction ■ Corrected methane volume flow ■ Mass flow ■ Energy flow ■ Gross calorific value ■ Wobbe index ■ Temperature 	Off
Value process variable	One of the following options is selected in the Assign simulation process variable parameter: <ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Methane fraction ■ Corrected methane volume flow ■ Mass flow ■ Energy flow ■ Gross calorific value ■ Wobbe index ■ Temperature 	Enter the simulation value for the selected process variable.	Depends on the process variable selected	-
	-	Switch simulation of the current output on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off
	The On option is selected in the Simulation current output 1-2 parameter.	Enter the current value for simulation.	3.6 to 22.5 mA	Current value currently measured
Frequency simulation	-	Switch simulation of the frequency output on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off
Frequency value	The On option is selected in the Frequency output simulation parameter.	Enter the frequency value for simulation.	0 to 1 250 Hz	Frequency currently measured
Pulse simulation	-	Set and switch off pulse output simulation.	<ul style="list-style-type: none"> ■ Off ■ Fixed value ■ Down-count val. <p> If the Fixed value option is selected, the Pulse width parameter defines the pulse width of the pulses output (→ 61).</p>	Off
Pulse value	The Down-count. val. option is selected in the Simulation pulse output parameter.	Enter the number of pulses for simulation.	0...65535	Pulse currently measured
Switch output simulation	-	Switch simulation of the switch output on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off

Switch status	The On option is selected in the Switch output simulation parameter.	Select the status of the status output for the simulation.	<ul style="list-style-type: none"> ■ Open ■ Closed 	Open
Simulation device alarm	–	Switch the device alarm on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off

10.8 Protecting settings from unauthorized access

The following options exist for protecting the configuration of the measuring device from unintentional modification after commissioning:

- Write protection via access code (→ [84](#))
- Write protection via write protection switch (→ [85](#))
- Write protection via keypad lock (→ [42](#))


10.8.1 Write protection via access code

With the customer-specific access code, the parameters for the measuring device configuration are write-protected and their values can no longer be changed via local operation.

Navigation path

"Setup" menu → Advanced setup → Define access code

Structure of the submenu

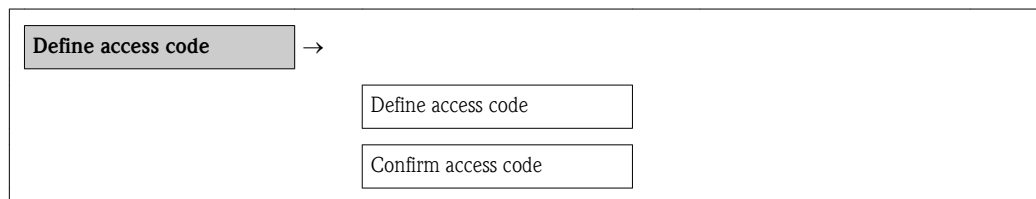

Defining the access code via local display


1. Navigate to the **Define access code** parameter.
2. Define a max. 4-digit numeric code as an access code.
3. Enter the access code again to confirm the code.
 - ✓ The -symbol appears in front of all write-protected parameters.

The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the operational display mode from the navigation and editing view.

- If write access is activated via access code, it can be also be deactivated only via the access code (→ [42](#)).
- The user role with which the user is currently logged on via the local display (→ [42](#)) is indicated by the **Access status display** parameter. Navigation path: Display/operation → Access status display

Parameters which can always be modified via the local display

Certain parameters that do not affect the measurement are excepted from write protection via the local display. Despite the defined access code, these parameters can always be modified even if the other parameters are locked.

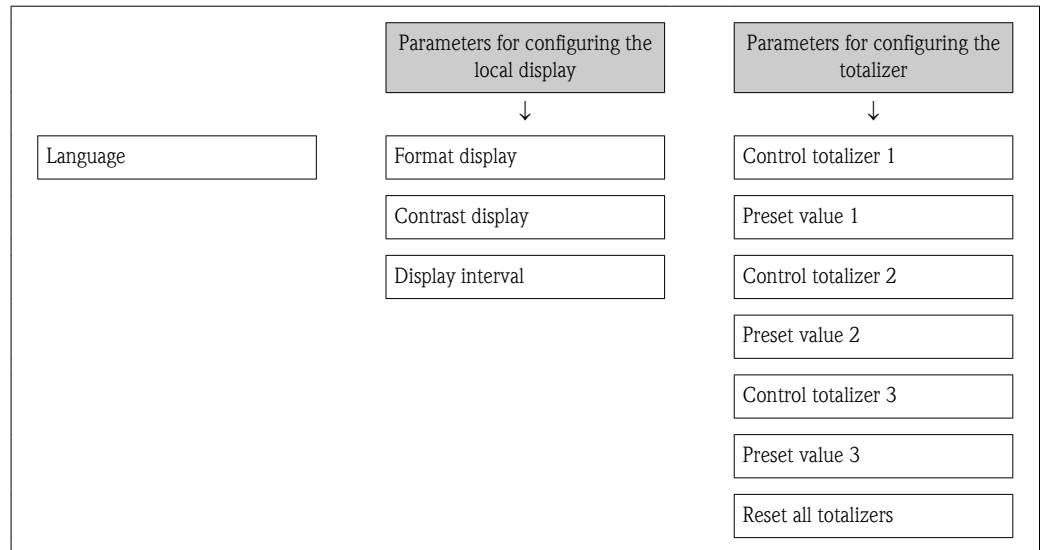


10.8.2 Write protection via write protection switch

Unlike write protection via user-specific access code, this allows write access to the entire operating menu - other than the **Contrast display** parameter - to be locked.


The parameter values are now read only and cannot be edited any more (exception **Contrast display**):


- Via local display
- Via service interface (CDI)
- Via HART protocol

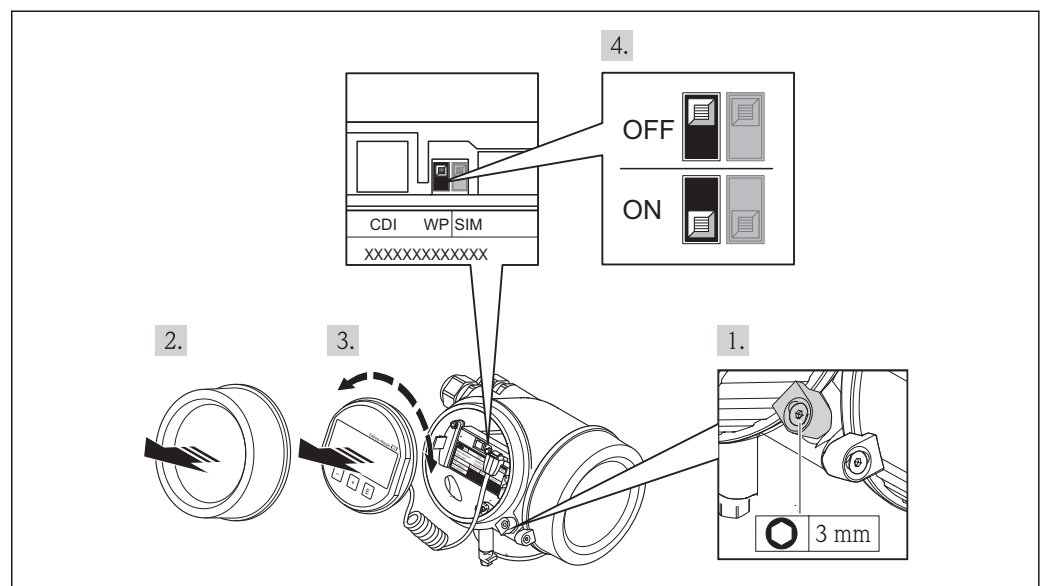



1. Loosen the securing clamp.
2. Unscrew the electronics compartment cover.
3. Pull out the display module with a gentle rotational movement. To make it easier to access the lock switch, attach the display module to the edge of the electronics compartment.

- ✓ Display module is attached to the edge of the electronics compartment.

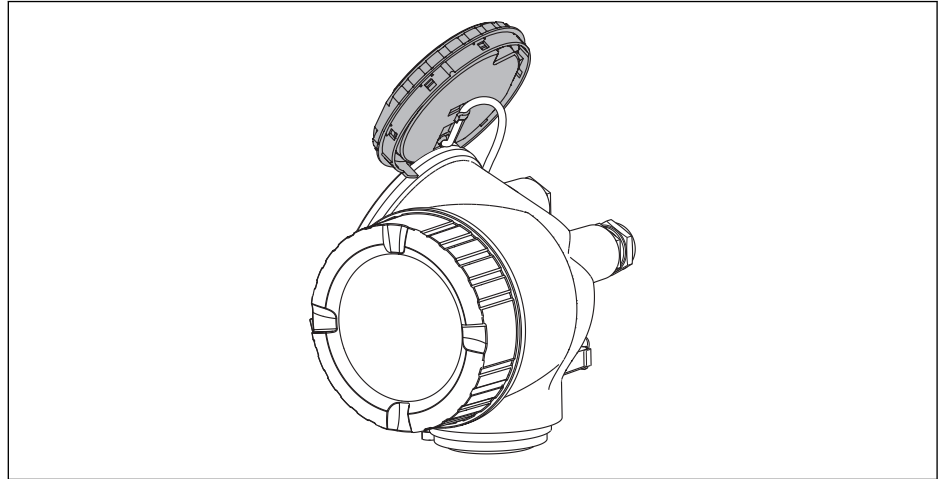

4. Setting the write protection switch (WP) on the main electronics module to the ON position enables the hardware write protection. Setting the write protection switch (WP) on the main electronics module to the OFF position (factory setting) disables the hardware write protection.
 - ✓ If hardware write protection is enabled, the **Hardware locked** option is displayed in the **Locking status** parameter . In addition, on the local display the -symbol appears in front of the parameters in the header of the operational display and in the navigation view.

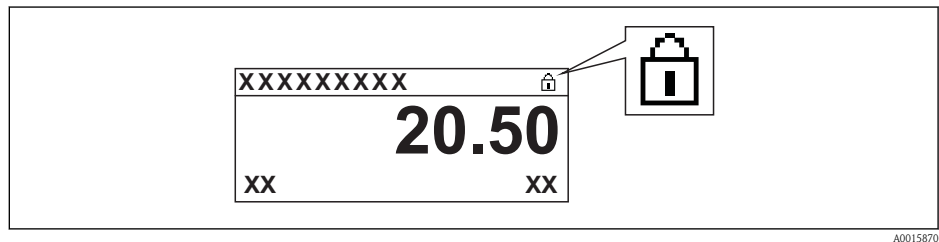




If hardware write protection is disabled, no option is displayed in the **Locking status** parameter . On the local display, the -symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

5. Feed the spiral cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
6. Reverse the removal procedure to reassemble the transmitter.



11 Operation

11.1 Adjusting the operating language

Information (→  50)

 For information on the operating languages supported by the measuring device (→  129)

11.2 Configuring the display

- Basic settings for local display (→  69)
- Advanced settings for local display (→  79)

11.3 Reading off measured values

You can read all measured values using the **Measured values** menu.

Navigation path

Diagnostics → Measured values


11.3.1 Process variables

The **Process variables** submenu contains all the parameters needed to display the current measured values for every process variable.

Navigation path

"Diagnostics" menu → Measured values → Process variables

Structure of the submenu

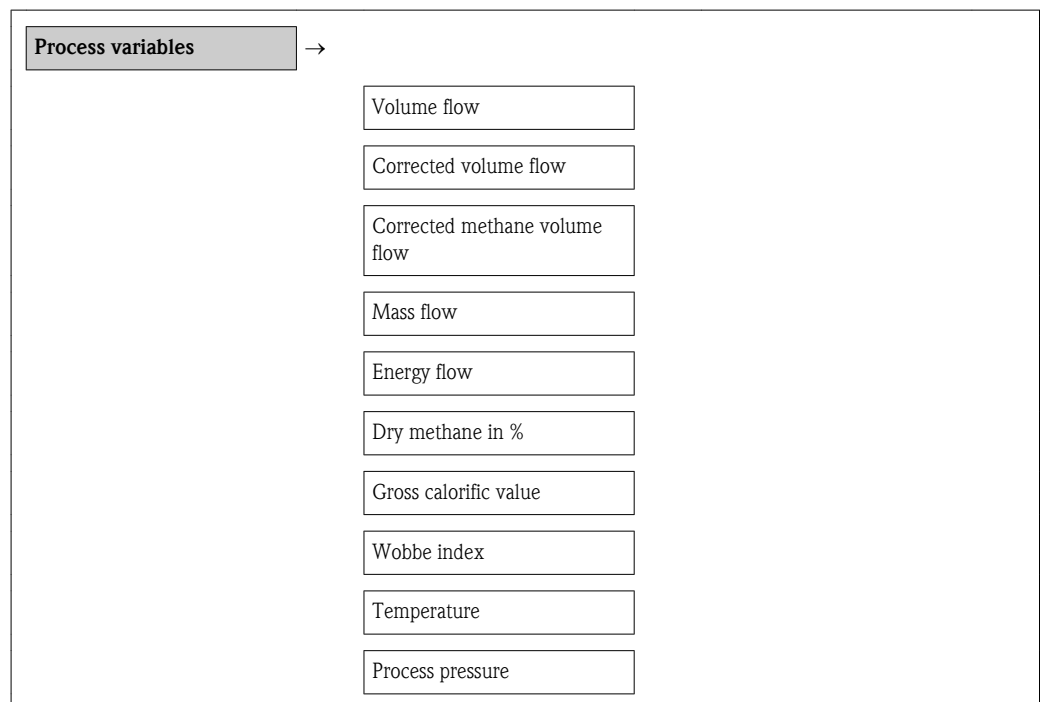

Parameter overview with brief description

Parameter	Prerequisite	Description	Display
-----------	--------------	-------------	---------

Volume flow	–	Displays the calculated volume flow	Floating point number with sign
Corrected volume flow	Either fixed temperature value and pressure value set or integrated temperature sensor ordered and effective operating pressure read in via HART	Displays the calculated corrected volume flow	Floating point number with sign
Corrected methane volume flow	Either biogas analysis option ordered and effective operating pressure read in via HART or fixed pressure value set	Displays the calculated corrected methane volume flow	Floating point number with sign
Mass flow	Either fixed temperature value and pressure value set or integrated temperature sensor ordered and effective operating pressure read in via HART	Displays the mass flow currently calculated	Floating point number with sign
Energy flow	Biogas analysis option ordered and reference combustion temperature selected	Displays the calculated energy flow	Floating point number with sign
Dry methane in %	Biogas analysis option ordered	Displays the calculated percentage of dry methane in %.	Floating point number with sign
Gross calorific value	Biogas analysis option ordered	Displays the calculated gross calorific value	Floating point number with sign
Wobbe index	Biogas analysis option ordered	Displays the calculated Wobbe index	Floating point number with sign
Temperature	Biogas analysis option ordered	Displays the medium temperature currently measured	Floating point number with sign
Process pressure	HART input configured to read in the effective process pressure	Displays the current pressure value read in from an external device	Floating point number with sign


11.3.2 System values

The **System values** submenu contains all the parameters needed to display the current measured values for every system value.

Navigation path

"Diagnostics" menu → Measured values → System values

Structure of the submenu

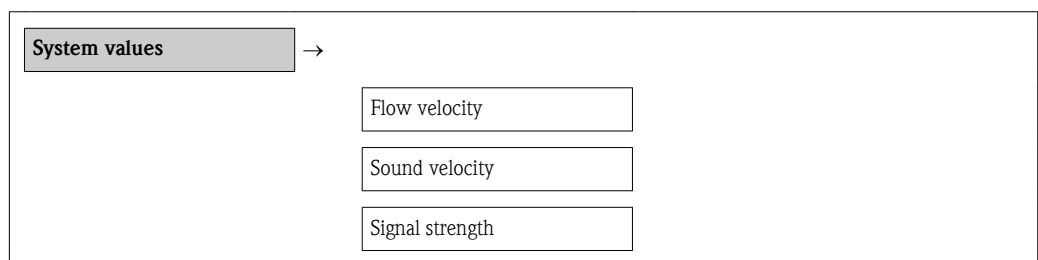

Parameter overview with brief description

Parameters	Prerequisite	Description	Display
------------	--------------	-------------	---------

Flow velocity	–	Displays the flow velocity currently measured	Floating point number with sign
Sound velocity	–	Displays the sound velocity currently measured	Floating point number with sign
Signal strength	–	Displays the signal strength currently measured	Floating point number with sign


11.3.3 Totalizer

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation path

"Diagnostics" menu → Measured values → Totalizer

Structure of the submenu

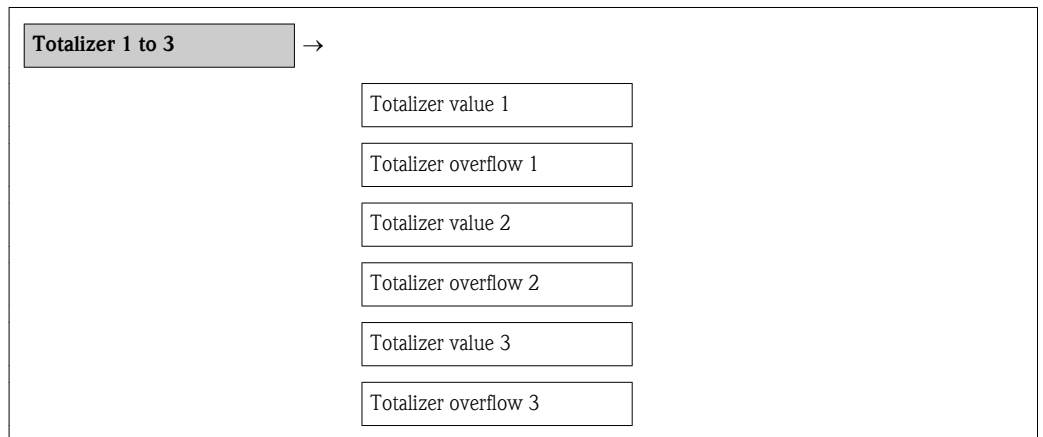

Parameter overview with brief description

Parameter	Prerequisite	Description	Display
Totalizer value	One of the following options is selected in the Assign process variable parameter of the Totalizer 1-3 submenu: <ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Corrected methane volume flow ■ Mass flow ■ Energy flow 	Displays the current totalizer counter value.	Floating point number with sign
Totalizer overflow 1-3	One of the following options is selected in the Assign process variable parameter of the Totalizer 1-3 submenu: <ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Corrected methane volume flow ■ Mass flow ■ Energy flow 	Displays the current totalizer overflow.	Integer


11.3.4 Output values

The **Output values** submenu contains all the parameters needed to display the current measured values for every output.

Navigation path

"Diagnostics" menu → Measured values → Output values

Structure of the submenu

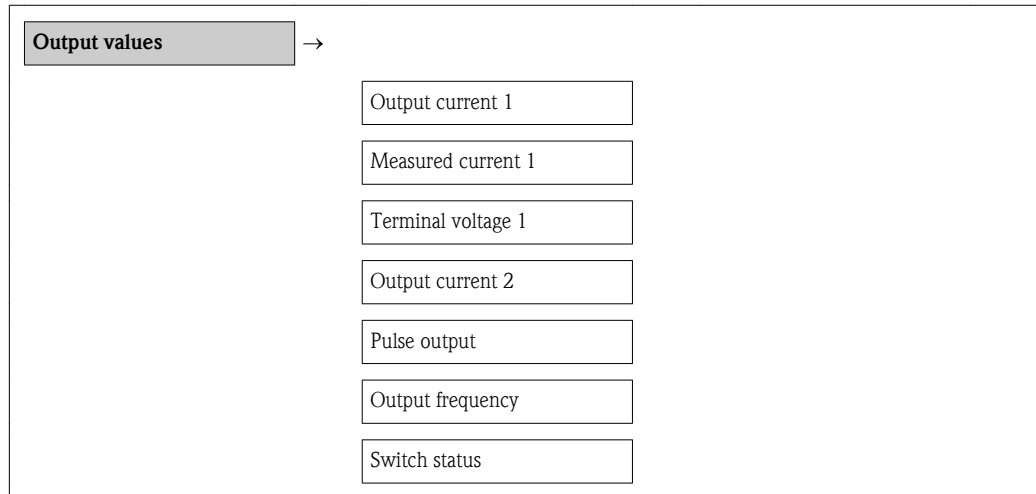

Parameter overview with brief description

Parameter	Prerequisite	Description	Display
Output current 1-2	-	Displays the current value currently calculated for the current output.	3.59 to 22.5 mA
Measured current 1	-	Displays the current value currently measured for the current output.	3.59 to 22.5 mA
Terminal voltage 1	-	Displays the current terminal voltage that is applied at the current output.	-
Pulse output	-	Displays the value currently measured for the pulse output.	Positive floating point number
Output frequency	-	Displays the value currently measured for the frequency output.	0 to 1 250 Hz
Switch status	-	Displays the current switch output status.	<ul style="list-style-type: none"> ■ Open ■ Closed

11.4 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Basic settings using the **Setup** menu (→  51)
- Advanced settings using the **Advanced setup** menu (→  74)

11.5 Performing a totalizer reset

In the **Operation** submenu, 2 parameters with various options for resetting the three totalizers are available:

- Control totalizer 1-3
- Reset all totalizers

Navigation path

"Display/operat." menu → Operation

Function scope of the "Control totalizer" parameter

Options	Description
Totalize	The totalizer is started.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold	The totaling process is stopped and the totalizer is set to the defined start value in the Preset parameter.
Reset + totalize	The totalizer is reset to 0 and the totaling process is restarted.
Preset + totalize	The totalizer is set to the defined start value in the Preset parameter and the totaling process is restarted.

Function scope of the "Reset all totalizers" parameter

Options	Description
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the flow values previously totalized.

"Operation" submenu

Operation	→
	Control totalizer 1
	Preset value 1
	Control totalizer 2
	Preset value 2
	Control totalizer 3
	Preset value 3
	Reset all totalizers

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection/ User entry	Factory setting
-----------	--------------	-------------	--------------------------	-----------------

Control totalizer 1-3	One of the following options is selected in the Assign process variable parameter of the Totalizer 1-3 submenu: <ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Corrected methane volume flow ■ Mass flow ■ Energy flow 	Control totalizer value.	<ul style="list-style-type: none"> ■ Totalize ■ Reset + hold ■ Preset + hold ■ Reset + totalize ■ Preset + totalize 	Totalize
Preset value 1-3	One of the following options is selected in the Assign process variable parameter of the Totalizer 1-3 submenu: <ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Corrected methane volume flow ■ Mass flow ■ Energy flow 	Specify start value for totalizer.	Floating point number with sign	Country-dependent: <ul style="list-style-type: none"> ■ 0 m³ ■ 0 ft³
Reset all totalizers	-	Reset all totalizers to 0 and start.	<ul style="list-style-type: none"> ■ Cancel ■ Reset + totalize 	Cancel

11.6 Showing data logging


In the device, the extended function of the HistoROM must be enabled (order option) so that the **Data logging** submenu appears. This contains all parameters for the measured value history.

Navigation path

"Diagnostics" menu → Data logging

Function scope

- A total of 1000 measured values can be stored
- 4 logging channels
- Adjustable logging interval for data logging
- Display of the measured value trend for each logging channel in the form of a chart

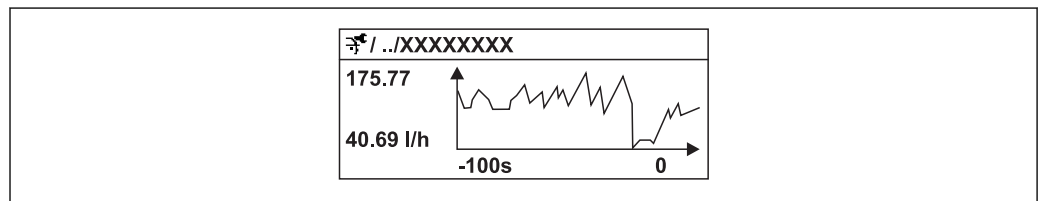


A0016222

25 Chart of a measured value trend

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

i If the length of the logging interval or the assignment of the process variables to the channels is changed, the content of the data logging is deleted.

"Data logging" submenu

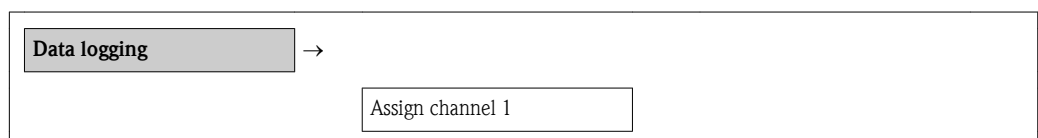

Assign channel 2
Assign channel 3
Assign channel 4
Logging interval
Clear logging data
Display channel 1
Display channel 2
Display channel 3
Display channel 4

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection/ User entry	Factory setting
Assign channel 1-4	-	Assign process variable to logging channel.	<ul style="list-style-type: none"> ■ Off ■ Volume flow ■ Corrected volume flow ■ Corrected methane volume flow ■ Mass flow ■ Energy flow ■ Methane fraction ■ Gross calorific value ■ Wobbe index ■ Temperature ■ Current output 1 ■ Current output 2 	Off
Logging interval	-	Define the logging interval t_{log} for data logging. This value defines the time interval between the individual data points in the memory.	1.0 to 3 600.0 s	10.0 s
Clear logging data	-	Clear the entire logging data.	<ul style="list-style-type: none"> ■ Cancel ■ Clear data 	Cancel

Display channel 1-4	One of the following options is selected in the Assign channel 1-4 parameter: <ul style="list-style-type: none">■ Volume flow■ Corrected volume flow■ Corrected methane volume flow■ Mass flow■ Energy flow■ Methane fraction■ Gross calorific value■ Wobbe index■ Temperature■ Current output 1■ Current output 2	Displays the measured value trend for the logging channel in the form of a chart.	-	-
---------------------	---	---	---	---

12 Diagnostics and troubleshooting

12.1 General troubleshooting

For local display








Problem	Possible cause	Remedy
Local display dark and no output signals	Supply voltage does not match that specified on the nameplate.	Apply the correct supply voltage (→ 25).
Local display dark and no output signals	Supply voltage has incorrect polarity.	Reverse polarity of supply voltage.
Local display dark and no output signals	No contact between connecting cables and terminals.	Check the contacting of the cables and correct if necessary.
Local display dark and no output signals	Terminals are not plugged into the I/O electronics module correctly.	Check terminals.
Local display dark and no output signals	I/O electronics module is defective.	Order spare part (→ 110).
Local display is dark, but signal output is within the valid range	Display is set too bright or too dark.	<ul style="list-style-type: none"> ■ Set the display brighter by simultaneously pressing $\square + \square$. ■ Set the display darker by simultaneously pressing $\square + \square$.
Local display is dark, but signal output is within the valid range	Spiral cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part (→ 110).
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures (→ 101)
Text on local display appears in a foreign language and cannot be understood.	Incorrect operating language is configured.	<ol style="list-style-type: none"> 1. Press $\square + \square$ for 2 s ("home position"). 2. Press \square. 3. Set the desired language in the Language parameter.

For output signals

Problem	Possible cause	Remedy
Signal output outside the valid range	Main electronics module is defective.	Order spare part (→ 110).
Signal output outside the valid current range (< 3.6 mA or > 22 mA)	I/O electronics module is defective.	Order spare part (→ 110).
Device shows correct value on local display, but signal output is incorrect, though in the valid range.	Configuration error	Check and correct parameter configuration.
Device measures incorrectly.	Configuration error or device is operated outside the application.	<ol style="list-style-type: none"> 1. Check and correct parameter configuration. 2. Observe limit values specified in the "Technical Data".

For access


Problem	Possible cause	Remedy
---------	----------------	--------

No write access to parameters	Hardware write protection enabled	Set the write protection switch on the main electronics module to the OFF position (→  85).
No write access to parameters	Current user role has limited access authorization	1. Check user role (→  42). 2. Enter correct customer-specific access code (→  42).
No connection via HART protocol	Missing or incorrectly installed communication resistor.	Install the communication resistor (250 Ω) correctly. Observe the maximum load (→  23) (→  116).
No connection via HART protocol	Commubox <ul style="list-style-type: none"> ■ Connected incorrectly ■ Configured incorrectly ■ Drivers not installed correctly ■ USB interface on computer configured incorrectly 	Observe the documentation for the Commubox.  FXA195 HART: Document "Technical Information" TI00404F
No connection via service interface	Incorrect configuration of USB interface on PC or driver not installed correctly.	Observe the documentation for the Commubox.  FXA291: Document "Technical Information" TI00405C

12.2 Diagnostic information on local display

12.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display.

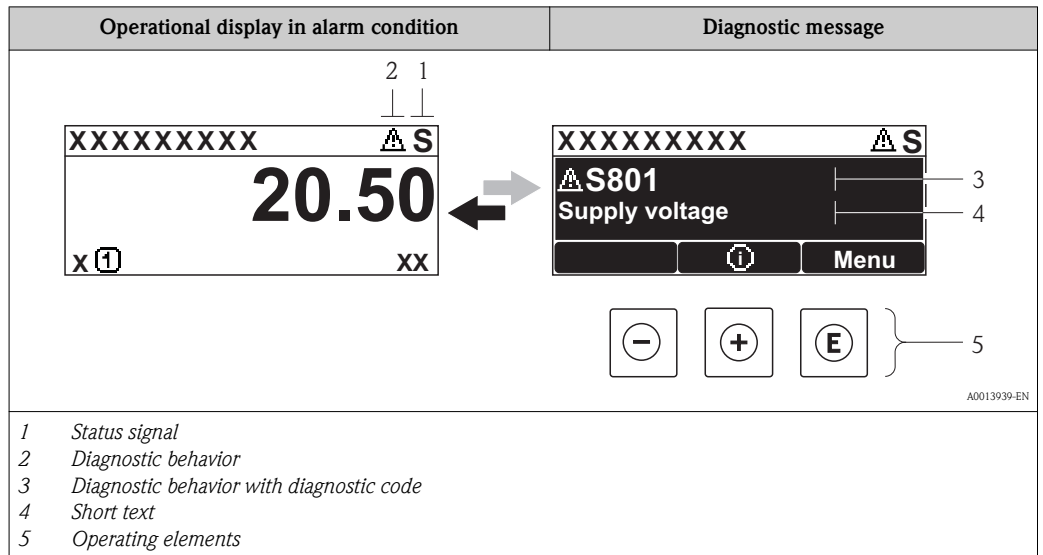

If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.

- i** Other diagnostic events that have occurred can be called up in the **Diagnostics** menu:
 - Via parameters
 - Via submenus (→ 104)



Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
F <small>A0013956</small>	Failure A device error has occurred. The measured value is no longer valid.
C <small>A0013959</small>	Function check The device is in service mode (e.g. during a simulation).
S <small>A0013958</small>	Out of specification The device is operated: <ul style="list-style-type: none"> ▪ Outside its technical specification limits (e.g. outside the process temperature range) ▪ Outside of the configuration carried out by the user (e.g. maximum flow in parameter 20 mA value)
M <small>A0013957</small>	Maintenance required Maintenance is required. The measured value is still valid.


- i** The status signals are categorized according to VDI/VDE 2650 and NAMUR Recommendation NE 107: F = Failure, C = Function Check, S = Out of Specification, M = Maintenance Required

Diagnostic behavior



Symbol	Meaning
 <small>A0013961</small>	Alarm <ul style="list-style-type: none"> ■ Measurement is interrupted. ■ Signal outputs and totalizers assume the defined alarm condition. ■ A diagnostic message is generated. ■ For local display with touch control: the background lighting changes to red.
 <small>A0013962</small>	Warning Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated.

Diagnostic information

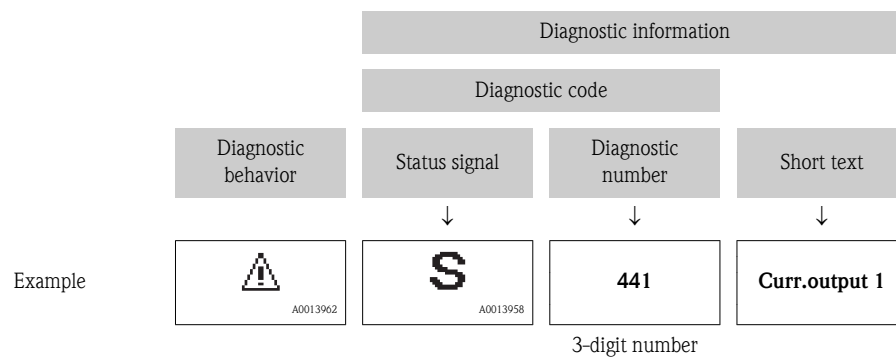
The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.



Operating elements

Key	Meaning
 <small>A0013970</small>	Plus key <i>In a menu, submenu</i> Opens the message about the remedial measures.
 <small>A0013952</small>	Enter key <i>In a menu, submenu</i> Opens the operating menu.

12.2.2 Calling up remedial measures

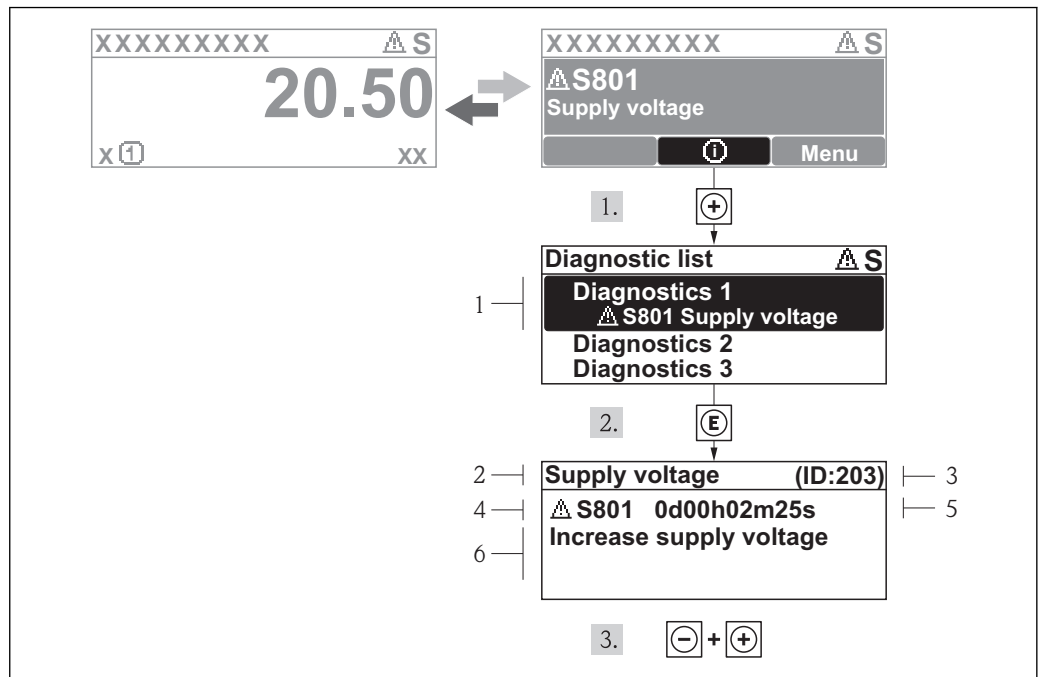

26 Message for remedial measures

- 1 Short text
- 2 Diagnostic behavior with diagnostic code
- 3 Service ID
- 4 Operation time of occurrence
- 5 Remedial measures

The user is in the diagnostic message.

1. Press \oplus (i symbol).
 - ✓ The **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with \oplus or \ominus and press E .
 - ✓ The message for the remedial measures for the selected diagnostic event opens.
3. Press $\ominus + \oplus$ simultaneously.
 - ✓ The message about the remedial measures closes.


The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or the **Previous diagnostics** parameter.

1. Press E .
 - ✓ The message for the remedial measures for the selected diagnostic event opens.
2. Press $\ominus + \oplus$ simultaneously.
 - ✓ The message about the remedial measures closes.

12.3 Diagnostic information in FieldCare

12.3.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

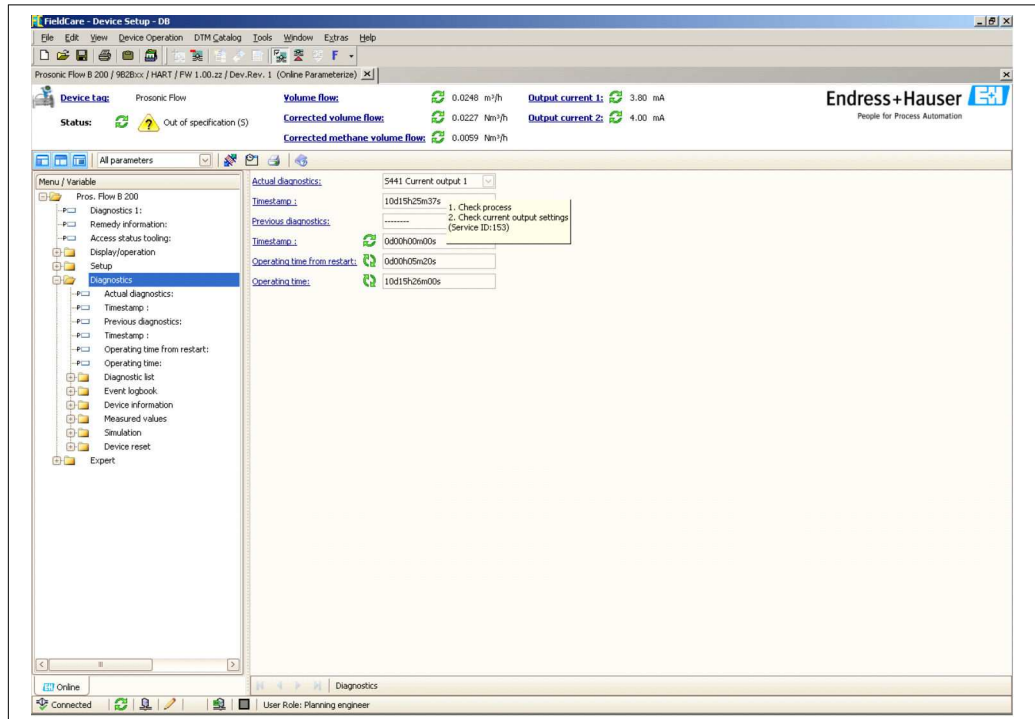

1 Status area with status signal

2 Diagnostic information (→ 98)

3 Remedy information with Service ID

- i** Furthermore, diagnostic events that have occurred can be viewed in the **Diagnostics** menu:
- Via parameters
 - Via submenu (→ 104)

12.3.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu
Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

1. Call up the desired parameter.
2. On the right in the working area, mouse over the parameter.
 - ✓ A tool tip with remedy information for the diagnostic event appears.


12.4 Adapting the diagnostic information

12.4.1 Adapting the diagnostic behavior

Each diagnostic number is assigned a certain diagnostic behavior at the factory. The user can change this assignment for certain diagnostic numbers via the **Diagnostic no. xxx** parameter.

Navigation path

"Expert" menu → System → Diagnostic handling → Diagnostic behavior → Assign behavior of diagnostic no. xxx

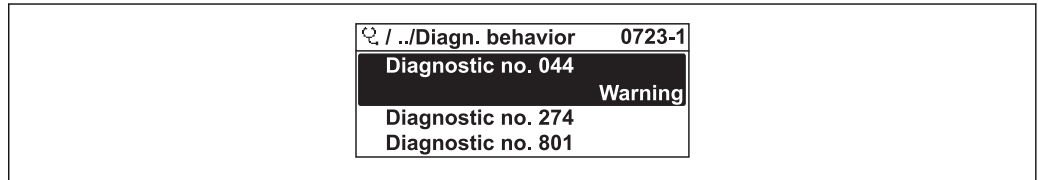

A0014048-EN

27 Taking the example of the local display

You can assign the following options to the diagnostic number as the diagnostic behavior:

Options	Description
Alarm	Measurement is interrupted. Signal outputs and totalizers assume the defined alarm condition. A diagnostic message is generated. For local display with touch control: the background lighting changes to red.
Warning	Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated.
Logbook entry only	The device continues to measure. The diagnostic message is entered in the Event logbook (events list) submenu only and is not displayed in alternation with the measured value display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

12.5 Overview of diagnostic information

Diagnostic number	Short text	Remedial measures	Status signal from the factory	Diagnostic behavior from the factory
Diagnostics for the sensor				
022	Temperature sensor	1. Check temperature sensor cable 2. Change main electronic module. 3. Change sensor.	F	Alarm
082	Data storage	1. Change main electronic module. 2. Change sensor.	F	Alarm
083	Memory content	1. Restart device. 2. Restore data. 3. Change sensor.	F	Alarm
104	Sensor signal path 1-2	1. Check process conditions. 2. Clean the transducer. 3. Replace the transducer.	F	Alarm
105	Transducer	1. Check the cables of the transducer. 2. Replace the transducer.	F	Alarm

Diagnostic number	Short text	Remedial measures	Status signal from the factory	Diagnostic behavior from the factory
Diagnostics for the electronics				
242	Software incompatible	1. Check software. 2. Flash or change main electronic module.	F	Alarm
252	Modules incompatible	1. Check electronic modules. 2. Change I/O or main electronic module.	F	Alarm
261	Electronic modules	1. Restart device. 2. Check electronic modules. 3. Change I/O module or main electronics.	F	Alarm
262	Module connect.	1. Check module connections. 2. Change electronic modules.	F	Alarm
270	Main electronic failure	Change main electronic module.	F	Alarm
271	Main electronic failure	1. Restart device. 2. Change main electronic module.	F	Alarm
272	Main electronic failure	1. Restart device. 2. Contact service.	F	Alarm
273	Main electronic failure	1. Emergency operation via display. 2. Change main electronics.	F	Alarm
275	I/O module failure	Change I/O module.	F	Alarm
276	I/O module failure	1. Restart device. 2. Change I/O module.	F	Alarm
282	Data storage	1. Restart device. 2. Contact service.	F	Alarm
283	Memory content	1. Transfer data or reset device. 2. Contact service.	F	Alarm
311	Electronic failure	1. Transfer data or reset device. 2. Contact service.	F	Alarm

* Diagnostic behavior can be changed: "Adapting the diagnostic behavior" section (→  101)

Diagnostic number	Short text	Remedial measures	Status signal from the factory	Diagnostic behavior from the factory
Diagnostics for the configuration				
410	Data transfer	1. Check connection. 2. Retry data transfer.	F	Alarm
411	Up-/download active	Up-/download active, please wait	C	Warning
437	Incompatible configuration	1. Restart device. 2. Contact service.	F	Alarm

438	Dataset	1. Check data set file. 2. Check device configuration. 3. Up- and download new configuration.	M	Warning
441	Current output	1. Check process. 2. Check current output settings.	S	Warning*
442	Frequency output 1	1. Check process. 2. Check frequency output setting.	S	Warning*
443	Pulse output 1	1. Check process. 2. Check pulse output setting.	S	Warning*
452	Calculation error	1. Check device configuration. 2. Check process conditions.	S	Alarm*
453	Flow override	Deactivate flow override.	C	Warning
484	Simulation failsafe mode	Deactivate simulation.	C	Alarm
485	Simulation process variable	Deactivate simulation.	C	Warning
491	Simulation current output	Deactivate simulation.	C	Warning
492	Frequency simulation 1	Switch off frequency output simulation.	C	Warning
493	Pulse simulation 1	Switch off pulse output simulation.	C	Warning
494	Switch output simulation 1	Switch off switch output simulation.	C	Warning

* Diagnostic behavior can be changed: "Adapting the diagnostic behavior" section (→ 101)

Diagnostic number	Short text	Remedial measures	Status signal from the factory	Diagnostic behavior from the factory
Diagnostics for the process				
801	Supply voltage too low	Increase supply voltage.	S	Warning*
803	Current loop 1-2	1. Check wiring. 2. Change I/O module.	F	Warning
832	Ambient temperature	Reduce ambient temperature.	S	Warning*
833	Ambient temperature	Increase ambient temperature.	S	Warning*
834	Process temperature	Reduce process temperature.	S	Warning*
835	Process temperature	Increase process temperature.	S	Warning*
836	Process pressure	Reduce process pressure.	S	Alarm*
837	Process pressure	Increase process pressure.	S	Warning*
841	Sensor range	Check flow velocity.	S	Warning*
842	Process limit	Low flow cut off active! 1. Check low flow cut off configuration.	S	Logbook entry only

881	Sensor signal path 1-2	1. Check process conditions. 2. Clean the transducer. 3. Replace the transducer.	M	Warning*
882	Input signal	1. Check input configuration. 2. Check pressure sensor or process conditions.	F	Alarm
930	Process fluid	Sound velocity too high! Check process conditions.	S	Warning
931	Process fluid	Sound velocity too low! Check process conditions.	S	Warning


* Diagnostic behavior can be changed: "Adapting the diagnostic behavior" section (→ [101](#))

12.6 Diagnostic list

In the **Diagnostic list** submenu, up to 5 currently pending diagnostic events can be displayed along with the related diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

Navigation path

"Diagnostics" menu → Diagnostic list

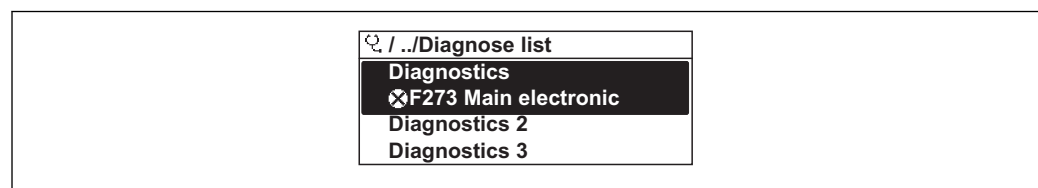

A0014006-EN

28 Illustrated using the example of the local display

To call up the measures to rectify a diagnostic event:

- Via local display (→ [99](#))
- Via "FieldCare" operating tool (→ [100](#))


12.7 Event logbook

12.7.1 Event history

A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

Navigation path

"Diagnostics" menu → Event logbook → Events list

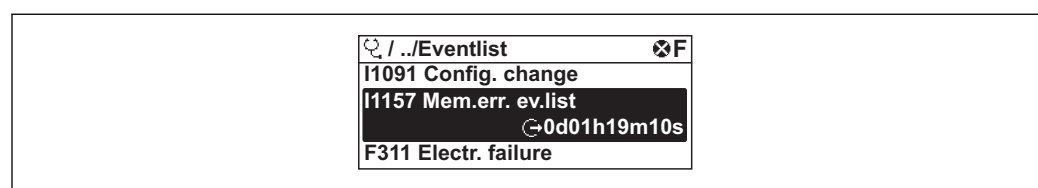



A0014006-EN




29 Illustrated using the example of the local display


A maximum of 20 event messages can be displayed in chronological order. If the advanced HistoROM function is enabled in the device (order option), up to 100 entries can be displayed.



The event history includes entries for:

- Diagnostic events (→  101)
- Information events (→  105)

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostics event
 - : Event has occurred
 - : Event has ended
- Information event
 - : Event has occurred

 To call up the measures to rectify a diagnostic event:

- Via local display (→  99)
- Via "FieldCare" operating tool (→  100)

 For filtering the displayed event messages (→  105)

12.7.2 Filtering the event logbook

Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Events list** submenu.

Navigation path

"Diagnostics" menu → Event logbook → Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

12.7.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Information event	Event text
I1000	——— (device ok)
I1079	Sensor changed
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	Trend data deleted
I1110	Write protection switch changed
I1137	Electronic changed
I1151	History reset
I1154	Reset terminal voltage min/max

I1155	Reset electronic temperature
I1156	Memory error trend
I1157	Memory error event list
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared
I1222	Zero point adjustment OK
I1227	Sensor emergency mode activated
I1228	Sensor emergency mode failed
I1256	Display: access status modified
I1327	Zero point adjust failed signal path
I1335	Firmware changed
I1397	Fieldbus: access status modified
I1398	CDI: access status modified


12.8 Resetting the measuring device

Using the **Device reset** parameter it is possible to reset the entire device configuration or some of the configuration to a defined state.

Navigation path

"Diagnostics" menu → Device reset → Device reset

Function scope of the "Device reset" parameter

Options	Description
Cancel	The user exists the parameter and no action is performed.
To factory defaults	Every parameter is reset to its factory setting.
To delivery settings	Every parameter for which a customized default setting was ordered is reset to that customized value; all other parameters are reset to their factory setting.  This option is not visible if no customized settings were ordered.
Restart device	Restarting the device resets every parameter whose data are saved in the volatile memory (RAM) to the parameter's factory setting (e.g. measured value data). The device configuration remains unchanged.

12.9 Device information

The **Device information** submenu contains all the parameters that display different information for identifying the device.

Navigation path

"Diagnostics" menu → Device information

Structure of the submenu

Device information

 →

Device tag

 (→ ⓘ 75)

Serial number

Firmware version

Device name

Order code

Extended order code 1

Extended order code 2

Extended order code 3

ENP version

Device revision


Device ID

Device type

Manufacturer ID

Parameter overview with brief description





Parameter	Prerequisite	Description	Display
Serial number	-	Displays the serial number of the measuring device. The number can be found on the nameplate of the sensor and transmitter.	Max. 11-digit character string comprising letters and numbers
Firmware version	-	Displays the device firmware version installed.	Character string in the format xx.yy.zz
Device name	-	Displays the name of the transmitter. The name can be found on the nameplate of the transmitter.	Pros. Flow B 200
Order code	-	Displays the device order code. The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.	Character string composed of letters, numbers and certain punctuation marks

Extended order code 1-3	Depending on the length of the extended order code, the code is divided into a maximum of 3 parameters.	Displays the 1st, 2nd or 3rd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string
ENP version	-	Displays the version of the electronic nameplate.	Character string in the format xx.yy.zz
Device revision	-	Displays the device revision with which the device is registered with the HART Communication Foundation.	2-digit hexadecimal number
Device ID	-	Displays the device ID for identifying the device in a HART network.	6-digit hexadecimal number
Device type	-	Displays the device type with which the measuring device is registered with the HART Communication Foundation.	0x5A
Manufacturer ID	-	Displays the manufacturer ID with which the measuring device is registered with the HART Communication Foundation.	0x11 (for Endress+Hauser)

12.10 Firmware history

Release date	Firmware version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
12.2011	01.00.zz	Option 78	Original firmware	Operating Instructions	BA01031D/06/EN/01.11 BA01031D/06/EN/01.11
				Description Device Parameters	GP01012D/06/EN/01.11 GP01012D/06/EN/01.11

Release date	Firmware version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
11.2012	01.01.zz	Option 76	<ul style="list-style-type: none"> ■ Local display with backlighting. ■ Integrated additional operating languages: Russian, Swedish ■ New options for order code for "Output": <ul style="list-style-type: none"> – 4-20 mA HART – 4-20 mA HART, pulse/frequency/switch output ■ New wizard: Pulse/frequency/switch output ■ Extension for Medium selection: In the Pressure compensation parameter, the "External gauge pressure" option has been added to the list of options available for selection. ■ Extension for HART input: New "Failure mode" parameter. ■ Additional measured variable: Mass flow 	Operating Instructions Description Device Parameters	See title page GP01012D/06/EN/01.12 GP01012D/06/EN/01.12

-  Flashing the firmware to the current version or to the previous version is possible via the service interface (CDI) (→  128).
-  For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.
-  The manufacturer's information is available:
 - In the Download Area of the Endress+Hauser Internet site: www.endress.com → Download
 - Specify the following details:
 - Product root: e.g. 9B2B
 - Text search: Manufacturer's information
 - Search range: documentation

13 Repair

13.1 General notes

Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by correspondingly trained customers.
- Certified devices can be converted into other certified devices by Endress+Hauser Service or at the factory only.


Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:

- Use only original Endress+Hauser spare parts.
- Carry out the repair according to the Installation Instructions.
- Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- Document every repair and each conversion and enter them into the *W@M* life cycle management database.



13.2 Spare parts

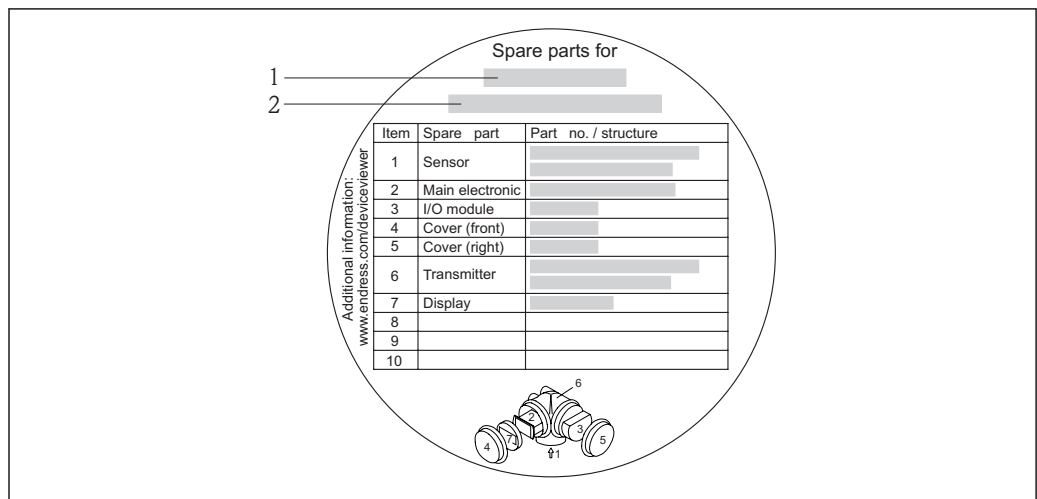- Some interchangeable measuring device components are listed on an overview sign in the connection compartment cover.
- This sign with an overview of the spare parts is located in the connection compartment cover of the device and contains the following information:
 - A list of the most important spare parts for the measuring device, including their ordering information.
 - The URL for the *W@M Device Viewer* (www.endress.com/deviceviewer):
All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.



30 Example for "Spare part overview sign" in connection compartment cover

- 1 Measuring device name
- 2 Measuring device serial number

-  Measuring device serial number:
- Is located on the device nameplate and the spare part overview sign.
 - Can be read out via the **Serial number** parameter in the **Device information** submenu (→  106).

13.3 Endress+Hauser services

-  Contact your Endress+Hauser Sales Center for information on services and spare parts.

14 Maintenance

14.1 Maintenance tasks


No special maintenance work is required.


14.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

14.2 Measuring and test equipment


Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.

 Your Endress+Hauser Sales Center can provide detailed information on the services.

 For a list of some of the measuring and test equipment, refer to the "Accessories" chapter of the "Technical Information" document for the device.

14.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

 Your Endress+Hauser Sales Center can provide detailed information on the services.

15 Return

The measuring device must be returned if repairs or a factory calibration are required, or if the wrong measuring device has been ordered or delivered. According to legal regulations, Endress+Hauser, as an ISO-certified company, is required to follow certain procedures when handling returned products that are in contact with medium.

To ensure swift, safe and professional device returns, please read the return procedures and conditions on the Endress+Hauser website at www.services.endress.com/return-material

16 Disposal

16.1 Removing the measuring device

1. Switch off the device.
2. **WARNING!** Danger to persons from process conditions. Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive fluids. Carry out the mounting and connection steps from the chapters "Mounting the measuring device" and "Connecting the measuring device" in the logically reverse sequence. Observe the safety instructions.

16.2 Disposing of the measuring device

⚠ WARNING

Danger to personnel and environment from fluids that are hazardous to health.

- ▶ Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:

- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.

17 Technical data


17.1 Application

The measuring device is suitable for flow measurement of gases only.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are adequately resistant.

17.2 Function and system design

Measuring principle	Prosonic Flow uses a measurement method based on the time of flight difference.
Measuring system	The device consists of a transmitter and a sensor. One device version is available: compact version, transmitter and sensor form a mechanical unit. For information on the structure of the device (→  10)

17.3 Input

Measured variable	<p>Direct measured variables</p> <p>Volume flow</p> <p>Calculated measured variables</p> <ul style="list-style-type: none"> ■ Corrected volume flow ■ Mass flow <p>Optional measured variables (can be ordered)</p> <p><i>Order code for "Sensor version", option 2 "Volume flow + Biogas analysis"</i></p> <ul style="list-style-type: none"> ■ Corrected methane volume flow ■ Energy flow ■ Methane fraction ■ Gross calorific value ■ Wobbe index ■ Temperature
-------------------	--


Measuring range	<i>Standard (Order code for "Calibration Flow", option 1 "Operable flow range 30 : 1")</i>					
	Nominal diameter		Velocity		Effective volume flow	
	[mm]	[in]	[m/s]	[ft/s]	[m ³ /h]	[ft ³ /h]
	50	2	1 to 30	3.28 to 98.4	9 to 269	316 to 9495
	80	3	1 to 30	3.28 to 98.4	20 to 611	720 to 21592
	100	4	1 to 30	3.28 to 98.4	34 to 1032	1215 to 36443
	150	6	1 to 30	3.28 to 98.4	76 to 2290	2695 to 80862
	200	8	1 to 30	3.28 to 98.4	131 to 3925	4620 to 138596

Optional (Order code for "Calibration Flow", option 2 "Operable flow range 100 : 1")

Nominal diameter		Velocity		Effective volume flow	
[mm]	[in]	[m/s]	[ft/s]	[m ³ /h]	[ft ³ /h]
50	2	0.3 to 30	0.98 to 98.4	3 to 269	95 to 9495
80	3	0.3 to 30	0.98 to 98.4	6 to 611	215 to 21 592
100	4	0.3 to 30	0.98 to 98.4	11 to 1 032	363 to 36 443
150	6	0.3 to 30	0.98 to 98.4	25 to 2 290	805 to 80 862
200	8	0.3 to 30	0.98 to 98.4	43 to 3 925	1 365 to 138 596

The values in the table should only be regarded as reference values.

Recommended measuring range

"Flow limit" section (→  124)

Operable flow range

- 30 : 1 (standard; order code for "Calibration Flow", option 1 "Operable flow range 30 : 1")
- 100 : 1 (optional; order code for "Calibration Flow", option 2 "Operable flow range 100 : 1")

Flow rates above the preset full scale value do not overload the amplifier so the totalized values are registered correctly.

Input signal

HART protocol

To increase the accuracy of certain measured variables, a measured pressure value can be used instead of a fixed process pressure. For this purpose, the measuring device continuously reads in the process pressure from a pressure transmitter (e.g. Cerabar M or Cerabar S) via the HART protocol.

The pressure transmitter must support the following protocol-specific functions:

- HART protocol
- Burst mode
- Endress+Hauser recommends the use of an absolute pressure transmitter

External pressure compensation is recommended to calculate the following measured variables:

- Corrected volume flow
- Corrected methane volume flow
- Mass flow
- Energy flow

17.4 Output


Output signal

Current output

Current output 1	4-20 mA HART (passive)
Current output 2	4-20 mA (passive)
Resolution	< 1 µA

Damping	Adjustable: 0.07 to 999 s
Assignable measured variables	<ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Corrected methane volume flow ■ Mass flow ■ Energy flow ■ Methane fraction ■ Gross calorific value ■ Wobbe index ■ Temperature

Pulse/frequency/switch output

Function	Can be set to pulse, frequency or switch output
Version	Passive, open collector
Maximum input values	<ul style="list-style-type: none"> ■ DC 35 V ■ 50 mA  For information on the Ex connection values
Voltage drop	<ul style="list-style-type: none"> ■ For ≤ 2 mA: 2 V ■ For 10 mA: 8 V
Residual current	≤ 0.05 mA
Pulse output	
Pulse width	Adjustable: 5 to 2000 ms
Maximum pulse rate	100 Impulse/s
Pulse value	Adjustable
Assignable measured variables	<ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Corrected methane volume flow ■ Mass flow ■ Energy flow
Frequency output	
Output frequency	Adjustable: 0 to 1000 Hz
Damping	Adjustable: 0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	<ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Corrected methane volume flow ■ Mass flow ■ Energy flow ■ Methane fraction ■ Gross calorific value ■ Wobbe index ■ Temperature
Switch output	
Switching behavior	Binary, conductive or non-conductive
Switching delay	Adjustable: 0 to 100 s

Number of switching cycles	Unlimited
Assignable functions	<ul style="list-style-type: none"> ■ Off ■ On ■ Diagnostic behavior ■ Limit value <ul style="list-style-type: none"> – Volume flow – Corrected volume flow – Corrected methane volume flow – Mass flow – Energy flow – Methane fraction – Gross calorific value – Wobbe index – Temperature – Totalizer 1 to 3 ■ Flow direction monitoring ■ Status <ul style="list-style-type: none"> Low flow cut off

Signal on alarm

Depending on the interface, failure information is displayed as follows:

Current output

4-20 mA

Failure mode	Selectable (as per NAMUR recommendation NE 43): <ul style="list-style-type: none"> ■ Minimum value: 3.6 mA ■ Maximum value: 22 mA ■ Defined value: 3.59 to 22.5 mA ■ Actual value ■ Last valid value
---------------------	---

HART

Device diagnostics	Device condition can be read out via HART Command 48
---------------------------	--

Pulse/frequency/switch output

Pulse output	
Failure mode	Choose from: <ul style="list-style-type: none"> ■ Actual value ■ No pulses
Frequency output	
Failure mode	Choose from: <ul style="list-style-type: none"> ■ Actual value ■ Defined value: 0 to 1250 Hz ■ 0 Hz
Switch output	
Failure mode	Choose from: <ul style="list-style-type: none"> ■ Current status ■ Open ■ Closed

Local display

Plain text display	With information on cause and remedial measures
Backlight	Additionally for device version with SD03 local display: red lighting indicates a device error.

 Status signal as per NAMUR recommendation NE 107

Operating tool

- Via digital communication:
HART protocol
- Via service interface

Plain text display	With information on cause and remedial measures
---------------------------	---



Load (→  23)

Low flow cut off The switch points for low flow cut off are user-selectable.

Galvanic isolation All outputs are galvanically isolated from one another.

Protocol-specific data

HART


- For information on the device description files (→  48)
- For information on the dynamic variables and measured variables (HART device variables) (→  48)

17.5 Power supply

Terminal assignment

Transmitter

4-20 mA HART connection version with additional outputs

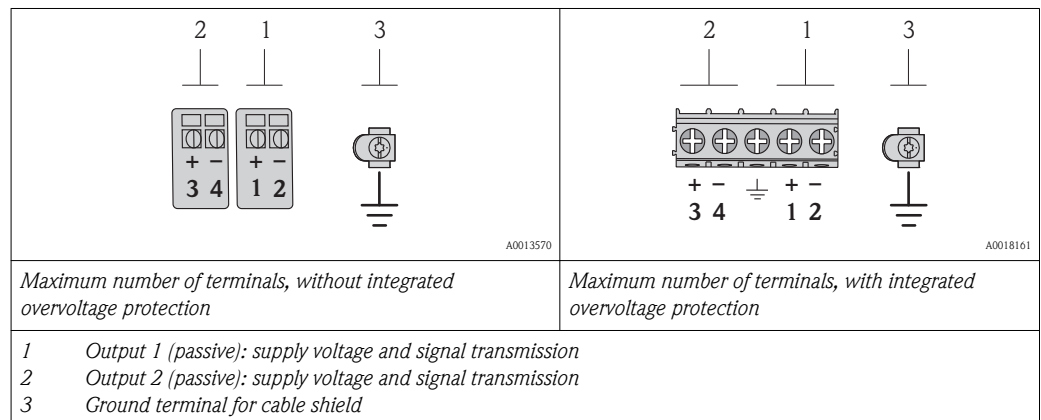


Order code for "Output"	Terminal numbers			
	Output 1		Output 2	
	1 (+)	2 (-)	3 (+)	4 (-)
Option A	4-20 mA HART (passive)		-	
Option B ¹⁾	4-20 mA HART (passive)		Pulse/frequency/switch output (passive)	
Option C ¹⁾	4-20 mA HART (passive)		4-20 mA (passive)	

1) Output 1 must always be used; output 2 is optional.

Supply voltage

An external power supply is required for each output. The following supply voltage values apply for the 4-20 mA and 4-20 mA HART current output:

Order code for "Output"	Minimum terminal voltage	Maximum terminal voltage
<ul style="list-style-type: none"> ■ Option A ^{1), 2)}: 4-20 mA HART ■ Option B ^{1), 2)}: 4-20 mA HART, Pulse/frequency/switch output 	For 4 mA: ≥ DC 16 V For 20 mA: ≥ DC 12 V	DC 35 V
Option C ^{1), 2)} : 4-20 mA HART, 4-20 mA	For 4 mA: ≥ DC 16 V For 20 mA: ≥ DC 12 V	DC 30 V

- 1) External supply voltage of the power supply unit with load (→  23)
- 2) For device versions with local display SD03: The terminal voltage must be increased by DC 2 V if backlighting is used.

Power consumption



Transmitter

Order code for "Output"	Maximum power consumption
Option A: 4-20 mA HART	770 mW
Option B: 4-20 mA HART, Pulse/frequency/switch output	<ul style="list-style-type: none"> ■ Operation with output 1: 770 mW ■ Operation with output 1 and 2: 2 770 mW
Option C: 4-20 mA HART, 4-20 mA	<ul style="list-style-type: none"> ■ Operation with output 1: 660 mW ■ Operation with output 1 and 2: 1 320 mW

Current consumption

Current output

For every 4-20 mA or 4-20 mA HART current output: 3.6 to 22.5 mA

 If the option **Defined value** is selected in the **Failure mode** parameter (→  118): 3.59 to 22.5 mA

Power supply failure


- Totalizers stop at the last value measured.
- Configuration is retained in the device memory (HistoROM).
- Error messages (incl. total operated hours) are stored.

Electrical connection

(→  24)

Potential equalization

No special measures for potential equalization are required.

Terminals	<ul style="list-style-type: none"> ■ For device version without integrated overvoltage protection: plug-in spring terminals for wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG) ■ For device version with integrated overvoltage protection: screw terminals for wire cross-sections 0.2 to 2.5 mm² (24 to 14 AWG) 														
Cable entries	<ul style="list-style-type: none"> ■ Cable gland: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in) ■ Thread for cable entry: <ul style="list-style-type: none"> – NPT ½" – G ½" 														
Cable specification	<p>Permitted temperature range</p> <ul style="list-style-type: none"> ■ –40 °C (–40 °F)...≥ 80 °C (176 °F) ■ Minimum requirement: cable temperature range ≥ ambient temperature + 20 K <p>Signal cable</p> <p><i>Current output</i></p> <ul style="list-style-type: none"> ■ For 4-20 mA: standard installation cable is sufficient. ■ For 4-20 mA HART: Shielded cable recommended. Observe grounding concept of the plant. <p><i>Pulse/frequency/switch output</i></p> <p>Standard installation cable is sufficient.</p>														
Overvoltage protection	<p>The device can be ordered with integrated overvoltage protection for diverse approvals: Order code for "Accessory mounted", option NA "overvoltage protection"</p> <table border="1"> <tr> <td>Input voltage range</td> <td>Values correspond to supply voltage specifications (→ 23) ¹⁾</td> </tr> <tr> <td>Resistance per channel</td> <td>2 · 0.5 Ω max</td> </tr> <tr> <td>DC sparkover voltage</td> <td>400 to 700 V</td> </tr> <tr> <td>Trip surge voltage</td> <td>< 800 V</td> </tr> <tr> <td>Capacitance at 1 MHz</td> <td>< 1.5 pF</td> </tr> <tr> <td>Nominal discharge current (8/20 μs)</td> <td>10 kA</td> </tr> <tr> <td>Temperature range</td> <td>–40 to +85 °C (–40 to +185 °F)</td> </tr> </table> <p>1) The voltage is reduced by the amount of the internal resistance $I_{\min} \cdot R_i$</p> <p> Depending on the temperature class, restrictions apply to the ambient temperature for device versions with overvoltage protection .</p>	Input voltage range	Values correspond to supply voltage specifications (→ 23) ¹⁾	Resistance per channel	2 · 0.5 Ω max	DC sparkover voltage	400 to 700 V	Trip surge voltage	< 800 V	Capacitance at 1 MHz	< 1.5 pF	Nominal discharge current (8/20 μs)	10 kA	Temperature range	–40 to +85 °C (–40 to +185 °F)
Input voltage range	Values correspond to supply voltage specifications (→ 23) ¹⁾														
Resistance per channel	2 · 0.5 Ω max														
DC sparkover voltage	400 to 700 V														
Trip surge voltage	< 800 V														
Capacitance at 1 MHz	< 1.5 pF														
Nominal discharge current (8/20 μs)	10 kA														
Temperature range	–40 to +85 °C (–40 to +185 °F)														
Reference conditions	<ul style="list-style-type: none"> ■ Error limits following ISO/DIS 11631 ■ Calibration gas: air ■ Temperature regulated to 24 ± 0.5 °C (75.2 ± 0.9 °F) under atmospheric pressure ■ Humidity regulated to < 40 % RH ■ Accuracy based on accredited calibration rigs that are traced to ISO 17025. 														
Maximum measured error	In addition to the values indicated, the measured error at the current output is typically ±4 μA.														

o.r. = of reading; o.f.s. = of full scale value; abs. = absolute; $1 \text{ g/cm}^3 = 1 \text{ kg/l}$; T = medium temperature

Volume flow

<p>Standard Order code for "Calibration", option 1</p>	<ul style="list-style-type: none"> ■ $\pm 1.5 \%$ o.r. for 3 to 30 m/s (9.84 to 98.4 ft/s) ■ $\pm 3 \%$ o.r. for 1 to 3 m/s (3.28 to 9.84 ft/s)
<p>Optional Order code for "Calibration", option 2</p>	<ul style="list-style-type: none"> ■ $\pm 0.1 \%$ o.f.s. for 0.3 to 1 m/s (0.98 to 3.28 ft/s) ■ $\pm 1.5 \%$ o.r. for 1 to 30 m/s (3.28 to 98.4 ft/s)


Methane

$\pm 2 \%$ o.f.s. = $\pm 2 \%$ abs.

Temperature

$\pm 0.6 \text{ }^\circ\text{C} \pm 0.005 \cdot T \text{ }^\circ\text{C}$ ($\pm 0.9 \text{ }^\circ\text{F} \pm 0.005 \cdot (T - 32) \text{ }^\circ\text{F}$)

Example for max. measured error (volume flow)

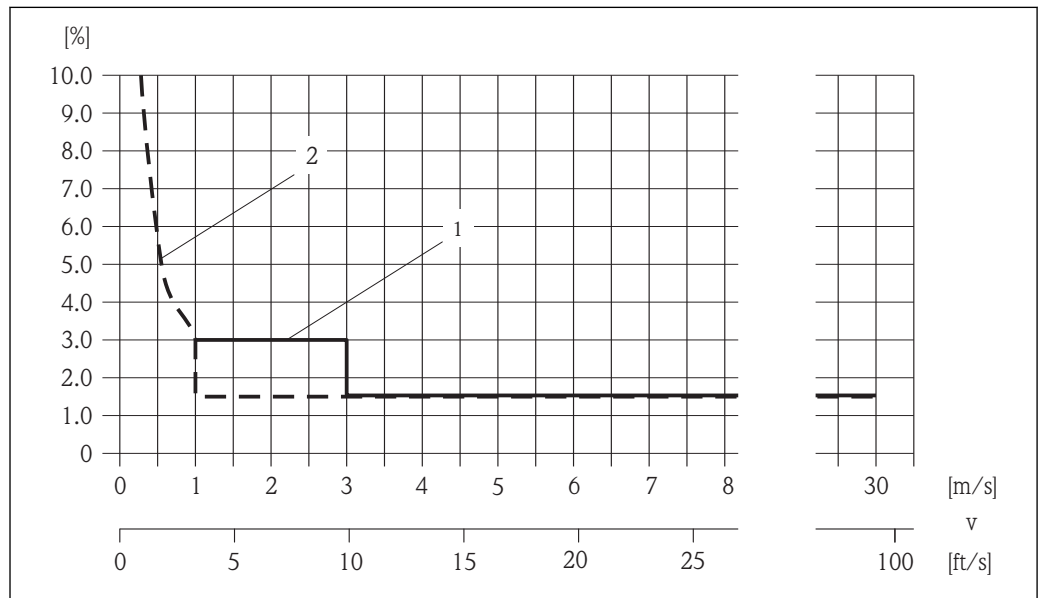

31 Example for max. measured error (volume flow) in % o.r.

- 1 Standard (order code for "Calibration", option 1)
- 2 Optional (order code for "Calibration", option 2)

Repeatability

o.r. = of reading; o.f.s. = of full scale value; abs. = absolute; $1 \text{ g/cm}^3 = 1 \text{ kg/l}$; T = medium temperature

Volume flow

$\pm 0.5 \%$ o.r.

Methane

$\pm 0.5 \%$ o.f.s. = $\pm 0.5 \%$ abs.

Temperature

$\pm 0.3 \text{ }^\circ\text{C} \pm 0.0025 \cdot T \text{ }^\circ\text{C}$ ($\pm 0.45 \text{ }^\circ\text{F} \pm 0.0025 \cdot (T - 32) \text{ }^\circ\text{F}$)

Response time

- The response time depends on the configuration (damping).
- Response time in the event of erratic changes in the flow: after 1 000 ms 95 % of the full scale value.

Influence of ambient temperature o.r. = of reading; o.f.s. = of full scale value

Current output

Additional error, in relation to the span of 16 mA:

Temperature coefficient at zero point (4 mA)	0.02 %/10 K, max. 0.35 % over the entire temperature range -40 to +60 °C (-40 to +140 °F)
Temperature coefficient with span (20 mA)	0.05 %/10 K, max. 0.5 % over the entire temperature range -40 to +60 °C (-40 to +140 °F)

Pulse/frequency output

Temperature coefficient	Max. ±100 ppm o.r.
--------------------------------	--------------------

17.7 Mounting

"Mounting requirements" (→  16)

17.8 Environment

Ambient temperature range	Transmitter	-40 to +60 °C (-40 to +140 °F)
	Local display	-20 to +60 °C (-4 to +140 °F), the readability of the display may be impaired at temperatures outside the temperature range.
	Sensor	<ul style="list-style-type: none"> ■ Flange material carbon steel: -10 to +60 °C (+14 to +140 °F) ■ Flange material stainless steel: -40 to +60 °C (-40 to +140 °F) ■ Version without flange: -40 to +60 °C (-40 to +140 °F)

- If operating outdoors:
Avoid direct sunlight, particularly in warm climatic regions.

Storage temperature -40 to +80 °C (-40 to +176 °F), preferably at +20 °C (+68 °F)

Degree of protection

Transmitter

- As standard: IP66/67, type 4X enclosure
- When housing is open: IP20, type 1 enclosure
- Display module: IP22, type 1 enclosure

Sensor
IP66/67, type 4X enclosure

Shock resistance In accordance with EN 60721-3-4




Vibration resistance Class 4M4, in accordance with EN 60721-3-4

Electromagnetic compatibility (EMC)


- As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)
- Complies with emission limits for industry as per EN 55011

 Details are provided in the Declaration of Conformity.

17.9 Process

Medium temperature range	Sensor 0 to +80 °C (+32 to +176 °F)
Pressure-temperature ratings	 An overview of the material load diagrams (pressure/temperature diagrams) for the process connections is provided in the "Technical Information" document.
Flow limit	Select the nominal diameter by optimizing between the required flow range and permissible pressure loss.  For an overview of the measuring range full scale values, see the "Measuring range" section (→  115) <ul style="list-style-type: none"> ■ The minimum recommended full scale value is approx. 1/20 of the maximum full scale value. ■ In most applications, 10 to 50 % of the maximum full scale value can be considered ideal.
Pressure loss	There is no pressure loss.
System pressure	Sensor Max. 10 bar (145 psi)
Thermal insulation	For optimum temperature and methane fraction measurement (order characteristic for "Sensor version", option 2 "Volume flow + Biogas analysis"), make sure that heat is neither lost nor applied to the sensor. Thermal insulation can ensure that such heat transfer does not take place. Thermal insulation is particularly recommended in situations where there is a large difference between the process temperature and the ambient temperature. This can result in heat convection errors during temperature measurement. A further factor which can lead to measurement errors due to heat convection is a low flow velocity.

17.10 Mechanical construction

Design, dimensions	 For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section																																		
Weight	<p>Weight in SI units</p> <p><i>Compact version</i></p> <p>All values (weight) refer to devices with EN (DIN) PN 10/16 flanges. Weight information in [kg].</p> <p><i>Order code for "Housing", option C "GT20 two-chamber, aluminum coated"</i></p> <table border="1"> <thead> <tr> <th rowspan="2">Nominal diameter [mm]</th> <th colspan="2">Lap joint flange</th> <th colspan="2">Lap joint flange, stamped plate</th> </tr> <tr> <th>1.4306</th> <th>S235JR</th> <th>1.4301</th> <th>S235JR</th> </tr> </thead> <tbody> <tr> <td>50</td> <td colspan="2">9.5</td> <td colspan="2">5.9</td> </tr> <tr> <td>80</td> <td colspan="2">11.8</td> <td colspan="2">7.5</td> </tr> <tr> <td>100</td> <td colspan="2">14.0</td> <td colspan="2">9.1</td> </tr> <tr> <td>150</td> <td colspan="2">20.9</td> <td colspan="2">12.3</td> </tr> <tr> <td>200</td> <td colspan="2">27.9</td> <td colspan="2">19.1</td> </tr> </tbody> </table>	Nominal diameter [mm]	Lap joint flange		Lap joint flange, stamped plate		1.4306	S235JR	1.4301	S235JR	50	9.5		5.9		80	11.8		7.5		100	14.0		9.1		150	20.9		12.3		200	27.9		19.1	
Nominal diameter [mm]	Lap joint flange		Lap joint flange, stamped plate																																
	1.4306	S235JR	1.4301	S235JR																															
50	9.5		5.9																																
80	11.8		7.5																																
100	14.0		9.1																																
150	20.9		12.3																																
200	27.9		19.1																																

Order code for "Housing", option S, "GT18 two-chamber, stainless steel"

Nominal diameter [mm]	Lap joint flange		Lap joint flange, stamped plate	
	1.4306	S235JR	1.4301	S235JR
50	12.4		8.7	
80	14.7		10.3	
100	16.9		12.0	
150	23.7		15.2	
200	30.7		22.0	

Weight in US units

Compact version

All values (weight) refer to devices with ASME B16.5, Class 150 flanges. Weight information in [lbs].

Order code for "Housing", option C "GT20 two-chamber, aluminum coated"

Nominal diameter [in]	Lap joint flange	
	316L	A105
2	18.8	
3	28.6	
4	38.0	
6	49.8	
8	77.4	

Order code for "Housing", option S "GT18 two-chamber, stainless steel"

Nominal diameter [in]	Lap joint flange	
	316L	A105
2	25.1	
3	34.9	
4	44.3	
6	56.1	
8	83.7	

Accessories

Replacement tool

Weight [kg]	Weight [lbs]
3.66	8.07

Flow conditioner

Weight in SI units

DN [mm]	Pressure rating	Weight [kg]
50	PN 10/16	0.5
	Class 150	0.5
80	PN 10/16	1.4
	Class 150	1.2
100	PN 10/16	2.4
	Class 150	2.7
150	PN 10/16	6.3
	Class 150	6.3
200	PN 10	11.5
	Class 150	12.3

Weight in US units

DN [in]	Pressure rating	Weight [lbs]
2	Class 150	1.1
3	Class 150	2.6
4	Class 150	6.0
6	Class 150	14.0
8	Class 150	27.0

Materials

Transmitter housing

- Order code for "Housing", option **C**: aluminum coating AlSi10Mg
- Order code for "Housing", option **S**: stainless steel 1.4404/316L
- Window material: glass

Cable entries

Order code for "Housing", option C "GT20 two-chamber, aluminum coated"

Transmitter cable entries		
Electrical connection	Type of protection	Material
Cable gland M20 × 1.5	<ul style="list-style-type: none"> ■ Non-Ex ■ Ex ia 	Plastic
Thread G ½" via adapter	For non-Ex and Ex (except for CSA Ex d/XP)	Nickel-plated brass
Thread NPT ½" via adapter	For non-Ex and Ex	

Transmitter neck cable entries		
Electrical connection	Measuring path	Material
Cable gland M20 × 1.5	Two-path	Nickel-plated brass
Cable gland M12 × 1.5	Single-path	

Sensor cable entries	
Electrical connection	Material
Cable gland M12 × 1.5	Nickel-plated brass

Order code for "Housing", option S, "GT18 two-chamber, stainless steel"

Transmitter cable entries		
Electrical connection	Type of protection	Material
Cable gland M20 × 1.5	<ul style="list-style-type: none"> ■ Non-Ex ■ Ex ia 	Stainless steel 1.4404
Thread G ½" via adapter	For non-Ex and Ex (except for CSA Ex d/XP)	Stainless steel 1.4404/316L
Thread NPT ½" via adapter	For non-Ex and Ex	

Transmitter neck cable entries		
Electrical connection	Sensor version	Material
Cable gland M20 × 1.5	Two-path	Stainless steel 1.4305
Cable gland M12 × 1.5	Single-path	

Sensor cable entries		
Electrical connection	Sensor version	Material
Cable gland M20 × 1.5	Two-path	Stainless steel 1.4305
Cable gland M12 × 1.5	Single-path	



Sensor housing

Stainless steel (cold worked):

- 1.4404/316L
- 1.4435/316L

Process connections

- Stainless steel:
 - 1.4301/304
 - 1.4306/304L
 - 1.4404/316L
- Steel S235JR
- Carbon steel A105

 List of all available process connections (→  128)

Seals

- Transducer: HNBR
- Temperature sensor: AFM 34

Accessories

Replacement tool

- Knurled handle: aluminum
- Isolation valve: nickel-plated brass
- Shaft: brass
- Tensioning element: tempered steel

Flow conditioner

Stainless steel 1.4404/316L (in compliance with NACE MR0175-2003 and MR0103-2003)

Weather protection cover

Stainless steel 1.4301

Process connections

Flanges:

- EN 1092-1 (DIN 2501)
- ASME B16.5



For information on the materials of the process connections (→ [127](#))







17.11 Operability

Local operation

Display elements

- 4-line display
- In the case of order code for "Display; Operation", option **E**: white background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured
- Permitted ambient temperature for the display: –20 to +60 °C (–4 to +140 °F)
The readability of the display may be impaired at temperatures outside the temperature range.

Operating elements

- In the case of order code "Display; Operation", Option **C**: local operation with 3 push buttons (, , )
- In the case of order code for "Display; Operation", option **E**: external operation via touch control; 3 optical keys: , , 
- Operating elements also accessible in various hazardous areas

Additional functionality

- Data backup function
The device configuration can be saved in the display module.
- Data comparison function
The device configuration saved in the display module can be compared to the current device configuration.
- Data transfer function
The transmitter configuration can be transmitted to another device using the display module.

Remote operation	<p>HART protocol</p> <p>Operation via:</p> <ul style="list-style-type: none"> ■ HART protocol ■ Operating tools via FXA191, FXA195 <ul style="list-style-type: none"> – FieldCare (→ 130) – AMS Device Manager – SIMATIC PDM ■ HART handheld terminals <ul style="list-style-type: none"> – Field Communicator 475 – Field Xpert SFX100 <p>Service interface (CDI)</p> <p>Operation of the measuring device with the service interface (CDI) via: "FieldCare" operating tool with COM DTM "CDI Communication FXA291" via Commubox FXA291</p>
------------------	---

Languages	<p>Can be operated in the following languages:</p> <ul style="list-style-type: none"> ■ Via local display: English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Bahasa (Indonesian), Vietnamese, Czech, Swedish ■ Via "FieldCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese
-----------	--


17.12 Certificates and approvals

CE mark	<p>The measuring system is in conformity with the statutory requirements of the applicable EC Directives. These are listed in the corresponding EC Declaration of Conformity along with the standards applied.</p> <p>Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.</p>
C-Tick symbol	<p>The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".</p>
Ex approval	<p>The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.</p>
Pressure Equipment Directive	<ul style="list-style-type: none"> ■ With the identification PED/G1/x (x = category) on the sensor nameplate, Endress+Hauser confirms conformity with the "Basic Safety Requirements" specified of Appendix I of the Pressure Equipment Directive 97/23/EC. ■ Devices not bearing this marking (PED) are designed and manufactured according to good engineering practice. They meet the requirements of Art.3 Section 3 of the Pressure Equipment Directive 97/23/EC. The range of application is indicated in tables 6 to 9 in Annex II of the Pressure Equipment Directive.


Other standards and guidelines

- EN 60529
Degrees of protection provided by enclosures (IP code)
- EN 61010-1
Protection Measures for Electrical Equipment for Measurement, Control, Regulation and Laboratory Procedures
- IEC/EN 61326
Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements)
- NAMUR NE 21
Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment
- NAMUR NE 32
Data retention in the event of a power failure in field and control instruments with microprocessors
- NAMUR NE 43
Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.
- NAMUR NE 53
Software of field devices and signal-processing devices with digital electronics
- NAMUR NE 80
The application of the pressure equipment directive to process control devices
- NAMUR NE 105
Specifications for integrating fieldbus devices in engineering tools for field devices
- NAMUR NE 107
Self-monitoring and diagnosis of field devices
- NAMUR NE 131
Requirements for field devices for standard applications

17.13 Application packages

 For an overview of the application packages that can be ordered, see the "Technical Information" document

17.14 Accessories

 For an overview of the accessories that can be ordered, see the "Technical Information" document

18 Appendix

18.1 Overview of the Operator/Maintenance operating menu

The following table provides an overview of the operating menu structure with the specific parameters for operators and maintenance staff. The page reference indicates where a description of the parameter can be found in the manual.

Language		(→ 50)
Display/operat.	→	(→ 69)
Language		(→ 50)
Access status display		(→ 42)
Locking status		(→ 85)
Display	→	(→ 69)
Operation	→	(→ 91)
Setup	→	(→ 51)
Medium selection	→	(→ 52)
HART input	→	(→ 53)
Current output 1	→	(→ 56)
Current output 2	→	(→ 56)
PFS output	→	(→ 59)
Display	→	(→ 69)
Output conditioning	→	(→ 72)
Low flow cut off	→	(→ 73)
Advanced setup	→	(→ 74)
Enter access code		(→ 42)
Device tag		(→ 75)
Define access code	→	(→ 84)
System units	→	(→ 75)
Totalizer 1	→	(→ 77)
Totalizer 2	→	(→ 77)
Totalizer 3	→	(→ 77)
Display	→	(→ 79)

	Configuration backup display	→	(→ 80)
Diagnostics		→	(→ 95)
	Actual diagnostics		(→ 104)
	Previous diagnostics		(→ 104)
	Operating time from restart		-
	Operating time		(→ 99)
	Diagnostic list	→	(→ 104)
	Event logbook	→	(→ 104)
	Filter options		(→ 105)
	Events list	→	(→ 105)
	Device information	→	(→ 97)
	Measured values	→	(→ 87)
	Process variables	→	(→ 87)
	System values	→	(→ 88)
	Totalizer	→	(→ 89)
	Output values	→	(→ 90)
	Data logging	→	(→ 92)
	Simulation	→	(→ 82)
	Device reset	→	(→ 106)

Index

A

- Access authorization to parameters
 - Read access 42
 - Write access 42
- Access code 42
 - Incorrect input 42
- Adapting the diagnostic behavior 101
- Ambient temperature
 - Influence 123
- Ambient temperature range 18, 123
- AMS Device Manager 46
 - Function 46
- Application 8, 115
- Application packages 130
- Applicator 115
- Approvals 129

C

- C-Tick symbol 129
- Cable entries
 - Technical data 121
- Cable entry
 - Degree of protection 26
- Cable specification 121
- CE mark 9, 129
- Certificates 129
- Check
 - Post-connection 27
 - Post-mounting 20
- Checklist
 - Post-connection check 27
 - Post-mounting check 20
- Cleaning
 - Exterior cleaning 112
- Commissioning 50
 - Advanced settings 74
 - Configuring the measuring device 51
- Communication-specific data 48
- Connecting cable 22
- Connecting the measuring device 24
- Connection
 - see Electrical connection
- Connection preparations 24
- Connection tools 22
- Context menu
 - Closing 37
 - Explanation 37
 - Opening 37
- Current consumption 120

D

- Declaration of Conformity 9
- Define access code 84
- Degree of protection 26, 123
- Design
 - Measuring device 10

- Designated use
 - 8
- Device components 10
- Device description files 48, 48
- Device documentation
 - Supplementary documentation 7
- Device name
 - Sensor 13
 - Transmitter 12
- Device repair 110
- Device revision 48
- Device type ID 48
- Diagnostic behavior
 - Explanation 98
 - Symbols 98
- Diagnostic information
 - Design, description 98
 - FieldCare 100
 - Local display 97
 - Overview 101
 - Remedial measures 101
- Diagnostic list 104
- Diagnostic message 97
- Diagnostics
 - Symbols 97
- DIP switch
 - see Write protection switch
- Direct access 39
- Direct access code 33
- Disabling write protection 84
- Display
 - see Local display
- Display area
 - For operational display 31
 - In the navigation view 34
- Display values
 - For device info 107
 - For output values 90
 - For process variables 87
 - For system values 88
 - For the totalizer 89
- Disposal 114
- Document
 - Function 5
 - Symbols used 5
- Document function 5

E

- Electrical connection
 - Commubox FXA195 44
 - Commubox FXA291 45
 - Degree of protection 26
 - Field Communicator 44
 - Handheld terminals 44
 - Measuring device 22
 - Operating tools 44

- Via HART protocol 44
 - Via service interface (CDI) 45
 - Electromagnetic compatibility 123
 - Enabling write protection 84
 - Endress+Hauser services
 - Maintenance 112
 - Repair 111
 - Error messages
 - see Diagnostic messages
 - Event history 104
 - Events list 104
 - Ex approval 129
 - Extended order code
 - Sensor 13
 - Transmitter 12
 - Exterior cleaning 112
- F**
- Field Communicator
 - Function 47
 - Field Communicator 475 47
 - Field of application
 - Residual risks 9
 - Field Xpert 45
 - Function 45
 - FieldCare 45
 - Device description file 48
 - Function 45
 - User interface 46
 - Filtering the event logbook 105
 - Firmware
 - Release date 48
 - Version 48
 - Firmware history 108
 - Flow direction 16, 19
 - Flow limit 124
 - Function check 50
 - Function scope
 - AMS Device Manager 46
 - Field Communicator 47
 - Field Communicator 475 47
 - Field Xpert 45
 - SIMATIC PDM 46
 - Functions
 - see Parameter
- G**
- Galvanic isolation 119
- H**
- Hardware write protection 85
 - HART input
 - Connection 26
 - Settings 53
 - HART protocol 129
 - Device variables 48
 - Measured variables 48
 - Revision 48
 - Help text
- Calling up 40
 - Close 40
 - Explanation 40
 - HistoROM 80
- I**
- I/O electronics module 10, 25
 - Identifying the measuring device 12
 - Incoming acceptance 11
 - Influence
 - Ambient temperature 123
 - Information on the document 5
 - Inlet runs 17
 - Input 115
 - Input mask 35
 - Inspection check
 - Received goods 11
 - Installation conditions
 - Inlet and outlet runs 17
 - Mounting location 16
 - Orientation 16
 - System pressure 18, 124
 - Thermal insulation 18, 124
 - Installation dimensions 18
- K**
- Keypad lock
 - Disabling 42
 - Enabling 42
- L**
- Languages, operation options 129
 - Line recorder 92
 - Load 23
 - Local display 128
 - Editing view 35
 - Navigation view 33
 - see Diagnostic message
 - see In alarm condition
 - see Operational display
 - Low flow cut off 119
- M**
- Main electronics module 10
 - Maintenance 112
 - Maintenance tasks 112
 - Managing the device configuration 80
 - Manufacturer ID 48
 - Manufacturing date 12, 13
 - Materials 126
 - Maximum measured error 121
 - Measured variables
 - Calculated 115
 - Direct 115
 - Optional 115
 - see Process variables
 - Measuring and test equipment 112
 - Measuring device
 - Configuration 51
 - Conversion 110

- Design 10
- Disposal 114
- Integrating via HART protocol 48
- Mounting the sensor 19
- Preparing for electrical connection 24
- Preparing for mounting 19
- Removing 114
- Repair 110
- Switching on 50
- Measuring principle 115
- Measuring range 115
- Measuring range, recommended 124
- Measuring system 115
- Media 8
- Menus
 - For measuring device configuration 51
 - For specific settings 74
- Mounting 16
- Mounting dimensions
 - see Installation dimensions
- Mounting location 16
- Mounting preparations 19
- Mounting requirements
 - Installation dimensions 18
- Mounting tools 19
- N**
- Nameplate
 - Sensor 13
 - Transmitter 12
- Navigation path (navigation view) 33
- Navigation view
 - In the submenu 33
 - In the wizard 33
- Numeric editor 35
- O**
- Operable flow range 116
- Operating elements 36, 98
- Operating keys
 - see Operating elements
- Operating menu
 - Menus, submenus 29
 - Structure 29
 - Submenus and user roles 30
- Operating menu overview
 - Operators and maintenance 131
- Operating philosophy 30
- Operation 87
- Operation options 28, 28
- Operational display 31
- Operational safety 9
- Order code 12, 12, 13
- Orientation (vertical, horizontal) 16
- Outlet runs 17
- Output 116
- Output signal 116
- P**
- Packaging disposal 15
- Parameter
 - Changing 41
 - Enter a value 41
- Parameter settings
 - For conf. backup disp. 81
 - For current output 57
 - For data logging 93
 - For local display 70, 79
 - For low flow cut off 73
 - For output conditioning 72
 - For selecting and setting the medium 52
 - For simulation 82
 - For switch output 67
 - For system units 76
 - For the frequency output 62
 - For the HART input 54
 - For the operation 91
 - For the pulse output 60
 - For the tag name 75
 - For the totalizer 77
- Performance characteristics 121
- Post-connection check (checklist) 27
- Post-installation check 50
- Post-mounting check (checklist) 20
- Potential equalization 120
- Power consumption 120
- Power supply failure 120
- Pressure Equipment Directive 129
- Pressure loss 124
- Pressure-temperature ratings 124
- Process connections 128
- Product safety 9
- Protecting parameter settings 84
- R**
- Read access 42
- Reading off measured values 87
- Recalibration 112
- Reference conditions 121
- Registered trademarks 10
- Remedial measures
 - Calling up 99
 - Closing 99
- Remote operation 129
- Repair 110
 - Notes 110
- Repair of a device 110
- Repeatability 122
- Replacement
 - Device components 110
- Requirements for personnel 8
- Response time 122
- Returning devices 113
- S**
- Safety 8
- Sensor

- Medium temperature range 124
 - Mounting 19
 - System pressure 18, 124
 - Serial number 12, 13
 - Service interface (CDI) 129
 - Setting the operating language 50
 - Settings
 - Adapting the measuring device to the process conditions 91
 - Advanced display configurations 79
 - Current output 56
 - Device reset 106
 - Device tag 75
 - HART input 53
 - Local display 69
 - Low flow cut off 73
 - Managing the device configuration 80
 - Medium 52
 - Operating language 50
 - Output conditioning 72
 - Pulse/frequency/switch output 59
 - Resetting the totalizer 91
 - Simulation 82
 - System units 75
 - Totalizer 77
 - Totalizer reset 91
 - Shock resistance 123
 - Showing data logging 92
 - Signal on alarm 118
 - SIMATIC PDM 46
 - Function 46
 - Software release 48
 - Spare part 110
 - Spare parts 110
 - Standards and guidelines 130
 - Status area
 - For operational display 31
 - In the navigation view 33
 - Status signals 97
 - Storage conditions 14
 - Storage temperature 14
 - Structure
 - Operating menu 29
 - Submenu
 - Conf. backup disp. 81
 - Data logging 92
 - Define access code 84
 - Device information 107
 - Events list 104
 - Local display 79
 - Operation 91
 - Output values 90
 - Overview 30
 - Process variables 87
 - Simulation 82
 - System units 75
 - System values 88
 - Totalizer 77, 89
 - Supply unit
 - Requirements 23
 - Supply voltage 23, 120
 - Symbols
 - For communication 31
 - For correction 35
 - For diagnostic behavior 31
 - For locking 31
 - For measured variable 31
 - For measurement channel number 31
 - For menus 34
 - For parameters 34
 - For status signal 31
 - For submenu 34
 - For wizard 34
 - In the status area of the local display 31
 - In the text and numeric editor 35
 - System design
 - Measuring system 115
 - see Measuring device design
 - System integration 48
 - System pressure 18, 124
- T**
- Technical data, overview 115
 - Temperature range
 - Ambient temperature 18, 123
 - Ambient temperature range for display 128
 - Medium temperature 124
 - Storage temperature 14
 - Terminal assignment 23, 25, 119
 - Terminal voltage 23
 - Terminals 121
 - Text editor 35
 - Thermal insulation 18, 124
 - Tool tip
 - see Help text
 - Tools
 - Electrical connection 22
 - Installation 19
 - Transport 14
 - Transmitter
 - Connecting the signal cables 25
 - Turning the display module 20
 - Turning the housing 19
 - Transporting the measuring device 14
 - Troubleshooting
 - General 95
 - Turning the display module 20
 - Turning the electronics housing
 - see Turning the transmitter housing
 - Turning the transmitter housing 19
- U**
- Use of the measuring device
 - Borderline cases 8
 - Incorrect use 8
 - see Designated use
 - User roles 30

V

Version data for the device	48
Vibration resistance	123

W

W@M	110, 112
W@M Device Viewer	12, 110
Weight	
Flow conditioner	126
Replacement tool	125
SI units	124
Transport (notes)	14
US units	125
Wizard	
Current output	56
Display	70
Frequency output	62
HART input	54
Low flow cut off	73
Medium selection	52
Output conditioning	72
Pulse output	60
Switch output	65
Workplace safety	9
Write access	42
Write protection	
Via access code	84
Via write protection switch	85
Write protection switch	85

Declaration of Hazardous Material and De-Contamination *Erklärung zur Kontamination und Reinigung*

RA No.

Please reference the Return Authorization Number (RA#), obtained from Endress+Hauser, on all paperwork and mark the RA# clearly on the outside of the box. If this procedure is not followed, it may result in the refusal of the package at our facility.
Bitte geben Sie die von E+H mitgeteilte Rücklieferungsnummer (RA#) auf allen Lieferpapieren an und vermerken Sie diese auch außen auf der Verpackung. Nichtbeachtung dieser Anweisung führt zur Ablehnung ihrer Lieferung.

Because of legal regulations and for the safety of our employees and operating equipment, we need the "Declaration of Hazardous Material and De-Contamination", with your signature, before your order can be handled. Please make absolutely sure to attach it to the outside of the packaging.

Aufgrund der gesetzlichen Vorschriften und zum Schutz unserer Mitarbeiter und Betriebseinrichtungen, benötigen wir die unterschriebene "Erklärung zur Kontamination und Reinigung", bevor Ihr Auftrag bearbeitet werden kann. Bringen Sie diese unbedingt außen an der Verpackung an.

Type of instrument / sensor

Geräte-/Sensortyp _____

Serial number

Seriennummer _____

Used as SIL device in a Safety Instrumented System / Einsatz als SIL Gerät in Schutzeinrichtungen

Process data / Prozessdaten

Temperature / Temperatur _____ [°F] _____ [°C]

Pressure / Druck _____ [psi] _____ [Pa]

Conductivity / Leitfähigkeit _____ [µS/cm]

Viscosity / Viskosität _____ [cp] _____ [mm²/s]

Medium and warnings

Warnhinweise zum Medium



	Medium / concentration <i>Medium / Konzentration</i>	Identification CAS No.	flammable <i>entzündlich</i>	toxic <i>giftig</i>	corrosive <i>ätzend</i>	harmful/ irritant <i>gesundheitsschädlich/ reizend</i>	other * <i>sonstiges*</i>	harmless <i>unbedenklich</i>
Process medium <i>Medium im Prozess</i>								
Medium for process cleaning <i>Medium zur Prozessreinigung</i>								
Returned part cleaned with <i>Medium zur Endreinigung</i>								

* explosive; oxidizing; dangerous for the environment; biological risk; radioaktiv

* *explosiv; brandfördernd; umweltgefährlich; biogefährlich; radioaktiv*

Please tick should one of the above be applicable, include safety data sheet and, if necessary, special handling instructions.

Zutreffendes ankreuzen; trifft einer der Warnhinweise zu, Sicherheitsdatenblatt und ggf. spezielle Handhabungsvorschriften beilegen.

Description of failure / Fehlerbeschreibung _____

Company data / Angaben zum Absender

Company / Firma _____	Phone number of contact person / Telefon-Nr. Ansprechpartner: _____
Address / Adresse _____	Fax / E-Mail _____
Your order No. / Ihre Auftragsnr. _____	

"We hereby certify that this declaration is filled out truthfully and completely to the best of our knowledge. We further certify that the returned parts have been carefully cleaned. To the best of our knowledge they are free of any residues in dangerous quantities."

"Wir bestätigen, die vorliegende Erklärung nach unserem besten Wissen wahrheitsgetreu und vollständig ausgefüllt zu haben. Wir bestätigen weiter, dass die zurückgesandten Teile sorgfältig gereinigt wurden und nach unserem besten Wissen frei von Rückständen in gefahrbringender Menge sind."

(place, date / Ort, Datum)

Name, dept./Abt. (please print / bitte Druckschrift)

Signature / Unterschrift

www.endress.com/worldwide

Endress+Hauser 

People for Process Automation
