

Important Notice

CAUTION

Electrical shock could cause death or serious injury. If the sensor is installed in a high voltage environment and a fault or installation error occurs, high voltage may be present on the connection terminals or the probe itself.

Safe and secure operation of the temperature sensor can only be guaranteed if the operating instructions of the used transmitters and all included safety notes are read, understood and followed. For Endress+Hauser temperature transmitters see enclosed CD-ROM.

Correct use


The manufacturer cannot be held responsible for damage caused by misuse of the unit. The installation conditions and connection values indicated in the operating instructions must be followed!

Installation Guidelines and Safety instructions

1. Install the unit according to the relevant NEC Code and local regulations.
2. Avoid any spark due to impact, friction and installation. Anti-sparking wrenches should be utilized.
3. The temperature sensor should be connected to the power supply or other external circuit using the appropriate cable glands and wire entries.
4. For ambient temperature higher than 158 °F, suitable cables, conduit and conductors must be used. Only use approved wire entries.
5. When utilized in dust atmospheres, the connection between the housing, fittings and thermowell should provide a minimum degree of Ingress Protection. Liquid/gas sealants should be used. Local regulations need to be respected.

CAUTION

Do not disconnect equipment unless power has been switched off or the area is not hazardous.

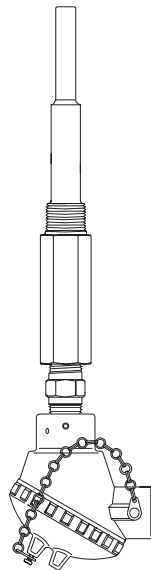

Measuring System
The thermocouple assembly provided with thermowells and connection head for heavy industries process applications. They are made up of a MgO insulated thermocouple as a measurement probe and a thermowell made of bar-stock material. The thermocouple sensor complies with the ASTM E-230 and IEC60584 specifications. The sensor is designed to ensure highest accuracy and long term stability.

Compact Instructions in Thermowell TH53

The accessories for pipe connections and the appropriate gaskets and sealing rings are not supplied with the sensors. These are the customer's responsibility. Depending on temperature and pressure operating conditions, the gaskets, the sealing and the applicable torques must be selected by the user. For further information regarding connections, please refer to the corresponding Standards.

Installation and operation

The unit is constructed using the most up to date production equipment and complies with the safety requirements of the local guidelines. However, if it is installed incorrectly or misused, certain application dangers can occur. Installation, wiring and maintenance of the unit must only be completed by trained, skilled personnel who are authorized to do so by the plant operator. The plant operator must make sure that the measurement system has been correctly wired to the connection schematics. Procedures indicated in these instructions must be followed.

Returns

Please follow the Return Authorization Policy which is attached with this manual.

Safety pictograms and symbols



Notes draw attention to activities or procedures that can have a direct influence on operation or trigger an unforeseen device reaction if they are not carried out properly.

CAUTION

Cautions draw attention to activities or procedures that can lead to persons being seriously injured, to safety risks or to the destruction of the device if they are not carried out properly.

Though the information provided herein is believed to be accurate, be advised that the information contained herein is NOT a guarantee of satisfactory results. Specifically, this information is neither a warranty nor guarantee, expressed or implied, regarding performance; merchantability, fitness, or other matter with respect to the products; and recommendation for the use of the product/process information in conflict with any patent. Please note that Endress+Hauser reserves the right to change and/or improve the product design and specifications without notice.

All important Temperature Operating Instructions, particularly with regard to head and field transmitters are available on CD-ROM, find enclosed or order by order number: **SONDPT-AG**

Supplementary documentation

Insulation resistance = 1,000 MΩ at 77 °F (25 °C). Insulation resistance for MgO insulated TC with ungrounded hot junction between terminals and probe sheath, test voltage 500 V DC. Value applies also between each TC wire at single and duplex construction with ungrounded hot junction.

| Type | Temperature range | | Standard Tolerance in % and °C* (whichever is greater) | |
|------|-------------------|------------|--|------------------|
| | °F | °C | IEC class 1 | IEC class 2 |
| E | 0 to 870 | 32 to 1600 | ± 1.0 or ± 0.4% | ± 1.7 or ± 0.5% |
| J | 0 to 760 | 32 to 1400 | ± 1.1 or ± 0.4% | ± 2.2 or ± 0.75% |
| K | 0 to 1260 | 32 to 2300 | ± 1.1 or ± 0.4% | ± 2.2 or ± 0.75% |
| T | 0 to 370 | 32 to 700 | ± 0.5 or ± 0.4% | ± 1.0 or ± 0.75% |
| N | 0 to 1260 | 32 to 2300 | ± 1.1 or ± 0.4% | ± 2.2 or ± 0.4% |

* For measurement errors in °F, calculate using equation above in °C, then multiply the outcome by 1.8.

Performance Characteristics


Maximum measured error

| Material | Max. temp. rating | Application notes |
|-------------|-------------------|--|
| 316SS | 1700 °F (927 °C) | Superior corrosion resistance. Duplex version of type N is not available with 316SS sheath. |
| Inconel 600 | 2100 °F (1149 °C) | Excellent oxidation and corrosion resistance at high temperature. Not to be used in sulphurous atmospheres over 1000 °F (538 °C). Types T & J are not available with Inconel 600 sheath. |

(1) Max. working temperature under oxidizing conditions: reducing conditions reduce max. temp. to 1900 °F (1038 °C).

Installation

Installation locations

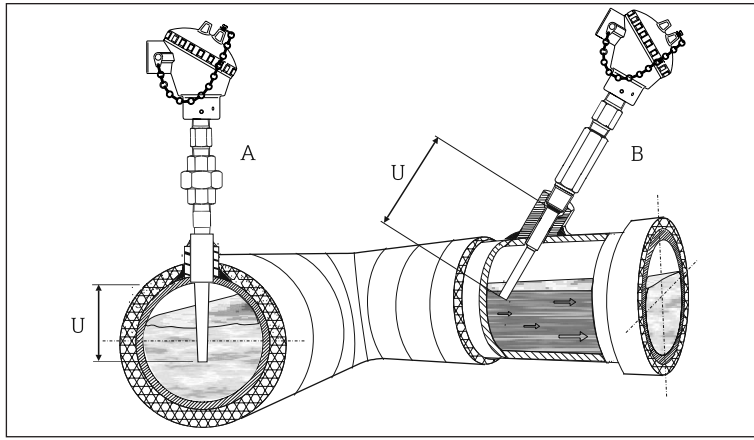

Examples of pipe installation. In pipes of a small section the axis line of the duct must be reached and if possible slightly exceeded by the tip of the probe (=U).


- A: Socket weld installation
- B: Threaded, tilted installation

For installation proceed as follows:

1. Attach thermowell to pipe (see A and B) or process container wall. Install and tighten the Thermowell before applying process pressure.
2. Make sure that the process fitting matches the maximum specified process pressure.
3. Seal the extension nipples with TFE tape before screwing the sensor into the thermowell.
4. Thermowells are used in measuring the temperature of a moving fluid in a conduit, where the stream exerts an appreciable force. The limiting value for the thermowells is governed by the temperature, the pressure and the speed of the medium, the immersion length, the materials of the thermowell and the medium, etc.
For operating conditions, a stress calculation should be carried out.

Dimensions

with spring loaded insert and self contained nipple.

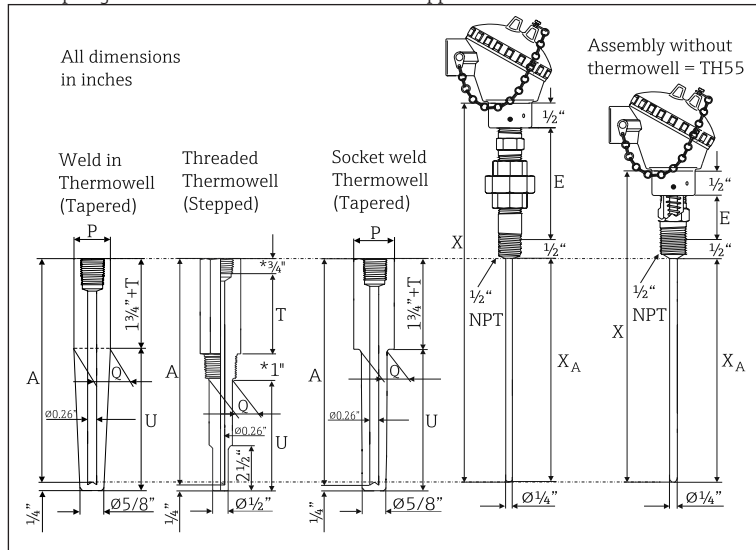

| | | | |
|---|---|--------------------|---|
| U | Thermowell Immersion length (see table) | T | Lag dimension (3" or specified length 1" to 6" in 1/2" increments) |
| E | Extension (see table before) | X _A = A | Immersion length RTD sensor, thermowell drilled depth, (A = U + 1 1/2" + T) |
| Q | Thermowell diameter | X | Insert overall length (X = A + E) |
| P | Pipe size (Nom. 3/4"; Dia. = 1.050" - Nom. 1"; Dia. = 1.315") | | |

*For wells with 1/2" NPT - 1" Process thread length and 3/4" Hex length dimensions are reversed.


For spare parts insert, TU121, please contact Endress+Hauser!

Recommended minimum immersion for thermowell:

| | | |
|---------------------|---------------------|---------------------|
| Stepped TW = 2 1/2" | Tapered TW = 4 1/2" | Weld in TW = 4 1/2" |
|---------------------|---------------------|---------------------|

Electrical connection-wiring diagrams

Head mounted transmitter (single/dual) Field mounted transmitter

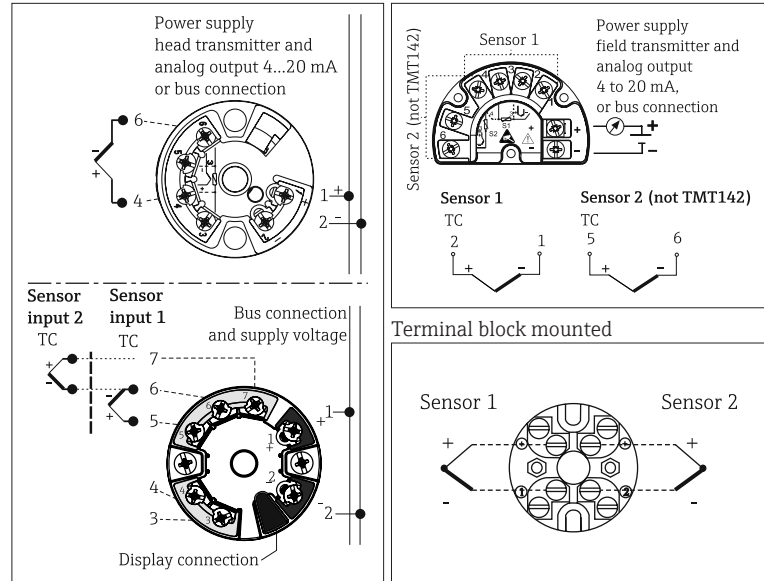

Wire specifications: Thermocouple grade, TFE insulated 20AWG, 7 strands with stripped ends

| |
|---|
| Flying leads, standard 3" for wiring in terminal head, head transmitter or terminal block mounted |
| Flying leads, 5 1/2" for wiring with field housing or field transmitter assembly |

The blocks and transmitters are shown as they will sit inside the heads in reference to the conduit opening. ALWAYS terminate leads to the outside screw!

| U | E (nom. dimension) | Process connection | Shape of Thermowell | øQ |
|--|--|--------------------|---|-----------------|
| 2 1/2", 4 1/2", 7 1/2", 10 1/2"; specified length 2" to 18" in 1/2" increments | Hex nipple = 1" or Nipple Union Nipple (NUN) = 4" Material: Steel or 316SS | 1/2" NPT | Stepped (Standard duty) Tapered (Heavy duty) | 5/8" 1 1/16" |
| | | 3/4" NPT | Stepped (Standard duty) Tapered (Heavy duty) | 3/4" 7/8" |
| | | 1" NPT | Stepped (Standard duty) Tapered (Heavy duty) | 7/8" 1 1/16" |
| | | 3/4" Socket weld | Stepped (Standard duty) Tapered (Heavy duty) | 3/4" 3/4" |
| 2 1/2", 4 1/2", 7 1/2", 10 1/2"; specified length 2" to 18" in 1/2" increments | Hex nipple = 1" or Nipple Union Nipple (NUN) = 4" Material: Steel or 316SS | 1" Socket weld | Stepped (Standard duty) Tapered (Heavy duty) | 7/8" 1" |
| | | 3/4" weld in | Tapered (Heavy duty) | 1.050" |
| | | 1" weld in | Tapered (Heavy duty) | 1.315" |

Technical data

| Upper temperature limits for various thermocouple types in °F (°C) | | | | | |
|--|-----------------|------------------|------------------|-------------------|--------|
| Sheath OD | Type T | Type J | Type E | Type K | Type N |
| ø3/4" | 700 °F (370 °C) | 1330 °F (720 °C) | 1510 °F (820 °C) | 2100 °F (1150 °C) | |

Thermocouple color codes as per ASTM E-230

Weight: From 1 to 10 lbs
Shock and vibration resistance: 4g/2 to 150 Hz as per IEC 60 068-2-6
Ambient temperature limits*

| Housing without head-mounted transmitter | |
|--|-------------------------------|
| Aluminium pressure die-cast housing | -40 to 300 °F (-40 to 150 °C) |
| Plastic housing | -40 to 185 °F (-40 to 85 °C) |
| Deep drawn SS housing without display | -40 to 300 °F (-40 to 150 °C) |
| Housing with head-mounted transmitter | |
| Deep drawn SS housing with display | -4 to 160 °F (-20 to 70 °C) |
| Field transmitter | |
| with display | -40 to 158 °F (-40 to 70 °C) |
| without display | -40 to 185 °F (-40 to 85 °C) |

*For hazardous areas refer to the transmitter control drawing