



**EN** Operating instructions. . . . . pages 1 to 6  
Translation of the original operating instructions

- |   |   |
|---|---|
| <b>CS</b> Aktuální verzi návodu k použití ve vašem jazyce naleznete na <a href="http://www.schmersal.net">www.schmersal.net</a>   | <b>DA</b> På <a href="http://www.schmersal.net">www.schmersal.net</a> findes aktuelle betjeningsvejledninger på EU's officielle sprog.  |
| <b>ES</b> Encontrará el manual de instrucciones actual en su idioma oficial de la UE en nuestra página de Internet <a href="http://www.schmersal.net">www.schmersal.net</a> .             | <b>FR</b> Vous trouverez la version actuelle du mode d'emploi dans votre langue nationale officielle sur l'Internet, <a href="http://www.schmersal.net">www.schmersal.net</a> . |
| <b>IT</b> Il manuale d'istruzioni aggiornato nella vostra lingua (lingua ufficiale UE) è scaricabile in Internet all'indirizzo <a href="http://www.schmersal.net">www.schmersal.net</a> . | <b>JP</b> 日本語の取扱説明書は、インターネット ( <a href="http://www.schmersal.net">www.schmersal.net</a> ) からダウンロード出来ます。   |
| <b>NL</b> U vindt de huidige versie van de gebruikshandleiding in uw officiële landstaal op het Internet, <a href="http://www.schmersal.net">www.schmersal.net</a> .                      | <b>PL</b> Tutaj znajdziesz aktualną wersję instrukcji obsługi w Twoim języku na stronie internetowej <a href="http://www.schmersal.net">www.schmersal.net</a> .                 |
| <b>PT</b> O manual de instruções actual, no seu idioma oficial da UE, encontra-se na nossa página de Internet <a href="http://www.schmersal.net">www.schmersal.net</a> .                  | <b>SV</b> På <a href="http://www.schmersal.net">www.schmersal.net</a> finner ni de aktuella versionerna av bruksanvisningen på EU's officiella språk.                           |

**Content**

**1 About this document**

1.1 Function . . . . . 1

1.2 Target group: authorised qualified personnel. . . . . 1

1.3 Explanation of the symbols used . . . . . 1

1.4 Appropriate use . . . . . 1

1.5 General safety instructions . . . . . 1

1.6 Warning about misuse . . . . . 2

1.7 Exclusion of liability . . . . . 2

**2 Product description**

2.1 Ordering code . . . . . 2

2.2 Special versions. . . . . 2

2.3 Destination and use . . . . . 2

2.4 Technical data . . . . . 2

2.5 Safety classification . . . . . 3

**3 Mounting**

3.1 General mounting instructions . . . . . 3

3.2 Dimensions . . . . . 3

**4 Electrical connection**

4.1 General information for electrical connection. . . . . 3

**5 Operating principle and settings**

5.1 LED functions. . . . . 3

5.2 Description of the terminals . . . . . 3

5.3 Setting report SRB 100DR. . . . . 4

**6 Set-up and maintenance**

6.1 Functional testing. . . . . 4

6.2 Maintenance . . . . . 4

**7 Disassembly and disposal**

7.1 Disassembly. . . . . 4

7.2 Disposal . . . . . 4

**8 Appendix**

8.1 Wiring example . . . . . 5

8.2 Start configuration . . . . . 5

8.3 Actuator configuration . . . . . 5

**9 Declaration of conformity**

9.1 EC Declaration of conformity . . . . . 6

**1. About this document**

**1.1 Function**

This operating instructions manual provides all the information you need for the mounting, set-up and commissioning to ensure the safe operation and disassembly of the safety-monitoring module. The operating instructions must be available in a legible condition and a complete version in the vicinity of the device.

**1.2 Target group: authorised qualified personnel**

All operations described in this operating instructions manual must be carried out by trained specialist personnel, authorised by the plant operator only.

Please make sure that you have read and understood these operating instructions and that you know all applicable legislations regarding occupational safety and accident prevention prior to installation and putting the component into operation.

The machine builder must carefully select the harmonised standards to be complied with as well as other technical specifications for the selection, mounting and integration of the components.

**1.3 Explanation of the symbols used**



**Information, hint, note:**

This symbol is used for identifying useful additional information.



**Caution:** Failure to comply with this warning notice could lead to failures or malfunctions.

**Warning:** Failure to comply with this warning notice could lead to physical injury and/or damage to the machine.

**1.4 Appropriate use**

The products described in these operating instructions are developed to execute safety-related functions as part of an entire plant or machine. It is the responsibility of the manufacturer of a machine or plant to ensure the correct functionality of the entire machinery or plant.

The safety-monitoring module must be exclusively used in accordance with the versions listed below or for the applications authorised by the manufacturer. Detailed information regarding the range of applications can be found in the chapter "Product description".



To avoid EMC disturbances, the physical ambient and operational conditions at the place where the product is installed, must meet the provisions laid down in the paragraph "Electromagnetic Compatibility (EMC)" of DIN EN 60204-1.

**1.5 General safety instructions**

The user must observe the safety instructions in this operating instructions manual, the country-specific installation standards as well as all prevailing safety regulations and accident prevention rules.



Further technical information can be found in the Schmersal catalogues or in the online catalogue on the Internet: [www.schmersal.net](http://www.schmersal.net).

The information contained in this operating instructions manual is provided without liability and is subject to technical modifications.



The entire concept of the control system, in which the safety component is integrated, must be validated to EN ISO 13849-2.

There are no residual risks, provided that the safety instructions as well as the instructions regarding mounting, commissioning, operation and maintenance are observed.

### 1.6 Warning about misuse



In case of inadequate or improper use or manipulations of the safety-monitoring module, personal hazards or damage to machinery or plant components cannot be excluded. The relevant requirements of the standards ISO 14119 and EN ISO 13850 must be observed.

### 1.7 Exclusion of liability

We shall accept no liability for damages and malfunctions resulting from defective mounting or failure to comply with this operating instructions manual. The manufacturer shall accept no liability for damages resulting from the use of unauthorised spare parts or accessories.

For safety reasons, invasive work on the device as well as arbitrary repairs, conversions and modifications to the device are strictly forbidden; the manufacturer shall accept no liability for damages resulting from such invasive work, arbitrary repairs, conversions and/or modifications to the device.

The safety-monitoring module must only be used when the enclosure is closed, i.e. with the front cover fitted.

## 2. Product description

### 2.1 Ordering code

This operating instructions manual applies to the following types:

#### SRB 100DR



The SRB 100DR is not an autonomous safety-monitoring module, but a "superimposed device", which generates a safe reset signal by means of a double acknowledgment (reset impulse approx. 100 ms). The start configuration of the downstream device must be realised in accordance with the datasheet of this device.



In this application, the reset buttons must be set up so that the operator has a good overview over the entire protected area.



Only if the information described in this operating instructions manual are realised correctly, the safety function and therefore the compliance with the Machinery Directive is maintained.

### 2.2 Special versions

For special versions, which are not listed in the order code below 2.1, these specifications apply accordingly, provided that they correspond to the standard version.

### 2.3 Destination and use

The safety-monitoring modules for integration in safety circuits are designed for fitting in control cabinets. They are used for the safe evaluation of the signals of two reset buttons, which are installed independent from each other in a plant and which must be successively actuated within a certain period of time (adjustable).

In this application, the reset buttons must be set up so that the operator has a good overview over the entire protected area.

The reset signal is safely transmitted to the reset input of a downstream safety-monitoring module (impulse approx. 100 ms).

The safety function is defined as the closing of the safety contact 13-14 (pulse approx. 100 ms) when reset button 1 and reset button 2 have been actuated within the preset monitoring time (3...30 sec possible by means of DIP switch). The safety-relevant current path with output contact 13-14 meets the following requirements under observation of a  $B_{10d}$  value assessment (also refer to "Requirements of DIN EN ISO 13849-1"):

- Control category 4 - PL e to DIN EN ISO 13849-1
- SIL 3 to DIN EN 61508-2
- SILCL 3 to DIN EN 62061 (meets the requirements of control category 4 to DIN EN 954-1)

To determine the Performance Level (PL) of the entire safety function (e.g. sensor, logic, actuator) to DIN EN ISO 13849-1, an analysis of all relevant components is required.

### 2.4 Technical data

#### General data:

Standards:	IEC/EN 60204-1, EN 60947-5-1; EN ISO 13849-1, IEC/EN 61508
Climate resistance:	EN 60068-2-78
Mounting:	Snaps onto standard DIN rail to EN 60715
Terminal designations:	EN 60947-1
Material of the housings:	Plastic, glass-fibre reinforced thermoplastic, ventilated
Material of the contacts:	AgNi, self-cleaning, positive drive
Weight:	250 g
Start conditions:	Automatic
Feedback circuit (Y/N):	No
Pull-in delay:	after 2nd acknowledgement typ. 50 ms
<b>Mechanical data:</b>	
Connection type:	Screw connection
Cable section:	min. 0.25 mm <sup>2</sup> / max. 2.5 mm <sup>2</sup>
Connecting cable:	rigid or flexible
Tightening torque for the terminals:	0.6 Nm
With removable terminals (Y/N):	yes
Mechanical life:	10 million operations
Electrical life:	Derating curve available on request
Resistance to shock:	10 g / 11 ms
Resistance to vibrations to EN 60068-2-6:	10 ... 55 Hz, amplitude 0.35 mm
<b>Ambient conditions:</b>	
Ambient temperature:	–25 °C ... +60 °C
Storage and transport temperature:	–40 °C ... +85 °C
Protection class:	Enclosure: IP40 Terminals: IP20 Clearance: IP54
Air clearances and creepage distances to IEC/EN 60664-1:	4 kV/2 (basic insulation)
EMC rating:	to EMC Directive

**Electrical data:**

Contact resistance in new state:	max. 100 mΩ
Power consumption:	max. 3.2 W / 6.0 VA
Rated operating voltage $U_e$ :	24 VDC –15% / +20%, residual ripple max. 10% 24 VAC –15% / +10%
Frequency range:	50 / 60 Hz
Fuse rating for the operating voltage:	Internal electronic trip, Tripping current > 500 mA, Reset after approx. 1 sec.

**Monitored inputs:**

Short-circuit recognition (Y/N):	No
Wire breakage detection (Y/N):	Yes
Earth leakage detection (Y/N):	Yes
Number of NO contacts:	2
Number of NC contacts:	0
Conduction resistance:	max. 40 Ω

**Outputs:**

Number of safety contacts:	1
Number of auxiliary contacts:	0
Number of signalling outputs:	0
Switching capacity of the safety contacts:	max. 250 V, 8 A ohmic (inductive in case of appropriate protective wiring)

Fuse rating of the safety contacts:	external ( $I_k = 1000$ A) to EN 60947-5-1 6 A gL, 8 A slow blow
-------------------------------------	--

Utilisation category to IEC/EN 60947-5-1:	AC-15: 230 V / 3 A, DC-13: 24 V / 2 A
---	--

Dimensions H x W x D:	100 mm x 22.5 mm x 121 mm
The data specified in this manual are applicable when the component is operated with rated operating voltage $U_e \pm 0\%$ .	

**2.5 Safety classification**

Standards:	EN ISO 13849-1, IEC 61508, EN 60947-5-1
PL:	up to e
Control category:	up to 4
PFH value:	$\leq 2.0 \times 10^{-8}/h$
SIL:	up to 3
Service life:	20 years

The PFH value of  $2.0 \times 10^{-8}/h$  applies to the combinations of contact load (current through enabling contacts) and number of switching cycles ( $n_{oply}$ ) mentioned in the table below. At 365 operating days per year and a 24-hours operation, this results in the below-mentioned switching cycle times ( $t_{cycle}$ ) for the relay contacts. Diverging applications upon request.

Contact load	$n_{oply}$	$t_{cycle}$
20 %	525,600	1.0 min
40 %	210,240	2.5 min
60 %	75,087	7.0 min
80 %	30,918	17.0 min
100 %	12,223	43.0 min

**3. Mounting**

**3.1 General mounting instructions**

Mounting: snaps onto standard DIN rails to EN 60715.

Snap the bottom of the enclosure slightly tilted forwards in the DIN rail and push up until it latches in position.

**3.2 Dimensions**

All measurements in mm.

Device dimensions (H/W/D): 100 x 22.5 x 121 mm  
with plugged-in terminals: 120 x 22.5 x 121 mm

**4. Electrical connection**

**4.1 General information for electrical connection**



As far as the electrical safety is concerned, the protection against unintentional contact of the connected and therefore electrically interconnected apparatus and the insulation of the feed cables must be designed for the highest voltage, which can occur in the device.



The electrical connection may only be carried out by authorised personnel in a de-energised condition.

**Wiring examples: see appendix**

**5. Operating principle and settings**

**5.1 LED functions**

- K1: Status reset 1
- K2: Status reset 2
- K3: Status reset impulse
- $U_B$ : Status operating voltage (LED is on, when the operating voltage on the terminals A1-A2 is ON)

**5.2 Description of the terminals**

Voltage	A1 A2	+24 VDC/24 VAC 0 VDC/24 VAC
Inputs	X1-X2 X3-X4	Input reset 1 Input reset 2
Outputs	13-14	Reset input of a downstream safety-monitoring module

**Opening the front cover (see Fig. 2)**

- To open the front cover, insert a slotted screwdriver in the top and bottom cover notch and gently lift it.
- When the front cover is open, the electrostatic discharge requirements must be respected and observed.
- After setting, the front cover must be fitted back in position.
- The set drop-out delay must be entered on the front cover.



Only touch the components after electrical discharge!

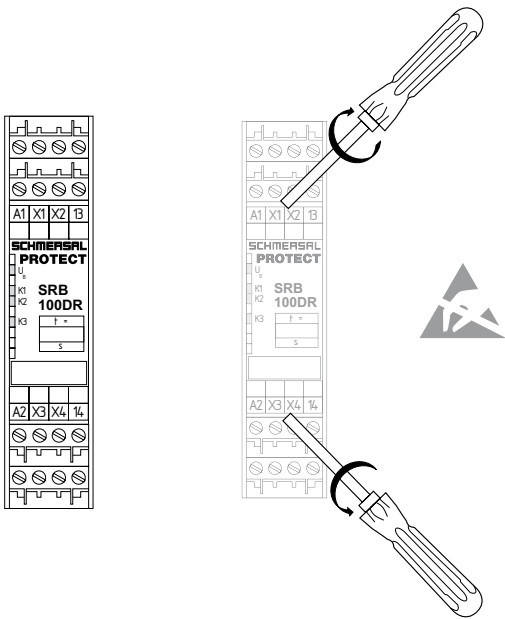


Fig. 1

Fig. 2

**Time setting**

DIP switch settings (see Fig. 3 and 4)

- The DIP switches are located underneath the front cover of the safety-monitoring module.
- Both DIP switches SW 1 (channel 1) and SW 2 (channel 2) must be set identically.
- Condition on delivery: 3.0 s

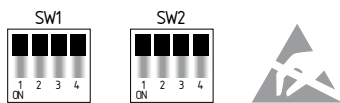


Fig. 3

DIP switch setting	Monitoring time	DIP switch setting	Monitoring time
	3.0 s		17.4 s
	4.8 s		19.2 s
	6.6 s		21.0 s
	8.4 s		22.8 s
	10.2 s		24.6 s
	12.0 s		26.4 s
	13.8 s		28.2 s
	15.6 s		30.0 s

Fig. 4 Tolerance of the monitoring time  $\pm 20\%$

**5.3 Setting report SRB 100DR**

This report regarding the setting of the device must be completed accordingly by the customer and enclosed in the technical manual of the machine.

The setting report must be available whenever a safety check is performed.

Company: \_\_\_\_\_

The safety-monitoring module is used in the following machine:

Machine n° \_\_\_\_\_ Machine type \_\_\_\_\_ Module n° \_\_\_\_\_

Set on monitoring time: \_\_\_\_\_

Set on (date) \_\_\_\_\_ Signature of the responsible person \_\_\_\_\_

**6. Set-up and maintenance**

**6.1 Functional testing**

The safety function of the safety-monitoring module must be tested.

The following conditions must be previously checked and met:

1. Correct fixing
2. Check the integrity of the cable entry and connections
3. Check the safety-monitoring module's enclosure for damage.
4. Check the electrical function of the connected sensors and their influence on the safety-monitoring module and the downstream actuators

**6.2 Maintenance**

A regular visual inspection and functional test, including the following steps, is recommended:

1. Check the correct fixing of the safety-monitoring module
2. Check the cable for damages
3. Check electrical function



The device has to be integrated into the periodic check-ups according to the Ordinance on Industrial Safety and Health, however at least 1 × year.

**Damaged or defective components must be replaced.**

**7. Disassembly and disposal**

**7.1 Disassembly**

The safety-monitoring module must be disassembled in a de-energised condition only. Push up the bottom of the enclosure and hang out slightly tilted forwards.

**7.2 Disposal**

The safety-monitoring module must be disposed of in an appropriate manner in accordance with the national prescriptions and legislations.

8. Appendix

8.1 Wiring example

- Start configuration: 2 time-dependent reset/on switches 1st and 2nd monitoring time between the 1st and 2nd reset button from 3 ... 30 seconds adjustable through DIP switches.
- Actuator configuration: single-channel control (output impulse approx. 100 ms) of the reset input of a downstream safety-monitoring module.
- Edge detection: After the device is reset, the trailing edge is evaluated, so that errors, e.g. welded contacts or manipulations cannot lead to dangerous situations.

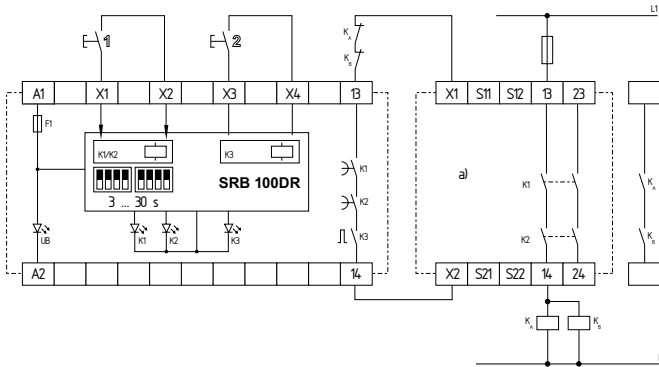


Fig. 3  
a) SRB, eg. SRB 301ST or SRB 211ST

8.2 Start configuration  
(see Fig. 4)

- The both reset buttons are wired to the terminals X1-X2 (1st reset button) and X3-X4 (2nd reset button).
- Both reset buttons must be actuated in sequence, i.e. first button 1, then button 2.
- An additional safety feature of the signal processing of the button signals is the edge detection, i.e. the trailing edge is evaluated after reset of the device, so that errors, e.g. welded contacts or manipulations, cannot lead to dangerous situations.

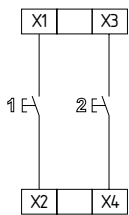


Fig. 4

8.3 Actuator configuration  
(see Fig. 5)

Integration of the SRB 100DR safety-monitoring module

- The reset button of the safety-monitoring module, which must be fitted for double acknowledgment, is replaced by the SRB 100DR safety-monitoring module. All safety-monitoring modules from the Schmersal Group can be connected to the SRB 100DR.
- **Note:** the SRB 100DR is not an autonomous safety-monitoring module, but a "superimposed device", which generates a safe reset signal by means of a double acknowledgment (reset impulse approx. 100 ms). The start configuration of the downstream device must be realised in accordance with the datasheet of this device.
- **Note:** In this application, the reset buttons must be set up so that the operator has a good overview over the entire hazardous area.



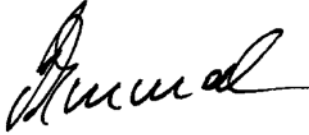


Fig. 5  
a) Safety-monitoring module, e.g. SRB 301ST or SRB 211ST

9. Declaration of conformity

9.1 EC Declaration of conformity

	
<h2>EC Declaration of conformity</h2>	
Translation of the original Declaration of Conformity	K.A. Schmersal GmbH & Co. KG Möddinghofe 30 42279 Wuppertal Germany www.schmersal.com
<p>We hereby certify that the hereafter described safety components both in its basic design and construction conform to the applicable European Directives.</p>	
<b>Name of the safety component:</b>	SRB 100DR
<b>Description of the safety component:</b>	Safety-monitoring module as a superimposed device, which generates a safe reset signal by means of a double acknowledgment. A downstream safety-monitoring module is required to ensure a safe operation.
<b>Relevant EC-Directives:</b>	2006/42/EC EC-Machinery Directive 2004/108/EC EMC-Directive
<b>Person authorized for the compilation of the technical documentation:</b>	Oliver Wacker Möddinghofe 30 42279 Wuppertal
<b>Notified body, which approved the full quality assurance system, referred to in Appendix X, 2006/42/EC:</b>	TÜV Rheinland Industrie Service GmbH Alboinstraße 56 12103 Berlin ID n°: 0035
<b>Place and date of issue:</b>	Wuppertal, November 5, 2014
SRB 100DR-C-EN	
	Authorised signature <b>Philip Schmersal</b> Managing Director

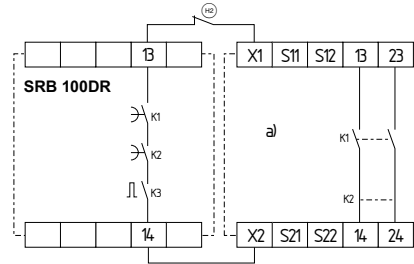

The currently valid declaration of conformity can be downloaded from the internet at [www.schmersal.net](http://www.schmersal.net).



**K. A. Schmersal GmbH & Co. KG**  
Möddinghofe 30, D - 42279 Wuppertal  
Postfach 24 02 63, D - 42232 Wuppertal

Phone: +49 - (0)2 02 - 64 74 - 0  
Telefax: +49 - (0)2 02 - 64 74 - 1 00  
E-Mail: [info@schmersal.com](mailto:info@schmersal.com)  
Internet: <http://www.schmersal.com>