ODSL 8

lunhun 20 ... 200mm 18 - 30 V DC

- Reflection-independent distance information
- Analog voltage output or current output (can be inverted, teachable)
- 2 teachable switching outputs (push-pull)
- M12 turning connector •

CDRH

IEC 60947

• Cable with M12 connector

Accessories: (available separately) Mounting systems

(K-D ...)

Control guard

· Easy alignment through visible red light

CE

IEC 60947




Optical laser distance sensors


В

С

S . റ

Dimensioned drawing

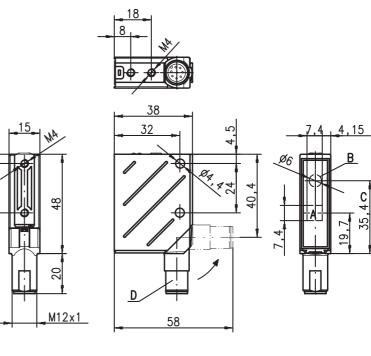

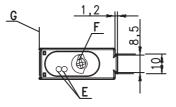


- Receiver Α
- В Transmitter
- Optical axis С
- D 90° turning connector
- Е
- LED yellow, green Operational control (rotary switch) F
- G Reference edge for the measurement (cover glass)

Electrical connection

ODSL 8/V66-200-S12

18-30V DC+	
GND	
o1 X	sw/BK
1−10V	
1-104	

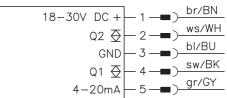

en 09-2014/05 50106534-02

ODSL 8

Tables 20 ... 200 mm 0.1 ... 0.2mm laser 650nm (visible red light) <1.2 mW 4ms Ø 1mm at 200mm see remarks Error limits (relative to measurement distance) ± 2% up to 200mm ± 1% up to 200mm ≤ 1.5% ≤ 0.2 %/°C 2 ... 7 ms ≤20ms < 300ms 18 ... 30VDC (incl. residual ripple) \leq 15% of U_B $\leq 50 \text{mA}$ 2 push-pull switching outputs pin 2: Q2, PNP light switching, NPN dark switching pin 4: Q1, PNP light switching, NPN dark switching \geq (U_B-2 V)/ \leq 2V voltage 1 ... 10V, $R_L \ge 2 kW$ / current 4 ... 20mA, $R_L < 500 \Omega$ ready fault, teach values were not applied no voltage object within teach-in measurement distance (output Q1 ⁵⁾)

teach values were not applied object outside teach-in measurement distance (output Q1 ⁴)

Mechanical data

Housing Optics cover Weight Connection type

Specifications

Measurement range ¹⁾ Resolution ²⁾

Laser warning notice

Absolute measurement accuracy

B/W detection thresh. (6 ... 90% rem.)

continuous light

flashing (no teach)

flashing (no teach)

Optical data

Light source

Wavelength Max. output power Pulse duration

Light spot

Repeatability

Timing

Temperature drift

Measurement time

Delay before start-up

Open-circuit current Switching output/function ⁴⁾

Signal voltage high/low Analog output

off

off

Yellow LED continuous light

Response time

Electrical data Operating voltage UB

Residual ripple

Indicators Green LED

Environmental data

Ambient temp. (operation/storage) Protective circuit ⁶ 7) VDE safety class ⁷ Protection class ⁸⁾ Laser class Standards applied

-40°C ... +50°C/-40°C ... +70°C 2, 3 II, all-insulated IP 67, IP 69K ⁹⁾ 2 (acc. to EN 60825-1) IEC 60947-5-2

70g M12 connector, 5-pin, turning


- 1) Luminosity coefficient 6% ... 90%, at 20°C, measurement object ≥ 20x20mm²
- 2) Minimum and maximum value depend on measurement distance and configuration of the analog output

metal

glass

- 3) Same object, identical environmental conditions, measurement object ≥ 20x20mm² The push-pull switching outputs must not be connected in parallel 4)
- 5)
- No display for output Q2 2=polarity reversal protection, 3=short-circuit protection for all outputs 6)
- 7) Rating voltage 250VAC
- 8 In stop position of the turning connector (turning connector locked)
- 9 IP 69K test acc. to DIN 40050 part 9 simulated, high pressure cleaning conditions without the use of additives, acids and bases are not part of the test

Characteristic curve of analog output:

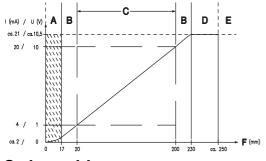

Order guide


With M12 connector	
and voltage output	
and current output	

Area not defined Α В

- Linearity not defined С Measurement range
- D Object present
- Е No object detected
- Measurement distance F

	Designation	Part no.
12 connector		
tage output	0DSL 8/V66-200-S12	50105761
rrent output	0DSL 8/C66-200-S12	50108362

Diagrams

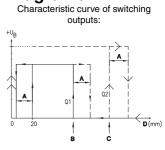

- Α Hysteresis
- Switching point Q1 (teach point) в
- Switching point Q2 (teach point) С
- Measurement distance D

Remarks

Operate in accordance with intended use!

This product is not a safe	
and is not intended as p	personnel
 protection.	

- ✤ The product may only be put into operation by competent persons. Solution of the second second
- dance with the intended use.
- Measurement time depends on the reflectivity of the measurement object and on the measurement mode.

ODSL 8

Optical laser distance sensors

Laser safety notices – Laser class 2

ATTENTION, LASER RADIATION - LASER CLASS 2

Never look directly into the beam!

The device fulfills the EN 60825-1:2008-05 (IEC 60825-1:2007) safety regulations for a product in **laser class 2** as well as the U.S. 21 CFR 1040.10 regulations with deviations corresponding to "Laser Notice No. 50" from June 24th, 2007.


- ♥ Never look directly into the laser beam or in the direction of reflecting laser beams!
- If you look into the beam path over a longer time period, there is a risk of injury to the retina.
- Do not point the laser beam of the device at persons!
- the laser beam with an opaque, non-reflective object if the laser beam is accidentally directed towards a person.
- When mounting and aligning the device, avoid reflections of the laser beam off reflective surfaces!
- CAUTION! Use of controls or adjustments or performance of procedures other than specified herein may result in hazardous light exposure.
 - The use of optical instruments or devices (e.g., magnifying glasses, binoculars) with the product will increase eye hazard.
- Adhere to the applicable legal and local regulations regarding protection from laser beams acc. to EN 60825 (IEC 60825) in its latest version.
- The device must not be tampered with and must not be changed in any way.
 There are no user-serviceable parts inside the device.
 Repairs must only be performed by Leuze electronic GmbH + Co. KG.

NOTICE

Affix laser information and warning signs!

Laser information and warning signs are affixed to the device(see ①). In addition, self-adhesive laser information and warning signs (stick-on labels) are supplied in several languages (see ②).

- Affix the laser information sheet with the language appropriate for the place of use to the device.
- When using the device in the US, use the stick-on label with the "Complies with 21 CFR 1040.10" notice.
- Affix the laser information and warning signs near the device if no signs are attached to the device (e.g. because the device is too small) or if the attached laser information and warning signs are concealed due to the installation position. Affix the laser information and warning signs so that they are legible without exposing the reader to the laser radiation of the device or other optical radiation.

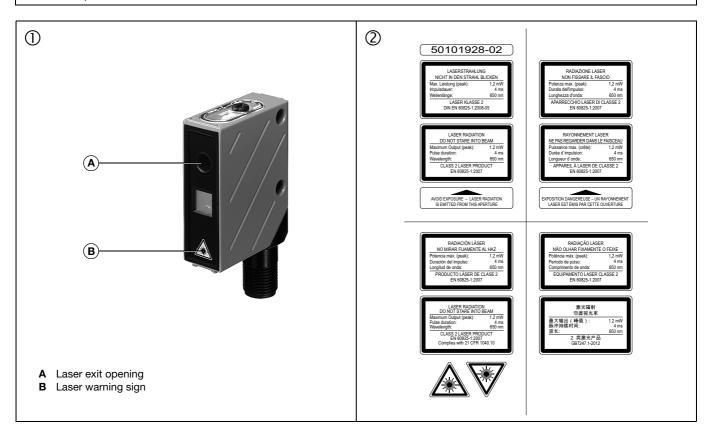


▲ Leuze electronic


ODSL 8

Installation instructions

Mounting systems are available which have to be ordered separately at Leuze electronic. Apart from this, the drilled-through holes and threaded holes are suitable for the individual mounting of the ODSL 8, depending on the area in which it is used. When mounting, avoid application of excessive force on the housing.

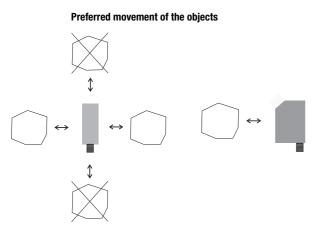


Preferred mounting in connection to objects with structured surface

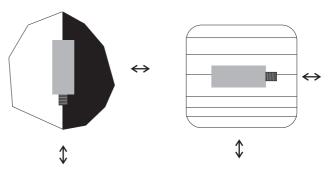


View through a chase


If the ODSL 8 has to be installed behind a cover, the chase has to have at least the size of the optical glass cover. Otherwise, a correct measurement is not possible or can not be guaranteed.

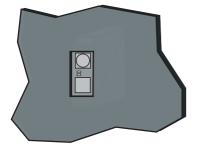

Alignment to measurement objects with reflecting surfaces

If the measurement object to be detected has a reflecting surface, a measurement may not be possible depending on the angle in which the light is reflected by the measurement object's surface. Adjust the angle between the sensor and the measurement object such that the sensor can reliably detect the measurement object.

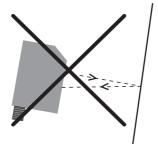

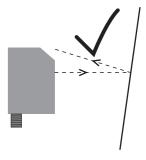

Optical laser distance sensors

ODSL 8

T_I teach-in with rotary switch

1. Position measurement object at the desired measurement distance (①).

2. Turn rotary switch into the desired position (Low, High, 1, 2) (②). Wait for optical confirmation by flashing of the LEDs.

Teach function	Rotary switch position	Green LED	Yellow LED	
Analog output 1 V/4 mA	low	On	Flashes	
Analog output 10V/20mA	high	Flashes	On	
Switching output Q1	1	Flash synchr	Flash synchronously	
Switching output Q2	2	Flash alterna	Flash alternatingly	

3. For teaching, position rotary switch onto "Run" (③).

Wait for optical confirmation by end of flashing signal (green LED on).

Reset of the analog output to factory settings

Reset 1V/4mA analog output at 20mm:

- 1. Position measurement object just below start of measurement range (20mm).
- 2. Position rotary switch on "Low". Wait for optical confirmation by flashing of the LEDs.
- $\ensuremath{\textbf{3.For}}$ teaching, position rotary switch onto "Run".
- Wait for optical confirmation by end of flashing signal (green LED on).

Reset 10V/20mA analog output at 200mm:

- 1. Position measurement object just beyond end of measurement range (200mm).
- 2. Position rotary switch on "High". Wait for optical confirmation by flashing of the LEDs.
- **3.** For teaching, position rotary switch onto "Run".
- Wait for optical confirmation by end of flashing signal (green LED on).


Error messages

Continuously flashing LEDs in switch position "Run" signal an unsuccessful teach event (sensor not ready):

Green LED	Yellow LED	Error
On	Flashes	Teach 1 V/4 mA analog output unsuccessful
Flashes	On	Teach 10V/20mA analog output unsuccessful
Flash synchronously		Teach switching output Q1 unsuccessful
Flash alternatingly		Teach switching output Q1 unsuccessful

Remedy:

- Repeat teach event or
- Disconnect sensor from voltage to restore the old values.

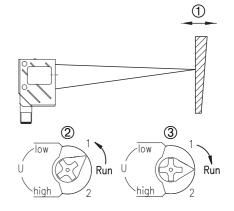

▲ Leuze electronic

ODSL 8