
Forked photoelectric sensor

Dimensioned drawing

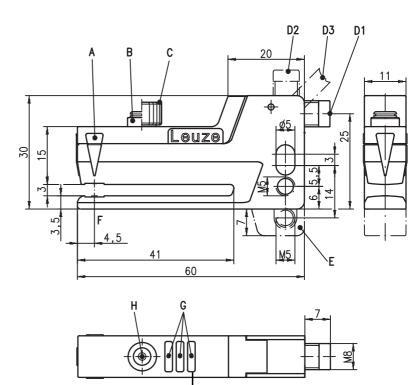


This LED has no function on the GS 61 with potentiometer

- Label centre position Α
- В Control element
- С Knurled knob (removable)
- D D1: horizontal connector, D2: vertical connector, D3: cable
- Mounting device BT-GS6X; BT-GS6X.L Е
- F Optical axis
- G Indicator diodes
- Teach button н

Electrical connection

Connector, 4-pin

Cable

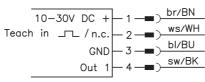

n.c

GND

Out 1

br/BN


<u>ws/W</u>H


bl/BU

sw/BK

gr/GY



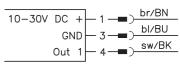

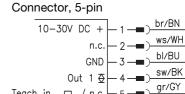

Teach in ___ / n.c.



Optical forked photoelectric sensor with 3mm mouth width for exact detection of labels on base material

տոու

10 kHz

3mm

- Simple sensitivity adjustment via multiturn potentiometer or optionally via teach-in function
- NEW slim-line design (reduced fork height) for installation directly on the dispensing edge
- NEW Removable operating head for easy parameter adjustment without tools
- NEW Smallest dimensions of all industrial • forked photoelectric sensors with an excellent price / performance ratio
- NEW Easy adjustment via lockable teach • button or teach input



Accessories:

(available separately)

- Mounting device BT-GS6X (Part No. 50110803)
- Mounting device BT-GS6X.L (Part No. 50112215)
- Mounting device BT-GS6X.H (Part No. 50123869)

Teach in ___ / n.c.

10-30V DC +

We reserve the right to make changes • DS_GS61_en_50111253_02.fm

GS 61


Leuze electronic

GS 61

Marking on the sensor

 Align the label tape according to the sensor's marker "Label centre position".

Diagrams

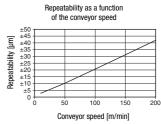

Remarks

Operate in accordance with intended use!

- This product is not a safety sensor and is not intended as personnel protection.
- The product may only be put into operation by competent persons.
 Only use the product in accor-
- dance with the intended use.

Specifications

Physical data

Mouth width Mouth depth Label gap Light source Switching frequency Conveyor speed with teach-in Typ. response time Repeatability Delay before start-up

Electrical data

Operating voltage U_B ¹⁾ Residual ripple Open-circuit current Switching output ²⁾ .../6 switching signal in the label gap .../6D signal voltage high/low Output current

Capacitive load

Indicators Green LED Green LED, flashing Yellow LED Red LED (GS 61/....2... only)

Mechanical data

Housing base Upper part of housing Optics Weight

Connection type

Tightening torque of fastening screws

Environmental data

Ambient temp. (operation/storage) Protective circuit ⁴⁾ VDE safety class Protection class Standards applied Certifications 3mm 40mm ≥ 2mm 940nm (infrared light) max. 10kHz ≤ 20m/min (0.3m/s) 50µs see diagrams ≤ 300ms acc. to IEC 60947-5-2

ready teach-in activated switching signal in the label gap teach error / function error

PC plastic, black RAL 9005 PC plastic, red RAL 3000 PC plastic 20g with connector 70g with cable M8 connector, 4-pin, or M8 connector, 3-pin, or cable 2m (cross section 5 x 0.2mm²) max. 3Nm

-20 °C ... +60 °C/-30 °C ... +70 °C 1, 2 III IP 65 with mounted connector IEC 60947-5-2 UL 508, CSA C22.2 No.14-13 $^{\rm (1)}$ $^{\rm (5)}$

- 1) For UL applications: for use in class 2 circuits according to NEC only
- 2) The push-pull switching outputs must not be connected in parallel
- Max. permissible input capacitance of a consumer connected to the switching output that can be switched without activation of short-circuit-current limiting.
- 4) 1=polarity reversal protection, 2=short-circuit protection for all outputs
 5) These proximity switches shall be used with UL Listed Cable assemblies rated 30V, 0.5A min,
- These proximity switches shall be used with UL Listed Cable assemblies rated 30V, 0.5A mi in the field installation, or equivalent (categories: CYJV/CYJV7 or PVVA/PVVA7)

Order guide

The sensors listed here are preferred types; current information at www.leuze.com.

	Designation	Part No.
Teach-In	GS61/6.2-S8	501 10108
	GS61/6D.2-S8	501 10109
	GS61/6.2-S8V	501 10763
	GS61/6D.2-S8V	501 10764
	GS61/6.2-S8.3	501 10765
	GS61/6D.2-S8.3	501 10766
	GS61/6.2	501 10767
	GS61/6D.2	501 10768
Potentiometer	GS61/6-S8	501 10110
	GS61/6D-S8	501 10111
	GS61/6-S8V	501 10112
	GS61/6D-S8V	501 10113
	GS61/6-S8.3	501 10761
	GS61/6D-S8.3	501 10762
	GS61/6	501 10769
	GS61/6D	501 10770

▲ Leuze electronic

Forked photoelectric sensor

3

GS 61

Type key

		GS	61/	6D.	2 -	S8V.
Operating p	rinciple					
GS	Forked sensor, optical					
Series						
61	Small series with excellent price / performance ratio		_			
Output func	tion					
/6	Push-pull output: PNP signal in the label gap, NPN signal on the label					
/6D	Push-pull output: PNP signal on the label, NPN signal in the label gap					
Configuration	n					
N/A	Potentiometer adjustment				-	
.2	Teach button on the device					
.3	Teach button on the device and teach input					
Electrical c	nnection					
N/A	Device with cable, standard length 2000mm, cable outlet at 45°					_
-S8	M8 connector, 4-pin, horizontal plug outlet					
-S8V	M8 connector, 4-pin, vertical plug outlet					
-\$8.3	M8 connector, 3-pin, horizontal plug outlet					
-S8V.3	M8 connector, 3-pin, vertical plug outlet					
,200-S12	200 mm cable with M12 connector, 5-pin, cable outlet at 45°					


Sensor adjustment via potentiometer for GS 61

Notice: A removable operating head is plugged on the potentiometer in ex works. This can be used to manually adjust the forked photoelectric sensor without the use of a tool. If this is not desired, the operating head can be pulled off – a screwdriver is then necessary for making adjustments.

The following description applies to a forked photoelectric sensor with switching signal in the label gap (GS 61/6...). For device versions with switching signal on the label (GS 61/6D...), the LED indicators are inverted.


Preparation: Remove one or more labels from the base material and advance this blank area into the sensor.

- If the yellow OUT LED does not switch on when the blank area is encountered, increase the sensitivity by turning the potentiometer clockwise until the yellow OUT LED switches on.
- Starting from this setting, turn the potentiometer clockwise another approx. one half turn.
- Now advance the label tape so that a label is in the sensor.
- If set correctly, the yellow OUT LED must now switch off. Reduce the sensitivity by turning counterclockwise if the LED remains on.
- Finished: if set correctly, the LED changes between gap and label.

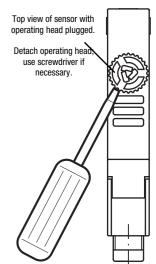

GS 61

Short instructions for sensor adjustment via teach button for GS 61/... (with Teach)

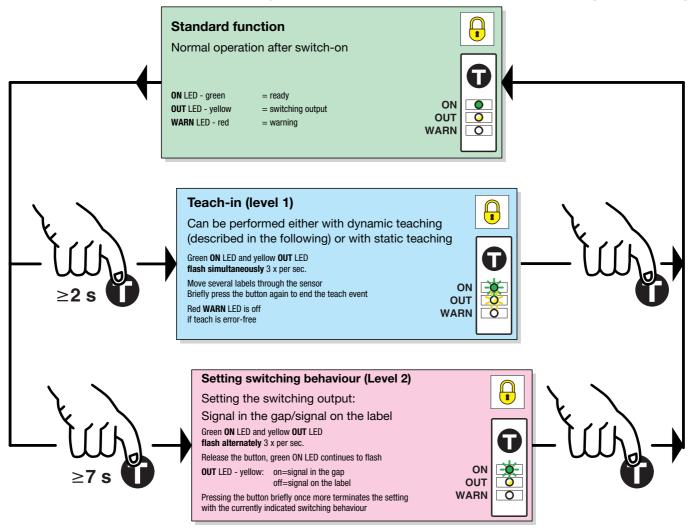

= function lockable through constant application of U_B on the teach input (for devices with teach input only)

Forked photoelectric sensor

ON OUT WARN

Standard function for GS 61/... (with Teach)

During operation the sensor is always in this function. The sensor detects label gaps with high precision and speed. This is indicated by the yellow LED and the switching output.

Indicators:

GS 61

ON LED - green	Constantly ON when operating voltage is applied.		
OUT LED - yellow	Indicates the switching signal. LED is ON if the sensor detects label gaps.		
	The display is independent of the output setting.		
WARN LED - red	Is OFF if operation is error-free. If the "Control limit reached" message appears or if		
	the last teach event was faulty, the red LED illuminates.		

Operation

The teach button must be pressed for at least 2 seconds to operate the device. The button can be electrically disabled to prevent accidental operation.

Sensor adjustment (Teach-In) via teach button for GS 61/... (with Teach)

Manual teach while label tape is passing through (dynamic)

Preparation: Insert label tape into the sensor.

- Press the teach button until green and yellow LEDs flash simultaneously.
- Release teach button.
- During the teach event, the switching output is frozen in the most recently valid state prior to teaching.
- Advance the label tape at a maximum speed of 20m/min through the sensor so that at least 3 ... 7 labels pass through the sensor.
- Press the button briefly once more to terminate the teach event, the sensor goes into standard mode.

3 ... 7 label gaps should be advanced through the sensor in order to achieve stable switching points.

If the teach event is faulty (e.g. transmission with insufficiently thick base material), the red LED illuminates, the green and yellow LEDs flash rapidly. For error acknowledgment, briefly press the teach button and repeat the teach event. If the error cannot be rectified, the label material cannot be detected with the GS 61/....2...

Manual teach if the label tape cannot be advanced (static)


Preparation: Remove one or more labels from the base material and advance this blank area into the sensor.

- Press the teach button until green and yellow LEDs flash simultaneously.
- Release teach button.
- During the teach event, the switching output is frozen in the most recently valid state prior to teaching.
- Press the button briefly once more to terminate the teach event, the sensor goes into standard mode.

If the teach event is faulty (e.g. transmission with insufficiently thick base material), the red LED illuminates, the green and yellow LEDs flash rapidly. For error acknowledgment, briefly press the teach button and repeat the teach event. If the error cannot be rectified, the label material cannot be detected with the GS 61/....2...

Adjusting the switching behaviour of the switching output (signal in the label gap/on the label)

- Press the teach button until green and yellow LEDs flash alternately.
- Release the teach button the green LED continues to flash, the yellow LED alternates slowly between ON and OFF.
- Yellow LED ON = output switches in the label gap Yellow LED OFF = output switches on the label.
- If the button is pressed again while the LED is ON, the device switches in the label gap. For control purposes, the switching behaviour is displayed as long as the button is pressed. If the output is to switch on the label, the button must be pressed while the LED is OFF.
- Finished.

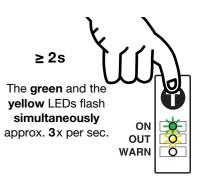



≥ 2s

The green and the

yellow LEDs flash

yellow LEDs flash

alternately

approx. 3x per sec.

ON

Sensor adjustment (Teach-In) via teach input for GS 61/... (with Teach)

U _{Teach}	not connected	Internal pull-down resistor pulls the input down to zero	Teach button can be operated; all functions adjustable
U _{Teach low}	≤ 2V	Low level	Teach button can be operated; all functions adjustable
U _{Teach high}	≥ 8V	High level	Teach button disabled; button has no function
U _{Teach}	> 2V < 8V	Not permitted	


The following description applies to PNP switching logic!

The device setting is stored in a fail-safe way. A reconfiguration following voltage interruption or switch-off is thus not required.

Line teach while label tape is passing through

Ο

Preparation: Insert the label tape in the correct position in the sensor (align the middle of the tape to the sensor marking).

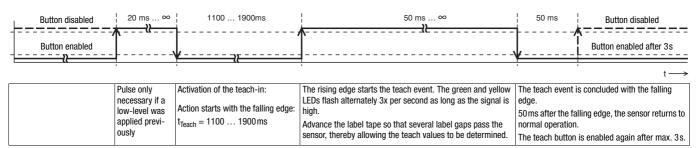

The red LED lights if a teach error occurs (e.g. the label cannot be reliably detected due to insufficient signals).

Regardless of the state, the green LED is on when the teach event is terminated, the yellow LED indicates the current switching state.

Line teach if the label tape cannot be advanced (static teaching)

Preparation: Remove one or more labels from the base material and place this blank area in the sensor. The label tape must now not be advanced further.

The process is identical to the line teach with moving label tape.

Adjusting the switching behavior of the switching output - light/dark switching

L_	Button disabled	20 ms ∞	2100 3000ms	20 900ms	1100 2000ms		Button disabled
	Button enabled		·		··		Button enabled after 3s
	u	7		.			t →
		Pulse only	Activation of the teach switching	Switching output switches in	the label gap (20 900 ms)	The teach event is	s concluded with the falling

	outout	Switching output switches on the label (1100 2000 ms)	The teach event is concluded with the falling edge.
qualit			50ms after the falling edge, the sensor returns to normal operation.
			The teach button is enabled again after max. 3s.

Forked photoelectric sensor

Locking the teach button via the teach input



GS 61/... (with Teach)

A **static high signal** on the teach input locks the teach button on the device so that no manual operation is possible (e.g. protection against erroneous operation or manipulation).

If the teach input is not connected or if there is a static low signal, the button is enabled and can be operated freely.



Notices for integrating the sensor in a control concept

If the sensor is taught externally via a control, it may be necessary to receive acknowledgment from the sensor with respect to its current teach state. Use the following chart for this purpose:

Operating mode	Reaction from sensor
Dispensing mode	Dynamic output signal: alternates between gap and label
Teach	Static output signal: the state prior to teaching is frozen
Teach OK	Output signal is dynamic again
Teach faulty	Output signal is dynamic again - repeat teach event if necessary

GS 61

GS 61

Mounting with mounting device BT-GS6X or BT-GS6X.L

The BT-GS6X or BT-GS6X.L are necessary if mounting compatibility with the GS 06 forked photoelectric sensor is desired. When using, ensure secure seating (tighten set screw).



Maintenance information

The GS 61 forked photoelectric sensor is largely maintenance free. Depending on the environmental conditions and the used materials, it may be necessary from time to time to clean the transparent parts in the lower and upper fork of the forked photoelectric sensor. We recommend using a soft, moist cloth for this purpose. To protect the surface, cleaning agents containing solvents should not be used for transparent parts.

Environmental durability

The used materials feature very good resistance to weak acids and bases as well as to UV exposure. Contact with organic solvents is possible only to a limited extent and only for short times. Resistance to chemicals and oils must be determined on a caseby-case basis.