	Technical data		
62			
	General specifications	250 6000 mm	
	Sensing range	350 6000 mm 400 6000 mm	
	Adjustment range Unusable area	0 350 mm	
	Standard target plate	100 mm x 100 mm	
	Transducer frequency	approx. 65 kHz	
	Response delay	approx. 650 ms	
	Indicators/operating means		
	LED green	solid: Power-on	
		flashing: program function object detected	
	LED yellow	solid: switching state switch output	
		flashing: program function	
-	LED red	normal operation: "fault"	
	Electrical specifications	program function: no object detected	
	Operating voltage U <sub>B</sub>	10 30 V DC , ripple 10 % <sub>SS</sub>	
	No-load supply current $I_0$	≤ 50 mA	
CE <b>(SP</b> <sup>®</sup> c <b>(VL)</b> us	Input/Output	≤ 50 IIIA	
c Us	Synchronization	bi-directional	
	Cynonicalian	0 level -U <sub>B</sub> +1 V	
		1 level: +4 V+U <sub>B</sub>	
Model Number		input impedance: > 12 KOhm	
		synchronization pulse: $\ge$ 100 $\mu$ s, synchronization interpulse	
UB6000-30GM-E4-V15		period: $\geq$ 2 ms	
	Synchronization frequency		
Single head system	Common mode operation	$\leq$ 7 Hz	
	Multiplex operation	$\leq 7~Hz~/$ n , n = number of sensors , n $\leq 5$	
Features	Input		
Switch output	Input type	1 program input,	
-	pac ijpo	operating range 1: -U <sub>B</sub> +1 V, operating range 2: +4 V	
<ul> <li>5 different output functions can be</li> </ul>		+U <sub>B</sub>	
set		input impedance: > 4.7 k $\Omega$ ; program pulse: $\geq$ 1 s	
Program input	Output		
	Output type	1 switch output NPN , Normally open/closed ,	
<ul> <li>Synchronization options</li> </ul>		programmable	
Deactivation option	Rated operating current Ie	200 mA , short-circuit/overload protected	
	Voltage drop U <sub>d</sub>	≤ 2.5 V	
<ul> <li>Temperature compensation</li> </ul>	Repeat accuracy	$\leq 0.5$ % of switching point	
	Switching frequency f	$\leq$ 0.8 Hz	
<ul> <li>Insensitive to compressed air</li> </ul>	Range hysteresis H Temperature influence	1 % of the set operating distance < 2 % of far switch point	
	Ambient conditions		
Diagrams	Ambient temperature	-25 70 °C (-13 158 °F)	
	Storage temperature	-40 85 °C (-40 185 °F)	
Characteristic response curve	Mechanical specifications		
ondideteristic response curve	Connection type	Connector M12 x 1, 5-pin	
Distance Y [m]	Degree of protection	IP65	
1.5	Material		
	Housing	nickel plated brass; plastic components: PBT	
1.0	Transducer	epoxy resin/hollow glass sphere mixture; polyurethane foam	
	Mass	250 g	
0.5	Factory settings		
0.0	Output	Switch point A1: 880 mm Switch point A2: 6300 mm	
		output function: Window operation mode	
-0.5		output behavior: NO contact	
	Compliance with standards and		
-1.0	directives		
	Standard conformity		
-1.5	Standards	EN 60947-5-2:2007	
A Y Distance X [iii]		IEC 60947-5-2:2007	
X			
Curve 1: flat surface 100 mm x 100 mm	Approvals and certificates		
Curve 2: round bar, Ø 25 mm	UL approval	cULus Listed, General Purpose	
	CSA approval	cCSAus Listed, General Purpose	
		CCC approval / marking not required for products rated	
	CCC approval	≤36 V	

Release date: 2015-02-11 08:31 Date of issue: 2015-02-11 097973\_eng.xml Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com






# Dimensions

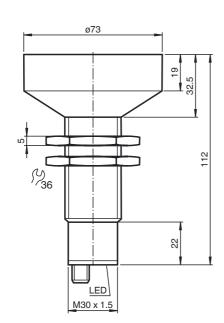

# **Electrical Connection**

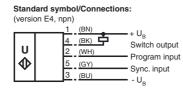

Wire colors in accordance with EN 60947-5-2.

# **Pinout**




#### Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)
5	GY	(gray)

## 1. Window mode, normally open mode A1 < A2:

**Additional Information** 

Programmable output modes

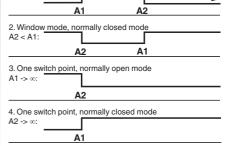

 A1 -> ∞, A2 -> ∞: Object presence detection mode Object detected: Switch output closed No object detected: Switch output open



# Accessories

BF 30

Mounting flange, 30 mm

## BF 5-30

Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

**UB-PROG2** 

Programming unit

#### V15-G-2M-PVC Female cordset, M12, 5-pin, PVC cable

V15-W-2M-PUR Female cordset, M12, 5-pin, PUR cable

# **Description of Sensor Functions**

## **Programming procedure**

The sensor features a programmable switch output with two programmable switch points. Programming the switch points and the operating mode is done by applying the supply voltage  $-U_B$  or  $+U_B$  to the Teach-In input. The supply voltage must be applied to the Teach-In input for at least 1 s. LEDs indicate whether the sensor has recognized the target during the programming procedure.

## Note:

If a programming adapter UB-PROG2 is used for the programming procedure, button A1 is assigned to -U<sub>B</sub> and button A2 is assigned to +U<sub>B</sub>.

## Programming of the switch output

## Window Modes

## Normally open (NO) output

- 1. Place the target at the near end of the desired switch window
- 2. Program the window boundary by applying -U<sub>B</sub> to the Teach-In input (yellow and green LEDs flash)
- 3. Disconnect the Teach-In input from -UB to save the window boundary
- 4. Place the target at the far end of the desired switch window
- 5. Program the window boundary by applying +U<sub>B</sub> to the Teach-In input (yellow and green LEDs flash)
- 6. Disconnect the Teach-In input from +U<sub>B</sub> to save the window boundary

## Normally closed (NC) output

- 1. Place the target at the near end of the desired switch window
- 2. Program the window boundary by applying  $+U_B$  to the Teach-In input (yellow and green LEDs flash)
- 3. Disconnect the Teach-In input from  $+ U_{B}$  to save the window boundary
- 4. Place the target at the far end of the desired switch window
- 5. Program the window boundary by applying  $-U_B$  to the Teach-In input (yellow and green LEDs flash)
- 6. Disconnect the Teach-In input from  $-U_B$  to save the window boundary

## Switch Point Modes

## Normally open (NO) output

- 1. Place the target at the desired switch point position
- 2. Program the switch point by applying +U<sub>B</sub> to the Teach-In input (yellow and green LEDs flash)
- 3. Disconnect the Teach-In input from +U<sub>B</sub> to save the switch point
- 4. Cover the sensor face with hand or remove all objects from sensing range
- 5. Program the switch point by applying -U<sub>B</sub> to the Teach-In input (red and yellow LEDs flash)
- 6. Disconnect the Teach-In input from -UB to save the switch point

## Normally closed (NC) output

- 1. Place the target at the desired switch point position
- 2. Program the switch point by applying -U<sub>B</sub> to the Teach-In input (yellow and green LEDs flash)
- 3. Disconnect the Teach-In input from -U<sub>B</sub> to save the switch point
- 4. Cover the sensor face with hand or remove all objects from sensing range
- 5. Program the switch point by applying +U<sub>B</sub> to the Teach-In input (red and yellow LEDs flash)
- 6. Disconnect the Teach-In input from +U<sub>B</sub> to save the switch point

## **Object Detection Mode**

- 1. Cover the sensor face with hand or remove all objects from sensing range
- 2. Apply -U<sub>B</sub> to the Teach-In input (red and yellow LEDs flash)
- 3. Disconnect the Teach-In input from  $+U_B$  to save the setting
- 4. Apply +U<sub>B</sub> to the Teach-In input (red and yellow LEDs flash)
- 5. Disconnect the Teach-In input from +U<sub>B</sub> to save the setting

## **Factory settings**

See technical data.

## Display

The sensor provides LEDs to indicate various conditions.

	Green LED	Red LED	Yellow LED
During Normal operation			
Proper operation	On	Off	Switching state
Interference (e.g. compressed air)	Off	Flashing	Previous state
During sensor programming			
Object detected	Flashing	Off	Flashing
No object detected	Off	Flashing	Flashing
Object uncertain (programming invalid)	Off	Flashing	Flashing

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com



#### Synchronization

This sensor features a synchronization input for suppressing ultrasonic mutual interference ("cross talk"). If this input is not connected, the sensor will operate using internally generated clock pulses. It can be synchronized by applying an external square wave. The pulse duration must be  $\geq$  100 µs. Each falling edge of the synchronization pulse triggers transmission of a single ultrasonic pulse. If the synchronization signal remains low for  $\geq$  1 second, the sensor will revert to normal operating mode. Normal operating mode can also be activated by opening the signal connection to the synchronization input (see note below).

If the synchronization input goes to a high level for > 1 second, the sensor will switch to standby mode, indicated by the green LED. In this mode, the outputs will remain in the last valid output state.

#### Note:

If the option for synchronization is not used, the synchronization input has to be connected to ground (0 V) or the sensor must be operated via a V1 cordset (4-pin).

The synchronization function cannot be activated during programming mode and vice versa.

#### The following synchronization modes are possible:

- 1. Several sensors (max. number see technical data) can be synchronized together by interconnecting their respective synchronization inputs. In this case, each sensor alternately transmits ultrasonic pulses in a self multiplexing mode. No two sensors will transmit pulses at the same time (see note below).
- 2. Multiple sensors can be controlled by the same external synchronization signal. In this mode the sensors are triggered in parallel and are synchronized by a common external synchronization pulse.
- 3. A separate synchronization pulse can be sent to each individual sensor. In this mode the sensors operate in external multiplex mode (see note below).
- 4. A high level (+U<sub>B</sub>) on the synchronization input switches the sensor to standby mode.

#### Note:

Sensor response times will increase proportionally to the number of sensors that are in the synchronization string. This is a result of the multiplexing of the ultrasonic transmit and receive signal and the resulting increase in the measurement cycle time.

#### Installation conditions

If the sensor is installed in an environment where the temperature can fall below 0 °C, one of these mounting flanges must be used for mounting: BF30, BF30-F, or BF 5-30.

If the sensor is mounted in a through hole using the included steel nuts, it must be mounted at the middle of the threaded housing. If it must be mounted at the front end of the threaded housing, plastic nuts with centering ring (optional accessories) must be used.

