# Thru-beam sensor



#### **Model Number**

# M7/MV7/59/76a/103/143

Thru-beam sensor


with 4-pin, M8 x 1 connector

#### **Features**

- Reliable sensor for standard applicati-• ons
- Miniature design with versatile moun-٠ ting options
- Automatic adjustment of sensitivity • via TEACH-IN
- Resistant against noise: reliable operation under all conditions
- Certified by ECOLAB ٠

#### **Product information**


Small, robust, effective, and reliable - these are the properties of the ML7 sensor series. Due to their small size, number of versions, and two different lens positions, they are particularly suited for installation in tight spaces. The robust design and high quality of Pepperl+Fuchs mean they can also be used under harsh environmental conditions. The efficient technology, switching frequencies up to 1000 Hz, high resistance to ambient light, and 4-in-1 output make the series suitable for non-contact object detection.

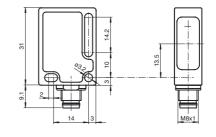



#### **Electrical connection**


Dimensions

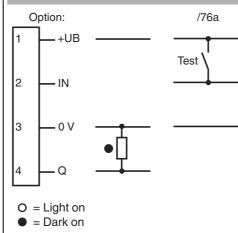

#### Pinout



# Indicators/operating means

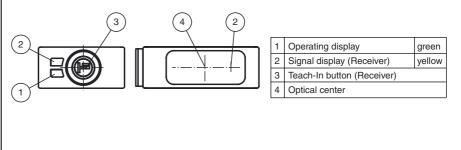

# Pepperl+Fuchs Group

www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



# M7/MV7/59/76a/103/143

Technical data			Accessories	
System components				
Emitter		M7/76a/143	Montagekit OMH-ML7-01 Mounting set consisting of bracket O	
Receiver		MV7/59/103/143		
General specifications			ML-01 sheet OMH-ML7-03, and fas	
Effective detection range		0 3.5 m	ning material	
Threshold detection range		4.5 m	Menterekit OMU MI 7.00	
Light source		LED	Montagekit OMH-ML7-02 Mounting set consisting of bracket OI ML-02 sheet OMH-ML7-03, and faste ning material OMH-ML7-01 Mounting burglast	
Light type		modulated visible red light		
Target size		min. 7 mm		
Diameter of the light spot		approx. 180 mm at a distance of 3.5 m		
Angle of divergence		approx. 3 °		
Ambient light limit		40000 Lux		
		40000 Edx	Mounting bracket	
Functional safety related para	meters	1120 -	OMH-ML7-02	
MTTF <sub>d</sub>		1130 a	Mounting bracket	
Mission Time (T <sub>M</sub> )		20 a		
Diagnostic Coverage (DC)		60 %	OMH-ML7-03	
Indicators/operating means		Fixing plate		
Operating display		Receiver: LED green, flashes in case of short-circuit Emitter: LED green	V31-WM-2M-PUR 4-pin, M8 socket, PUR cable	
Function display		Receiver: LED yellow, lights up when light beam is free, flashes when falling short of the stability control		
Controls		Receiver: TEACH-IN key	V31-GM-2M-PUR	
Electrical specifications			4-pin, M8 socket, PUR cable	
Operating voltage	UB	10 30 V DC , class 2		
Ripple		max. 10 %	Other suitable accessories can be foun www.pepperl-fuchs.com	
No-load supply current	Ι <sub>Ο</sub>	Emitter: ≤ 17 mA Receiver: ≤ 15 mA		
Input				
Test input		emitter deactivation at +U <sub>B</sub>		
Output				
Switching type		dark on		
Signal output		1 PNP output, short-circuit protected, reverse polarity protected, open collector		
Switching voltage		max. 30 V DC		
Switching current		max. 100 mA		
Voltage drop	Ud	≤ 1.5 V DC		
Switching frequency	f	1000 Hz		
Response time		0.5 ms		
Ambient conditions				
Ambient temperature		-20 60 °C (-4 140 °F)		
Storage temperature		-40 75 °C (-40 167 °F)		
Mechanical specifications				
Protection degree		IP67 / IP69K		
Connection		M8 x 1 connector, 4-pin		
Material				
Housing		PC (glass-fiber-reinforced Makrolon)		
Optical face		PMMA		
Connector		plastic		
Mass		approx. 20 g (emitter and receiver)		
Compliance with standards an	nd direct			
Ves Standard conformity				
Standard conformity		EN 60047 E 2:2007		
Product standard		EN 60947-5-2:2007 IEC 60947-5-2:2007		
Standards		EN 50178, UL 508		
Approvals and certificates				
Protection class		II, rated voltage ≤ 250 V AC with pollution degree 1-2 according to IEC 60664-1		
		ding to IEC 60664-1		
UL approval CCC approval		cULus CCC approval / marking not required for products rated ≤36 V		

Date of issue: 2013-05-13 127428\_eng.xml Release date: 2013-04-18 13:47

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001

Pepperl+Fuchs Group www.pepperl-fuchs.com


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



2

#### **Curves/Diagrams**

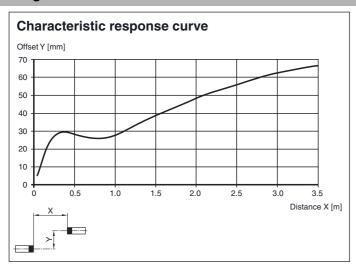

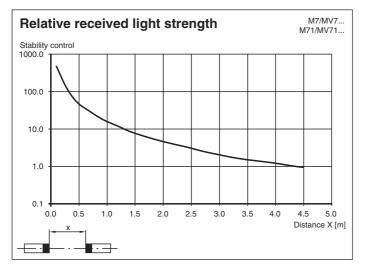

# Teach-In

Connect the sensors to operating voltage, the green LEDs green lights up constantly.

- The receiver operates at max. sensitivity (delivery status) or with the last teached values.
- · Mount transmitter and receiver opposite each other and align roughly.
- Adjust the transmitter to the receiver.
- Press the Teach-In button on the receiver as an acknowledgement the green LED will quickly turn off one time.
- Press the Teach-In button on the receiver until both LEDs green and yellow are blinking in parallel (2 Hz). Release the Teach-In button now.
  While the green and yellow LEDs are blinking alternating (2 Hz) on the receiver the unit is in the internal set up procedure.
- **Teach-In successful:** Both LEDs green and yellow on the receiver are on. The unit is ready to use and in switching mode now.
- Teach-In not successful: Both LEDs on the receiver are flashing alternating (4 Hz) for approx. 5 seconds. Afterwards the sensor returns to max. sensitivity setting. Please retry the Teach-In procedure beginning by step 1.

Pepperl+Fuchs GroupUSA: +1 330 4www.pepperl-fuchs.comfa-info@us.peppe

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

