Thru-beam sensor



Model Number

M7/MV7/59/76a/102/115/126b

Thru-beam sensor


with 2 m fixed cable

Features

- Reliable sensor for standard applicati-• ons
- Miniature design with versatile moun-٠ ting options
- Automatic adjustment of sensitivity • via TEACH-IN
- Resistant against noise: reliable operation under all conditions
- Certified by ECOLAB ٠

Product information


Small, robust, effective, and reliable - these are the properties of the ML7 sensor series. Due to their small size, number of versions, and two different lens positions, they are particularly suited for installation in tight spaces. The robust design and high quality of Pepperl+Fuchs mean they can also be used under harsh environmental conditions. The efficient technology, switching frequencies up to 1000 Hz, high resistance to ambient light, and 4-in-1 output make the series suitable for non-contact object detection.

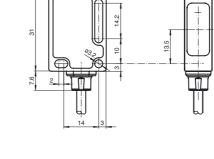




Electrical connection

Dimensions

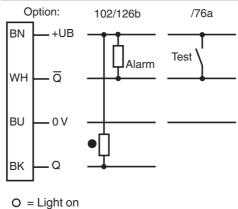

= Dark on

Indicators/operating means

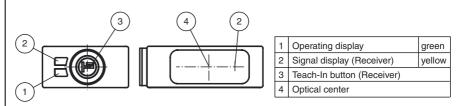

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



M7/MV	7/59/7	76a/1	02/1	15/	126h
	11001				

Technical data			Accessories
System components			Montagekit OMH-ML7-01
Emitter		M7/76a/115	Mounting set consisting of bracket OMH-
Receiver		MV7/59/102/115/126b	ML-01 sheet OMH-ML7-03, and faste-
General specifications			ning material
Effective detection range		0 3.5 m	
Threshold detection range		4.5 m	Montagekit OMH-ML7-02
Light source		LED	Mounting set consisting of bracket OMH-
Light type		modulated visible red light	ML-02 sheet OMH-ML7-03, and faste-
Target size		min. 7 mm	ning material
Diameter of the light spot		approx. 180 mm at a distance of 3.5 m	C C
Angle of divergence		approx. 3 °	OMH-ML7-01
Ambient light limit		40000 Lux	Mounting bracket
Functional safety related part	rameters		
MTTF _d		1130 a	OMH-ML7-02
Mission Time (T _M)		20 a	Mounting bracket
Diagnostic Coverage (DC)		60 %	OMH-ML7-03
Indicators/operating means			
Operating display		Receiver: LED green, flashes in case of short-circuit Emitter:	Fixing plate
		LED green	Other suitable accessories can be found at
Function display		Receiver: LED yellow, lights up when light beam is free, flashes when falling short of the stability control	www.pepperl-fuchs.com
Controls		Receiver: TEACH-IN key	
Electrical specifications			
Operating voltage	UB	10 30 V DC , class 2	
Ripple		max. 10 %	
No-load supply current	I ₀	Emitter: ≤ 17 mA	
		Receiver: ≤ 15 mA	
Input			
Test input		emitter deactivation at +UB	
Output			
Pre-fault indication output		1 NPN, inactive after failure to achieve the stability control mini- mum for approx. 5 s Immediately inactive if 4 beam interruptions occur within the flas- hing period.	
Switching type		dark on	
Signal output		1 NPN output, short-circuit protected, reverse polarity protected, open collector	
Switching voltage		max. 30 V DC	
Switching current		max. 100 mA	
Voltage drop	U _d	≤ 1.5 V DC	
Switching frequency	f	1000 Hz	
Response time	1	0.5 ms	
•		0.5 ms	
Ambient conditions		00 C0 °C / 4 140 °E)	
Ambient temperature		-20 60 °C (-4 140 °F) -40 75 °C (-40 167 °F)	
Storage temperature		-40 75 C (-40 107 P)	
Mechanical specifications			
Protection degree		IP67 / IP69K	
Connection		2 m fixed cable	
Material			
Housing		PC (glass-fiber-reinforced Makrolon)	
Optical face		PMMA	
Mass		approx. 100 g (emitter and receiver)	
Compliance with standards ves	and directi	-	
Standard conformity			
Product standard		EN 60947-5-2:2007	
		IEC 60947-5-2:2007	
Standards		EN 50178, UL 508	
A survey of a surv			
Approvals and certificates Protection class		II, rated voltage \leq 250 V AC with pollution degree 1-2 accor-	
		ding to IEC 60664-1 cULus	
UL approval			
CCC approval		CCC approval / marking not required for products rated \leq 36 V	

Date of issue: 2013-05-13 127431_eng.xml Release date: 2013-04-18 13:47


Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group


2

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com



Curves/Diagrams

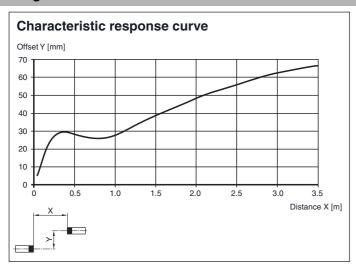

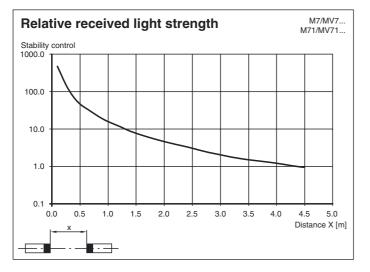

Teach-In

Connect the sensors to operating voltage, the green LEDs green lights up constantly.

- The receiver operates at max. sensitivity (delivery status) or with the last teached values.
- · Mount transmitter and receiver opposite each other and align roughly.
- Adjust the transmitter to the receiver.
- Press the Teach-In button on the receiver as an acknowledgement the green LED will quickly turn off one time.
- Press the Teach-In button on the receiver until both LEDs green and yellow are blinking in parallel (2 Hz). Release the Teach-In button now. • While the green and yellow LEDs are blinking alternating (2 Hz) on the receiver the unit is in the internal set up procedure.
- Teach-In successful: Both LEDs green and yellow on the receiver are on. The unit is ready to use and in switching mode now.
- Teach-In not successful: Both LEDs on the receiver are flashing alternating (4 Hz) for approx. 5 seconds. Afterwards the sensor returns to max. sensitivity setting. Please retry the Teach-In procedure beginning by step 1.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group

www.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

