## Dimensions



# **Model Number**

# ML7-55/59/103/115


Retroreflective sensor with 2 m fixed cable

### **Features**

- Reliable sensor for standard applicati-• ons
- Miniature design with versatile moun-٠ ting options
- Automatic adjustment of sensitivity • via TEACH-IN
- Resistant against noise: reliable ope-٠ ration under all conditions
- Clear and functional display concept ٠ for the operating modes
- Certified by ECOLAB


# **Product information**

Small, robust, effective, and reliable - these are the properties of the ML7 sensor series. Due to their small size, number of versions, and two different lens positions, they are particularly suited for installation in tight spaces. The robust design and high quality of Pepperl+Fuchs mean they can also be used under harsh environmental conditions. The efficient technology, switching frequencies up to 1000 Hz, high resistance to ambient light, and 4-in-1 output make the series suitable for non-contact object detection.

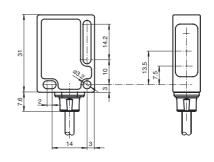




## **Electrical connection**

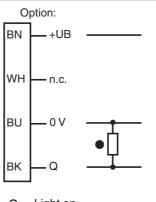



### Indicators/operating means

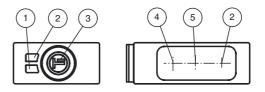

| 1 | Operating display | green  |
|---|-------------------|--------|
| 2 | Signal display    | yellow |
| 3 | TEACH-IN button   |        |
| 4 | Emitter           |        |
| 5 | Receiver          |        |

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



**Technical data** 

Reflector distance

Reference target

Light source

Light type

MTTF<sub>d</sub>

Controls

Ripple

Output Switching type

General specifications

Effective detection range

Threshold detection range

Diameter of the light spot

Angle of divergence

Ambient light limit

Mission Time (T<sub>M</sub>)

Function display

**Electrical specifications** 

No-load supply current

Operating voltage

Signal output

Switching voltage

Switching current Voltage drop

Response time Ambient conditions Ambient temperature

Connection

Housing Optical face

Material

Mass

ves

Switching frequency

Storage temperature **Mechanical specifications** Protection degree

Diagnostic Coverage (DC)

Indicators/operating means Operating display

#### Accessories Montagekit OMH-ML7-01 0...3m Mounting set consisting of bracket OMH-0.03 ... 3 m ML-01 sheet OMH-ML7-03, and faste-3.5 m ning material H85-2 reflector I FD Montagekit OMH-ML7-02 modulated visible red light , 635 nm Mounting set consisting of bracket OMHapprox. 180 mm at a distance of 3.5 m ML-02 sheet OMH-ML7-03, and fasteapprox. 3 ning material 40000 Lux Functional safety related parameters OMH-ML7-01 1530 a Mounting bracket 20 a **OMH-ML7-02** 0% Mounting bracket LED green, flashes in case of short-circuit OMH-ML7-03 LED yellow, lights up when light beam is free, flashes when fal-ling short of the stability control Fixing plate TEACH-IN key Suitable reflectors and cable sockets can be found in the Internet 10 ... 30 V DC , class 2 UB max. 10 % < 20 mA $I_0$ dark on 1 PNP output, short-circuit protected, reverse polarity protected, open collector max. 30 V DC max. 100 mA $\leq$ 1.5 V DC Ud f 1000 Hz 0.5 ms -20 ... 60 °C (-4 ... 140 °F) -40 ... 75 °C (-40 ... 167 °F) IP67 / IP69K 2 m fixed cable PC (glass-fiber-reinforced Makrolon) PMMA approx. 50 g Compliance with standards and directi-EN 60947-5-2:2007 IEC 60947-5-2:2007 EN 50178, UL 508

#### Approvals and certificates

Standard conformity Product standard

Standards

II, rated voltage  $\leq$  250 V AC with pollution degree 1-2 accor-Protection class ding to IEC 60664-1 UL approval cULus CCC approval CCC approval / marking not required for products rated  $\leq$ 36 V

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group

www.pepperl-fuchs.com

2


USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



# **Curves/Diagrams**

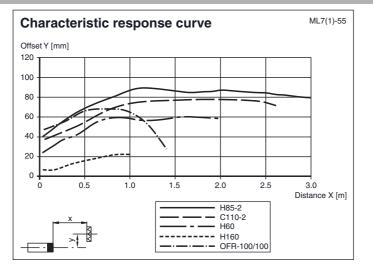

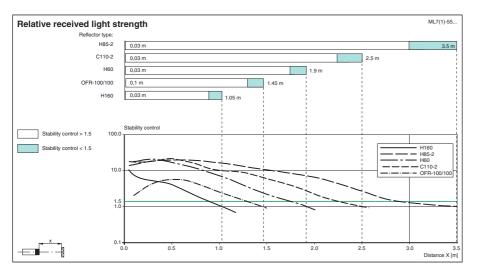

## **Teach-In**

Connect the sensor to operating voltage, the LED green lights up constantly. The sensor operates at max. sensitivity (delivery status) or with the last teached values.

Mount suitable reflector opposite light beam switch.

- Adjust the unit to the reflector.
- Press the Teach-In button as an acknowledgement the green LED will quickly turn off one time.
- Press the Teach-In button until both LEDs green and yellow are blinking in parallel (2Hz). Release the Teach-In button now.
- While the green and yellow LEDs are blinking alternating (2 Hz) the unit is in the internal set up procedure.
- Teach-In successful: Both LEDs green and yellow are on. The unit is ready to use and in switching mode now.
- Teach-In not successful: Both LEDs are flashing alternating (4 Hz) for approx. 5 seconds. Afterwards the sensor returns to max. sensitivity setting. Please retry the Teach-In procedure beginning by step 1.

