
Thru-beam sensor



Dimensions

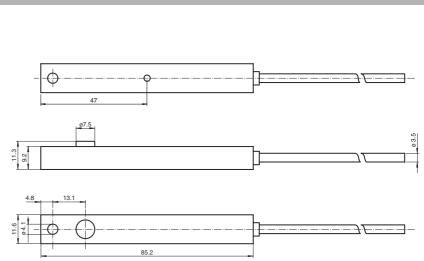

CE

Model Number

ML29-P/25/102/115


Thru-beam sensor with fixed cable

Features

- Single-beam monitoring with extre-• mely narrow sensor
- Integrated circuit ٠
- Test •
- Simple installation Plug & Play
- Ideal for installation in door profiles or ٠ frames
- Light on version


Product information

The narrow miniature thru-beam sensors are a small and cost-effective solution, fitting in virtually any door frame. The ML29 and ML30 series offer fast, reliable detection at a distance of up to 8.5 m. The sensors are easy to mount on the profile, either using adhesive strips or a screw. A large opening angle ensures problem-free alignment. Several sensors can be mounted in a cross formation to offer multi-beam protection.

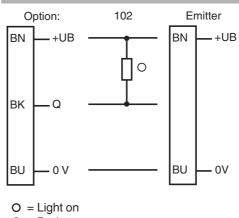

Electrical connection

Indicators/operating means

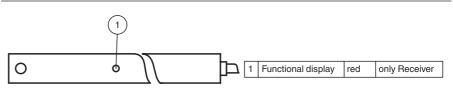

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001

Pepperl+Fuchs Group www.pepperl-fuchs.com fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Technical data			Typical applications	
System components				
Emitter		ML29-T/115	Person detection for automatic doors and	
Receiver		ML29-R/25/102/115	gates	
General specifications		Closing edge protection on s		
Effective detection range		0 6 m	revolving doors	
Threshold detection range			Threshold monitoring for elevator doors Step monitoring for doors on public trans	
Light source		IRED	Step monitoring for doors on public trans-	
Light type		modulated infrared light	port vehicles	
Angle of divergence		+/- 8 °	Trigger function for restarting escalators	
Optical face		lateral	Delection	
Ambient light limit		40000 Lux	Detection area	
Functional safety related par	rameters			
MTTF _d		880 a		
Mission Time (T _M)		20 a		
Diagnostic Coverage (DC)		0 %		
Indicators/operating means				
Function indicator		LED red in receiver : lights up when receiving the light beam		
Electrical specifications				
Operating voltage	U _B	11 30 V DC		
No-load supply current	I ⁰	Emitter: ≤ 25 mA		
no loud supply sufferin	•0	Receiver: ≤ 10 mA		
Input				
Test input		Test: Transmitter switches off at $+UB \le 5 V DC$		
Output				
Switching type		light on		
Signal output		1 NPN output, short-circuit protected, reverse polarity protected,		
g		open collector		
Switching voltage		max. 30 V DC		
Switching current		max. 0.1 A		
Switching frequency	f	100 Hz		
Response time		5 ms	Accessories	
Ambient conditions				
Ambient temperature		-20 60 °C (-4 140 °F)	ML29 Front Plate	
Storage temperature		-20 75 °C (-4 167 °F)	Front plate for thru-beam sensors in se-	
Relative humidity		90 % , noncondensing	ries ML29	
Mechanical specifications				
Degree of protection		IP65	Other suitable accessories can be found	
Connection		6 m fixed cable	www.pepperl-fuchs.com	
Material				
Housing		PMMA , black		
Optical face		Plastic pane		
Mass		per device 120 g		
Compliance with standards ves	and direct	i-		
Standard conformity				
Product standard		EN 60947-5-2:2007 IEC 60947-5-2:2007		
Standards		EN 61000-6-2, EN 61000-6-3		
Approvals and certificates				
CCC approval		CCC approval / marking not required for products rated ${\leq}36~\text{V}$		

Curves/Diagrams

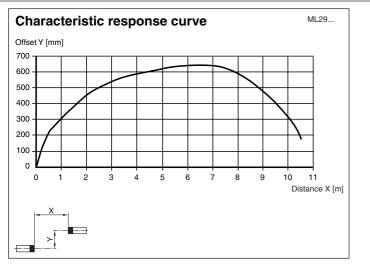

Release date: 2015-02-05 09:14 Date of issue: 2015-02-05 129309_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com


USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



2

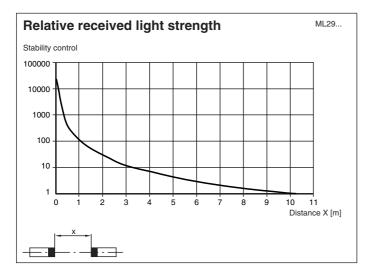

Function principle

The thru-beam sensor requires a pair of devices for operation, comprising a light transmitter and a light receiver. The emitter and receiver must be arranged in optical alignment with each other. The infrared light from the emitter is detected by the receiver and evaluated.

Function

Static detection:

The thru-beam sensor detects persons and objects independently of movement and surface structure for as long as the object breaks the detection beam.

		Electronic output
Light detection /05	Person in the beam	Inactive
Light detection /25	No person in the beam	Active
Dark data stien (50	Person in the beam	Active
Dark detection /59	No person in the beam	Inactive

Optics:

The relatively wide opening angles enable the light beam switches to be installed quickly, without alignment problems. Even if there is a light distortion of the installation profiles the function is retained.

Testing:

Testing is used to check the function of the light beam switch.

With supply voltage +U_B < 5 V the emitter device is switched off. This simulates a light beam interruption. By means of this, the function of the light barrier can be tested easily without using a separate test input.

Installation:

Thanks to its small dimensions, the light beam can be fitted in a U-profile or behind a face panel. The hole diameter for both the emitter and the receiver is 8 mm.


Even fixing by means of the adhesive tape contained in the delivery package can be considered.

Installation of twin-beam arrangement:

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com



A twin-beam version requires 2 emitters and receivers. Care should be taken that the beam separation is not less than 20 cm. The transmitters and receivers must be arranged in the form of a cross.

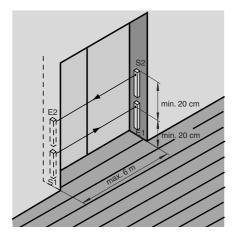



4