




 ϵ **SafeBox**



Dimensions

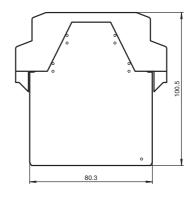

	13 14 15 16 9 10 11 12		1 2 3 4 5 6 7 8	[22.6
		99			

Model Number

SB4 Module 6C

Safety control unit module Module for Evaluation unit SafeBox - series SB4

Features

- Sensor module
- 6 sensor channels
- Single module for safety thru-beam sensors SLA12 and SLA29 and for 2 channel safety devices (emergency
- Operating mode can be selected by means of DIP switches

Electrical connection



Technical data

Material

Housing Mass

Terminal	Function
1	Transmitter 1 output
2	Transmitter 2 output
3	Transmitter 3 output
4	Transmitter 13 +U
5	Transmitter 4 output
6	Transmitter 5 output
7	Transmitter 6 output
8	Transmitter 46 +U
9	Receiver 1 input
10	Receiver 2 input
11	Receiver 3 input
12	Receiver 13 +U
13	Receiver 4 input
14	Receiver 5 input
15	Receiver 6 input
16	Receiver 46 +U

General specifications	
Operating mode	simultaneousness, antivalence
Functional safety related parameters	3
Safety Integrity Level (SIL)	SIL 3
Performance level (PL)	PL e
Category	Cat. 4
Mission Time (T _M)	20 a
Type	4
Indicators/operating means	
Function display	LED yellow (6x): indicator lamp channel 1 6
Pre-fault indication	LED yellow flashing: Indicator lamp channel 1 6
Controls	DIP-switch
Electrical specifications	
Operating voltage U _E	24 V DC ± 20 % , via SB4 Housing
Input	
Activation current	approx. 7 mA
Ambient conditions	
Ambient temperature	0 50 °C (32 122 °F)
Storage temperature	-20 70 °C (-4 158 °F)
Mechanical specifications	
Protection degree	IP20
Connection	screw terminals, lead cross section 0.2 2 mm ²

Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001

Polyamide (PA)

approx. 150 g

Compliance with standards and directives

Standard conformity	(extract)
Standards	EN IEC 61496-1 EN IEC 61508 EN ISO 13849-1
Approvals and certificates	
SIL classification	up to SIL3 acc. to IEC 61508 tested and certified by TÜV SÜD according to: IEC 61508:1998 part 1, 3.4 IEC 61508:2000 ISO 13849-1:2006 EN 50178:1997 IEC 61496-1:2004 IEC 61496-2:2006
UL approval	cULus
TÜV approval	TÜV

The operation of this module is possible only within a control unit of the type SafeBox SB4.

The operating instruction of the SafeBox has to be observed.

Function

The 6-channel sensor card module SB4-6C makes it possible to connect light barriers or light grids or contact safety sensors in a one or two-channel version.

When the system is switched on, the software determines whether a light barrier or a contact safety sensor is switched on at a channel and monitors its presence during operation. Safety sensors with switching contacts, which are connected to the Safe-Box, must operate in the switching mode "normally closed". An open contact means "safe status".


The channels 1 and 2, 3 and 4 as well as 5 and 6 can be monitored for simultaneousness or antivalence. If simultaneousness monitoring is activated, 2 channel safety equipment is monitored for simultaneous opening or changing of the signals. The monitoring time is 2 s.

Antivalence monitoring expects the normally closed contact at channel 1, 3 or 5 and the normally open contact at channel 2, 4 or 6. If antivalence monitoring is performed without simultaneousness monitoring, an incorrect contact position causes a switch-off and the error message 7 after approx. 60 s.

Operation types

The assembly contains 4 DIP switches for selecting the simultaneousness functions of neighbouring channels (1 and 2, 3 and 4, 5 and 6) and for an antivalent evaluation of neighbouring channels (1 and 2, 3 and 4, 5 and 6). For selecting functions, 2 selector switches must always be actuated. The functions are not effective if light barriers are connected.

Position of the DIP switches

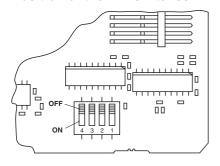

Switch	Position	Operation type
1 and 3 OFF		No antivalent evaluation
	ON	Antivalent evaluation active
2 and 4 OFF No simultar evaluation		No simultaneousness evaluation
	ON	Simultaneousness evaluation active

Display

For each channel, there is a yellow LED on the front panel of the module.

Display	LED	Meaning
R1 - R6	yellow	Status of light barrier 1 6
		Off: light beam interrupted On: light beam released
		Flashing (2.5 Hz): light beam released, function reserve fallen short of
		Flashing (5 Hz): error

Germany: +49 621 776-4411