
AS-Interface master

VBM-CTR-K20-R2





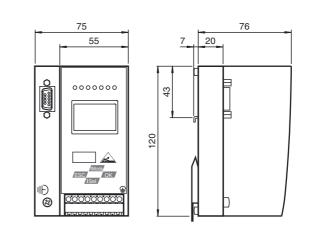

Electrical connection

Dimensions

Model number

VBM-CTR-K20-R2


AS-Interface master RS 232 cabinet module

Features

- Stand alone master with PLC functio-٠ nality and RS 232 interface
- Large, graphic LCD •
- RS 232 diagnosis interface •
- Easy commissioning and fault diagno-٠ sis via LEDs and graphic display
- Earth fault detection
- AS-Interface noise detection

AS-Interface ₽[#]# AS-Interface μP d, AS-Interface Power (PWR) Π Π 3 \triangleright \leq Gnd Screen At the cable for power supply no slaves or repeaters may be attached. At the cable for AS-Interface circuit no power supplies or further masters may be attached.

Indicating / Operating means

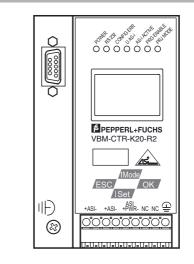

Release date: 2013-10-02 10:29 Date of issue: 2014-01-13 195379_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group

www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



1

AS-Interface master

VBM-CTR-K20-R2

Technical data

General specifications			
AS-Interface specification		V3.0	
PLC-Functionality		integrated	
Earth fault detection	EFD	integrated	
EMC monitoring		integrated	
Diagnostics function		Extended function via display	
UL File Number		E223772	
Functional safety related parame	ters		
MTTF _d		180 a at 30 °C	
Indicators/operating means			
Display		Illuminated graphical LC display for addressing and error mes- sages	
LED RS 232		interface in operation; LED green	
LED AS-i ACTIVE		AS-Interface operation normal; LED green	
LED CONFIG ERR		configuration error; LED red	
LED PRG ENABLE		autom. programming; LED green	
LED POWER		voltage ON; LED green	
LED PRJ MODE		projecting mode active; LED yellow	
LED U AS-i		AS-Interface voltage; LED green	
Switch SET		Selection and setting of a slave address	
OK button		Mode selection traditional-graphical/confirmation	
Button MODE		Mode selection PRJ-operation/save configuration/cursor	
ESC button		Mode selection traditional-graphical/cancel	
Electrical specifications			
Insulation voltage	Ui	≥ 500 V	
Rated operating voltage	Ue	from AS-Interface	
Rated operating current	l _e	≤ 150 mA	
Interface			
Interface type		RS 232	
Transfer rate		1200, 2400, 4800, 9600, 19200, 28800, 38400, 57600 or 11500 Bit/s , Automatic baud rate detection	
Cable length		max. 30 m	
Connection			
AS-Interface		spring terminals, removable	
Serial interfaces		9-pin Sub-D socket	
Ambient conditions			
Ambient temperature		0 55 °C (32 131 °F)	
Storage temperature		-15 75 °C (5 167 °F)	
Mechanical specifications			
Protection degree		IP20	
Mass		460 g	
Construction type		Low profile housing , Stainless steel	
Compliance with standards and directi- ves			
Standard conformity			
Electromagnetic compatibility		EN 61326	
AS-Interface		EN 50295	
Protection degree		EN 60529	
Notes			

Notes

In an AS-Interface network only one device can be operated earth fault detection. If there are many devices in an AS-Interface network, this can lead to the earth fault monitoring response threshold becoming less sensitive.

Function

The VBM-CTR-K20-R2 is a stand-alone master in AS-Interface specification 3.0 with IP20. The construction type is especially suited for use in a switch cabinet.

Address allocation, acceptance of the target configuration and setting the baud rate can be managed via buttons. There are 7 LEDs on the front panel, showing the current status of the AS-Interface line.

In the AS-Interface master with graphical display the commissioning of the AS-Interface circuit and the test of the connected periphery devices can be separated completely overriding bus systems and from programming. The on-site operation via the graphic display and the four push buttons make it possible to show all of the functions on the display, which, for all other AS-Interface masters, are covered by the software AS-Interface control tools.

PLC Functionality

For PLC functionality the VBM-CTR-K20-R2 provides 16 kB program memory, 8 kB data memory, 1024 counters and 1024 timers. This is sufficient capacity to process all data arriving at the AS-Interface. The master can, therefore, also be operated as "stand-alone". The programm processing for 1000 word commands is approx. 2 ms. The programming language is based on STEP5. In the extended mode the AS-Interface CTRL functions (upload, download, start, stop, read and write marker) can be utilized.

Software

The AS-i Control Tools software is supplied as restricted version together with the documentation. The software performs addressing, programming and monitoring of the AS-Interface network. In addition, it contains an editor that creates programs for the integrated PLC functionality. The full version of the AS-i Control Tool is available as an accessory and features an expanded diagnostics monitor as well as a larger program memory for AS-Interface Control which makes it possible to detect faulty telegrams of slaves.

Accessories

VAZ-SW-ACT32

Full version of the AS-I Control Tools including connection cable

USB-0,8M-PVC ABG-SUBD9 Interface converter USB/RS 232

Matching system components

VBG-RIO-KHD2-R2 Bus Coupler for Allen Bradley Remote I/O

fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

1 776 4411 Singap I-fuchs.com fa-info@so

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



2

www.pepperl-fuchs.com