







ECOLVB

Model number


VAA-4E4A-G11-ZAJ/EA2L-F

G11 module 4 inputs and 4 outputs


Features

- · Inputs for 2-, 3-, and 4-wire sensors
- Power supply of outputs from the external auxiliary voltage
- · Supply of sensors from AS-Interface
- Function display for bus, external auxiliary voltage, in- and outputs
- Red LED per channel, lights up in the event of output overload
- · Communication monitoring
- Switchable lead breakage detection (outputs)
- Cable piercing method with gold plated contact pins
- Degree of protection IP68 / IP69K
- AS-Interface POWER24


Dimensions

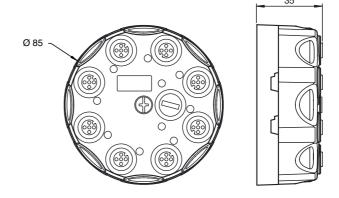

Electrical connection

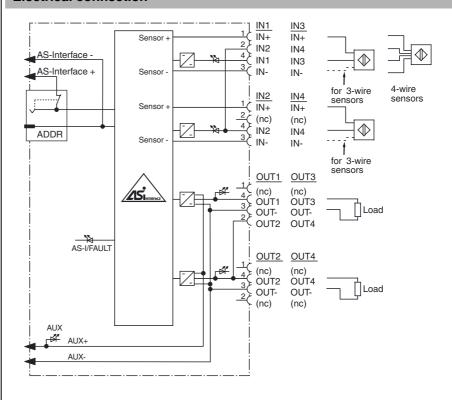

Indicating / Operating means

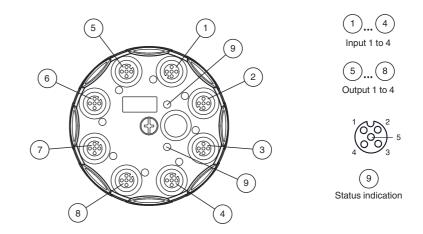

General specifications			
Slave type		Standard slave	
AS-Interface specification		V3.0	
Required master specification		≥ V2.1	
UL File Number		E87056	
ndicators/operating means			
LED AS-i/FAULT		Status display; multi-colour Green: normal operation Red: communication fault Flashing yellow/red: addres Flashing green/red: sensor tion outputs	
LED AUX		ext. auxiliary voltage U _{AUX} ; green: voltage OK red: reverse voltage	dual LED green/red
LED IN		switching state (input); 4 LE	D yellow
LED OUT		switching state (output); 4 L yellow: output active red: output overload or lead	·
Electrical specifications			
Auxiliary voltage (output)	U _{AUX}	20 30 V DC PELV	
Rated operating voltage	U _e	18,0 31.6 V from AS-Inter	face
Rated operating current	I _e	≤ 40 mA (without sensors) /	max. 240 mA
Protection class		III	
Surge protection		U _{AUX} , U _{in} : Over voltage cate (PELV)	gory III, safe isolated power supp
nput			
Number/Type		4 inputs for 2- or 3-wire sens option 2 inputs for 4-wire se	
Supply		from AS-Interface	
Voltage		12 31 V	
Current loading capacity		\leq 200 mA, overload and sho	ort-circuit protected
Input current		≤ 9 mA (limited internally)	
Switching point		according to DIN EN 61131	-2 (Type 2)
0 (unattenuated)		≤ 3 mA	
1 (attenuated)		≥ 5 mA	
Signal delay		< 1 ms (input/AS-Interface)	
Output			
Number/Type		4 electronic outputs PNP or	verload and short-circuit proof
Supply		from external auxiliary voltage	
Current		2 A per output TB ≤ 40 °C: 6 A total	max. 2 A, sum O3 + O4 max. 2 <i>i</i>
Voltage		≥ (U _{AUX} - 0.5 V)	
Electrical isolation		(-AUX /	
Input/Output		safe isolation, rated insulation	on voltage 40 V DC
Output/AS-Interface		safe isolation, rated insulation	
•		sale isolation, rated insulation	on voltage 40 v DO
Programming instructions		0.7.5	
Profile		S-7.F	
IO code		7	
ID code		F -	
ID1 code		F	
ID2 code		E	
Data bits (function via AS-Interface	∍)	input	output
D0		IN1	01
D1		IN2	O2
D2		IN3	O3
D3		IN4	O4
Parameter bits (programmable via	a AS-i)	function	
P0		munication fails P0 = 1 monitoring = on, i.e. are deenergised (basic setti Input filter P1 = 0 input filter on, pulse s	suppression ≤ 2 ms
P2		P1 = 1 input filter off (basic s Lead breakage outputs P2 = 0 lead breakage on	setting)
		P2 = 1 lead breakage off (ba	asic setting)
		not used	
P3			
		-25 70 °C (-13 158 °F)	
Ambient conditions		-25 70 °C (-13 158 °F) -25 85 °C (-13 185 °F)	
Ambient conditions Ambient temperature		, ,	ctions 3 shocks
Ambient conditions Ambient temperature Storage temperature		-25 85 °C (-13 185 °F)	

Function

The VAA-4E4A-G11-ZAJ/EA2L-F is an AS-Interface switch-on module with 4 inputs and 4 outputs. Both 2, 3 and 4-wire sensors as well as mechanical contacts can be connected to the 4 positive switching electronic inputs. The 4 electronic outputs are overload and short-circuit protected.

The housing with a central screw enables fast mounting on the base plate.

The connection to the sensors/actuators is via an M12x1 plug-in connection on the top side of the device. The AS-Interface flat cable and external power supply are connected to the underside of the module via insulation piercing technology.

The inputs and the connected sensors are powered by the internal power supply of the module (from the AS-Interface). The outputs and the connected actuators are powered by an external voltage source (AUX).

The current switching state of each input and output is indicated via an IN or OUT LED. The OUT LED also indicates an overload or a lead breakage at the associated output. The AS-i/FAULT LED indicates the status of the AS-Interface (normal operation, communication error, peripheral fault, address 0). The AUX LED indicates the external power supply. The switch-on module is compatible with AS-Interface POWER24.

Note:

The device is equipped with a communication monitor, which deactivates the outputs if the AS-Interface does not communicate with the module for more than 40 ms. The communication monitor can be deactivated via the parameter P0. Filters that suppress pulses with a duration of 2 ms or less at the inputs can be activated via the parameter P1.

The parameter P2 activates a lead breakage detection system for the outputs. This function detects and reports a missing load, providing the relevant output is deactivated. The associated OUT LED and the 'peripheral fault' function display the signal transmitted to the AS-Interface master. An overload of the input supply or the outputs is also reported to the AS-Interface master via the 'peripheral fault' function. Communication via the AS-Interface continues even if a peripheral fault is set.

Accessories

VBP-HH1-V3.0-KIT

AS-Interface Handheld with accessory

VAZ-V1-B3

Blind plug for M12 sockets

VBP-HH1-V3.0

AS-Interface Handheld


VAZ-PK-1,5M-V1-G

Adapter cable module/hand-held programming device

VAZ-FK-S-BK-SEAL

AS-Interface flat cable seal

Mechanical specifications

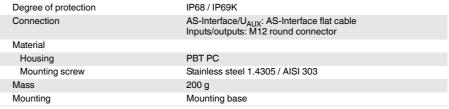

Compliance with standards and directives


1 100		
ı	Directive conformity	
ı	EMC Directive 2004/108/EC	EN 61000-6-2:2005, EN 61000-6-4:2007, EN 50295:1999
ı	Standard conformity	
ı	Noise immunity	EN 61000-6-2:2005, EN 61326-1:2006, EN 50295:1999
ı	Emitted interference	EN 61000-6-4:2007
ı	Input	EN 61131-2:2007
ı	Degree of protection	EN 60529:2000
ı	Fieldbus standard	EN 50295:1999, IEC 62026-2:2006

Notes

Do not connect inputs and outputs, which are supplied via the module from AS-interface or via auxiliary power, with power supply and signal circuits with external potentials.

Mounting instructions

Screw the device onto a level mounting surface using two M5 attachment screws. The attachement screws are not included.

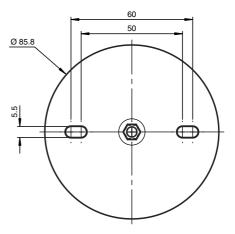

Screw a blind plug onto spare connections to ensure the protection category.