

| | Technical data | |
|---|---|--|
| | General specifications | |
| | Sensing range | 35 300 mm |
| | Adjustment range | 50 300 mm |
| | Unusable area | 0 35 mm |
| | Standard target plate | 100 mm x 100 mm |
| | Transducer frequency | approx. 390 kHz |
| | Response delay | approx. 18 ms |
| | Indicators/operating means | |
| - | LED green | Power on |
| | LED yellow | indication of the switching state flashing: program function object detected |
| | LED red | solid red: Error red, flashing: program function, object not detected |
| | Electrical specifications | |
| | Operating voltage U _B | 10 30 V DC , ripple 10 % _{SS} |
| | No-load supply current I0 | ≤ 20 mA |
| | Input | |
| | Input type | 1 program input operating distance 1: $-U_B \dots + 1 V$, operating distance 2: $+6 V$ $\dots +U_B$ input impedance: > 4,7 k Ω program pulse: $\ge 1 s$ |
| Madal Nixuahaw | Output | input impedance. > 4,7 ks2 program pulse. \geq 1 s |
| Model Number | Output type | 1 switch output E5, PNP NO/NC, programmable |
| UB300-18GM40-E5-V1-Y220359 | Rated operating current le | 200 mA, short-circuit/overload protected |
| 0D300-10GM40-L3-V1-1220339 | Default setting | Switch point A1: 50 mm Switch point A2: 300 mm |
| Single head system | Voltage drop U _d | $\leq 3 \text{ V}$ |
| | Repeat accuracy | _ 0 . ≤1 % |
| Features | Switching frequency f | ≤ 26 Hz |
| Ob ant de alema 40 mm | Range hysteresis H | 1 % of the set operating distance |
| Short design, 40 mm | Temperature influence | ± 1.5 % of full-scale value |
| Function indicators visible from all | Ambient conditions | |
| directions | Ambient temperature | 10 60 °C (50 140 °F) |
| | Storage temperature | -40 85 °C (-40 185 °F) |
| Switch output | Mechanical specifications | |
| • 5 different output functions can be | Connection type | Connector M12 x 1, 4-pin |
| set | Degree of protection | IP67 |
| 301 | Material | |
| Program input | Housing | brass, nickel-plated |
| Temperature compensation | Transducer | epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT |
| | Mass | 25 g |
| Diagrams | Compliance with standards and directives | |
| Characteristic responses or the | Standard conformity | |
| Characteristic response curve | Standards | EN 60947-5-2:2007 IEC 60947-5-2:2007 |
| 100 | Approvals and certificates | |
| 1 | UL approval | cULus Listed, General Purpose |
| 50 | CSA approval | cCSAus Listed, General Purpose |
| | | |
| | CCC approval | CCC approval / marking not required for products rated ${\leq}36~\text{V}$ |

-50

-100 L

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001

fa-info@us.pepperl-fuchs.com

50 100 150 200 250 300 350 400 450 500 550 600

Curve 1: flat surface 100 mm x 100 mm Curve 2: flat surface 10 mm x 10 mm Curve 3: round bar, Ø 25 mm

Distance X [mm]

Y **⊷** Х

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



1

V


Additional Information

Programmable output modes 1. Window mode, normally open mode

A1


A1 < A2:

Dimensions

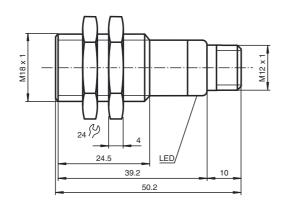

Electrical Connection



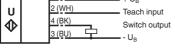

Core colours in accordance with EN 60947-5-2.

Pinout

Connector V1



Accessories

UB-PROG2 Programming unit

OMH-04

Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

BF 18 Mounting flange, 18 mm

BF 18-F

Mounting flange with dead stop, 18 mm

BF 5-30

Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

V1-G-2M-PVC Female cordset, M12, 4-pin, PVC cable

V1-W-2M-PUR Female cordset, M12, 4-pin, PUR cable

Adjusting the switching points

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com fa-info@us.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sq.pepperl-fuchs.com



2. Window mode, normally closed mode A2 < A1: A2 A1 3. One switch point, normally open mode A1 -> ∞: A2 4. One switch point, normally closed mode A2 -> ∞: A1

A2

object distance

5. A1 -> ∞ , A2 -> ∞ : Object presence detection mode Object detected: Switch output closed No object detected: Switch output open

The ultrasonic sensor features a switch output with two teachable switching points. These are set by applying the supply voltage $-U_B$ or $+U_B$ to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Switching point A1 is taught with $-U_B$, A2 with $+U_B$.

Five different output functions can be set

- 1. Window mode, normally-open function
- 2. Window mode, normally-closed function
- 3. one switching point, normally-open function
- 4. one switching point, normally-closed function
- 5. Detection of object presence

TEACH-IN window mode, normally-open function

- Set target to near switching point
- TEACH-IN switching point A1 with -UB
- Set target to far switching point
- TEACH-IN switching point A2 with +UB

TEACH-IN window mode, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A2 with +U_B
- Set target to far switching point
- TEACH-IN switching point A1 with -UB

TEACH-IN switching point, normally-open function

- Set target to near switching point
- TEACH-IN switching point A2 with +UB
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -U_B

TEACH-IN switching point, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A1 with -UB
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A2 with +UB

TEACH-IN detection of objects presence

- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -UB
- TEACH-IN switching point A2 with +U_B

LED Displays

| Displays in dependence on operating mode | Red LED | Yellow LED |
|--|---------|-----------------|
| TEACH-IN switching point: | | |
| Object detected | off | flashes |
| No object detected | flashes | off |
| Object uncertain (TEACH-IN invalid) | On | off |
| Normal operation | off | Switching state |
| Fault | on | Previous state |

Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF 5-30 must be used.

In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread. If a fixation at the front end of the threaded housing is required, plastic nuts with centering ring (accessories) must be used.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

