

#### **Model Number**

#### UB300-18GM40-U-V1


Single head system

#### **Features**

- Short design, 40 mm ٠
- Function indicators visible from all directions
- Analog output 0 ... 10 V
- Measuring window adjustable
- **Program input** ٠
- **Temperature compensation** ٠

#### Diagrams

#### Characteristic response curve

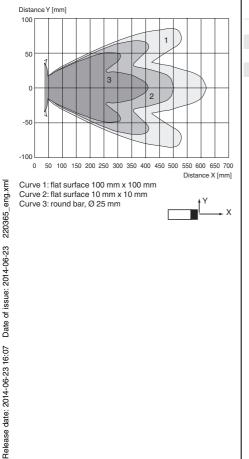

# **Technical data General specifications** Standard target plate Transducer frequency Indicators/operating means

Operating voltage U<sub>B</sub> No-load supply current I<sub>0</sub>

#### Output

- Output type Default setting Resolution Deviation of the characteristic curve Repeat accuracy Load impedance Temperature influence
- Ambient conditions
- Ambient temperature
- Storage temperature Mechanical specifications Connection type Degree of protection Material
- Housing
- Transducer
- Mass
- Compliance with standards and directives Standard conformity
  - Standards

#### Approvals and certificates

UL approval CSA approval CCC approval

#### 35 ... 300 mm 50 ... 300 mm 0 ... 35 mm 100 mm x 100 mm approx. 390 kHz approx. 50 ms

Power on solid yellow: object in the evaluation range yellow, flashing: program function, object detected solid red: Error red, flashing: program function, object not detected

15 ... 30 V DC , ripple 10  $\%_{\rm SS}$  $\leq$  20 mA

1 program input lower evaluation limit A1: -U<sub>B</sub> ... +1 V, upper evaluation limit A2: +4 V ... +U<sub>B</sub> input impedance: > 4.7 k\Omega, pulse duration:  $\geq$  1 s

1 analog output 0 ... 10 V evaluation limit A1: 50 mm evaluation limit A2: 300 mm 0.4 mm at max. sensing range ± 1 % of full-scale value ± 0.5 % of full-scale value > 1 kOhm ± 1.5 % of full-scale value

-25 ... 70 °C (-13 ... 158 °F) -40 ... 85 °C (-40 ... 185 °F)

Connector M12 x 1 , 4-pin **IP67** 

brass, nickel-plated epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT 25 a

EN 60947-5-7:2003 IEC 60947-5-7:2003

cULus Listed, General Purpose cCSAus Listed, General Purpose CCC approval / marking not required for products rated <36 V

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group

www.pepperl-fuchs.com


USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com




## UB300-18GM40-U-V1

## Dimensions

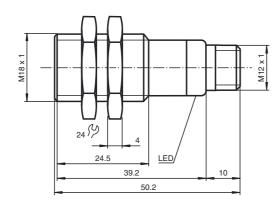


## **Additional Information**

### Programmed analogue output function

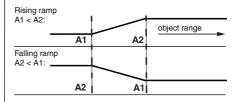

#### **Electrical Connection**

Standard symbol/Connections: (version U) <u>1 (BN)</u> + U

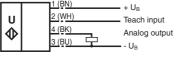

Core colors in accordance with EN 60947-5-2.

### Pinout



Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)



#### Accessories

## UB-PROG2

Programming unit

#### **OMH-04**

Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

BF 18 Mounting flange, 18 mm

#### BF 18-F

Mounting flange with dead stop, 18 mm

#### BF 5-30

Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

#### V1-G-2M-PVC Female cordset M12 4-nin P

Female cordset, M12, 4-pin, PVC cable

#### V1-W-2M-PUR

Female cordset, M12, 4-pin, PUR cable

#### Adjusting the evaluation limits

The ultrasonic sensor features an analogue output with two teachable evaluation limits. These are set by applying the supply voltage  $-U_B$  or  $+U_B$  to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. The lower evaluation limit A1 is taught with  $-U_B$ , A2 with  $+U_B$ .

Two different output functions can be set:

- 1. Analogue value increases with rising distance to object (rising ramp)
- 2. Analogue value falls with rising distance to object (falling ramp)

#### TEACH-IN rising ramp (A2 > A1)

- Position object at lower evaluation limit
- TEACH-IN lower limit A1 with UB
- Position object at upper evaluation limit
- TEACH-IN upper limit A2 with + UB

#### TEACH-IN falling ramp (A1 > A2):

- Position object at lower evaluation limit
- TEACH-IN lower limit A2 with + U<sub>B</sub>
- Position object at upper evaluation limit
- TEACH-IN upper limit A1 with U<sub>B</sub>

#### **Default setting**

A1:	unusable area
A2:	nominal sensing range
Mode of operation:	rising ramp

#### **LED Displays**

Displays in dependence on operating mode	Red LED	Yellow LED
TEACH-IN evaluation limit		
Object detected	off	flashes
No object detected	flashes	off
Object uncertain (TEACH-IN invalid)	on	off
Normal mode (evaluation range)	off	on
Fault	on	previous state

#### Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF 5-30 must be used.

In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread. If a fixation at the front end of the threaded housing is required, plastic nuts with centering ring (accessories) must be used.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

