









Model Number

UB400-F77-E3-V31


Ultrasonic direct detection sensor

Features

- Miniature design
- Program input
- · Degree of protection IP67
- Switching status indicator, yellow LED

Diagrams

Characteristic response curve

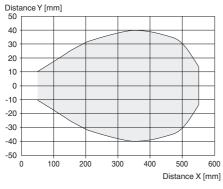



Technical data

eneral specifications	
Sensing range	25 400 mm
Adjustment range	40 400 mm
Unusable area	0 25 mm
Standard target plate	20 mm x 20 mm
Transducer frequency	approx. 300 kHz

Nominal ratings

Time delay before availability t_v

Limit data

Permissible cable length max. 300 m

Indicators/operating means LED yellow

Electrical specifications
Rated operating voltage U_e 24 V DC

Operating voltage U_B 20 ... 30 V DC , ripple 10 %_{SS} ; 12 ... 20 V DC sensitivity

≤ 150 ms

reduced to 90 %

switching state and flashing: Teach-In

No-load supply current $I_0 \le 20 \text{ mA}$

Input

Input type 1 program input

Level low level : 0 ... 0.7 V (Teach-In active) high level : U_B or open input (Teach-In inactive)

 $\begin{array}{ll} \text{Input impedance} & 16 \text{ k}\Omega \\ \text{Pulse length} & \geq 3 \text{ s} \end{array}$

Output

Output type 1 switch output PNP , NC contact
Rated operating current I_e 200 mA , short-circuit/overload protected

 $\begin{array}{lll} \mbox{Voltage drop U}_d & \leq 2 \ \mbox{V} \\ \mbox{Switch-on delay t}_{on} & \leq 75 \ \mbox{ms} \\ \mbox{Repeat accuracy} & \pm 1 \ \mbox{mm} \\ \mbox{Switching frequency f} & 5 \ \mbox{Hz} \\ \mbox{Range hysteresis H} & \mbox{typ. 4 mm} \\ \mbox{Off-state current I}_r & \leq 0.01 \ \mbox{mA} \\ \end{array}$

Temperature influence
Ambient conditions

Ambient temperature -25 ... 70 °C (-13 ... 158 °F)
Storage temperature -40 ... 85 °C (-40 ... 185 °F)
Shock resistance 30 g . 11 ms period

Shock resistance 30 g , 11 ms period Vibration resistance 10 ... 55 Hz , Amplitude \pm 1 mm

Mechanical specifications

Connection type M8 x 1 connector , 4-pin

Degree of protection IP67

Material

Housing Polycarbonate
Transducer epoxy resin/hollow glass sphere mixture; polyurethane foam

+ 0.17 %/K

Installation position any position Mass 10 g

Tightening torque, fastening screws max. 0.2 Nm

Compliance with standards and

directives
Standard conformity

Standards EN 60947-5-2:2007


IEC 60947-5-2:2007

Approvals and certificates


UL approval cULus Listed, General Purpose
CSA approval cCSAus Listed, General Purpose
CCC approval CCC approval / marking not required for products rated

<36 V

Dimensions

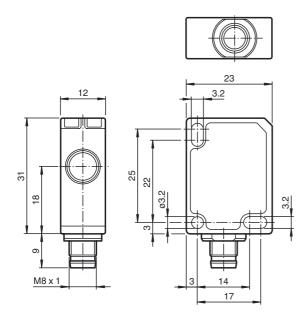

Electrical Connection

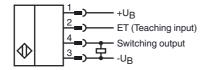

Pinout



Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)

Accessories

UB-PROG4-V31

Programming unit for ultrasonic sensors with Teach-in input at pin 2

OMH-ML7-01

Mounting bracket

V31-GM-2M-PVC

Female cordset, M8, 4-pin, PVC cable

V31-WM-2M-PVC

Female cordset, M8, 4-pin, PVC cable

Description of Sensor Function

The ultrasonic sensor transmits ultrasonic packets in quick succession and responds to their reflection off the detected object. The sensor has a switch output. The switching point is progammable (Teach-In). Objects beyond the taught-in switching point are not detected (background

Teach-In of Switching Point SP

To teach in a switching point, proceed as follows:

- 1. Connect the sensor and turn on the operating voltage.
- 2. Place the object to be detected at the required distance.
- Connect the teach-in input (ET) to -U_B. This can be done usingthepushbutton or the controller.
 The LED will start flashing after 3 seconds to indicate that the sensor is ready to start the teach-in process (*).
 Disconnect the teach-in input (ET) with -U_B. The switching point SP has now been taught in (*).
- If no object is detected within the sensing range of the sensor, the sensor will start flashing at a faster rate. The switching point remains (*) unchanged.

Switching characteristics and display LED

unusable	Sensing range	Output	LED
area	Adjustment range		
		+U _B	On
	•	-U _B	Off
		Unde	efined

= Object position

Mounting instruction

If the sensor is operated at temperatures below 0 °C, use the supplied distance plate. Only use the two rearmost mounting holes (located opposite to the transducer) for mounting the sensor.

Safety Note



The use of this device in applications, where the safety of persons depends from the devices function, is not allowed!