	1	
100	Technical data	
	General specifications	40 400 mm
The states	Sensing range Unusable area	40 40 mm
(BAN) EAL	Standard target plate	20 mm x 20 mm
A REAL PROVIDENCE AND A	Transducer frequency	approx. 300 kHz
All Sec.	Response delay	≤ 75 ms
241 CC	Nominal ratings	< 150 mg
2 (18 3 4 4 1) S	Time delay before availability t <sub>v</sub> Limit data	≤ 150 ms
	Permissible cable length	max. 300 m
	Indicators/operating means	
	LED yellow	object inside the scanning range
	Electrical specifications	241/100
	Rated operating voltage U <sub>e</sub> Operating voltage U <sub>B</sub>	24 V DC 20 30 V DC , ripple 10 % <sub>SS</sub> ; 12 20 V DC sensitivity
	operating vehage og	reduced to 90 %
	No-load supply current I0	≤ 20 mA
	Input	
	Input type	1 program input
	Level	low level : 0 0.7 V (Teach-In active) high level : U <sub>B</sub> or open input (Teach-In inactive)
Model Number	Input impedance	$16 \text{ k}\Omega$
	Pulse length	≥3 s
UB400-F77-F-V31	Output	
Ultrasonic direct detection sensor	Output type	Frequency output, PNP
	Rated operating current I <sub>e</sub> Voltage drop U <sub>d</sub>	100 mA , short-circuit/overload protected ≤ 2 V
Features	Resolution	≤ 2 v Standard 2 Hz / mm
Miniature design	Repeat accuracy	± 2.5 %
-	Off-state current Ir	≤ 0.01 mA
<ul> <li>Frequency output</li> </ul>	Output frequency	frequency : 80 800 Hz (40 400 Hz), adjustable
Program input	Temperature influence Ambient conditions	+ 0.17 %/K
	Ambient temperature	-25 70 °C (-13 158 °F)
Degree of protection IP67	Storage temperature	-40 85 °C (-40 185 °F)
Switching status indicator, yellow	Shock resistance	30 g , 11 ms period
LED	Vibration resistance	10 55 Hz , Amplitude ± 1 mm
-	Mechanical specifications Connection type	M8 x 1 connector , 4-pin
Diagrams	Degree of protection	IP67
	Material	
Characteristic response curve	Housing	Polycarbonate
Distance Y [mm]	Transducer	epoxy resin/hollow glass sphere mixture; polyurethane foam
50	Installation position Mass	any position 10 g
40	Tightening torque, fastening screws	max. 0.2 Nm
30	Compliance with standards and	
20	directives	
10	Standard conformity	EN 00047 5 0:0007
-10	Standards	EN 60947-5-2:2007 IEC 60947-5-2:2007
-10		
30	Approvals and certificates	
40	UL approval	cULus Listed, General Purpose
50	CSA approval	cCSAus Listed, General Purpose
0 100 200 300 400 500 600	CCC approval	CCC approval / marking not required for products rated
Distance X [mm]		≤36 V
	1	

Release date: 2012-04-11 15:29 Date of issue: 2014-05-15 233243\_eng.xml

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 G


 www.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com
 fa

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



# Dimensions

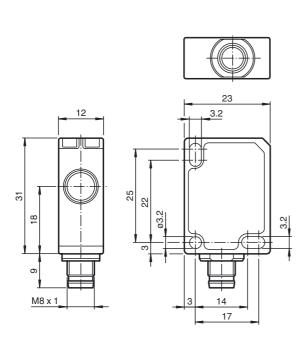

## **Electrical Connection**

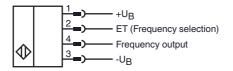

Pinout



Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)



## Accessories

## UB-PROG4-V31

Programming unit for ultrasonic sensors with Teach-in input at pin 2

OMH-ML7-01 Mounting bracket

V31-GM-2M-PVC Female cordset, M8, 4-pin, PVC cable

## V31-WM-2M-PVC

Female cordset, M8, 4-pin, PVC cable

## **Description of Sensor Function**

The ultrasonic sensor transmits ultrasonic packages in quick succession and responds to their reflection off the detected object. It has a frequency output that delivers a square wave signal. The frequency of this signal changes linearly with the distance of the object. Two frequency ranges are available.

## **Description of the Frequency Selection**

Proceed as follows to select the frequency range:

#### Standard frequency 80 ... 800 Hz

- 1. Connect terminal ET to +U<sub>B</sub> or leave it open.
- 2. Switch on the operating voltage.
- 3. The sensor will be ready for operation after 3 seconds.

### Low frequency 40 ... 400 Hz

- 1. Connect terminal (ET) to -U<sub>B</sub>.
- 2. Switch on the operating voltage.
- 3. The sensor will be ready for operation after 3 seconds.

ET	unusable area	Sensing range 40 400 mm	> 400 mm or no object
Open or +U <sub>B</sub>	Undefined	80 800 Hz	800 Hz
-U <sub>B</sub>	Undefined	40 400 Hz	400 Hz

#### Note:

Switching the potential on ET during operation will not change the frequency range.

### Mounting instruction

If the sensor is operated at temperatures below 0 °C, use the supplied distance plate. Only use the two rearmost mounting holes (located opposite to the transducer) for mounting the sensor.

#### Safety Note

The use of this device in applications, where the safety of persons depends from the devices function, is not allowed!



Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

