

Release date: 2012-07-12 14:43 Pepperl+Fuchs Group www.pepperl-fuchs.com

235136\_eng.xml

Date of issue: 2013-10-25

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com






UC500-F65-E8R2-V15

# Dimensions

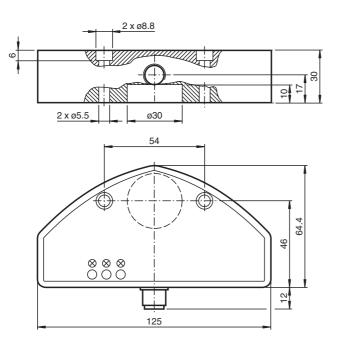

# **Electrical Connection**

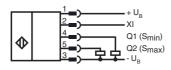

Pinout




Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)
5	GY	(gray)

# Additional Information

# Function of the switching outputs

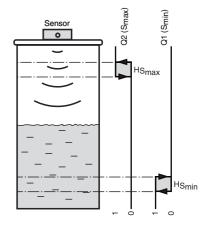



## Accessories

V15-G-2M-PUR

Female cordset, M12, 5-pin, PUR cable

V15-G-2M-PVC Female cordset, M12, 5-pin, PVC cable

V15-W-2M-PUR Female cordset, M12, 5-pin, PUR cable

V15-W-2M-PVC

Female cordset, M12, 5-pin, PVC cable

**3RX4000-PF** PC interface

## Applications

The design and functionality makes this sensor best suitable for level detection applications in small containers or tanks. The device provides 2 switching outputs Q1 ( $S_{min}$ ) and Q2 ( $S_{max}$ ). Special distances can be assigned to each of them - e. g. the minimum and maximum levels in a tank can be evaluated and displayed. The parameters can be programmed with SONPROG or with an automatic setup (Teach-In).

#### **Mounting and Connection**

All parts are accommodated in a fully enclosed housing. The ultrasonic transducer is set back in the housing, so it is protected. Because of the built-in sealing the sensor can be used as a closure with integrated level detection. The opening of the tank must have a diameter of 26 mm. The sensor is fixed by means of two M5 screws. The sensor has a 5 pin M12 x 1 connector. The BERO has built-in polarity reversal as well as short-circuit and overload protection. Where there is electrical interference, shielded cables are recommended.

#### Setup

The two ranges, the associated hysteresis and the average value are preset at the factory (see technical data). The parameters can be programmed with SONPROG or with an automatic setup (teach-in). Teach-in can be done by means of the keys of the interface (accessories) or the function input XI.

## Automatic Setup (Teach-in)

- With this function the minimum level S<sub>min</sub> can be set. The following steps must be performed in the correct order:
- 1. Fill the tank up to the required minimum level or place an object at the required distance.
- Apply "low" signal (0 to 3 V) to the function input XI e.g. connect XI via a key to 0 V, or connect it via a PLC to "LOW"). The LED "S<sub>min</sub>" flashes, then. The sensor is disabled; it's learning the distance. The signal duration must be at least 150 ms.
- 3. Remove signal from XI e.g. disconnect it from the function input XI, connect it to +U<sub>B</sub> or connect it via a PLC to "HIGH").
- Important! As long as the function input XI is connected to "low", the sensor is disabled.

#### SONPROG

With SONPROG the following parameters can be programmed:

- Start or end of both switching ranges Smin and Smax
- Hysteresis (HS<sub>max</sub>, HS<sub>min</sub>)
- Blind zone
- · Sensing range
- Average value
- Switching output Smin NC / NO

Customer specific programming is available on request.

### Operation

The level of liquid inside a tank is detected within the sensing range. If the level reaches one of the two switching levels ( $S_{min}$ ,  $S_{max}$ ), then the corresponding output will be set active. Both switching levels are equipped with a switching hysteresis ( $HS_{min}$ ,  $HS_{max}$ ). The switching status of each output is indicated by the corresponding yellow LED. If the filling level is in between the 2 switching levels, both of the outputs are in off state.

Objects inside the blind zone will cause error signals. Therefore the user has to mount the sensor that way that the level cannot be inside the blind zone.

