

Model Number


VT18-8-400-M/30/40a/118

Diffuse mode sensor with 4-pin, M12 x 1 connector


Features

- ٠ Array control panel with highly visible LED display
- Flashing power on LED in case of ٠ short-circuit
- Multiple device installation possible, ٠ no mutual interference (no cross-talk)
- Not sensitive to ambient light, even ٠ with switched energy saving lamps
- Protection class II ٠

Dimensions

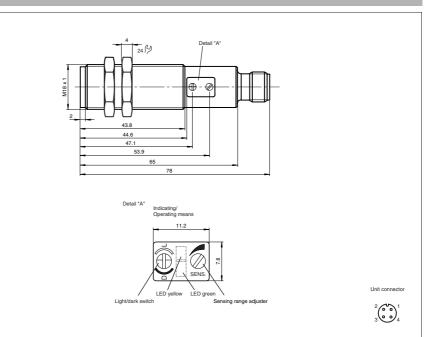

Electrical connection

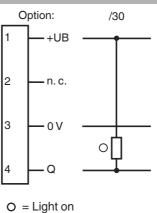

• = Dark on


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



| Technical data | | |
|--|----------------|---|
| General specifications | | |
| Detection range | | 0 400 mm , adjustable |
| Detection range min. | | 0 25 mm |
| Detection range max. | | 0 400 mm |
| Light source | | LED |
| Light type | | modulated visible red light , 660 nm |
| Diameter of the light spot | | approx. 4 mm at a distance of 120 mm |
| Optical face | | frontal |
| Ambient light limit | | 30000 Lux |
| Hysteresis | н | < 15 % |
| Functional safety related parameter | ers | |
| MTTF _d | | 700 a |
| Mission Time (T _M) | | 20 a |
| Diagnostic Coverage (DC) | | 0 % |
| Indicators/operating means | | |
| Operation indicator | | LED green, flashes in case of short-circuit |
| Function indicator | | LED yellow, lights up with receiver lit |
| Control elements | | Detection range adjuster, light/dark switch |
| Electrical specifications | | |
| Operating voltage | UB | 10 30 V DC , class 2 |
| Ripple | | 10 % |
| No-load supply current | l _o | < 30 mA |
| Output | | |
| Switching type | | light/dark on, switchable |
| Signal output | | 1 NPN output, short-circuit protected, reverse polarity protected, |
| | | open collector |
| Switching voltage | | 30 V DC |
| Switching current | | max. 200 mA |
| 5 - 1 5 | f | 500 Hz |
| Response time | | 1 ms |
| Ambient conditions | | |
| Ambient temperature | | -25 70 °C (-13 158 °F) |
| Storage temperature | | -30 70 °C (-22 158 °F) |
| Mechanical specifications | | |
| Degree of protection | | IP67 |
| Connection | | M12 connector, 4-pin (Vario-Quick quick connect technology) |
| Material | | |
| Housing | | brass, nickel-plated |
| Optical face | | plastic |
| Mass | | 60 g |
| Compliance with standards and d ves | irecti- | |
| Standard conformity | | |
| Product standard | | EN 60947-5-2 |
| Approvals and certificates | | |
| CE conformity | | yes |
| Protection class | | II, rated voltage ≤ 300 V AC with pollution degree 1-2 according to IEC 60664-1 |
| UL approval | | cULus |
| CCC approval | | CCC approval / marking not required for products rated ${\leq}36$ V |
| a (5) | | |

Curves/Diagrams

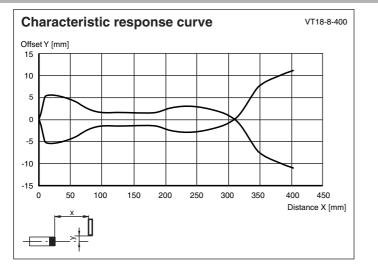

Release date: 2015-02-05 13:20 Date of issue: 2015-02-05 801130_eng.xml


Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group


www.pepperl-fuchs.com


USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

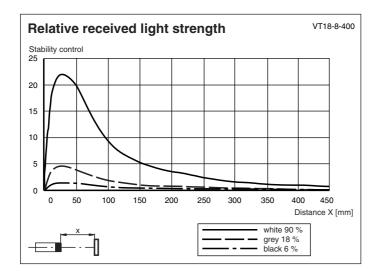

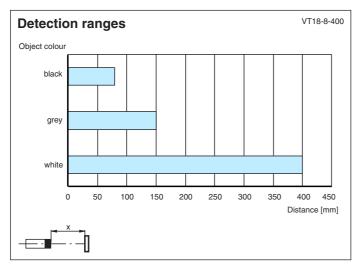

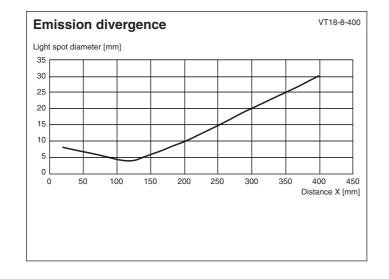

Adjustment

Release date: 2015-02-05 13:20 Date of issue: 2015-02-05 801130_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com



VT18-8-400-M/30/40a/118


Sensitivity adjustment

- Turn sensitivity adjuster (counterclockwise) to minimum position.
- Place the object to be detected in the sensing range and turn the sensitivity adjuster clockwise until the yellow indication LED lights up. This setting indicates the position A of the sensitivity adjuster.
- · Remove the object. Increase the sensitivity slowly (turning the sensitivity adjuster clockwise) until the yellow LED lights up again. This setting indicates the position B of the sensitivity adjuster.

Note:

In case of no background object, the LED won't light up, even in MAX. adjustment. In that case take care, that in normal operation conditions no temporal background object can appear in the sensing range (e. g. parked pallets). If this can not be excluded, place (only for adjustment matter) an object at the appropriate location. Then repeat this adjustment step. After finishing the adjustment this temporal object should be removed.

For optimal setting, now turn the sensitivity adjuster to the middle position between the positions A and B.

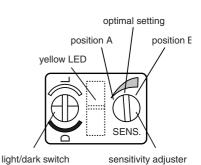

Release date: 2015-02-05 13:20 Date of issue: 2015-02-05 801130_eng.xml

