







### Model number


#### VBA-4E4A-G12-ZAJ/EA2L

G12 flat module 4 inputs (PNP) and 4 electronic outputs


#### **Features**

- A/B slave with extended addressing possibility for up to 62 slaves
- One-piece housing with stainless steel base
- Installation without tools
- Metal threaded inserts with SPEED-CON technology
- Flat cable connection with cable piercing technique, variable flat cable guide
- Red LED per channel, lights up in the event of output overload
- Communication monitoring, configurable
- Inputs for 2-, 3-, and 4-wire sensors
- DIN rail mounting
- AS-Interface certificate


# **Dimensions**

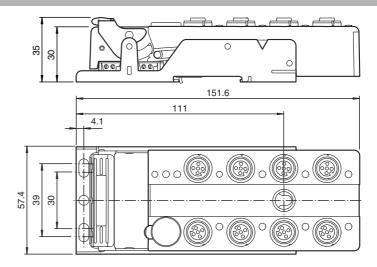

### **Electrical connection**

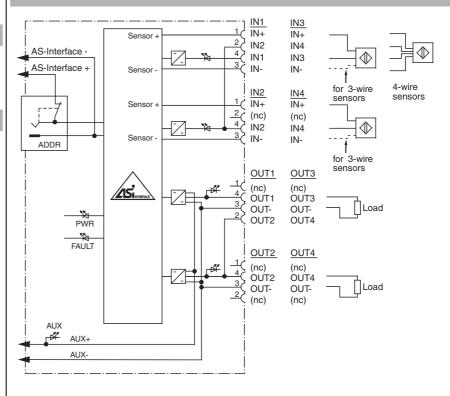

# **Indicating / Operating means**

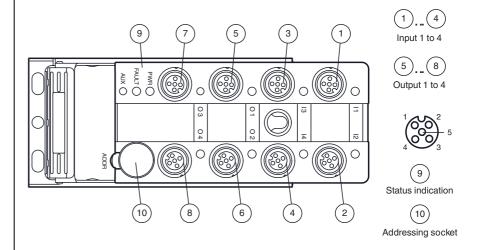

Technical data						
General specifications						
Slave type		A/B slave				
AS-Interface specification		V3.0				
Required master specification		≥ V3.0				
UL File Number	UL File Number E87056					
Functional safety related parame	ters					
MTTF <sub>d</sub>		190 a				
Mission Time (T <sub>M</sub> ) Diagnostic Coverage (DC)		20 a 0 %				
5 5 7		0 %				
Indicators/operating means  LED FAULT		error display; LED red				
		red: communication error or address is 0 red flashing: overload of sensor power supply or outputs				
LED PWR		AS-Interface voltage; green LED green: voltage OK flashing green: address 0				
LED AUX		ext. auxiliary voltage U <sub>AUX</sub> ; dual LED green/red green: voltage OK red: reverse voltage				
LED IN	LED IN		switching state (input); 4 LED yellow			
LED OUT		Switching status (output); 4 yellow/red LEDs Yellow: output active Red: output overload				
Electrical specifications						
Auxiliary voltage (output)	U <sub>AUX</sub>	24 V DC ± 15 % PELV				
Rated operating voltage	U <sub>e</sub>	26.5 31.6 V from AS-Inte				
Rated operating current  Protection class	l <sub>e</sub>	≤ 40 mA (without sensors) / max. 240 mA				
Input		""				
Number/Type		4 inputs for 2- or 3-wire ser	nsors (PNP). DC			
		option 2 inputs for 4-wire sensors (PNP), DC				
Supply		from AS-Interface				
Voltage		21 31 V				
Current loading capacity		≤ 200 mA, overload and short-circuit protected				
	Input current		≤ 8 mA (limited internally) according to DIN EN 61131-2 (Type 2)			
Switching point  0 (unattenuated)		≤ 2 mA				
0 (unattenuated) 1 (attenuated)		≥ 6 mA				
Signal delay	, ,					
Output						
Number/Type		4 electronic outputs, PNP, overload and short-circuit proof				
Supply	Supply		from external auxiliary voltage U <sub>AUX</sub>			
Current		2 A per output 6 A total (TB ≤ 40 °C) 4 A total (TB ≤ 70 °C)				
Voltage		≥ (U <sub>AUX</sub> - 0.5 V)				
Programming instructions						
Profile		S-7.A.7				
IO code ID code		7 A				
ID1 code		7				
ID2 code		7				
Data bits (function via AS-Interface	e)	input	output			
D0		IN1	OUT1			
D1		IN2	OUT2			
D2		IN3	OUT3			
D3		IN4	OUT4			
Parameter bits (programmable via	a AS-I)	communication monitoring				
PU		$P0=1 \ (basic setting), monitoring=ON, i.e.\ if communication fails, the outputs are de-energised \\ P0=0, monitoring=OFF, if communication fails, the outputs maintain their condition $				
P1		Input filter P1 = 0 input filter on, pulse suppression ≤ 2 ms P1 = 1 input filter off (basic setting)				
P2		Synchronous mode P2 = 0 synchronous mode on P2 = 1 synchronous mode off (basic setting) not used				
P3						
Ambient conditions		0E 70 °C / 10 150 °E				
Ambient temperature		-25 70 °C (-13 158 °F) -25 85 °C (-13 185 °F)				
Storage temperature Shock and impact resistance		30 g, 11 ms in 6 spatial directions 3 shocks				
		10 $g$ , 16 ms in 6 spatial directions 1000 shocks				
Vibration resistance		0.75 mm 10 57 Hz , 5 g !	57 150 Hz, 20 cycles			
Mechanical specifications						

# **Function**

The VBA-4E4A-G12-Z\*J/EA2L is an AS-Interface trigger module with 4 inputs and 4 outputs, 2- and 3-wire sensors as well as mechanical contacts can be connected to the plus switching electronic inputs. The outputs are electronic outputs which can be energized with max. 24 V DC and 2 A per output.

The solid housing permits fast mounting without tools as well as easy removal without tools. The stainless steel shell and the cast housing ensure durability and a high protection category.

The connection to the AS-Interface calbe and to the external power supply is achieved via penetration technology in the integrated flat cable. The insert for the flat cables can be turned in two orientations.

All connections to inputs and outputs are implemented via metal inserts for high stability. The connection to the sensors/actuators is achieved via a M12 x 1 circular connector with SPEEDCON quick locking option.

The inputs and the connected sensors are supplied from the internal power supply of the module (from AS-Interface), the outputs and the connected actuators via an external power source (AUX).

To indicate the current switching state there is an LED for each channel fitted to the top of the module. The outputs are protected against overload and short circuit, an output overload is indicated via an LED per channel. An LED to indicate the AS-Interface voltage and that the module has an address of 0 is available, another indicates errors in the AS-Interface communication as well as periphery faults. Another LED indicates the external power supply (AUX).

This module can be mounted in any position using three screws or can be snapped onto the DIN rail using the stainless steel holder.

An output overload is reported to the AS-Interface master via the function "periphery fault". The communcation with the AS-Interface remains intact.

## **Accessories**

# VBP-HH1-V3.0-KIT

AS-Interface Handheld with accessory

#### VAZ-V1-B3

Blind plug for M12 sockets

# VBP-HH1-V3.0

AS-Interface Handheld

# VAZ-PK-1.5M-V1-G

Adapter cable module/hand-held programming device

#### VAZ-CLIP-G12

lock for G12 module

Date of issue: 2015-02-05

IP67					
Cable piercing method flat cable yellow/flat cable black inputs/outputs: M12 round connector					
PBT					
230 g					
Mounting base					
Compliance with standards and directi-					
EN 50295:1999					
EN 61000-6-2:2005, EN 50295:1999					
EN 61000-6-4:2007					
EN 61131-2					
EN 60529					
EN 50295, IEC 62026-2					

# **Notes**

For 4-wire sensors, it is only possible to use plug-in slot IN1 or IN3 for inputs 1+2 or 3+4 (jump-ered internally).

Do not connect inputs and outputs, which are supplied via the module from AS-interface or via auxiliary power, with power supply and signal circuits with external potentials.