Features

- Interface between the I/O modules and the DCS/PLC
- · Com unit for 80 analog or 184 digital channels
- Communication via MODBUS TCP
- · HART communication via MODBUS TCP or service bus
- Configuration via FDT 1.2 DTM
- · Non-volatile memory for configuration and parameter settings
- · Self configuration in redundant systems
- · Permanently self-monitoring
- Outputs drive to safe state in case of failures
- Installation in Zone 2, Zone 22, Div. 2, or safe area
- Module can be exchanged under voltage

Function


The MODBUS TCP Remote I/O Com Unit or Gateway links intrinsically safe and safe inputs and outputs from sensors and actuators to the Ethernet.

It makes use of all regular I/O modules and thus transports signals to and from NAMUR sensors, mechanical contacts, high power IS solenoids, power relays, sounders, and alarms LEDs.

Industrial Ethernet hardware is familiar to most users not only through office applications but also through the architecture on which DCS systems are based.


Assembly

Front view

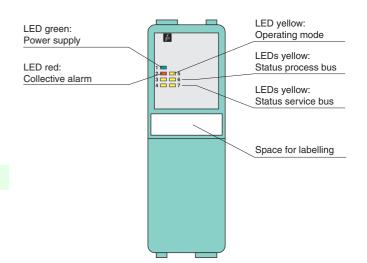



Connection

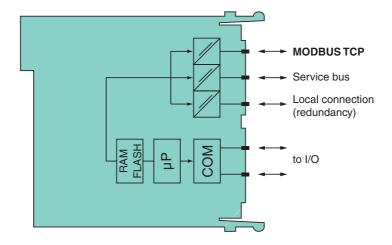

Zone 2 Div. 2

O		
Supply		heatelens bus
Connection		backplane bus
Rated voltage	U _n	5 V DC, only in connection with the power supplies LB9***
Power consumption		2.5 W
Fieldbus interface		MODBUOTOR
Fieldbus type		MODBUS TCP
Ethernet Interface		DI 45
Connection type		RJ-45 , via backplane
Transfer rate		100 MBit/s
Station connection		directly to DCS or PLC or via hubs or switches
Bus length		≤100 m (CAT 7 cable)
Addressing		IP address assigned via Ethernet
Ethernet address		IP V4 address (ex works standard: 0.0.0.0, auto IP, DHCP)
Number of channels per station	า	≤80 analog, ≤184 digital
Supported I/O modules		all LB remote I/O modules
HART communication		via Ethernet or service bus
Internal bus		
Connection		backplane bus
Redundancy		via backplane
Service interface		
Connection		9-pole to RS 485 standard , Sub-D
Number of stations per bus line	9	31 (RS-485 standard)
Indicators/settings		
LED indicator		LED 1 (power supply): On = operating, fast flash = cold start LED 2 (collective alarm): On = internal fault, flashing = no Modbus TCP connection LED 3 (status process bus): On = Network link OK LED 4 (status service bus): flashing = service bus receive channel active LED 5 (operating mode): flashing 1 (1:1 ratio) = active, normal operation; flashing 2 (7:1 ratio) = active, simulation LED 6 (status process bus): flashing = Modbus response channel active LED 7 (status servicebus): flashing = service bus response channel active
Directive conformity		, , , , , , , , , , , , , , , , , , , ,
Electromagnetic compatibility		
Directive 2004/108/EC		EN 61326-1
Conformity		
Degree of protection		IEC 60529
Fieldbus standard		IEEE 802.3
Environmental test		EN 60068-2-14
Shock resistance		EN 60068-2-27
Vibration resistance		EN 60068-2-6
Damaging gas		EN 60068-2-42
Relative humidity		EN 60068-2-56
Ambient conditions		2.1700000 2 00
Ambient temperature		-20 60 °C (-4 140 °F)
•		-25 85 °C (-13 185 °F)
Storage temperature		95 % non-condensing
Relative humidity Shock resistance		shock type I, shock duration 11 ms, shock amplitude 50 m/s ² , number of shock directions 6, number of shocks
		per direction 100
Vibration resistance		frequency range 5 500 Hz, amplitude 5 13.2 Hz \pm 1.5 mm, 13.2 100 Hz 1g, sweep rate 1 octave/min, duration 10 sweeps 5 Hz - 100 Hz - 5 Hz
Damaging gas		for plugs: 21 days in 25 ppm SO ₂ , at 25 °C and 75 % rel. humidity, device G3
Mechanical specifications		
Degree of protection		IP20 (module) , mounted on backplane
Connection		via backplane
Mass		approx. 150 g
Dimensions		32 x 100 x 103 mm (1.26 x 3.9 x 4 in)
Data for application in conne with Ex-areas	ection	
Statement of conformity		PF 08 CERT 1234 X
Group, category, type of pro	tection	⟨ II 3 G Ex nA IIC T4 Gc
Directive conformity		
Directive 94/9/EC		EN 60079-0:2009 EN 60079-11:2007 EN 60079-15:2010
International approvals		
UL approval		E106378



IECEx approval	BVS 09.0037X
Approved for	Ex nAc II T4
General information	
System information	The module has to be mounted in appropriate backplanes (LB9***) in Zone 2 or outside hazardous areas. Here, the corresponding declaration of conformity has to be observed. For use in hazardous areas (e. g. Zone 2, Zone 22 or Div. 2) the module must be installed in an appropriate enclosure.
Supplementary information	EC-Type Examination Certificate, Statement of Conformity, Declaration of Conformity, Attestation of Conformity and instructions have to be observed where applicable. For information see www.pepperl-