SIEMENS



Heating Controller

RVL481

including d.h.w. heating

Multifunctional and communicating heating controller for use in residential and non-residential buildings. Suited for heating circuit control with demandcompensated boiler temperature control or precontrol. Suited for heat source systems like burners and district heat. Control of d.h.w. heating. 29 programmed plant types. Operating voltage AC 230 V

Use	
	 Types of houses and buildings: Multifamily houses Single-family houses Non-residential buildings Types of plant: Heating zones and d.h.w. heating plants with own heat source Heating zones and d.h.w. heating plants with district heat connection Interconnected plants consisting of heat source, several heating zones and central or decentral d.h.w. heating Types of heating systems: Radiator, convector, underfloor and ceiling heating systems, or radiant panels
Functions	
Heating zone control	 Weather-compensated flow temperature control through control of the mixing valve in one of the heating zones Weather-compensated flow temperature control through control of the burner in one of the heating zones Weather-compensated flow temperature control through control of the valve in the primary return in one of the heating zones with a district heat connection (substation)

Precontrol		mand-compensated control of the main flow		ugh control of the
	mixing valve in the main flow; heat demand signal via data busDemand-compensated control of the boiler temperature through control of the			
		ner; heat demand signal via data bus	, flow to mo oroturo	through control of
		nand-compensated control of the secondar valve in the primary return of a district heat		-
		a bus		
D.h.w. heating		.w. heating:		
	 Through control of the charging pump 			
	 Through control of the changeover valve Through control of the mixing valve 			
	 Via heat exchanger through control of the valve in the primary return 			
		/ia solar collector		
	• Cor	ntrol of a circulating pump and of an electri	c immersion heater	r
Operating modes	Auto) Automatic mode		_
		Automatic changeover from the NORMA and vice versa, according to the 7-day p		•
		mode, demand-compensated control of t	-	
	\langle	Setback mode		
	ىلد	Continuous heating to the REDUCED te	mperature (with EC	O function)
	*	Comfort mode Continuous heating to the NORMAL tem	perature (without F	-CO function)
	\bigcirc	Protection		
	₽	Automatic d.h.w. heating		
	Zm/	Manual operation		
		No control, circulating pumps in service		
	Frost	protection is ensured in all operating mode	S.	
Other functions	 Opt 	timization functions		
	Protective functions			
		note control nmissioning aids		
		mmunication functions		
Ordering				
	When	ordering, please give type reference RVL	.481.	
	The controller is supplied complete with Operating Instructions and Installation Instruc-			
	tions. Senso	rs and, if required, room unit, actuator and va	alve must be ordere	d as separate items.
Product documentation				
	Tvpe	of documentation	Document no.	Part no.
				+

0618 0
0616 0

Suitable sensors and room units	 Flow, return and d.h.w. temperature: All sensors with sensing elements LG-Ni 1000, for example: Strap-on temperature sensor QAD22 Immersion temperature sensor QAE212 or QAP21.3 Collector temperature sensor (solar) QAP21.2 Room temperature: Room temperature sensor QAA24 Outdoor temperature: Outside sensor QAC22 (LG-Ni 1000 sensing element) Outside sensor QAC32 (NTC measuring element)
Suitable actuators	All electromotoric and electrohydraulic actuators for 3-position control made by Siemens can be used.
Communication	The controller can communicate with:All LPB-compatible devices made by SiemensThe SYNERGYR OZW30 central unit (software version 3.0 or higher)
Note	The heating controller RVL481 cannot be used as partner unit for the RVL469!

Plant types

Heating circuit plant types	 Heating circuit control with mixing group Can be combined with d.h.w. types: with types 1, 2 and 4 via hydraulic connection at ○ and □ with type 5 without hydraulic connection 	B9 HB9 HB1 HB1 HB1 HB1 HB1 HB1 HB1 HB1
	 2 Heating circuit control with boiler Can be combined with d.h.w. types: – with types 1, 2 and 3 via hydraulic connection at ○ and □ – with type 5 without hydraulic connection 	B9 LPB N1 A6/85 E1 B1 M1 E2 E2 B3
	 3 Heating circuit control with heat exchanger Can be combined with d.h.w. types: with types 2, 4 / type 1 / type 3 via hydraulic connection at ○ and □ with type 5 without hydraulic connection 	$\begin{array}{c c} & & & & \\ \hline \\ \hline$
	 4 Precontrol with mixing group Can be combined with d.h.w. types: – with types 1 and 2 via hydraulic connection at ○ and □ – with type 5 without hydraulic connection 	
	 5 Precontrol with boiler Can be combined with d.h.w. types: – with types 1, 2 and 4 via hydraulic connection at ○ and □ – with type 5 without hydraulic connection 	
	 6 Precontrol with heat exchanger Can be combined with d.h.w. types: – with types 1 and 2 via hydraulic connection at ○ and □ – with type 5 without hydraulic connection 	
D.h.w. circuit plant	0	
types	No d.h.w. heating 1 D.h.w. heating with charging pump (optional solar and/or electric immersion heater)	N1 M3 K6 B31 M4 B32 M5 B32 M5
	2 D.h.w. heating with mixing group (optional solar and/or electric immersion heater)	B3 B3 B3 B3 B3 B3 B3 B3 B3 B3

4/12

	3 D.h.w. heating with changeover valve (optional solar and/or electric immersion heater)	
	4 D.h.w. heating with heat exchanger	
	5 D.h.w. heating with electric immersion heater (optional solar heating)	
	A6Room unitE2Load (space)B1Flow / boiler sensorLPBData busB3Flow sensor for d.h.w.K6Electric immersion heaterB31D.h.w. storage tank sensor / thermostat 1M1Heating circuit pump / circulating pumpB32D.h.w. storage tank sensor / thermostat 2M3Charging pumpB5Room sensorM4Circulating pumpB6Collector sensorM5Collector pumpB7Return sensor (primary circuit)N1Controller RVL481B71Return sensor (secondary circuit)Y1Heating circuit mixing valve / 2-port valveB9Outside sensorY3Changeover valveE1Heat source (boiler / heat exchanger)Y7D.h.w. valve	
Working principle	The RVL481 offers 6 different plant types for space heating and precontrol, and 5 plant types for d.h.w. heating all of which are ready programmed. By combining the different plant types, a total of 29 plants can be configured. When commissioning the system, the appropriate plant types for space heating or precontrol and d.h.w. heating need to be entered. This activates all functions required for the respective type of plant. The default settings are practice-oriented. All functions that are not required for the configured plant type will not be shown and are deactivated.	
Enduser settings	 With weather-compensated control, the flow temperature is controlled via the heating curve as a function of the outdoor temperature. Its basic setting is made with the little bar on the front of the unit or on an operating line. The room temperature can be readjusted with the setting knob. In addition, following can be entered by the enduser: The room temperature setpoints of NORMAL heating, REDUCED heating and frost protection / holidays The d.h.w. temperature setpoints 2 independent 7-day switching programs and a maximum of 8 holiday periods per year The time of day and the date 	
Temperature acquisition	 Flow temperature: with LG-Ni 1000 sensor Outdoor temperature: with LG-Ni 1000 or NTC 575 sensor; the RVL481 automatically identifies the type of sensor used. In interconnected plants, it is also possible to identify the source of the outdoor temperature Room temperature: With a room sensor or room unit, or both (averaging) 	
Space heating	 The room temperature is included in the control. It can be acquired with a sensor or can be simulated by a room model that uses an adjustable building time constant. When using a sensor, the impact on the control can be adjusted. It is also possible to limit the maximum room temperature 	

	 The heating is switched on and off depending on demand (ECO function). It is switched off when the amount of heat stored by the building structure is sufficient to maintain the required room temperature. In that case, the controller takes into account the progression of the room temperature and the building's heat storage capacity. It is possible to set 2 heating limits, one for NORMAL heating and one for REDUCED heating The control is optimized. Switching on, heating up and shutting down are controlled such that, during occupancy times, the required room temperature is always maintained. At the end of each occupancy period, the heating will be shut down (circulating pump) until the room temperature setpoint for the nonoccupancy time is reached (quick setback, can be deactivated). During heating up, the room temperature setpoint can be boosted (boost heating). It is possible to set maximum limits for the heating up time and for early shutdown
3-position control	3-position control operates as weather- or demand-compensated flow temperature control. P-band and integral action time are adjustable. The flow temperature is controlled via the controlling element (seat or slipper valve). Minimum and maximum limitation of the flow temperature as well as maximum limitation of the rate of setpoint rise are adjustable.
Boiler temperature control	Weather- or demand-compensated boiler temperature control is accomplished via 2-position control. The boiler temperature is controlled through cycling of the single- or 2-stage burner (direct burner control). 2-stage operation is enabled when the release limit of burner stage 2 is reached, and disabled when the reset limit of burner stage 2 is reached. The limits can be adjusted. When there is no demand for heat, the boiler will either be shut down or maintained at the minimum temperature limit (selectable). Both minimum and maximum limitation of the boiler temperature are adjustable.
District heat	 The secondary flow temperature is controlled via the valve in the primary return, either weather- or demand-compensated. Maximum limitations act on the: Primary return temperature, whereby the following selections can be made: Type of compensation (local outside sensor or bus signal), slope of limit curve, and start of compensation Difference of primary return and secondary return temperature (DRT) Minimum stroke limitation (Y_{min} function) prevents measuring errors in connection with heat metering when flow rates fall below a certain level. The integral action time of the limit functions is adjustable.
Minimum limitation of the return temperature	Minimum limitation of the return temperature acts with both 3-position control and de- mand-dependent control of the boiler temperature and helps prevent flue gas conden- sation.
Locking functions	On the software side, all settings can be locked to prevent tampering. The district heat settings can be locked on the hardware side.
Time switches	 The RVL481 has 3 independent 7-day time switches whose assignment can be selected. Each 7-day time switch affords 3 daily on periods which may differ from one weekday to the other. The heating circuit, d.h.w. heating, the circulating pump and the multifunctional relay can be assigned to one of the three 7-day time switches For entering a maximum of 8 holiday periods, the RVL481 is equipped with a yearly time switch featuring automatic summer- / wintertime changeover


D.h.w. heating	 D.h.w. heating source can be Boiler Heat exchanger Precontroller Solar collector (charging is shown in the LCD with *) Electric immersion heater (summer operation) D.h.w. heating is controlled independent of the heating circuit. Charging to the NORMAL or REDUCED d.h.w. temperature setpoint can be adjusted to meet individual needs. It can be released: According to its own 7-day program According to the switching program of the heating circuit (one hour before space heating starts) According to the switching programs of the zone controllers on the data bus Continuously (24 hours a day) D.h.w. heating features a legionella function that can be deactivated. It is activated at a pre-determined date and time and for a selected duration. The d.h.w. temperature is acquired: With 1 or 2 sensors With 1 or 2 thermostats (not possible with solar d.h.w. heating) D.h.w. control also includes the control of a circulating pump and of an electric immersion heater. The impact of the legionella function on the circulating pump can be disabled. The d.h.w. storage tank can be forcedly charged once a day.
Remote control	 Changeover of operating mode with the QAW50 room unit Overriding the major controller functions with the QAW70 room unit Selection of another (programmable) operating mode with an external switch
Note on QAW70	The day of the week is set automatically with the date by the controller; an adjustment from the room unit QAW70 is not possible.
Passing on the heat demand signal	The heat demand signal can be passed on via the scalable DC 010 V output (corresponding to 0x °C). The value of "x" can be adjusted in the range of 30130 °C.
Communication	 Communication with other devices takes place via data bus and allows: Signaling of heat demand to the heat source Exchange of locking and enforced signals Exchange of measured values such as outdoor temperature, return temperature, flow temperature and of clock signals Integration of heat source cascades or heat source systems (heat pump, solar panels, wood-fired boiler) Reception of heat demand signal from the SYNERGYR OZW30 central unit (from software version 3.0) Exchange of error messages
Error messages and flow temperature alarm	 Error messages in the event of sensor, data bus or room unit faults Flow temperature alarm; adjustable is the period of time during which the flow or boiler temperature may stay outside the set limits; an error message is delivered when the time has elapsed
Other functions	 One multifunctional relay. Choice of functions: Outdoor temperature switch, on / off according to the time switch, alarm contact in the event of error messages, on / off according to the occupancy period, on / off ac- cording to the occupancy period including optimization, on / off according to heat demand, on / off manually DC 010 V output for passing on the heat demand signal Display of parameters, actual values, operating states and error messages

- Simulation of outdoor temperature
- · Relay test; all relays can be controlled manually
- · Sensor test; all measured values from sensors and thermostats can be displayed
- Testing the contacts connected to terminals H1-M, H3-M and H4-M
- Outdoor temperature-dependent frost protection for the plant; a minimum flow temperature is maintained; its setpoint and the response threshold can be adjusted
- Pump overrun to prevent the buildup of heat
- Periodic pump run (pump kick) to prevent seizing of the pumps in the summer
- Controller hours run meter

For more detailed information about data bus (LPB), refer to the following pieces of documentation:

- Data Sheet Basic System Data LPB: N2030
- Data Sheet Basic Engineering Data LPB: N2032

Mechanical design

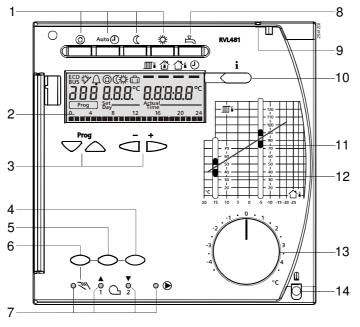

- 1 Operating mode buttons (selected button is lit)
- 2 Display (LCD)
- 3 Buttons for operating the display:
- Prog = selection of operating line
- + = adjustment of displayed value
- 4 Button for "Close heating circuit mixing valve" or burner stage 2 ON/OFF in manual operation
- 5 Button for "Open heating circuit mixing valve" in manual operation
- 6 Button for manual operation
- 7 LEDs for:
 - Manual operation
 - \bigcirc / \blacktriangle Heating circuit mixing valve opens / burner stage 1 ON
 - □ / ▼ Heating circuit mixing valve closes / burner stage 2 ON
 - Pump runs
- 8 Button for d.h.w. heating ON/OFF (ON = button lit)
- 9 Sealing facility in the cover
- 10 Info button for the display of actual values
- 11 Setting slider for flow temperature setpoint at an outside temperature of –5 $^{\circ}C$
- 12 Setting slider for flow temperature setpoint at an outside temperature of 15 °C
- 13 Setting knob for readjustment of room temperature
- 14 Fixing screw with sealing facility

The RVL481 is comprised of controller insert, which accommodates the electronics, the power section, the output relays and – on the front – all operating elements, and the base, which carries the connection terminals. The operating elements are located behind a lockable transparent cover.

	 The operating instructions can be inserted in the transparent cover. All values are read in the display (LCD) featuring background lighting. The controller insert is secured to the base with two screws, one of which can be sealed. The cover can also be sealed. The RVL481 can be fitted in 3 different ways: Wall mounting (on a wall, in the control panel, etc.) Rail mounting (on a top hat rail) Flush panel mounting (control panel door, etc.)
Analog operating elements	 Buttons for selecting the required operating mode Info button Direct adjustment of the heating curve with the help of the SIGMAGYR setting facility Knob for manual readjustment of the room temperature 3 buttons for manual operation and manual positioning commands
Digital operating elements	The entry or readjustment of all setting parameters, activation of optional functions and reading of actual values and statuses is made according to the operating line principle. An operating line with an associated number is assigned to each parameter, each actual value and each function that can be selected. One pair of buttons is used to select an operating line and one pair to readjust the display.
Notes	
Engineering	 The wires of the measuring circuits carry extra low voltage The wires to the actuators and the pumps carry AC 24230 V The local electrical regulations must be complied with Sensor cables must not be run parallel to mains carrying cables for loads such as actuator, pump, burner, etc. (insulation class II EN 60730)
Commissioning	The plant type must be selectedWhen used in district heating plants, the district heat parameters can be blocked

Disposal



In terms of disposal, the RVL481 are classified as electronic scrap conforming to the European Directive 2002/96/EG (WEEE) and must not be disposed of as domestic waste. The relevant national legal requirements must be complied with and the units must be disposed of through the relevant channels. Local and currently valid legislation must be observed.

Warranty


When using the RVL481 together with third-party devices not specifically mentioned, correct functioning must be ensured by the user. In that case, Siemens will assume no responsibility for service and warranty.

Technical Data

Power supply	Rated operating voltage	AC 230 V (±10 %)
	Frequency	50 Hz
	Power consumption (no external load)	max. 9 VA
	Supply line fusing	10 A
Output relays	Switching capacity	AC 24230 V
	Switching current Y1/K4, Y2/K5, Q1, Y7, Y8	AC 0.022 (2) A
	Switching current Q5, Q3/Y3, Q4, K6	AC 0.021 (1) A
	Rated current of ignition transformer	max. 1 A (max. 30 s)
	Switch-on current of ignition transformer	max. 10 A (max. 10 ms)
Permissible cable	Copper cable 0.6 mm \varnothing	20 m
lengths to sensors	Copper cable 0.5 mm ²	50 m
and room unit	Copper cable 1.0 mm ²	80 m
	Copper cable 1.5 mm ²	120 m
Connection terminals	Screw terminals for wire section	up to 2.5 mm ²
Communication	Bus protocol/type	LPB
by wire	Bus loading characteristic E	7
Backup	Backup of controller clock	12 h
Standards	CE-conformance to	
	EMC directive	2004/108/EC
	– Immunity	– EN 61000-6-1 / -2
	– Emissions	– EN 61000-6-3 / -4
	Low voltage directive	2006/95/EC
	– Safety	– EN 60730-1 / EN 60730-2-9
Protective data	Safety class	II to EN 60730
	Degree of protection (cover closed)	IP42 to EN 60529
	Degree of contamination	2 to EN 60730
Dimensions		refer to "Dimensions"
Weight	Unit (net)	1.2 kg
Colors	Controller insert	Light grey RAL 7035
	Terminal base	Pigeon blue RAL 5014
Environmental		Operation Transport Storage
conditions	Climatia conditiona	EN 60721-3-3 EN 60721-3-2 EN 60721-3-1
	Climatic conditions	class 3K5 class 2K3 class 1K3
	Temperature	0+50 °C –25+70 °C –20+65 °C
	Humidity	<95 % r.h. <95 % r.h. <95 % r.h.
		(non-condensing) (non-condensing)
	Mechanical conditions	class 3M2 class 2M2 class 1M2
	Use above sea level	max. 3000 m above sea level


Low voltage side



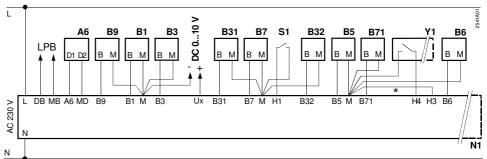


Mains voltage side

Basic connections for plant types with 3-position control (seat or slipper valves)

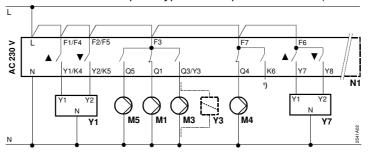


Basic connections for plant types with 2-position control (boiler with a 2-stage burner)

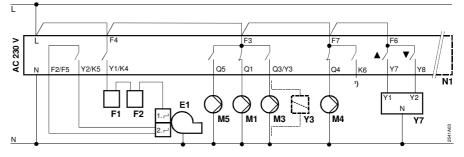

- A6 Room unit
- B1 Flow / boiler sensor
- B3 Flow sensor for d.h.w.
- B31 D.h.w. storage tank sensor / thermostat 1
- B32 D.h.w. storage tank sensor / thermostat 2
- B5 Room sensor
- B6 Collector sensor
- B7 Return sensor (primary circuit)
- B71 Return sensor (secondary circuit)
- B9 Outside sensor
- E1 2-stage burner
- F1 Limit thermostat
- F2 Safety limit thermostat
- LPB Data bus
- M1 Heating circuit pump / circulating pump
- M3 Charging pump
- M4 Circulating pump
- M5 Collector pump
- N1 Controller RVL481
- S1 Remote control of operating mode
- Ux Heat demand output
- Y1 Actuator heating circuit, with switch for minimum stroke limitation
- Y3 Actuator changeover valve
- Y7 Actuator d.h.w. circuit
- Wire link for locking the district heat parameters
- ¹) Multifunctional output

Dimensions

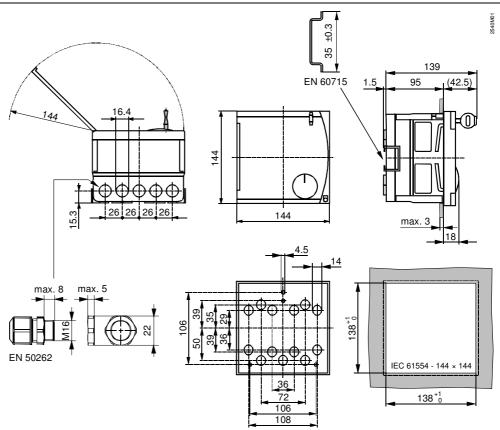

Dimensions in mm

© 2008 Siemens Switzerland Ltd Subject to alteration